## QUICK START GUIDE FOR DEMONSTRATION CIRCUIT DC690 STROBE CAPACITOR CHARGER, HIGH VOLTAGE SUPPLY

LT3420EMS-1

## DESCRIPTION

Demonstration circuit 690 is a DC-DC flyback converter using the LT3420EMS-1 to rapidly charge an output capacitor to 300V for photoflash applications. It demonstrates a simple application circuit operating in high efficiency and shows appropriate layout techniques for the LT3420EMS- 1. The circuit uses small surface mount components and has very small board space compared to conventional solutions. This demonstration circuit is particularly useful for applications such as digital cam-

eras and high voltage supplies that require high efficiency and small size.

Design files for this circuit board are available. Call the LTC factory.

LT is a trademark of Linear Technology Corporation

## **QUICK START PROCEDURE**

Demonstration circuit 690 is easy to set up to evaluate the performance of the LT3420EMS-1. Refer to Figure 1 for proper measurement equipment setup and follow the procedure below:

**NOTE**: When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the input or output voltage ripple by touching the probe tip directly across the Vin or Vout and GND terminals. See Figure 2 for proper scope probe technique.

**NOTE**: For safe operation, always shield the circuit when power is on, and always discharge the high voltage output capacitor after power is off.

- 1. With power off, connect input power source Vbatt to the Vbatt and GND terminals. Input voltage is limited to between 1.8V to 6V.
- 2. Set JP1 to DISCONNECT position for separate input power operation. Connect input power source Vcc to the Vcc and GND terminals, and limit the input voltage from 2.3V to 6V.
- 3. Connect load (a 70uF, 330V photoflash capacitor) between the +Strobe Cap and -Strobe Cap terminals.
- 4. Set JP2 to ON position to enable Charge operation.

5. Slowly turn on power source Vbatt and Vcc. Check for the proper output voltages. Vout= 320V.

**NOTE:** If there is no output, temporarily disconnect the load and input power source, and make sure that JP2 is set to ON position.

- 6. Measure the charge time (Vout rise time from 0V to 320V) from scope, it should be about 3 seconds. The photoflash capacitor should be pre-charged a few times before the measurement test due to its memory characteristic.
- 7. For efficiency measurement, connect a high voltage adjustable load box between the +Strobe Cap and Strobe Cap terminals, adjust load and set the Vout = 300V. Measure the Vin, Iin, Vout and lout and calculate the efficiency. For Vin=3.3V, the efficiency should be above 70%.
- 8. For single source operation, set the input source selector Jumper JP1 to CONNECT position. Remove the connection of power source Vcc. Limit the input voltage from 2.3V to 6V. Vcc will be powered from Vbatt.
- 9. To shut down the circuit, connect the JP2 to OFF position. The output capacitor charging is disabled.

Warning: Operate by high voltage trained personnel only.



1

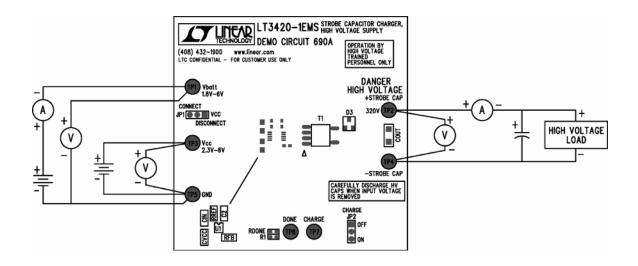


Figure 1. Proper Measurement Equipment Setup




Figure 2. Measuring Input or Output Ripple

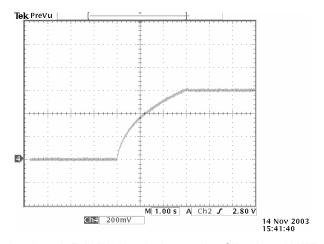


Figure 3. Charge time for charging 70uF, 330V photoflash capacitor. CH4: Vout, 100V/Div. Vin=3.3V, Vout=300V.



## QUICK START GUIDE FOR DEMONSTRATION CIRCUIT DC690 STROBE CAPACITOR CHARGER, HIGH VOLTAGE SUPPLY

