

## CS1000 Series

### Push and Clinch 10mm Snaps

#### A quick and easy to install ground snap for ESD matting that can be removed and reused

These push & clinch snaps are ideal for multi-layer rubber or vinyl mats. The pronged 3/8" (10mm) socket or 3/8" (10mm) stud is a quick and easy way to install snaps for ESD ground cables. Provides a strong contact for table matting. The bendable pronged teeth allow the snap to be removed and used over again.




**CS1010 - Female Socket**



**CS1020-Male Stud**

#### How to Install Clinch Snaps

1. Locate the safest, and most convenient snap location.
2. Press snap downward on the top side until prongs puncture matting and are fully visible on the underside of the mat.
3. Bend the prongs of the snaps until flush against the underside of the mat.
4. Bend the prongs up to remove the snap from the matting.

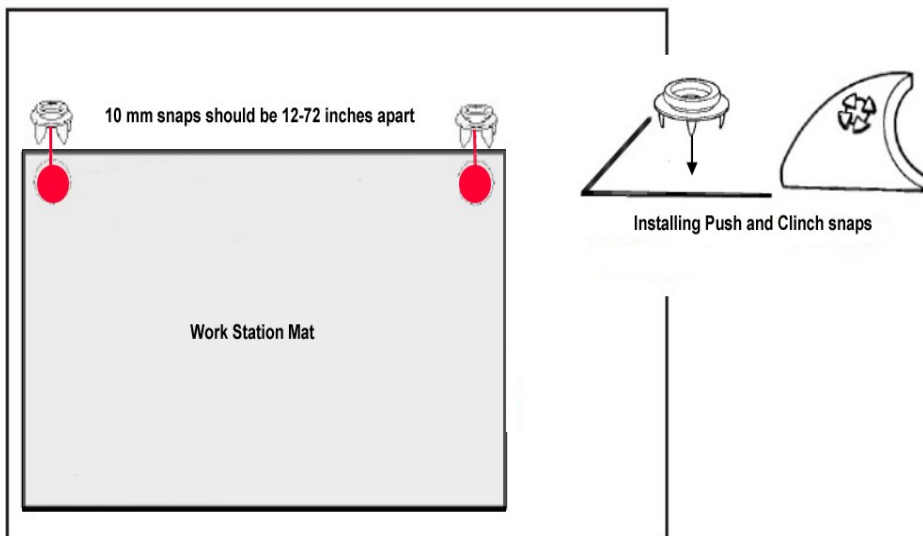

#### Product Numbers

<u>Item Number</u>	<u>Description</u>
CS1010	Snap, 10mm Female
CS1020	Snap, 10mm, Male

This document is prepared for our customers as a service, and is to the best of our knowledge true and accurate. However, it is understood and agreed by the users of this document that we will accept no liability for the conclusions reached. Users of this document may therefore wish to perform additional testing before determining that products mentioned are suitable.

