




# HAKKO DUCT KIT

999-205-02B  
Loc-Line® Duct Kit

## Assembly Instructions

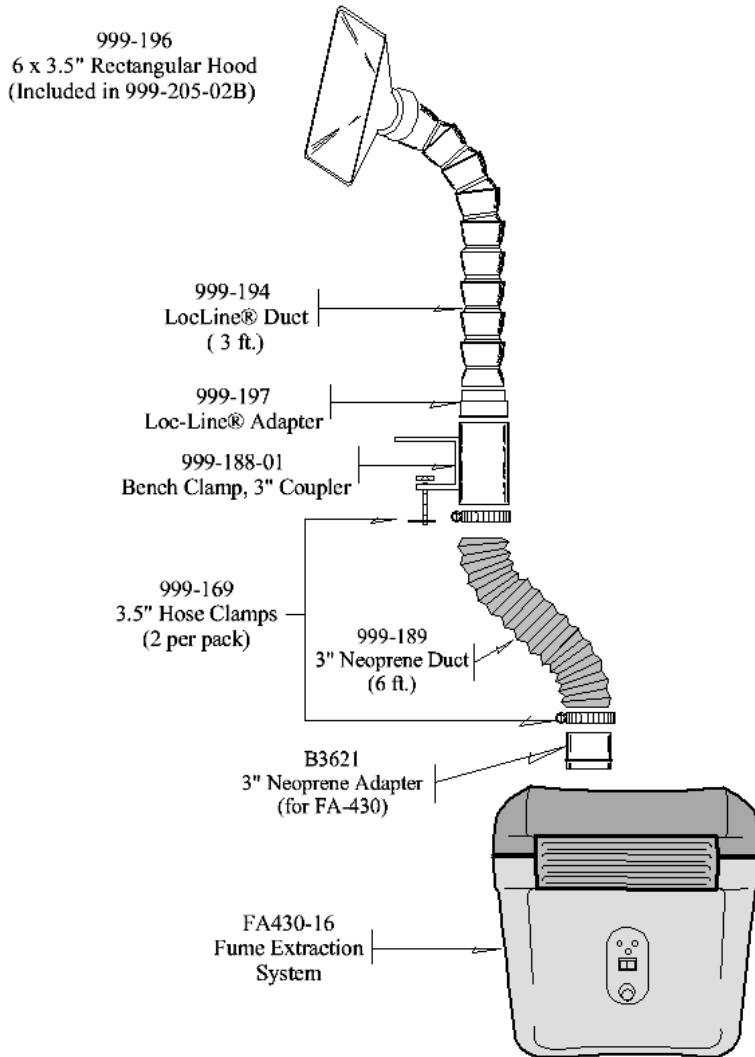

NOTE: Ensure the Neoprene Duct is attached to the longer side of the Neoprene Duct Adapter as measured from the flange.

Loc-Line® is a registered trademark of Lockwood Products