



## **Steps Required for the Installation of the 1.5" x 5" Cool Boot Top Air Sealing Fitting**

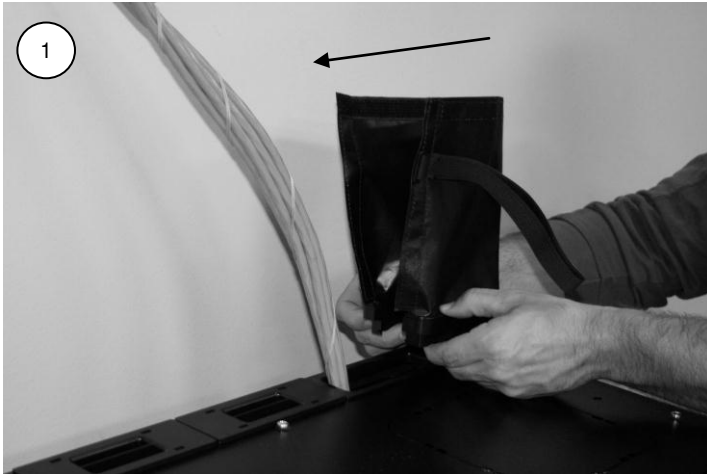

Step 1: Disengage the hook and loop cinch tie and the hook and loop strips along the top edge and side of the fabric sleeve. Open the fitting to accept the existing cable bundle by separating the end of the fitting assembly.



Step 2: Place the fitting around the cable bundle.

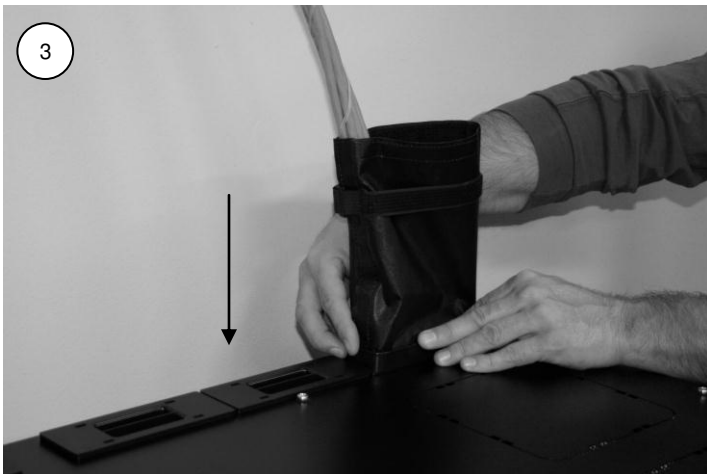

Step 3: Reattach the hook and loop side strip and the cinch tie. Align Cool Boot fitting with the cabinet top bezel and insert by pressing down on the top of the outer edges of the fitting assembly.



Step 4: Reattach the hook and loop at the top edge of the fabric sleeve. Pull the hook and loop cinch tie tight around the cable bundle. Wrap cinch tie around the cable bundle and attach it to itself. If applicable, trim off the excess cinch tie material.

## Steps Required for the Installation of the 3.5" x 5" Cool Boot Top Air Sealing Fitting



Step 1: Disengage the hook and loop cinch tie and the hook and loop strips along the top edge and side of the fabric sleeve. Open the fitting to accept the existing cable bundle by separating the end of the fitting assembly.



Step 2: Place the fitting around the cable bundle.



Step 3: Reattach the hook and loop side strip and the cinch tie. Align Cool Boot fitting with the cabinet top bezel and insert by pressing down on the top of the outer edges of the fitting assembly.



Step 4: Reattach the hook and loop at the top edge of the fabric sleeve. Pull the hook and loop cinch tie tight around the cable bundle. Wrap cinch tie around the cable bundle and attach it to itself. If applicable, trim off the excess cinch tie material.

For Instructions in Local Languages  
and Technical Support:

[www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

**PANDUIT**  
[www.panduit.com](http://www.panduit.com)

E-mail:  
[techsupport@panduit.com](mailto:techsupport@panduit.com)

Phone:  
866-405-6654