




MeasureWare Starter Kit (EV-ADMW1001-KITZ) Quick Start Guide

1. Firstly save the downloaded 3 Wire RTD reference file to a known location on your PC and extract the contents.

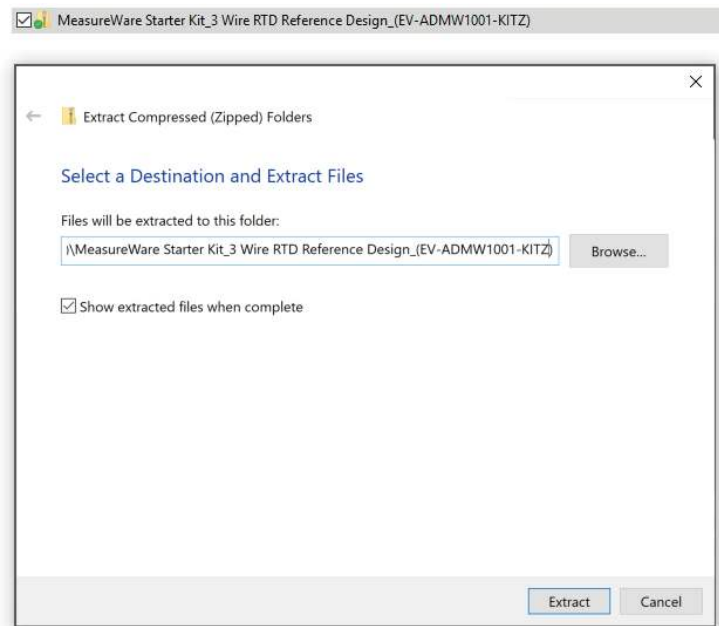

2. Once you have the reference file go to <https://www.analog.com/en/measureware/software-studio/measureware-lab.html> and download the MeasureWare Lab Installer. Once installed open the application using the Desktop icon.

3. Once prompted sign up to create your [My Analog Account](#). You can then save and track your designs.



4. Plug together your MeasureWare kit and connect the kit to your computer using the USB cable.



5. In [MeasureWare Lab](#) click “upload your design” and open the unzipped preconfigured reference design downloaded earlier and select the JSON file.



6. Once your reference design is uploaded attach your 3 wire RTD sensor to the ProBoard and proceed to the measurement dashboard.

