
APPLICATION TOOLING

ID tools and machines

The arrow mark indocates the press that is applicable to the applicator.



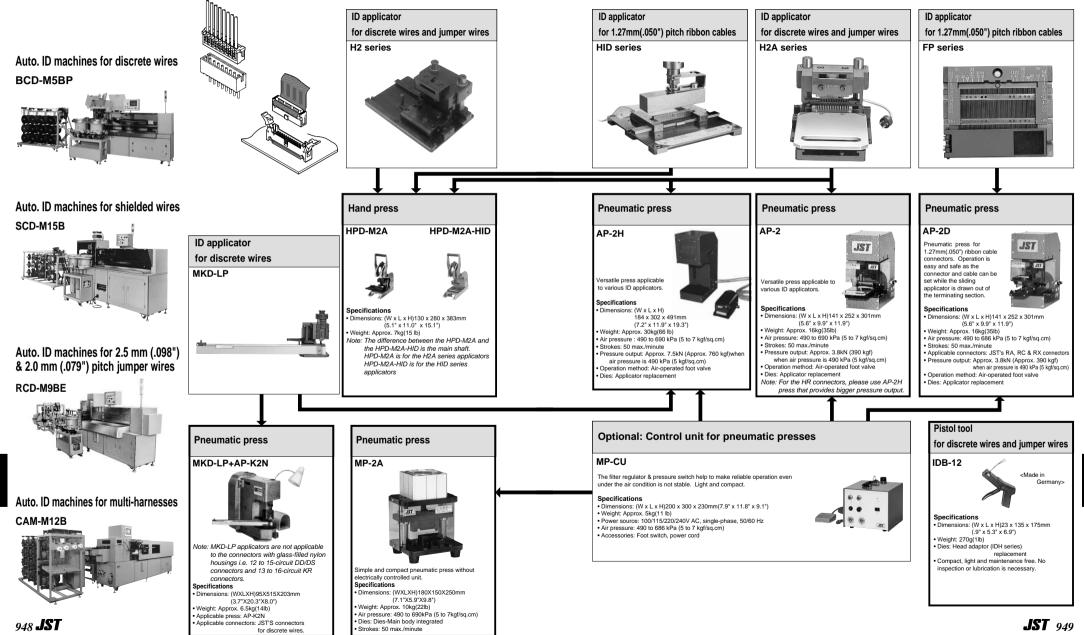

		Hand press: HPD-M2A Pneumatic press: AP-2 or AP-2H	Hand press: HPD-M2A	Hand press: HPD-M2A-HID	Pneumatic press: AP-2H Electric press: AP-K2N Pitch-feeding applicator	
		Applicator	Applicator	Applicator		
		H2A series	H2 series	HID series	MKD-LP with die set	
Conn						
Pitch mm(in.)	Series SUR	H2A-SUR	H2-SUR30ED-X	_	_	
0.8(.031)	SR	H2A-SOK H2A-SR	H2-S0R30ED-X	_	_	
1.0(.039)	-			_		
	ASR	H2A-SSR H2A-ASR	H2-SSR20ED-X H2-ASR20ED-X	_		
	CZ	H2A-ASR H2A-CZ	H2-ASR20ED-X H2-CZ20ED-X	_	_	
4.5(.050)	ZR	-	H2-CZ20ED-X H2-ZR20ED-X	_		
1.5(.059)	ZR	H2A-ZR H2A-ZA		_	MKD-LP + MKD-DS-ZR	
		H2A-ZA H2A-KR/XR	H2-ZA20ED-X H2-KR/XR20ED-X	_	MKD-LP + MKD-DS-ZA	
	KR (Note 3) KRD	H2A-KR/XR H2A-KRD	H2-KRD20DD-Y	_	MKD-LP + MKD-DS-KR (Note 1)	
				_	_	
2 0(070)	CK (Note 4)	H2A-KR/XR	H2-KR/XR20ED-X	_	_	
2.0(.079)	CR DR	H2A-CR H2A-DR	H2-CR20ED-X H2-DR20ED-X	_	_	
	DR	H2A-DR H2A-DA		_	MKD-LP + MKD-DS-DR	
		HZA-DA	H2-DA20ED-X H2-DD/DS20ED-X	_	MKD-LP + MKD-DS-DA	
	DD	H2A-DD/DS			MKD-LP + MKD-DS-DD/DS (Note 1)	
	DS NR	H2A-NR	H2-NR20ED-X	_	. ,	
	NRD	H2A-NRD	H2-NRD20DD-Y	_	MKD-LP + MKD-DS-NR	
	HR	H2A-NRD H2A-HR	H2-HR20ED-X	_	MKD-LP + MKD-DS-NRD (Note 2) MKD-LP + MKD-DS-HR	
2.5(.098)	DB	H2A-RR H2A-DB	H2-DB20ED-X	_		
	DB	H2A-DB H2A-DG	H2-DB20ED-X	_	MKD-LP + MKD-DS-DB/DC	
					MKD-LP + MKD-DS-DG	
	BR	H2A-BR	H2-BR20ED-X		MKD-LP + MKD-DS-BR	
2.54(.100)	RC	_		HID-RA/RX	_	
2.34(.100)				HID-RC		
3.96(.156)	RX			HID-RA/RX		
. ,	VR blo cuttor	H2A-VR	H2-VR15DD-Y	-	MKD-LP + MKD-DS-VR (Note 2)	
Ribbon cable cutter		-	-	HID-FC		

Note 1: MKD-LP applicators are not applicable to the connectors with glass-filled nylon housings i.e. 12 to 15-circuit DD/DS connectors and 13 to 16-circuit KR connectors.
2: End-connection only (not through processing)
3: ID tools for the standard KR series connectors are not applicable to the ()KR-4K-** connectors. For ()KR-4K-**, use the tools for the CR series connectors.
4: ID tools for the standard CK series connectors are not applicable to the ()CK-6H-** contectors.

Pneumatic press: AP-2H Electric press: AP-K2N	Pneumatic press: AP-2D	Pistol tool: IDB-12			
Applicator	Applicator	Head adaptor			
MKD-LR with die set	FP series	IDH series			
			Connector		
			Series	Pitch mm(in.	
_	-	_	SUR	0.8(.031)	
_	-	_	SR		
_	-	-	SSR	1.0(.039)	
_	-	-	ASR		
-	_	_	CZ	1.5(.059)	
-	_	IDH-ZR12	ZR		
-	-	-	ZA		
MKD - LR + MKD-LR-DS-KR	-	IDH-KR12	KR(Note3)		
-	-	-	KRD		
-	-	_	CK(Note4)	2.0(.079)	
-	-	-	CR		
-	-	IDH-DR12	DR		
MKD - LR + MKD-LR-DS-DA		IDH-DA12 IDH-DD/DS12	DA		
_			DD		
	_	1011 00/0012	DS		
-	-	IDH-NR12	NR		
-	-	-	NRD	1	
MKD - LR + MKD-LR-DS-HR	-	IDH-HR12	HR	2.5(.098)	
MKD - LR + MKD-LR-DS-DB	-	IDH-DB/DC12	DB		
-	-	-	DG		
-	-	-	BR		
-	FCD-DS FP2-RA/RX	-	RA		
-	FCD-DS FP2-RC	-	RC	2.54(.100)	
-	FCD-DS FP2-RA/RX	-	RX	1 .	
-	-	IDH-VR12	VR	3.96(.156)	
_	-	-	Ribbon	cable cutter	