




STRAIGHT PLUG CLAMP TYPE CABLE RG 8/U ET RG 9/U



All dimensions are in mm.

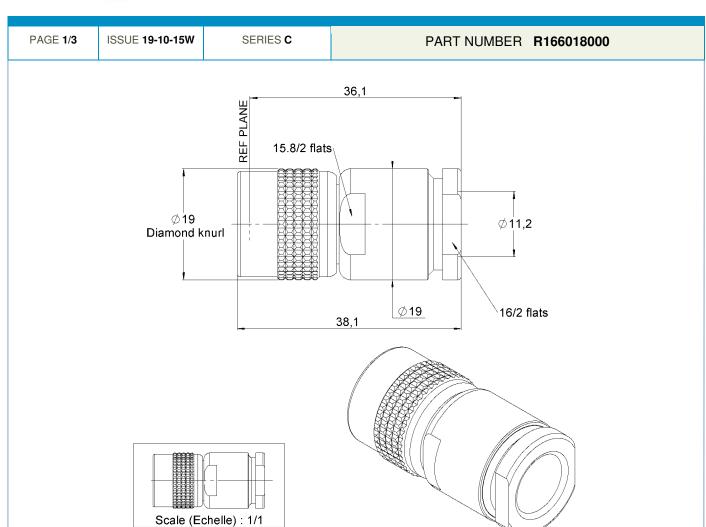

COMPONENTS	MATERIALS	PLATING (μm)
Body Center contact Outer contact Insulator	BRASS. BRASS. BRONZE PTFE	NICKEL 2 GOLD 0.5 OVER NICKEL 2 NICKEL 2
Gasket Others parts -	SILICONE BRASS.	NICKEL 2 -



Technical Data Sheet

STRAIGHT PLUG CLAMP TYPE CABLE RG 8/U ET RG 9/U

				STRAIGE	II PLUG	CLAMP	TYPE CA	BLE RG	8/UETRG	i 9/U
PAGE 2/3	ISSUE 19-10-15W	SERIES (С		PAR	T NUN	MBER F	16601	8000	
PACKAGING Standard Unit Other							I			
		1			act us		Contact	us		
Impedance Frequency	ELECTRICAL CHARA	CTERISTICS 50 Ω 0-11 GHz		Operatino Hermetic	g tempera seal	_	ENVIRONN	<u>IENTAL</u>	-55/+155 NA	°C Atm.cm3/s
VSWR Insertion loss RF leakage Voltage rating Dielectric withstal Insulation resistal	- (0,0000 x F(GH 0.05 √F(GH	nini	Panel lea			<u>SPECIFIC</u>	<u>ATION</u>	NA	7.11.11.011.070
MECHANICAL CHARACTERISTICS			CABLE ASSEMBLY							
Center contact re Axial force – M		NA	N mini	Stripping mm	a 4	7,5	C 0	d 0	e 1,5	f 0
Axial force – O Torque			N mini N.cm mini			7,5	•		1,5	
Recommended to Mating Panel nut Clamp nut A/F clamp nut	orque	NA 800	N.cm N.cm N.cm mm	Assembly Recomm			mp 02			
Mating life Weight	. (44,1(Cycles min g	i	KX 13 KX 24 RG 213 RG 225 RG 214 RG 165						
					e cable. Intri				an be achieved inish the perform	with the highest mance of the
				Cable let	CHILIOIT					

 - pull off
 300
 N mini

 - torque
 NA
 N.cm

TOOLING

Part Number	Description	Hexagon


OTHER CHARACTERISTICS

_



Technical Data Sheet

STRAIGHT PLUG CLAMP TYPE CABLE RG 8/U ET RG 9/U

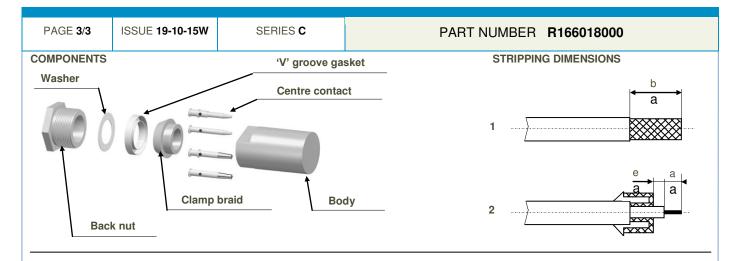


1

Strip the cable as shown in sketch 1.



4


Slide the back nut over the cable assembly. Slide the centre contact onto the inner conductor.



2

Slide the back nut, the washer and the 'V' groove gasket onto the cable.

Slide the clamp braid sleeve over the braid.

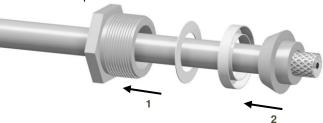


5

Solder the centre contact onto the inner conductor.



3

Fold the braid back and trim off the extra braid. Trim dielectric back as shown in sketch 2.

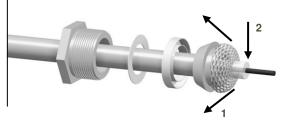

6

Screw sub-assembly into the connector body with the adapted wrench.

Recommended coupling torque (see connector TDS).

