

RoHS Compliant

M.2 2242 Flash Drive

SV250-M242 BiCS5 Product Specifications



November 9, 2022

Version 1.3



Apacer Technology Inc.

1F, No.32, Zhongcheng Rd., Tucheng Dist., New Taipei City, Taiwan, R.O.C Tel: +886-2-2267-8000 Fax: +886-2-2267-2261

www.apacer.com

Specifications Overview:

Compliance with SATA Revision 3.2

- SATA 6 Gb/s interface
- Backward compatible with SATA 1.5 and 3 Gb/s interfaces
- ATA-8 command set

Capacity

- 120, 240, 480, 960 GB

Performance¹

- Burst read/write: 600 MB/sec
- Sequential read: Up to 560 MB/sec
- Sequential write: Up to 470 MB/sec
- Random read (4K): Up to 50,000 IOPS
- Random write (4K): Up to 68,000 IOPS

Flash Management

- Low-Density Parity-Check (LDPC) Code
- Global Wear Leveling
- Flash bad-block management
- Flash Translation Layer: Page Mapping
- S.M.A.R.T.
- DataDefenderTM
- Device Sleep
- ATA Secure Erase
- TRIM
- Hyper Cache Technology
- Over-provisioning
- DataRAID^{TM2}
- SMART Read Refresh™

• NAND Flash Type: 3D TLC (BiCS5)

• MTBF: >3,000,000 hours

Endurance (in drive writes per day: DWPD)

- 120 GB: 2.03 DWPD

- 240 GB: 2.28 DWPD

480 GB: 2.21 DWPD

- 960 GB: 2.34 DWPD

Notes:

- 1. Varies from capacities. The values for performances and power consumptions presented are typical and may vary depending on flash configurations or platform settings. The term idle refers to the standby state of the device.
- Supported on standard model and TCG Opal-supported model of 240-960GB capacities.

Temperature Range

Operating:

Standard: 0°C to 70°C Wide: -40°C to 85°C

- Storage: -55°C to 100°C

Supply Voltage

 $-3.3 \text{ V} \pm 5\%$

Power Consumption¹

- Active mode (Max.): 380 mA

- Idle mode: 60 mA

• SATA Power Management Modes

• Connector Type

- 75-pin SATA-based M.2 module pinout

Form Factor

- M.2 2242-D5-B-M
- Dimensions: 42.00 x 22.00 x 3.80, unit: mm
- Net weight: $3.86g \pm 5\%$

Security

- AES 256-bit hardware encryption
- Trusted Computing Group (TCG) Opal 2.0 (optional)

Reliability

- Thermal Sensor
- End-to-End Data Protection

RoHS Compliant

Table of Contents

1. General Description	4
2. Functional Block	4
3. Pin Assignments	5
4. Product Specifications	8
4.1 Capacity	8
4.2 Performance	8
4.3 Environmental Specifications	9
4.4 Mean Time Between Failures (MTBF)	9
4.5 Certification and Compliance	9
4.6 Endurance	10
4.7 LED Indicator Behavior	10
5. Flash Management	
5.1 Error Correction/Detection	11
5.2 Bad Block Management	11
5.3 Global Wear Leveling	11
5.4 Flash Translation Layer – Page Mapping	11
5.5 TRIM	11
5.6 DataDefender™	12
5.7 ATA Secure Erase	12
5.8 Device Sleep (DevSleep or DEVSLP) Mode	12
5.9 Hyper Cache Technology	12
5.10 Over-provisioning	13
5.11 DataRAID™	13
5.12 SMART Read Refresh™	13
5.13 SATA Power Management	13
6. Security and Reliability Features	14
6.1 Advanced Encryption Standard	14
6.2 TCG Opal (optional)	
6.3 Thermal Sensor	
6.4 End-to-End Data Protection	14
7. Software Interface	
7.1 Command Set	15

Apacer

7.2 S.M.A.R.T.	16
8. Electrical Specifications	18
8.1 Operating Voltage	18
8.2 Power Consumption	
9. Mechanical Specifications	19
9.1 Dimensions	19
9.2 Net Weight	19
10. Product Ordering Information	20
10.1 Product Code Designations	20
10.2 Valid Combinations	21

1. General Description

Apacer's SV250-M242, utilizing 3D NAND for higher capacity up to 960GB and providing more power efficiency than 2D NAND, is the next generation Solid State Drive (SSD) with compact and high-speed storage. Designed in SATA 6 Gb/s interface, SV250-M242 provides full compliance with the latest SATA Revision 3.2 interface specifications and delivers exceptional read/write speed, making it the leading add-in storage solution for future host computing systems.

SV250-M242 is built with a powerful SATA controller that supports on-the-module ECC as well as efficient wear leveling scheme and implemented with LDPC (Low Density Parity Check) ECC engine to extend SSD endurance and increase data reliability. Furthermore, SV250-M242 is equipped with a built-in thermal sensor to monitor the temperature of the SSD via S.M.A.R.T commands to prevent overheating. Operating under 6 Gb/s interface, SV250-M242 is provided with Apacer latest S.M.A.R.T. that is primarily oriented for the latest SATA interface SSD, for drive lifetime monitoring and analysis. For highly-intensive applications, End-to-End Data Protection ensures that data integrity can be assured at multiple points in the path to enable reliable delivery of data transfers.

Security-wise, Advanced Encryption Standard (AES) and Trusted Computing Group (TCG) Opal (optional) ensure data security and provide users with peace of mind knowing their data is safeguarded against unauthorized use at all times. SV250-M242 also adopts the latest page mapping file translation layer and comes with various implementations including power saving modes, wear leveling, flash block management, S.M.A.R.T., TRIM, Hyper Cache technology, over-provisioning, DataDefenderTM, DataRAIDTM and SMART Read RefreshTM.

With exceptional performance, trustable reliability and cost effectiveness, SV250-M242 is definitely the ideal storage or cache solution for a variety of applications ranging from industrial, imaging, computing to enterprise markets.

2. Functional Block

Apacer SV250-M242 includes a single-chip controller and flash media. The controller integrates the flash management unit to support multi-channel, multi-bank flash arrays. Figure 2-1 shows the functional block diagram.

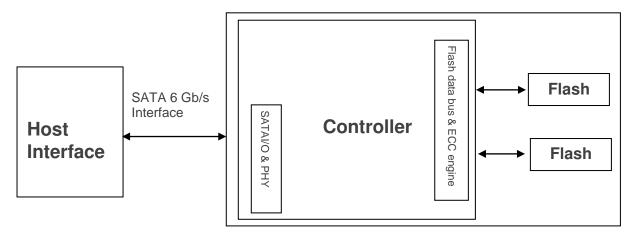


Figure 2-1 Functional Block Diagram

3. Pin Assignments

This connector does not support hot plug capability. There are a total of 75 pins. 12 pin locations are used for mechanical key locations; this allows such a module to plug into both Key B and Key M connectors.

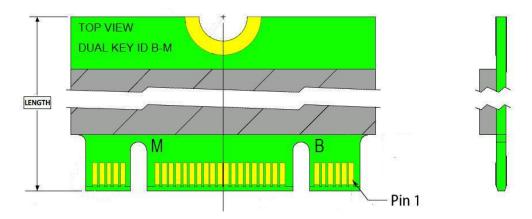


Figure 3-1 SATA Connectors

Table 3-1 Pin Assignments

Pin	Туре	Description		
1	CONFIG_3	Ground (according to M.2 configurations for SSD-SATA definition)		
2	3.3V	Supply Pin, 3.3V		
3	GND	Ground		
4	3.3V	Supply pin, 3.3V		
5	No connect	No connect		
6	Not available	No connect		
7	Not available	No connect		
8	Not available	Reserved for Apacer use only ¹		
9	No connect	No connect		
10	DAS/DSS	Device Activity Signal/Disable Staggered Spin-up		
11	No connect	No connect		
12	(removed for key)	Mechanical notch B		
13	(removed for key)	Mechanical notch B		
14	(removed for key)	Mechanical notch B		
15	(removed for key)	Mechanical notch B		
16	(removed for key)	Mechanical notch B		
17	(removed for key)	Mechanical notch B		
18	(removed for key)	Mechanical notch B		
19	(removed for key)	Mechanical notch B		
20	Not available	No connect		
21	CONFIG_0	Ground (according to M.2 configurations for SSD-SATA definition)		
22	Not available	No connect		

Table 3-1 Pin Assignments

Not available		_	Table 3-11 III Assignments	
24 Not available No connect 25 Not available No connect 26 Not available No connect 27 GND Ground 28 Not available No connect 30 Not available No connect 30 Not available No connect 31 PERp1 No connect 32 Not available No connect 33 GND Ground 34 Not available No connect 35 PETn1 No connect 36 Not available No connect 37 PETp1 No connect 38 DEVSLP Device Sleep, input. If driven high the host is informing the SSD to enter a low power state 39 GND Ground 40 Not available No connect 41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Tx- Host receiver differential pair 44	Pin	Туре	Description	
25 Not available No connect 26 Not available No connect 27 GND Ground 28 Not available No connect 29 PERn1 No connect 30 Not available No connect 31 PERp1 No connect 32 Not available No connect 33 GND Ground 34 Not available No connect 35 PETn1 No connect 36 Not available No connect 37 PETp1 No connect 38 DEVSLP Device Sleep, input. If driven high the host is informing the SSD to enter a low power state 39 GND Ground 40 Not available No connect 41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45	23	Not available	No connect	
26 Not available No connect 27 GND Ground 28 Not available No connect 29 PERR1 No connect 30 Not available No connect 31 PERp1 No connect 32 Not available No connect 33 GND Ground 34 Not available No connect 35 PETn1 No connect 36 Not available No connect 37 PETp1 No connect 38 DEVSLP Device Sleep, input. If driven high the host is informing the SSD to enter a low power state 39 GND Ground 40 Not available No connect 41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45 GND Ground 46 Not availa	24		No connect	
27 GND Ground 28 Not available No connect 29 PERn1 No connect 30 Not available No connect 31 PERp1 No connect 32 Not available No connect 33 GND Ground 34 Not available No connect 35 PETn1 No connect 36 Not available No connect 37 PETp1 No connect 38 DEVSLP Device Sleep, input. If driven high the host is informing the SSD to enter a low power state 39 GND Ground 40 Not available No connect 41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45 GND Ground 46 Not available No connect 47 SATA-Tx- </td <td>25</td> <td>Not available</td> <td>No connect</td>	25	Not available	No connect	
28 Not available No connect 29 PERn1 No connect 30 Not available No connect 31 PERp1 No connect 32 Not available No connect 33 GND Ground 34 Not available No connect 35 PETn1 No connect 36 Not available No connect 37 PETp1 No connect 38 DEVSLP Device Sleep, input. If driven high the host is informing the SSD to enter a low power state 39 GND Ground 40 Not available No connect 41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair <	26	Not available	No connect	
29 PERn1 No connect 30 Not available No connect 31 PERp1 No connect 32 Not available No connect 33 GND Ground 34 Not available No connect 35 PETn1 No connect 36 Not available No connect 37 PETp1 No connect 38 DEVSLP Device Sleep, input. If driven high the host is informing the SSD to enter a low power state 39 GND Ground 40 Not available No connect 41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect <	27	GND	Ground	
30 Not available No connect 31 PERp1 No connect 32 Not available No connect 33 GND Ground 34 Not available No connect 35 PETn1 No connect 36 Not available No connect 37 PETp1 No connect 38 DEVSLP Device Sleep, input. If driven high the host is informing the SSD to enter a low power state 39 GND Ground 40 Not available No connect 41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair	28	Not available	No connect	
31 PERp1 No connect 32 Not available No connect 33 GND Ground 34 Not available No connect 35 PETn1 No connect 36 Not available No connect 37 PETp1 No connect 38 DEVSLP Device Sleep, input. If driven high the host is informing the SSD to enter a low power state 39 GND Ground 40 Not available No connect 41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect <td>29</td> <td>PERn1</td> <td>No connect</td>	29	PERn1	No connect	
Not available	30	Not available	No connect	
33 GND Ground 34 Not available No connect 35 PETn1 No connect 36 Not available No connect 37 PETp1 No connect 38 DEVSLP Device Sleep, input. If driven high the host is informing the SSD to enter a low power state 39 GND Ground 40 Not available No connect 41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect	31	PERp1	No connect	
34 Not available No connect 35 PETn1 No connect 36 Not available No connect 37 PETp1 No connect 38 DEVSLP Device Sleep, input. If driven high the host is informing the SSD to enter a low power state 39 GND Ground 40 Not available No connect 41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect	32	Not available	No connect	
35 PETn1 No connect 36 Not available No connect 37 PETp1 No connect 38 DEVSLP Device Sleep, input. If driven high the host is informing the SSD to enter a low power state 39 GND Ground 40 Not available No connect 41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect	33	GND	Ground	
36 Not available No connect 37 PETp1 No connect 38 DEVSLP Device Sleep, input. If driven high the host is informing the SSD to enter a low power state 39 GND Ground 40 Not available No connect 41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP No connect <t< td=""><td>34</td><td>Not available</td><td>No connect</td></t<>	34	Not available	No connect	
37 PETp1 No connect 38 DEVSLP Device Sleep, input. If driven high the host is informing the SSD to enter a low power state 39 GND Ground 40 Not available No connect 41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP No connect 56 MFG1 Reserved for Apacer use only¹ </td <td>35</td> <td>PETn1</td> <td>No connect</td>	35	PETn1	No connect	
Bevslep Device Sleep, input. If driven high the host is informing the SSD to enter a low power state Ground Ground Not available No connect SATA-Rx+ Host receiver differential signal pair Not available No connect SATA-Rx- Host receiver differential signal pair Not available No connect SATA-Rx- Host receiver differential signal pair Not available No connect SATA-Tx- Host transmitter differential pair Not available No connect SATA-Tx- Host transmitter differential pair Not available No connect SATA-Tx+ Host transmitter differential pair Not connect SATA-Tx+ Host transmitter differential pair CLKREQ# No connect REFCLKN No connect AND Ground CLKREQ# No connect REFCLKN No connect REFCLKP No connect REFCLKP Reserved for Apacer use only¹ Reserved for Apacer use only¹	36	Not available	No connect	
38 DEVSLP power state 39 GND Ground 40 Not available No connect 41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP No connect 56 MFG1 Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer	37	PETp1	No connect	
40 Not available No connect 41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M 60 (removed for key) Mechanical notch M	38	DEVSLP		
41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M	39	GND	Ground	
42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M 60 (removed for key) Mechanical notch M	40	Not available	No connect	
43 SATA-Rx- 44 Not available 45 GND 46 Not available 47 SATA-Tx- 48 Not available 49 SATA-Tx+ 49 Host transmitter differential pair 50 PERST# 51 GND 52 CLKREQ# 53 REFCLKN 54 PEWAKE# 55 REFCLKP 56 MFG1 57 GND 58 MFG2 59 (removed for key) 60 (removed for key) 61 (removed for key) 61 (removed for key) 6 No connect Reserved differential pair No connect No connect No connect No connect Reserved for Apacer use only¹ Mechanical notch M No connect Mechanical notch M	41	SATA-Rx+	Host receiver differential signal pair	
44 Not available No connect 45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP No connect 56 MFG1 Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M 60 (removed for key) Mechanical notch M 61 (removed for key)	42	Not available	No connect	
45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP No connect 56 MFG1 Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M 60 (removed for key) Mechanical notch M	43	SATA-Rx-	Host receiver differential signal pair	
46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP No connect 56 MFG1 Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M 60 (removed for key) Mechanical notch M	44	Not available	No connect	
47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP No connect 56 MFG1 Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M 60 (removed for key) Mechanical notch M 61 (removed for key) Mechanical notch M	45	GND	Ground	
48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only¹57GNDGround58MFG2Reserved for Apacer use only¹59(removed for key)Mechanical notch M60(removed for key)Mechanical notch M61(removed for key)Mechanical notch M	46	Not available	No connect	
49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP No connect 56 MFG1 Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M 60 (removed for key) Mechanical notch M 61 (removed for key) Mechanical notch M	47	SATA-Tx-	Host transmitter differential pair	
50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP No connect 56 MFG1 Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M 60 (removed for key) Mechanical notch M 61 (removed for key) Mechanical notch M	48	Not available	No connect	
51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only¹57GNDGround58MFG2Reserved for Apacer use only¹59(removed for key)Mechanical notch M60(removed for key)Mechanical notch M61(removed for key)Mechanical notch M	49	SATA-Tx+	Host transmitter differential pair	
52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP No connect 56 MFG1 Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M 60 (removed for key) Mechanical notch M 61 (removed for key) Mechanical notch M	50	PERST#	No connect	
FERCLKN REFCLKN No connect No connect REFCLKP No connect Reserved for Apacer use only¹ Mechanical notch M Reserved for Key) Mechanical notch M Reserved for Key) Mechanical notch M	51	GND	Ground	
54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only¹57GNDGround58MFG2Reserved for Apacer use only¹59(removed for key)Mechanical notch M60(removed for key)Mechanical notch M61(removed for key)Mechanical notch M	52	CLKREQ#	No connect	
SEFCLKP No connect Reserved for Apacer use only¹ Ground MFG1 Reserved for Apacer use only¹ From the following of the served for Apacer use only¹ Reserved for Apacer use only¹ Reserved for Apacer use only¹ Mechanical notch M (removed for key) Mechanical notch M (removed for key) Mechanical notch M	53	REFCLKN	No connect	
56MFG1Reserved for Apacer use only¹57GNDGround58MFG2Reserved for Apacer use only¹59(removed for key)Mechanical notch M60(removed for key)Mechanical notch M61(removed for key)Mechanical notch M	54	PEWAKE#	No connect	
57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M 60 (removed for key) Mechanical notch M 61 (removed for key) Mechanical notch M	55	REFCLKP	No connect	
58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M 60 (removed for key) Mechanical notch M 61 (removed for key) Mechanical notch M	56	MFG1	Reserved for Apacer use only ¹	
59 (removed for key) Mechanical notch M 60 (removed for key) Mechanical notch M 61 (removed for key) Mechanical notch M	57	GND	Ground	
59 (removed for key) Mechanical notch M 60 (removed for key) Mechanical notch M 61 (removed for key) Mechanical notch M	58	MFG2	Reserved for Apacer use only ¹	
61 (removed for key) Mechanical notch M	59	(removed for key)		
	60	(removed for key)	Mechanical notch M	
62 (removed for key) Mechanical notch M	61	(removed for key)	Mechanical notch M	
	62	* * * * * * * * * * * * * * * * * * * *	Mechanical notch M	

Table 3-1 Pin Assignments

Pin	Туре	Description		
63	(removed for key)	Mechanical notch M		
64	(removed for key)	Mechanical notch M		
65	(removed for key)	Mechanical notch M		
66	(removed for key)	Mechanical notch M		
67	Not available	No connect		
68	SUSCLK	No connect		
69	CONFIG_1	Ground		
70	3.3V	Supply pin, 3.3V		
71	GND	Ground		
72	3.3V	Supply pin, 3.3V		
73	GND	Ground		
74	3.3V	Supply pin, 3.3V		
75	CONFIG_2	Ground		

Note:

^{1.} Reserved by Apacer, please do not connect to a host.

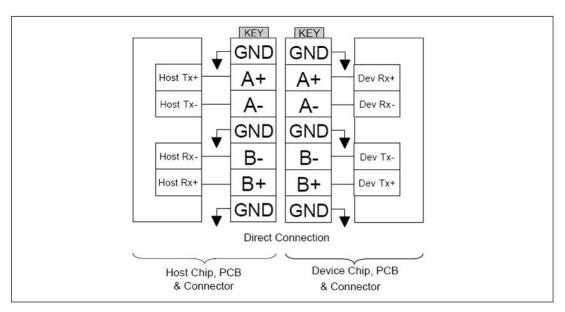


Figure 3-2 Direct Connection between the Host and Device

4. Product Specifications

4.1 Capacity

Capacity specifications of SV250-M242 are available as shown in Table 4-1. It lists the specific capacity and the default numbers of heads, sectors and cylinders for each product line.

Table 4-1 Capacity Specifications

Capacity	Total bytes	Cylinders	Heads	Sectors	Total LBA
120 GB	120,034,123,776	16,383	16	63	234,441,648
240 GB	240,057,409,536	16,383	16	63	468,862,128
480 GB	480,103,981,056	16,383	16	63	937,703,088
960 GB	960,197,124,096	16,383	16	63	1,875,385,008

Notes:

- Display of total bytes varies from operating systems.
- 1 GB = 1,000,000,000 bytes; 1 sector = 512 bytes.
- LBA count addressed in the table above indicates total user storage capacity and will remain the same throughout the
 lifespan of the device. However, the total usable capacity of the SSD is most likely to be less than the total physical
 capacity because a small portion of the capacity is reserved for device maintenance usages.

4.2 Performance

Performance of SV250-M242 is listed below in Table 4-2.

Table 4-2 Performance Specifications

Capacity Performance	120 GB	240 GB	480 GB	960 GB
Sequential Read (MB/s)	440	560	560	560
Sequential Write (MB/s)	190	470	470	470
Random Read IOPS (4K)	22,000	35,000	50,000	50,000
Random Write IOPS (4K)	43,000	68,000	60,000	60,000

Notes:

- Results may differ from various flash configurations or host system setting.
- Sequential read/write is based on CrystalDiskMark 8.0.4 with file size 1,000MB.
- Random read/write is measured using IOMeter with Queue Depth 32.

4.3 Environmental Specifications

Environmental specifications of SV250-M242 product are shown in Table 4-3.

Table 4-3 Environmental Specifications

Item	Specifications
Operating temp.	0°C to 70°C (Standard); -40°C to 85°C (Wide)
Non-operating temp.	-55°C to 100°C
Operating vibration	7.69 GRMS, 20~2000 Hz/random (compliant with MIL-STD-810G)
Non-operating vibration	4.02 GRMS, 15~2000 Hz/random (compliant with MIL-STD-810G)
Operating shock	50G, 11ms
Non-operating shock	1500G, 0.5ms (compliant with MIL-STD-883K)

Note: This Environmental Specification table indicates the conditions for testing the device. Real world usages may affect the results.

4.4 Mean Time Between Failures (MTBF)

Mean Time Between Failures (MTBF) is predicted based on reliability data for the individual components in SV250-M242. The prediction result for SV250-M242 is more than 3,000,000 hours.

Note: The MTBF is predicated and calculated based on "Telcordia Technologies Special Report, SR-332, Issue 3" method.

4.5 Certification and Compliance

SV250-M242 complies with the following standards:

- CE
- FCC
- RoHS Recast
- MIL-STD-810G

4.6 Endurance

The endurance of a storage device is predicted by Drive Writes Per Day based on several factors related to usage, such as the amount of data written into the drive, block management conditions, and daily workload for the drive. Thus, key factors, such as Write Amplifications and the number of P/E cycles, can influence the lifespan of the drive.

Table 4-4 Endurance Specifications

Capacity	Drive Writes Per Day
120 GB	2.03
240 GB	2.28
480 GB	2.21
960 GB	2.34

Notes:

- This estimation complies with JEDEC JESD-219, Enterprise endurance workload of random data with payload size distribution.
- Flash vendor guaranteed 3D NAND TLC P/E cycle: 3K
- WAF may vary from capacity, flash configurations and writing behavior on each platform.
- 1 Terabyte = 1,024 GB
- DWPD (Drive Write Per Day) is calculated based on the number of times that user overwrites the entire capacity of an SSD per day of its lifetime during the warranty period. (3D NAND TLC warranty: 3 years)

4.7 LED Indicator Behavior

The behavior of the SV250-M242 LED indicators is described in Table 4-5.

Table 4-5 LED Behavior

Location	LED	Description
LED A	HDDA1	LED blinks when the drive is being accessed



5. Flash Management

5.1 Error Correction/Detection

SV250-M242 implements a hardware ECC scheme, based on the Low Density Parity Check (LDPC). LDPC is a class of linear block error correcting code which has apparent coding gain over BCH code because LDPC code includes both hard decoding and soft decoding algorithms. With the error rate decreasing, LDPC can extend SSD endurance and increase data reliability while reading raw data inside a flash chip.

5.2 Bad Block Management

Current production technology is unable to guarantee total reliability of NAND flash memory array. When a flash memory device leaves factory, it comes with a minimal number of initial bad blocks during production or out-of-factory as there is no currently known technology that produce flash chips free of bad blocks. In addition, bad blocks may develop during program/erase cycles. Since bad blocks are inevitable, the solution is to keep them in control. Apacer flash devices are programmed with ECC, page mapping technique and S.M.A.R.T to reduce invalidity or error. Once bad blocks are detected, data in those blocks will be transferred to free blocks and error will be corrected by designated algorithms.

5.3 Global Wear Leveling

Flash memory devices differ from Hard Disk Drives (HDDs) in terms of how blocks are utilized. For HDDs, when a change is made to stored data, like erase or update, the controller mechanism on HDDs will perform overwrites on blocks. Unlike HDDs, flash blocks cannot be overwritten and each P/E cycle wears down the lifespan of blocks gradually. Repeatedly program/erase cycles performed on the same memory cells will eventually cause some blocks to age faster than others. This would bring flash storages to their end of service term sooner. Global wear leveling is an important mechanism that levels out the wearing of all blocks so that the wearing-down of all blocks can be almost evenly distributed. This will increase the lifespan of SSDs.

5.4 Flash Translation Layer – Page Mapping

Page mapping is an advanced flash management technology whose essence lies in the ability to gather data, distribute the data into flash pages automatically, and then schedule the data to be evenly written. Page-level mapping uses one page as the unit of mapping. The most important characteristic is that each logical page can be mapped to any physical page on the flash memory device. This mapping algorithm allows different sizes of data to be written to a block as if the data is written to a data pool and it does not need to take extra operations to process a write command. Thus, page mapping is adopted to increase random access speed and improve SSD lifespan, reduce block erase frequency, and achieve optimized performance and lifespan.

5.5 TRIM

TRIM is a SATA command that helps improve the read/write performance and efficiency of solid-state drives (SSD). The command enables the host operating system to inform SSD controller which blocks contain invalid data, mostly because of the erase commands from host. The invalid will be discarded permanently and the SSD will retain more space for itself.

5.6 DataDefender™

Apacer's DataDefender is an advanced technology of power failure management which combines both firmware and hardware mechanisms to ensure data integrity. When power disruption occurs, the low voltage detector will be triggered. When this happens, the SSD's protection mechanism is activated and cuts off data transmission from the host. Once the power supply is resumed, the firmware protection mechanism will ensure the integrity of the firmware as well as the data already written into the NAND flash media.

5.7 ATA Secure Erase

ATA Secure Erase is an ATA disk purging command currently embedded in most of the storage drives. Defined in ATA specifications, (ATA) Secure Erase is part of Security Feature Set that allows storage drives to erase all user data areas. The erase process usually runs on the firmware level as most of the ATA-based storage media currently in the market are built-in with this command. ATA Secure Erase can securely wipe out the user data in the drive and protects it from malicious attack.

5.8 Device Sleep (DevSleep or DEVSLP) Mode

Device Sleep is a feature that allows SATA devices to enter a low power mode by designating a particular pin as DEVSLP signal with an aim to reducing power consumption.



Figure 5-1 Device Sleep

5.9 Hyper Cache Technology

Apacer proprietary Hyper Cache technology uses a portion of the available capacity as SLC (1bit-percell) NAND flash memory, called Hyper cache mode. When data is written to SSD, the firmware will direct the data to Hyper Cache mode, providing excellent performance to handle various scenarios in industrial use.

5.10 Over-provisioning

Over-provisioning (OP) is a certain portion of the SSD capacity exclusively for increasing Garbage Collection (GC) efficiency, especially when the SSD is filled to full capacity or performs a heavy mixed-random workload. OP has the advantages of providing extended life expectancy, reliable data integrity, and high sustained write performance.

5.11 DataRAID™

Apacer's DataRAID algorithm applies an additional level of protection and error-checking. Using this algorithm, a certain amount of space is given over to aggregating and resaving the existing parity data used for error checking. So, in the event that data becomes corrupted, the parity data can be compared to the existing uncorrupted data and the content of the corrupted data can be rebuilt.

5.12 SMART Read Refresh™

Apacer's SMART Read Refresh plays a proactive role in avoiding read disturb errors from occurring to ensure health status of all blocks of NAND flash. Developed for read-intensive applications in particular, SMART Read Refresh is employed to make sure that during read operations, when the read operation threshold is reached, the data is refreshed by re-writing it to a different block for subsequent use.

5.13 SATA Power Management

By complying with SATA 6 Gb/s specifications, the SSD supports the following SATA power saving modes:

- ACTIVE: PHY ready, full power, TX & RX operational
- PARTIAL: Reduces power, resumes in under 10 μs (microseconds)
- SLUMBER: Reduces power, resumes in under 10 ms (milliseconds)
- HIPM: Host-Initiated Power Management
- DIPM: Device-Initiated Power Management
- AUTO-SLUMBER: Automatic transition from partial to slumber.
- Device Sleep (DevSleep or DEVSLP): PHY powered down; power consumption ≤ 5 mW; host assertion time ≤ 10 ms; exit timeout from this state ≤ 20 ms (unless specified otherwise in SATA Identify Device Log).

Note: The behaviors of power management features would depend on host/device settings.

6. Security and Reliability Features

6.1 Advanced Encryption Standard

Advanced Encryption Standard (AES) is a specification for the encryption of electronic data. AES has been adopted by the U.S. government since 2001 to protect classified information and is now widely implemented in embedded computing applications. The AES algorithm used in software and hardware is symmetric so that encrypting/decrypting requires the same encryption key. Without the key, the encrypted data is inaccessible to ensure information security.

Notably in flash memory applications, AES 256-bit hardware encryption is the mainstream to protect sensitive or confidential data. The hardware encryption provides better performance, reliability, and security than software encryption. It uses a dedicated processor, which is built inside the controller, to process the encryption and decryption. This enormously shortens the processing time and makes it efficient.

6.2 TCG Opal (optional)

Developed by the Trusted Computing Group (TCG), an organization whose members work together to formulate industry standards, Opal is a set of security specifications used for applying hardware-based encryption to storage devices.

Hardware encryption has many advantages. First of all, it transfers the computational load of the encryption process to dedicated processors, reducing the stress on the host system's CPU. In addition, storage devices complying with Opal specifications are self-encryption devices. Opal specifications also feature boot authentication. When the drive is being accessed, the shadow MBR will request the drive password at boot. The drive will only unlock and decrypt if the correct password is supplied. The other feature is LBA-specific permissions. Users are assigned different permissions for LBA ranges created by the device administrator. Each LBA range is password-protected and can only be accessed by users with the correct key to perform permitted actions (read/write/erase).

6.3 Thermal Sensor

Apacer Thermal Sensor is a digital temperature sensor with serial interface. By using a designated pin for transmission, storage device owners are able to read temperature data.

6.4 End-to-End Data Protection

End-to-End Data Protection is a feature implemented in Apacer SSD products that extends error control to cover the entire path from the host computer to the drive and back, and ensure data integrity at multiple points in the path to enable reliable delivery of data transfers. Unlike ECC which does not exhibit the ability to determine the occurrence of errors throughout the process of data transmission, End-to-End Data Protection allows SSD controller to identify an error created anywhere in the path and report the error to the host computer before it is written to the drive. This error-checking and error-reporting mechanism therefore guarantees the trustworthiness and reliability of the SSD.

7. Software Interface

7.1 Command Set

This section defines the software requirements and the format of the commands the host sends to SV250-M242. Commands are issued to SV250-M242 by loading the required registers in the command block with the supplied parameters, and then writing the command code to the Command register.

Table 7-1 Command Set

Code	Command	Code	Command
E5h	CHECK POWER MODE	F4h	SECURITY ERASE UNIT
06h		F5h	SECURITY FREEZE LOCK
92h	DATA SET MANAGEMENT	F1h	
	DOWNLOAD MICROCODE		SECURITY SET PASSWORD
90h	EXECUTE DEVICE DIAGNOSTIC	F2h	SECURITY UNLOCK
E7h	FLUSH CACHE	70h	SEEK
EAh	FLUSH CACHE EXT	EFh	SET FEATURES
ECh	IDENTIFY DEVICE	C6h	SET MULTIPLE MODE
E3h	IDLE	E6h	SLEEP
E1h	IDLE IMMEDIATE	B0h	SMART
91h	INITIALIZE DEVICE PARAMETERS	E2h	STANDBY
E4h	READ BUFFER	E0h	STANDBY IMMEDIATE
C8h	READ DMA	E8h	WRITE BUFFER
25h	READ DMA EXT	CAh	WRITE DMA
60h	READ FPDMA QUEUED	35h	WRITE DMA EXT
C4h	READ MULTIPLE	3Dh	WRITE DMA FUA EXT
29h	READ MULTIPLE EXT	61h	WRITE FPDMA QUEUED
2Fh	READ LOG EXT	3Fh	WRITE LOG EXT
47h	READ LOG DMA EXT	57h	WRITE LOG DMA EXT
20h	READ SECTOR	C5h	WRITE MULTIPLE
24h	READ SECTOR EXT	39h	WRITE MULTIPLE EXT
40h	READ VERIFY SECTORS	CEh	WRITE MULTIPLE FUA EXT
42h	READ VERIFY SECTORS EXT	30h	WRITE SECTOR
10h	RECALIBRATE	34h	WRITE SECTOR EXT
F6h	SECURITY DISABLE PASSWORD	45h	WRITE UNCORRECTABLE EXT
F3h	SECURITY ERASE PREPARE		

Table 7-2 Trusted Computing Feature Set

Code	Command	Code	Command
5Ch	TRUSTED RECEIVE	5Eh	TRUSTED SEND
5Dh	TRUSTED RECEIVE DMA	5Fh	TRUSTED SEND DMA

Note: This feature set is only applicable to products implemented with AES and Opal functions.

7.2 S.M.A.R.T.

S.M.A.R.T. is an abbreviation for Self-Monitoring, Analysis and Reporting Technology, a self-monitoring system that provides indicators of drive health as well as potential disk problems. It serves as a warning for users from unscheduled downtime by monitoring and displaying critical drive information. Ideally, this should allow taking proactive actions to prevent drive failure and make use of S.M.A.R.T. information for future product development reference.

Apacer devices use the standard SMART command B0h to read data out from the drive to activate our S.M.A.R.T. feature that complies with the ATA/ATAPI specifications. S.M.A.R.T. Attribute IDs shall include initial bad block count, total later bad block count, maximum erase count, average erase count, power on hours and power cycle. When the S.M.A.R.T. Utility running on the host, it analyzes and reports the disk status to the host before the device reaches in critical condition.

Note: Attribute IDs may vary from product models due to various solution design and supporting capabilities.

Apacer memory products come with S.M.A.R.T. commands and subcommands for users to obtain information of drive status and to predict potential drive failures. Users can take advantage of the following commands/subcommands to monitor the health of the drive.

Table 7-3 SMART Subcommand Set

Code	SMART Subcommand
D0h	READ DATA
D1h	READ ATTRIBUTE THRESHOLDS
D2h	ENABLE/DISABLE ATTRIBUTE AUTOSAVE
D4h	EXECUTE OFF-LINE IMMEDIATE
D5h	SMART READ LOG
D6h	SMART WRITE LOG
D8h	ENABLE OPERATIONS
D9h	DISABLE OPERATIONS
DAh	RETURN STATUS

Table 7-4 General SMART Attribute Structure

Byte	Description
0	ID (Hex)
1 – 2	Status Flag
3	Value
4	Worst
5*-11	Raw Data

*Byte 5: LSB

Apacer

Table 7-5 SMART Attribute ID List

ID (Hex)	Attribute Name
9 (0x09)	Power-on Hours
12 (0x0C)	Power Cycle Count
163 (0xA3)	Maximum Erase Count
164 (0xA4)	Average Erase Count
166 (0xA6)	Total Later Bad Block Count
167 (0xA7)	SSD Protect Mode (Vendor Specific)
168 (0xA8)	SATA PHY Error Count
171 (0xAB)	Program Fail Count
172 (0xAC)	Erase Fail Count
175 (0xAF)	Bad Cluster Table Count
192 (0xC0)	Unexpected Power Loss Count
194 (0xC2)	Temperature
231 (0xE7)	Lifetime Left
241 (0xF1)	Total Sectors of Write

8. Electrical Specifications

8.1 Operating Voltage

Table 8-1 lists the supply voltage for SV250-M242.

Table 8-1 Operating Range

Item	Range
Supply Voltage	3.3V ± 5%

8.2 Power Consumption

Table 8-2 lists the power consumption for SV250-M242.

Table 8-2 Power Consumption (Unit: mA)

Capacity	120 GB	240 GB	480 GB	960 GB
Active (Max.)	300	370	370	380
Idle	60	60	60	60

Notes:

• All values are typical and may vary depending on flash configurations or host system settings.

Power consumption is measured using CrystalDiskMark 8.0.4.

9. Mechanical Specifications

9.1 Dimensions

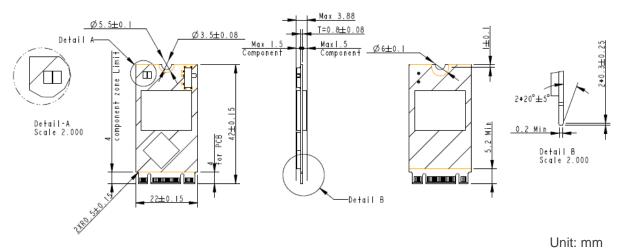


Figure 9-1 Physical Dimensions

9.2 Net Weight

Table 9-1 Net Weight

Capacity	Net Weight (g ± 5%)
120GB	3.45
240GB	3.86
480GB	3.54
960GB	3.65

10. Product Ordering Information

10.1 Product Code Designations

Apacer's SV250-M242 SSD is available in different configurations and densities. See the chart below for a comprehensive list of options for the SV250-M242 series devices.

Codo	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Code	Α	3	2		Χ	Χ	5	Χ	Χ	В		Χ	Χ	Χ	Е	Χ

Code 1-3 (Product Line & Form Factor)	SATA M.2 2242
Code 5-6 (Model/Solution)	25: SV250 A1: SV250 with TCG Opal
Code 7-8 (Product Capacity)	5H: 120GB 5J: 240GB 5K: 480GB 5L: 960GB
Code 9 (Flash Type & Product Temp)	G: 3D TLC Standard temperature H: 3D TLC Wide temperature
Code 10 (Product Spec)	Double Side B+M key
Code 12-14 (Version Number)	Random numbers generated by system
Code 15-16 (Firmware Version)	EM: Thermal Sensor DEVSLP OP Standard Temp EF: Thermal Sensor DEVSLP OP Wide Temp EE: Thermal Sensor DEVSLP TCG Opal OP Standard Temp EB: Thermal Sensor DEVSLP TCG Opal OP Wide Temp

10.2 Valid Combinations

The following tables list the available models of the SV250-M242 series which are in mass production or will be in mass production. Consult your Apacer sales representative to confirm availability of valid combinations and to determine availability of new combinations.

10.2.1 Without TCG Opal

Capacity	Standard Temperature	Wide Temperature
120GB	A32.255HGB.003EM	A32.255HHB.003EF
240GB	A32.255JGB.004EM	A32.255JHB.003EF
480GB	A32.255KGB.004EM	A32.255KHB.004EF
960GB	A32.255LGB.003EM	A32.255LHB.003EF

10.2.2 With TCG Opal

Capacity	Standard Temperature	Wide Temperature
120GB	A32.A15HGB.002EE	A32.A15HHB.002EB
240GB	A32.A15JGB.002EE	A32.A15JHB.002EB
480GB	A32.A15KGB.002EE	A32.A15KHB.002EB
960GB	A32.A15LGB.001EE	A32.A15LHB.001EB

Apacer

Revision History

Revision	Description	Date
1.0	Initial release	11/29/2021
1.1	Updated endurance rating at Endurance on Specifications Overview page and Table 4-4	6/29/2022
	- Added 120GB, 960GB, wide temperature and TCG Opal support	
	- Updated Performance, Endurance and Power Consumption on Specifications Overview page and Table 4-2, 4-4 and 8-2	
1.2	- Updated warranty period from 2 years to 3 years at the notes for 4.6 Endurance	7/28/2022
	- Added 6.2 TCG Opal and Table 7-2	
	- Updated 10. Product Ordering Information by adding codes for 120GB and 960GB, wide temperature and firmware versions	
1.3	Modified the product photo at 4.7 LED Indicator Behavior	11/9/2022

Global Presence

Taiwan (Headquarters)

Apacer Technology Inc.

1F., No.32, Zhongcheng Rd., Tucheng Dist., New Taipei City 236, Taiwan R.O.C.

Tel: 886-2-2267-8000 Fax: 886-2-2267-2261 amtsales@apacer.com

Japan

Apacer Technology Corp.

6F, Daiyontamachi Bldg., 2-17-12, Shibaura, Minato-Ku, Tokyo, 108-0023, Japan

Tel: 81-3-5419-2668 Fax: 81-3-5419-0018 jpservices@apacer.com

China

Apacer Electronic (Shanghai) Co., Ltd

Room D, 22/FL, No.2, Lane 600, JieyunPlaza, Tianshan RD, Shanghai, 200051, China

Tel: 86-21-6228-9939 Fax: 86-21-6228-9936 sales@apacer.com.cn

U.S.A.

Apacer Memory America, Inc.

46732 Lakeview Blvd., Fremont, CA 94538

Tel: 1-408-518-8699 Fax: 1-510-249-9551 sa@apacerus.com

Europe

Apacer Technology B.V.

Science Park Eindhoven 5051 5692 EB Son,

The Netherlands
Tel: 31-40-267-0000
Fax: 31-40-290-0686
sales@apacer.nl

India

Apacer Technologies Pvt Ltd,

1874, South End C Cross, 9th Block Jayanagar, Bangalore-560069, India

Tel: 91-80-4152-9061/62 Fax: 91-80-4170-0215 sales india@apacer.com