
Technical Data Sheet		Rosenberger			
4.3-10	Open Circuit	64K12L-000S3			

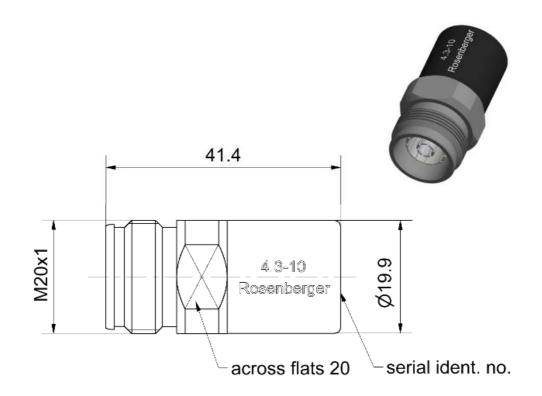

All dimensions are in mm; tolerances according to ISO 2768 m-H

Interface	
According to	IEC 61169-54

Documents	
Application note	AN001 "Calibration Services"

Material and plating					
Connector parts	Material	Plating			
Center conductor	CuBe	Gold, min. 1.27 μm, over nickel			
Outer conductor	CuBe or equiv.	Silver, 3-6 μm			
Dielectric	PTFE	•			

Tel. : +49 8684 18-0

Email: info@rosenberger.de

Rosenberger Hochfrequenztechnik GmbH & Co. KG P.O.Box 1260 D-84526 Tittmoning Germany www.rosenberger.de

Page

1/3

Dieses Dokument ist urheberrechtlich geschützt • This document is protected by copyright • Rosenberger Hochfrequenztechnik GmbH & Co.

RF 35/09.14/6.2

Technical Data Sheet

Rosenberger

4.3-10

Open Circuit Jack

64K12L-000S3

Electrical data

Frequency range DC to 12 GHz

Return loss \leq 0.15 dB, DC to 12 GHz

Error from nominal phase¹ $\leq 2.0^{\circ}$, DC to 4 GHz

≤ 2.5°, 4 GHz to 6 GHz ≤ 3.0°, 6 GHz to 12 GHz

Mechanical data

 $\begin{array}{ll} \text{Mating cycles} & \geq 100 \\ \text{Maximum torque} & 5 \text{ Nm} \\ \text{Recommended torque} & 2 \text{ Nm} \\ \end{array}$

Gauge 3.10 mm to 3.20 mm

General standard definitions

For proper operation the vector network analyzer (VNA) needs a model describing the electrical behaviour of this calibration standard. The different models, units, and terms used will depend on the VNA type and they will have to be entered into the VNA. All values are based on typical geometry and plating.

 $\begin{array}{lll} \mbox{Offset Z_{\circ} / Impedance / Z_{\circ}} & 50 \ \Omega \\ \mbox{Offset Delay} & 80.055 \ ps \\ \mbox{Length (electrical) / Offset Length} & 24.00 \ mm \\ \mbox{Offset Loss} & 0.70 \ G\Omega/s \\ \mbox{Loss} & 0.0097 \ dB/\sqrt{\mbox{GHz}} \end{array}$

Fringing Capacitances²

Environmental data

Operating temperature range³ +20 °C to +26 °C
Rated temperature range of use⁴ 0 °C to +50 °C
Storage temperature range -40 °C to +85 °C

RoHS compliant

Tel. : +49 8684 18-0

Email: info@rosenberger.de

¹ The nominal phase is defined by the Offset Delay, the Offset Loss and the Fringing Capacitances.

² Fringing Capacitances are determined individually for each open circuit and are documented in a Calibration Certificate.

³ Temperature range over which these specification are valid.

⁴ This range is underneath and above the operating temperature range, within the open circuit is fully functional and could be used without damage.

Technical Data Sheet Rosenberger 4.3-10 Open Circuit Jack 64K12L-000S3

Declaration of calibration options

Factory Calibration

Standard delivery for this calibration standard includes a Factory Calibration. The Calibration Certificate issued reports individual calibration results, traceable to national / international standards. Model based standard definitions are individually optimized and reported in an Agilent/Keysight, Rohde & Schwarz and Anritsu compatible VNA format.

Accredited Calibration

Not available.

For further, more detailed information see application note AN001 on the Rosenberger homepage.

Calibration interval

Recommendation

12 months

Packing

Standard Weight 1 pce in box 45.0 g/pce

While the information has been carefully compiled to the best of our knowledge, nothing is intended as representation or warranty on our part and no statement herein shall be construed as recommendation to infringe existing patents. In the effort to improve our products, we reserve the right to make changes judged to be necessary.

Draft	Date	Approved	Date		Rev.	Engineering change number	Name		Date
Marcel Panicke	02.09.16	Markus Müller	02.08.18		c00	18-1361	Marion Striegler	r	02.08.18
Rosenberger Hochfrequenztechnik GmbH & Co. KG					40.0004.40.0			Page	

Rosenberger Hochfrequenztechnik GmbH & Co. KG P.O.Box 1260 D-84526 Tittmoning Germany www.rosenberger.de

Tel. : +49 8684 18-0 Email : info@rosenberger.de

3/3