

Auto-Tuning Fiber-Optic Sensor

E3X-N

High Performance DC Amplifier with Pushbutton Sensitivity Adjustment

- Maintenance is made easier with pushbutton sensitivity adjustment
- Sensing distance is up to 100% longer than standard amplifiers
- Choose either single channel or four channel models
- Compact housing: 32 mm and 10 mm housing widths
- Four amplifiers in a single housing saves space and wiring
- Four fiber-optic cables can be mounted directly next to each other without mutual interference



Ordering Information _____

Туре		Single channel		Four channel
Off-delay timer		None	Provided	Provided
Remote teach input		None	Provided	Provided
Part number	NPN output	E3X-NT11	E3X-NT21	E3X-NM11
	PNP output	E3X-NT41	E3X-NT51	E3X-NM41

■ FIBER-OPTIC CABLES

Please see the E32 Fiber-Optic Cables section.


ACCESSORIES


Description	Part number
Replacement protective cover for E3X-NT	E39-G8
Replacement protective cover for E3X-NM	E39-G9

Specifications _____


Description			General-purpose	Multi-function	Four-channel
Part number		NPN	E3X-NT11	E3X-NT21	E3X-NM11
		PNP	E3X-NT41	E3X-NT51	E3X-NM41
Supply volta	ge		12 to 24 VDC \pm 10%, $^{\circ}$	10% ripple max.	
Current cons	sumption		50 mA max.		150 mA max.
Required fib	er-optic cables		Please see the E32 Fit	per-Optic Cables section.	
Light source	1		Pulse modulated red L	ED (680 nm)	
Operation m	ode		Light-ON, Dark-ON (sw	vitch selectable)	
Sensitivity			Pushbutton setting (se	e operation section)	
Mutual interf	erence protection		Provided		
Remote tead	ch option		—	Provided	
Control output	DC solid state	Туре	NPN open collector PNP open collector		
		Max. load	100 mA, 30 VDC max.		
		Max. ON-state voltage drop	1 VDC max. at 100 mA	A	
Response ti	me		500 μs max. at rated d	etection distance	
Timing funct	ions		_	OFF: delay, 40 ms, se	electable ON or OFF
Circuit prote	ction		Output short circuit pro	tection, DC power reverse p	polarity protection
Teaching co	nfirmation function		Indicators (red/green L	ED) and buzzer	
Indicators			Operation (orange LED) and output stability (green	1 LED)
Materials		Case	PBT plastic		
		Cover	Polycarbonate		
Mounting			DIN-rail track, or on flat	t surface through holes in br	racket (provided)
Connections	;	Pre-leaded	3 conductor cable, 2 m (6.5 ft)	4 conductor cable, 2 m (6.5 ft)	7 conductor cable, 2 m (6.5 ft)
Weight			100 g (3.5 oz.) with 2 n	n cable	
Enclosure ra	atings	UL	<u> </u>		
		NEMA	_		
		IEC	IP 50 (with cover on)		
Approvals		UL	_		
		CSA	_		
Ambient tem	perature		Operating: -25°C to 55°C (-13°F to 131°F) with no ice buildup		
			Storage: -40°C to 70°C	C (-40°F to 158°F)	

OUTPUT CIRCUIT DIAGRAMS

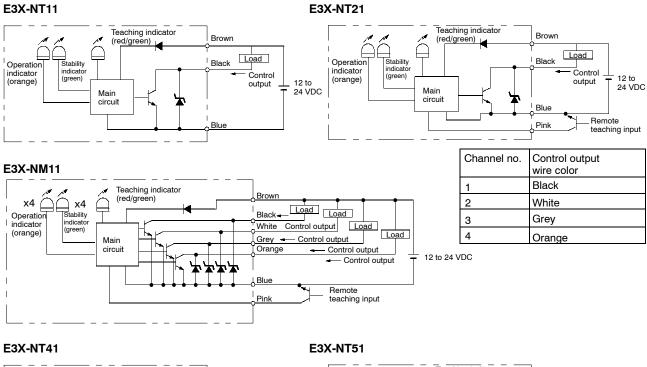



E3X-NM41

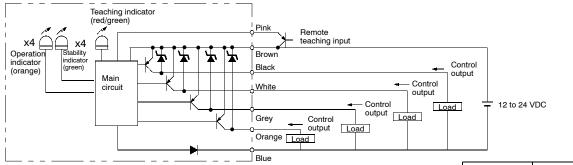

Channel no.	Control output wire color
1	Black
2	White
3	Grey
4	Orange

E3X-NM11 (NPN) E3X-NM41 (PNP)

SELECT

ALL

FACH

Four operation indicators (orange) Four stability _____ indicators (green)

Channel selector

Teaching button

Operation mode selectors

Mode selector

Teaching indicator (red/green)

Nomenclature

E3X-NT11 (NPN) E3X-NT21 (NPN) E3X-NT41 (PNP) E3X-NT51 (PNP)
Operation indicator (orange) Stability indicator (green) Teaching indicator (red/green) Teaching button TEACH
Mode selector ON RUN Timer switch (see note) F- riMER Operation mode selector C WALE IN ASYN
Note: The E3X-NT11 or E3X-NT41 do

Operation

not have a timer function.

■ CHOOSING THE RIGHT TEACHING METHOD

Refer to the following table to select the most suitable sensitivity setting method.

Teaching method	Maximum sensitivity setting	No-object teaching	With/Without-object teaching
Typical application	Detection of the existence of objects that interrupt light perfectly	If teaching is impossible by stopping the movement of sensing objects	Detection of a slight difference in reflection Color discrimination
	Detection of objects with no background objects	To detect bright or dark objects by teaching only with background objects	Background objects with unstable reflection
		,	Detection of object surface irregularities
		Elimination of background object in	nfluence

Note: 1. None of the four channels has any output when the E3X-NM (four channels) is in teaching mode (i.e., all the four channels will be in teaching mode).

2. If the set distance is very short (i.e., 0 to 12 mm for the E32-TC200 and 0 to 4 mm for the E32-DC200), no-object teaching is not possible due to excessive light, in which case, perform with/without-object teaching.

3. In principle, use the E3X-NM (four channels) for the close connection of a maximum of four Fiber Units. When closely connecting two to three Fiber Units to more than one E3X-NT (one channel), perform with/without-object teaching, in which case teaching must be performed on a single E3X-NT at a time. Therefore, turn on only the E3X-NT on which teaching is performed. If all the E3X-NTs are turned on, interrupt the emitters of the Fiber Units on which teaching is not performed.

MAXIMUM SENSITIVITY SETTING

Note: The sensitivity of the E3X-NT and E3X-NM are set to maximum before shipping. When resetting the sensitivity of the E3X-NT or E3X-NM to maximum after no-object teaching or with/without-object teaching, follow the steps described below.

Procedure	Operation	E3X-NT	E3X-NM
1	Locate the sensor head within the rated sensing range with the E3X-N		
2	Set the mode selector to TEACH.		TEACH TIMER SET RUN
3	The flashing function of the E3X-N \square will be activated. Therefore, adjust the optical axes so that the tip of the emitting fiber will be lit. If the optical axes are divergent, the tip of the emitting fiber will flash and the built-in buzzer of the E3X-N \square will beep.		
4	Press the teaching button for three seconds minimum with or without a sensing object. In the case of the E3X-NM, select a channel with the channel selector, at which time the stability indicator for the selected channel will flash.	TEACH	
	The teaching indicator (red) turns green.		
	The built-in buzzer beeps once when the color of the teaching indicator is red.		
	The built-in buzzer beeps continuously when the color of the teaching indicator is green.		
	Note: The built-in buzzer will stop beeping when the teaching button is no longer being pressed.		
5	Set the mode selector to RUN to complete the sensitivity setting.	TEACH	TEACH — ■ TIMER ■
	The teaching indicator is OFF.	₿↓	
	Note: When the sensitivity is set to maximum, the sensitivity will be automatically adjusted regardless of the set distances of the fibers or light.	RUN	
6	Select the logical output required with the operation mode selector.		CH 1 2 3 4 L ON - D D D D ON - D D ON - D D D D D D D D D D D D D D D D D D

■ WITH/WITHOUT-OBJECT TEACHING

Procedure	Operation	E2Y NT	E3X-NM
	Operation	E3X-NT	E3X-INIVI
1	Locate the sensor head within the rated sensing range with the E3X-N \Box .		
2	Set the mode selector to TEACH.	TEACH TEACH RUN	TEACH - TIMER SET - RUN -
3	The flashing function of the E3X-N \square will be activated. Therefore, adjust the optical axes so that the tip of the emitting fiber will be lit. If the optical axes are divergent, the tip of the emitting fiber will flash and the built-in buzzer of the E3X-N \square will beep.		
4	Locate a sensing target in the sensing area and press the teaching button once. In the case of the E3X-NM, select a channel with the channel selector and press the teaching button, at which time the stability indicator for the selected channel will flash. Through-beam Model Reflective Model Reflective Model	TEACH	TEACH
	Light is in- terrupted. The teaching indicator (red) is lit. The built-in buzzer beeps once.		
<i>c</i>		-	
5	Move the object and press the teaching button. Through-beam Model Reflective Model Reflective Model Light is received. Base	TEACH	TEACH
	If teaching is OK: The teaching indicator (red) turns green. The built-in buzzer beeps once. If teaching is NG: The teaching indicator (red) starts flashing. The operation indicator also starts flashing. (E3X-NM) The built-in buzzer beeps 3 times. Change the position of the object and the sensing distance that have been set and repeat from the beginning.		1 1
6	Set the mode selector to RUN to complete the sensitivity setting. The teaching indicator (green) is OFF.	TEACH	TEACH – TIMER SET – RUN –
7	Select the logical output required with the operation mode selector.		CH 1 2 3 4 L ON - A A A A A A A A A A A A A A A A A A

Note: 1. Even if the E3X-N is turned off, the E3X-N will retain the sensitivity set at the time of teaching.

2. Channels (E3X-NM) are selected in the following order.

When all the channels are selected, it is possible to set the sensitivity of the E3X-NM on all channels.

→ 1 CH → 2 CH → 3 CH → 4 CH →

ALL -

NO-OBJECT TEACHING

Procedure	Operation	E3X-NT	E3X-NM
1	Locate the sensor head within the rated sensing range with the E3X-N		
2	Set the mode selector to TEACH.	TEACH T RUN	TEACH TIMER SET RUN
3	The flashing function of the E3X-N \square will be activated. Therefore, adjust the optical axes so that the tip of the emitting fiber will be lit. If the optical axes are divergent, the tip of the emitting fiber will flash and the built-in buzzer of the E3X-N \square will beep.		
4	Press the teaching button for 0.5 to 2.5 seconds without a sensing object. In the case the E3X-NM, select a channel with the channel selector and press the teaching button, at which time the stability indicator for the selected channel will flash. The teaching indicator (red) is lit. The built-in buzzer beeps once.	TEACH	TEACH
5	Set the mode selector to RUN. No-object teaching will be set when the first sensing object passes through the sensing area. The teaching indicator (red) turns green (automatically turned off in one second).	TEACH	TEACH – TIMER SET – RUN –
6	Select the logical output required with the operation mode selector.		CH 1 2 3 4 L ON - D D D D D D D D D D D D D D D D D D

Note: 1. To detect dark objects in front of bright backgrounds, set the operation mode selector to D. ON.

2. If the set distance is very short (i.e., 0 to 12 mm for the E32-TC200 and 0 to 4 mm for the E32-DC200), no-object teaching is not possible due to excessive light, in which case, perform with/without-object teaching.


- 3. If the teaching button is pressed for more than three seconds, the sensitivity of the E3X-N will be set to maximum, at which time the green indicator will be lit.
- 4. The E3X-N will be ready to detect objects in approximately one second after the mode selector is set to RUN.

SENSITIVITY ADJUSTMENT

Combination of the E3X-NT/E3X-NM and Fine Through-beam Fiber Units (E32-T22S/T24S/T84S)

No-object Teaching

Press the teaching button once with no object in the sensing area.



Note: If detection is not stable after no-object teaching, perform with/without-object teaching.

With/Without-object Teaching

_

Press the teaching button once with no object in the sensing area.

8

E3X-N OMRON E3X-

NOTE: DIMENSIONS SHOWN ARE IN MILLIMETERS. To convert millimeters to inches divide by 25.4.



OMRON ON-LINE

Global - http://www.omron.com USA - http://www.omron.com/oei Canada - http://www.omron.com/oci OMRON CANADA, INC. 885 Milner Avenue Scarborough, Ontario M1B 5V8 416-286-6465

Cat. No. CEDSAX4

11/01

Specifications subject to change without notice.

Printed in U.S.A.