

#### ISL85009EVAL1Z

**Evaluation Board User Guide** 

UG112 Rev.0.00 Feb 15, 2017

### **Description**

The ISL85009 is a 3.8V to 18V input, 9A synchronous buck regulator for applications with input voltage from multi-cell batteries or regulated 5V and 12V power rails. The device also provides an integrated bootstrap diode for the high-side gate driver to reduce the external parts count. The ISL85009EVAL1Z platform allows quick evaluation of the high-performance features of the ISL85009 buck regulator.

### **Specifications**

This board has been configured and optimized for the following operating conditions:

- Input voltage range from 4.5V to 18V
- 1.8V nominal output voltage
- · Up to 9A output current capability
- Default internally set to 600kHz switching frequency
- · Default internally set to 3ms soft-start
- Operating temperature range: -40°C to +85°C

# **Key Features**

- Switch selectable EN (enabled/disabled)
- · Frequency synchronization option
- Jumper selectable mode (DEM/Forced CCM)
- Jumper selectable OCP mode (Hiccup/Latch-Off)
- Jumper selectable frequency (600kHz/300kHz)
- . Connectors and test points for easy probing
- · Compact design

#### **Related Literature**

- · For a full list of related documents, visit our website
  - ISL85009 product page

# **Ordering Information**

| PART NUMBER    | DESCRIPTION                   |  |
|----------------|-------------------------------|--|
| ISL85009EVAL1Z | Evaluation board for ISL85009 |  |

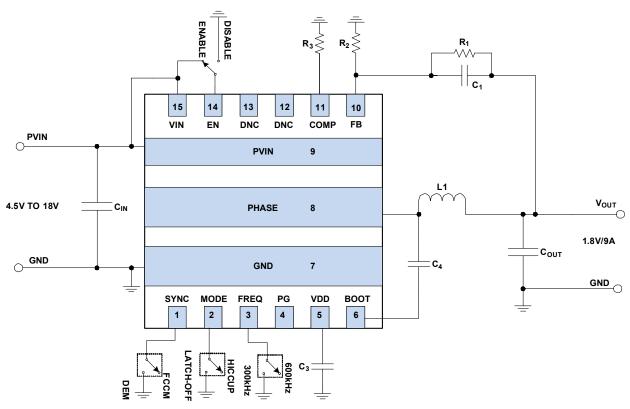


FIGURE 1. BLOCK DIAGRAM



# Connector and Test Point Descriptions

The ISL85009EVAL1Z evaluation board includes I/O connectors and test points as shown in Table 1.

**TABLE 1. CONNECTORS AND TEST POINTS** 

| REFERENCE<br>DESIGNATOR | DESCRIPTION   |
|-------------------------|---|
| J1                      | Input voltage positive connection                   |
| J2                      | Output voltage positive connection                  |
| J3                      | Input voltage return connection                     |
| J4                      | Output voltage return connection                    |
| J6                      | Two-position socket connector for PHASE to GND test |
| J7                      | Two-position socket connector for VOUT to GND test  |
| PVIN                    | PVIN positive test point                            |
| GND                     | GND test point                                      |
| VIN                     | VIN positive test point                             |
| VOUT                    | Output voltage positive test point                  |
| SYNC                    | External synchronization clock connection           |
| EN                      | Enable test point                                   |
| VDD                     | Internal LDO output test point                      |
| PG                      | Power-good output                                   |

# **Selection Switch and Jumper Descriptions**

· Switch SW5 (Enable)

The switch enables and disables the ISL85009:

- When the switch is in the ON position, ISL85009 enabled.
- When the switch is in the OFF position, ISL85009 disabled.
- Jumper J9

The jumper provides selection of different operating modes detailed as following:

- When the jumper is in the FCCM position, the ISL85009 operates in Forced CCM.
- When the jumper is in the DEM position, the ISL85009 operates in Diode Emulation mode and enables automatic transition from CCM to DCM at light-load conditions.
- Jumper J10 sets the switching frequency at either 600kHz or 300kHz.
- Jumper J11 sets the OCP scheme in either Hiccup mode or Latch-Off mode.

# **Quick Setup Guide**

Refer to the following instructions to configure and power-up the board for proper operation.

 Set the power supply voltage to 12V and turn off the power supply. Connect the positive output of the power supply to J1 (PVIN) and the negative output to J3 (GND).

- Connect an electronic load to J2 (VOUT) for the positive connection and J4 (GND) for the negative connection.
- 3. Measure the output voltage (test points VOUT and GND) with the voltmeter.
- 4. Place scope probes on VOUT test point (J7) and other test points of interest.
- 5. Toggle selection switch SW5 to ON position.
- Set the load current to be 0.1A and turn on the power supply.
   The output voltage should be in regulation with a nominal 1.8V output.
- Slowly increase the load up to 9A while monitoring the output voltage, which should remain in regulation with a nominal 1.8V output.
- 8. Slowly sweep VIN from 4.5V to 18V. The output voltage should remain in regulation with a nominal 1.8V output.
- 9. Decrease the input voltage to 0V to shut down the regulator.

### **Frequency Synchronization**

The ISL85009 can be synchronized to an external clock with frequency ranges from 100kHz to 1MHz by applying the external clock to test point SYNC on the ISL85009EVAL1Z evaluation board. The external clock should meet the specifications of pulse width and voltage level described in the ISL85009 datasheet.

# Evaluating Other Output Voltages

The ISL85009EVAL1Z has a nominal 1.8V output voltage. The output voltage is programmable by an external resistor divider formed by  $R_1$  and  $R_2$  as shown in Figure 1 on page 1.  $R_1$  is usually chosen first, then the value for  $R_2$  can be calculated based on  $R_1$  and the desired output voltage using Equation 1.

$$R_2 = \frac{R_1 \cdot 0.6V}{V_{OUT} - 0.6V} \tag{EQ. 1}$$

# **PCB Layout Considerations**

The PCB layout is critical for proper operation of the ISL85009. The following guidelines should be followed to achieve good performance.

- 1. Use a multilayer PCB structure to achieve optimized performance. A four-layer PCB is recommended for this design.
- Use a combination of bulk capacitors and smaller ceramic capacitors with lower ESL for the input capacitors, and place them as close to the IC as possible.
- 3. Place the VDD decoupling capacitor close to the IC between VDD and GND. A 1μF ceramic capacitor is typically used.
- Place a bootstrap capacitor close to the IC between the BOOT and PHASE pins. A 0.1µF ceramic capacitor is typically used.
- Connect the feedback resistor divider between the output capacitor positive terminal and AGND pin of the IC, and place the resistors close to the FB pin of the IC.
- Connect the GND of the IC to the ground planes underneath using multiple thermal vias to improve thermal performance.



# **ISL85009EVAL1Z Evaluation Board**



FIGURE 2. TOP VIEW

# ISL85009EVAL1Z Schematic

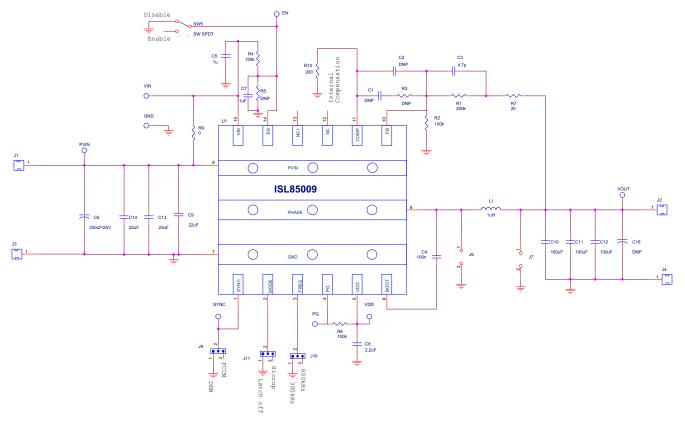


FIGURE 3. SCHEMATIC

# **Bill of Materials**

| MANUFACTURER<br>PART  | QTY | UNITS | REFERENCE<br>DESIGNATOR                       | DESCRIPTION  | MANUFACTURER                |
|-----------------------|-----|-------|---|--|-----------------------------|
| ISL85009EVAL1ZREVAPCB | 1   | ea    |   | PWB-PCB, ISL85009EVAL1Z, REVA, ROHS                              | IMAGINEERING INC            |
| 25SVPF330M            | 1   | ea    | C6  | CAP-OSCON, SMD, 10mm, 330 $\mu$ F, 25V, 20%, 14m $\Omega$ , ROHS | PANASONIC                   |
| GRM32ER71E226KE15L    | 3   | ea    | C9, C13, C14                                  | CAP, SMD, 1210, 22µF, 25V, 10%, X7R, ROHS                        | MURATA                      |
| C0402X7R500-102KNE    | 1   | ea    | C7  | CAP, SMD, 0402, 1000pF, 50V, 10%, X7R, ROHS                      | VENKEL                      |
| C1005X7R1H104K        | 1   | ea    | C4  | CAP, SMD, 0402, 0.1µF, 50V, 10%, X7R, ROHS                       | TDK                         |
| 04025A4R7CAT2A        | 1   | ea    | С3  | CAP, SMD, 0402, 4.7PF, 50V, 0.25pF, NPO, ROHS                    | AVX                         |
| GRM188R61E105KA12D    | 1   | ea    | C5  | CAP, SMD, 0603, 1µF, 25V, 10%, X5R, ROHS                         | MURATA                      |
| GRM188R71A225KE15D    | 1   | ea    | C8  | CAP, SMD, 0603, 2.2µF, 10V, 10%, X7R, ROHS                       | MURATA                      |
| GRM31CR60J107ME39L    | 3   | ea    | C10, C11, C12                                 | CAP, SMD, 1206, 100µF, 6.3V, 20%, X5R, ROHS                      | MURATA                      |
| 7443340100            | 1   | ea    | L1  | COIL-PWR INDUCTOR, SMD, 8.4x7.9, 1.0µH, 20%, 17A, WW, ROHS       | WURTH ELECTRONICS           |
| 111-0702-001          | 2   | ea    | J1, J2  | CONN-GEN, BIND.POST, INSUL-RED, THMBNUT-GND                      | JOHNSON COMPONENTS          |
| 111-0703-001          | 2   | ea    | J3, J4  | CONN-GEN, BIND.POST, INSUL-BLK, THMBNUT-GND                      | JOHNSON COMPONENTS          |
| 5002                  | 8   | ea    | VDD, SYNC, PG,<br>EN, GND, VIN,<br>PVIN, VOUT | CONN-MINI TEST POINT, VERTICAL, WHITE, ROHS                      | KEYSTONE                    |
| 68000-236HLF          | 3   | ea    | J9, J10, J11                                  | CONN-HEADER, 1x3, BREAKAWY 1x36, 2.54mm, ROHS                    | BERG/FCI                    |
| 929950-00             | 1   | ea    | Jumper  | CONN-JUMPER, SHORTING, 2PIN, BLK, OPEN TOP, 2.54mmPITCH, ROHS    | зм                          |
| ISL85009FRZ           | 1   | ea    | U1  | IC-9A BUCK REGULATOR, 15P, TDFN 3.5x3.5, ROHS                    | INTERSIL                    |
| ERJ2RKF20R0           | 1   | ea    | R7  | RES, SMD, 0402, 20Ω, 1/16W, 1%, TF, ROHS                         | PANASONIC                   |
| CR0402-16W-00T        | 1   | ea    | R9  | RES, SMD, 0402, 0Ω, 1/16W, 5%, TF, ROHS                          | VENKEL                      |
| ERJ2RKF1003           | 3   | ea    | R2, R4, R6                                    | RES, SMD, 0402, 100k, 1/16W, 1%, TF, ROHS                        | PANASONIC                   |
| ERJ-2RKF2000X         | 1   | ea    | R10   | RES, SMD, 0402, 200Ω, 1/16W, 1%, TF, ROHS                        | PANASONIC                   |
| MCR01MZPF2003         | 1   | ea    | R1  | RES, SMD, 0402, 200k, 1/16W, 1%, TF, ROHS                        | ROHM                        |
|                       | 0   | ea    | R3, R5  | RES, SMD, 0402, DNP, DNP, DNP, TF, ROHS                          |                             |
| GT11MSCBE             | 1   | ea    | SW5   | SWITCH-TOGGLE, SMD, 6PIN, SPDT, 2POS, ON-NONE-ON, ROHS           | ITT INDUSTRIES/C&K DIVISION |
| PMSSS 440 0025 PH     | 4   | ea    | Four corners                                  | SCREW, 4-40x1/4in, PHILLIPS, PANHEAD, STAINLESS, ROHS            | BUILDING FASTENERS          |
| 2204                  | 4   | ea    | Four corners                                  | STANDOFF, 4-40x3/4in, F/F, HEX, ALUMINUM, 0.25 OD, ROHS          | KEYSTONE                    |
| 212403-013            | 1   | ea    | Place assy in bag                             | BAG, STATIC, 5x8, ZIPLOC, ROHS                                   | INTERSIL                    |
| 310-87-102-41-001101  | 2   | ea    | J6, J7  | CONN-SOCKET STRIP, TH, 2P, 2.54mm PITCH, ROHS                    | PRECI-DIP                   |
|                       | 0   | ea    | C1, C2, C16                                   | DO NOT POPULATE OR PURCHASE                                      |                             |
| LABEL-DATE CODE       | 1   | ea    | AFFIX TO BACK<br>OF PCB                       | LABEL-DATE CODE_LINE 1: YRWK/REV#, LINE 2: BOM NAME              | INTERSIL                    |



# **ISL85009EVAL1Z PCB Layout**

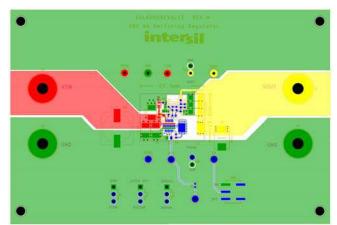


FIGURE 4. TOP LAYER

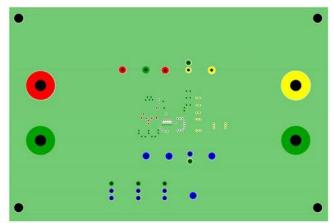


FIGURE 5. LAYER 2

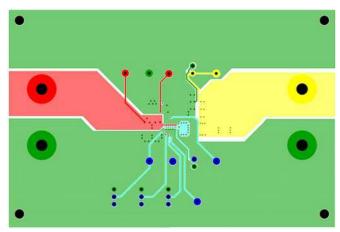


FIGURE 6. LAYER 3

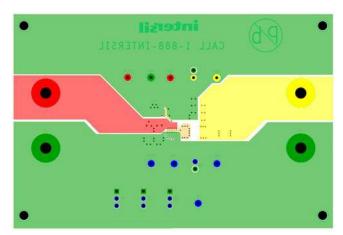
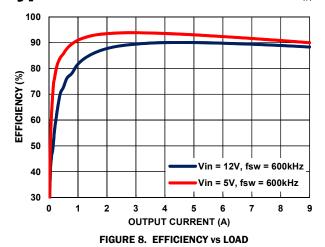


FIGURE 7. BOTTOM LAYER

# $\textbf{Typical Performance Curves} \quad v_{\text{IN}} = \textbf{12V}, \ v_{\text{OUT}} = \textbf{1.8V}, \ L = \textbf{1} \mu\text{H}, \ f_{\text{SW}} = 600 \text{kHz}, \ T_{\text{A}} = +25 \,^{\circ}\text{C}, \ unless \ otherwise \ noted. }$



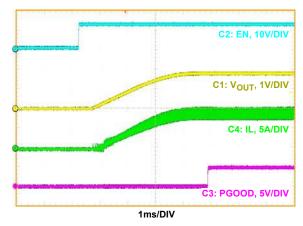


FIGURE 9. START-UP WITH EN, IOUT = 9A

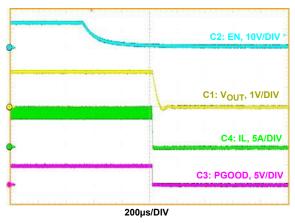


FIGURE 10. SHUTDOWN WITH EN, I<sub>OUT</sub> = 9A

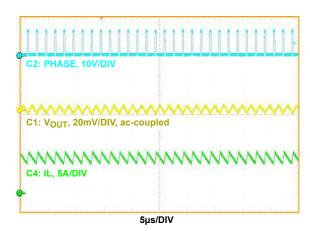


FIGURE 11. OUTPUT VOLTAGE RIPPLE, I<sub>OUT</sub> = 9A

© Copyright Intersil Americas LLC 2017. All Rights Reserved.

All trademarks and registered trademarks are the property of their respective owners.

Intersil Corporation reserves the right to make changes in circuit design, software and/or specifications at any time without notice. Accordingly, the reader is cautioned to verify that the document is current before proceeding.

For information regarding Intersil Corporation and its products, see <a href="https://www.intersil.com">www.intersil.com</a>

