# **FK-1417M-C** SHOCK ABSORBER - FIXED

# Bansbach easylift<sup>®</sup>



SPECIFICATIONS								
Model		Stroke mm	Max Absorption Energy J(kgf·m)		N	Max Equivalent Mass kg (kgf)		
FK-1417M	-C	17		14.7(1.5)	20(20)			
Max Drag N (kgf)	En	ax. Absorption ergy per min. nin(kgf∙m/min)		Extension Force N(kgf)	Mass g	Urethane Cap Specification (Type-R)		
2646(270)		235(24)		8.9(0.9) or lower	77	0		

Note) Insert R in place of C if ordering urethane cap

## **COMMON SPECIFICATIONS**

Range of Impact Rate	m/s	0.3~2
Maximum Cycle Rate	cycle/min	60
Operating Temperature	C°	-5~70

## **CHARACTERISTICS**

- With a fixed, specially-designed orifice structure, an optimal impact absorption can be achieved even under variable operating conditions.
- The main unit can also be used as a stopper. (No external stopper required, except for FK-3625A)
- Three different types are available to accommodate various speeds. For low-speed: L, for medium-speed: M, for highspeed: H.
- Urethane cap specification is also available.
- Two or more of each product can be used in parallel.
- This product can also be custom-designed for optimal impact absorption.


## PRECAUTIONS FOR USE

- Do not use this product without carefully reading the attached owner's manual.
- Do not turn the oil inlet screw located at the bottom of the main unit.
- Ensure that sufficient mounting strength is secured for this product.
  (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- Urethane caps are consumable goods that need to be replaced with new ones if necessary.
- Do not use this product in a vacuum or a location where it may come in contact with oil.
- Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: ±2.5°)
- Ensure that an external stopper (OP-020\*\*) is also used. (The FK-0404 series can be used without a stopper.)

## **OPTIONAL PARTS**

### Stopper nut OP-020RB

Adjust so that it stops 1 mm before the stroke end, and fasten with the main unit's nut until secured.

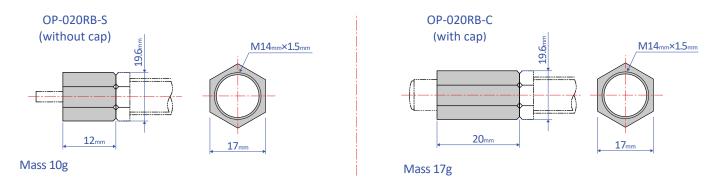

Note: When attaching, make sure that the side without a bearing chamfer is the impact surface.

#### Standard nuts are sold separately as well - M14 Nut

### Flange OP-040RB

This is a mounting fixture for soft absorbers

