


# **Electronic Components**

# Cannon 50 Ohm RF Connectors

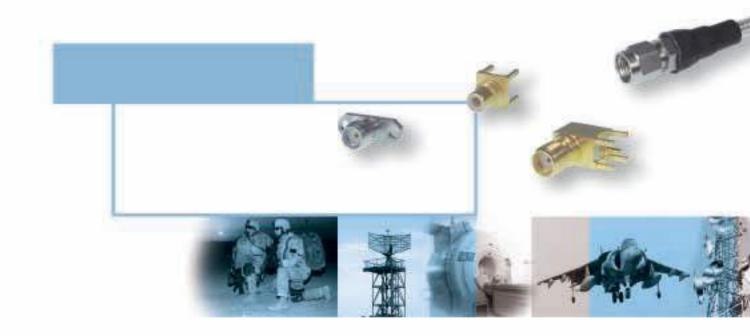

### Over 90 year history ...

ITT Electronic Components is an innovative and dynamic company with the in-depth experience of a 90 plus year industry leader. We are part of ITT Corporation, a multi-disciplined, multi-national company engaged in the design and manufacture of electronic components, defense products and fluid handling controls.

ITT operates globally and is active in many diverse markets including telecom, carrier networks, wireless, medical electronics, instrumentation, military, microwave components, information systems and radar. ITT is an approved manufacturer to ISO 9001 and ISO 14001.



# Broad range of Cannon connectors and cable assemblies

In addition to our 50 Ohm RF product line, we also offer a range of 75 Ohm connectors including Type 43 (SMZ), 1.0/2.3, 1.6/5.6 and BNC.

#### Cannon CoSMID™ connectors

CoSMID™ (Coax Surface Mount MID) 75 ohm connectors use molded interconnect device technology – a process which allows the selective metallization of 3D plastic shapes. Two, three or four coaxial connector lines can be integrated into a single surface mountable module. The modular design means that designers can incorporate more coax lines on a card edge than ever before.





#### QT - Quick Termination Connectors

Quick Termination connectors have the special QT contact pre-assembled into the main connector assembly, which eliminates the process of crimping or soldering onto the center conductor of a cable. The center conductor is terminated to the inner contact within the connector assembly, by activating the QT (patented) mechanism using the simple plastic tool provided. The assembly is completed in 4 simple steps.

- 1. Strip cable using standard tooling.
- 2. Assemble connector on to cable.
- 3. Press insulator into connector body.
- 4. Crimp the ferrule using standard hex crimp tool to complete the termination.

The QT principle may be applied to 50 Ohm products also. Contact our Customer Service group for more information.

CoSMID is a trademark of ITT Corporation.

CANNON, ENGINEERED FOR LIFE, the ITT "Engineered Blocks" symbol and the composite ITT logo are registered trademarks of ITT Corporation © 2007



#### TABLE OF CONTENTS

Description	Page
Selection Guide	4
SMA (Precision) Connectors	6
SMA (Commercial) Connectors	13
SMB Connectors	19
SMC Connectors	24
SSMB Connectors	27
SSMC Connectors	31
Coaxial Terminators	33
Between Series Adaptors	35
Sealflex 2 ™ Assemblies	37
Mounting Information	40
Assembly Instructions	41
Tooling	58
Glossary of Terms	60
Part Number Index	61
Product Safety Information	62

#### CABLE ASSEMBLY SERVICE

Cannon has a precision cable assembly facility for the manufacture and testing of a wide range of cable / connector assemblies. By using Cannon's considerable expertise in this field, the customer is relieved of expensive training, tooling and reject problems. This invariably offers economic and logistical advantages when compared to user assembly.

Rexible, semi-rigid and Sealflex 2 RF and microwave coaxial cable assemblies for DC to 40 GHz are manufactured to the most complex customer designs and exacting mechanical and electrical tolerances. A full range of MIL-C-17G proprietary flexible and semi-rigid cables are used as well as the Sealflex 2 fully flexible, low loss microwave cable. With computerized semi-rigid cable forming and Vector Network Analyzer test equipment cable assemblies are manufactured for quality conscious customers the world over. Our skills, experience and 100% electrical testing allow us to build products that meet or exceed expectations.

#### 75 OHM CONNECTORS

Cannon also offer a wide selection of 75 Ohm connectors for switching and transmission in telecom applications. These include the popular Type 43 (SMZ), 1.0/2.3, 1.6/5.6 and BNC connector ranges incorporating the CoSMID ™ surface mountable modular technology and the (patented) 'QT' quick termination designs. The CoSMID modular design allows designers to incorporate more coax lines on a card edge than ever before and the QT assembly eliminates the process of crimping or soldering onto the centre conductor of the cable.

#### **FAKRA CONNECTORS**

In addition to the range of SMB connectors we also offer FAKRA connectors for automotive applications.

For more details on any of the products listed above, please visit www.ittcannon.com.



#### **CONNECTOR / CABLE SELECTION GUIDE**

Given here are details of all popular cables with which the connectors in this publication may be used.


Cable numbers suitable for use with all cable mounting connectors are given opposite the connector part numbers in the series chosen.

Cable Number	Impedance	Diameter	Diameter of Outer	Diameter of	Diameter of Cente
	(ohms)	of Jacket	Conductor (Max)	Dielectric (Max)	Conductor (Nom)
BT3002	75	3,55 (.140)	2,85 (.112)	1,95 (.077)	0,31 (.012)
RD179*	75	3,07 (.121)	2,69 (.106)	1,68 (.066)	0,30 (.012)
RD316*	50	3,00 (.118)	2,79 (.101)	1,60 (.063)	0,51 (.020)
RG174/U	50	2,67 (.105)	2,24 (.088)	1,60 (.063)	0,48 (.019)
RG178/U	50	1,91 (.075)	1,37 (.054)	0,91 (.036)	0,30 (.012)
RG179/U	75	2,67 (.105)	2,13 (.084)	1,68 (.066)	0,30 (.012)
RG187/U	75	2,80 (.110)	2,13 (.084)	1,68 (.066)	0,30 (.012)
RG188/U	50	2,80 (.110)	2,06 (.081)	1,60 (.063)	0,51 (.020)
RG196/U	50	2,04 (.080)	1,37 (.054)	0,91 (.036)	0,30 (.012)
RG316/U	50	2,60 (.102)	2,06 (.081)	1,60 (.063)	0,51 (.020)
RG402/U	50	-	3,61 (.142)	3,05 (.120)	0,91 (.036)
RG405/U	50	-	2,18 (.086)	1,70 (.067)	0,51 (.020)
TZC75024	75	3,55 (.140)	3,01 (.119)	1,95 (.077)	0,31 (.012)
RG141	50	4,95 (.195)	3,71 (.146)	3,07 (.121)	0,99 (.039)
RG142	50	5,08 (.200)	4,34 (.171)	3,07 (.121)	0,99 (.039)

<sup>\*</sup> Double shielded

#### PART NUMBER GUIDE

This table shows how the part numbers for coaxial connectors are constructed.

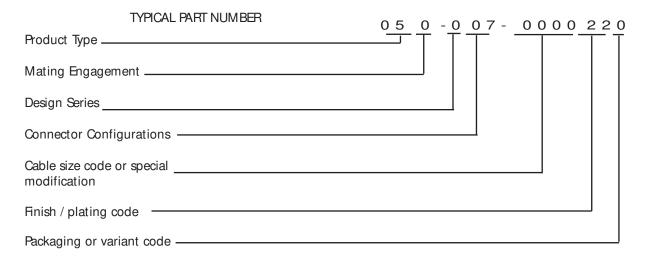



#### **QUICK REFERENCE SELECTION GUIDE**

	0		ST.	5	-	See Marie
Series	SM A Precision	SM A Commercial	SMB	SMC	SSMB	SSMC
Description	Coaxial connector for rugged environments	Robust economical coaxial connectors	Rapid connect /disconnect coaxial connectors	Vibration resistant coaxial connectors	Microminiature rapid connect / disconnect coaxial connectors	Microminiature rapid connect / disconnect coaxial connectors
Frequency	DC - 18 GHz	DC - 18 GHz	DC - 4 GHz	DC - 12.4 GHz	DC - 4 GHz	DC - 4 GHz
Impedance	50Ω	50Ω	50Ω	50Ω	50Ω	50Ω
Cable Type	Rexible/ semi-rigid	Hexible/ semi-rigid	Rexible	Rexible	Rexible	Hexible
Coupling	Screw	Screw	Snap-on	Screw	Snap-on	Screw
Body Material	Stainless steel or beryllium copper	Brass	Brass	Brass	Brass	Brass
Body Finish	Gold or passivated	Gold over nickel	Gold or nickel	Gold or nickel	Gold or nickel	Gold or nickel
Page Number	6	13	19	24	27	31

	0	6	
Series	Coaxial Terminators	Between Series Adaptor	SEALFLEX 2 ™
Description	Provide permanent coaxial connections to printed circuit boards	High efficiency transitions between various coaxial connector series	High performance flexible microwave cable assemblies
Frequency	DC - 4 GHz	DC - 18 GHz	DC - 18 GHz
Impedance	N/A	50Ω	50Ω
Cable Type	Rexible	N/A	Hexible
Coupling	N/A	Various	Screw
Body Material	Copper alloy	Stainless steel or brass	Stainless steel (connectors)
Body Finish	Bectroplated tin	Gold or passivated	Passivated (connectors)
Page Number	33	35	37






**Key Features** 


- Military grade
- · Rugged stainless steel design
- Intermateable with all SMAs to Mil-C-39012
- Frequency range DC to 18 GHz

Cannon's precision SMA connectors feature the MIL-C-39012 Series SMA interface and envelope configuration. They can be mated with all connectors meeting the MIL specification dimensions. Designed for use with a variety of subminiature coaxial cables, superior results are obtained from DC to 18 GHz when used with semirigid cables and from DC to 12.4 GHz with flexible cable. These connectors are manufactured with beryllium copper bodies which are gold plated or stainless steel bodies which can be supplied with either a gold plated or passivated finish.

Cannon also offers a range of commercial SMA brass bodied connectors. For further details, please see page 13.

#### **MATING INTERFACES**

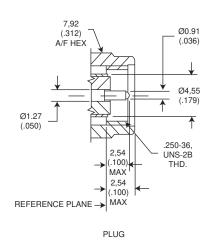

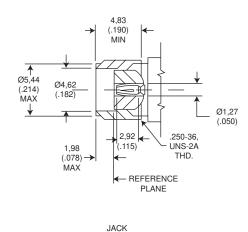




ELECTRICAL	Impedance	$50\Omega$ nominal			
	Frequency Range	0 to 18.0 GHz			
	Voltage Rating	Connectors for RG178/U series cable: At Sea Level= 170 Vrms. At 21km (70k feet) = 45 Vrms			
		Connectors for RG316/U series cable: At Sea Level = 250 Vrms. At $21 \text{km}$ ( $70 \text{k}$ feet) = 65 Vrms			
		Connectors for RG142	2/U series cable: At Sea Lew	el = 335 Vrms. At 21km (70k feet) = 85 Vrms	
	Insulation Resistance	5000 MΩ minimum			
	Contact resistance	Center Contact = 3.0 m $\Omega$ maximum initial. 4.0 m $\Omega$ maximum after environment			
		Outer Contact = 2.0 r	m $\Omega$ maximum initial. 2.0	m $\Omega$ maximum after environment	
		Braid to Body = 0.5 m	$\Omega$ maximum		
	Contact Current Rating	2.0 A dc maximum			
	Insertion Loss	0.06 x √ freq. GH	z tested at 6 GHz		
	RF Leakage	-60 dB minimum @ 2	- 3 GHz		
			Connector Configur	ation	
Voltage Stand	ding Wave Ratio (VSWR)	Cable group	Straight	Right Angle	
To 18 GHz	or 80% of upper cut-off	RG178/U braided	1.20 + .025F	1.20 + .03F	
equency of the ca	ble, whichever is lower.	RG316/U braided	1.15 + .02F	1.15 + .03F	
Applicable to 50	$\Omega$ cables only.(F = GHz)	RG142/U braided	1.15 + .01F	1.15 + .02F	
	standing Voltage (DWV)	Connectors used with	RG316/U series cable =	750 Vrms @ Sea Level	
	Corona Level	Connectors used with	RG316/U series cable =	190 V @ 21km (70k feet) minimum	
MECHANICAL	Engagement Design	SMA per MIL-C-39012	SMA per MIL-C-39012, Series SMA		
	Engagement Forces	Torque: 0.23 Nm (2 in	Torque: 0.23 Nm (2 in. lbs.) maximum		
	Contact Torque	0.03 Nm (4 in. ozs.) m	0.03 Nm (4 in. ozs.) minimum. (For captivated contacts)		
	Mating Torque	0.8 Nm to 1.1 Nm (7	0.8 Nm to 1.1 Nm (7 to 10 in. lbs.)		
	Locknut Torque	1.4 Nm to 1.7 Nm (12 to 15 in. lbs.) minimum			
	Coupling Nut Retention	267 N (60 lbs.) minimum			
	Materials	Body & Body Components: Non-magnetic stainless steel or beryllium copper.			
		Female Contacts: Bery	llium copper. Insulators:	PTFE. Crimp Ferrule: Annealed copper all	
		Gaskets: Silicone rubb	er		
	Finish/Plating	Center Contacts: Gold	plated. Other Metal Part	s: Gold plated or passivated (as specified	
	· ·	to meet the finish and	d corrosion requirements	of MIL-C-39012	
ENVIRONMEN	ITALTemperature Rating	-65° C to 165° C			
	Corrosion (salt spray)	MIL-STD-202, Method	101, test condition B, 59	% salt solution	
Vi	bration, High Frequency	MIL-STD-202, Method	204, test condition D (2	0 G's)	
	Shock	MIL-STD-202, Method	213, test condition I (10	0 G's)	
	Thermal Shock	MIL-STD-202, Method	107, test condition B		
	Moisture Resistance			at high humidity. Insulation resistance	
		shall be 200 M $\Omega$ min	imum within 5 minutes a	after removal from humidity.	
GENERAL	Connector Durability	500 matings minimun	n	<u>`</u>	
	Contact Captivation	Unless otherwise spec	ified, all connectors featu	ure captivated contacts. When captivated	
	·	the contacts will with	stand 26.7 N (6 lbs.) min	imum axial force.	
	Cable Retention		<u> </u>	ngle braided coaxial cable, the retention	
			ng strength of the cable.	,	
		Body Plating Options	<u> </u>		
			mber suffices can be spe	cified for Precision SMA Connectors	
			d body, gold coupling nu		
		_	sivated body & coupling		
Dimensions sh	own in mm (inch)	·	<u>Solder Types;</u> gold body, p		

#### CRIMP TYPE CABLE CONNECTORS FOR FLEXIBLE CABLE

#### Straight Plug, Non-Captive Contact


Part Number	Cable Numbers
050 - 622 - 9188890	RG174/U, 316/U
050 - 622 - 9875890	RD316

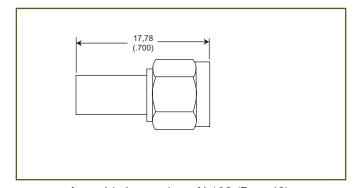

#### Assembly Instructions Al-102 (Page 43)

#### Straight Plug, Captive Contact


Part Number	Cable Numbers
A50 - 624- 9188890	RG174/U, 316/U
A50 - 624 - 9875890	RD316

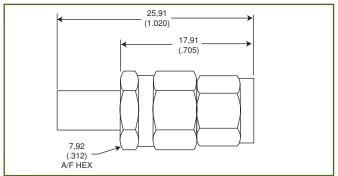

Assembly Instructions AI-703 (Page 51)

#### Right Angle Plug, Captive Contact

Part Number	Cable Numbers
050 - 628- 9188890	RG174/U, 316/U
050 - 628 - 9875890	RD316

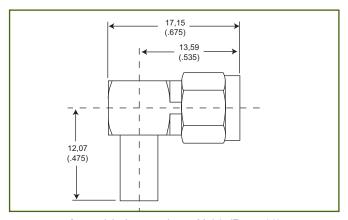


Assembly Instructions AI-90 (Page 41)


#### Bulkhead Jack, Captive Contact

Part Number	Cable Numbers
050 - 627- 9188890	RG174/U, 316/U
050 - 627- 9875890	RD316

The surface finish on these products is passivated stainless steel. For gold plated versions change last three digits of the the part number from 890 to 310.

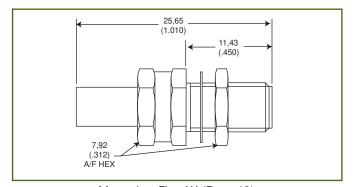

Mounting Plan W (Page 40) Assembly Instructions Al-227 (Page 46)

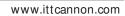




#### DIRECT SOLDER TYPE CABLE CONNECTORS FOR SEMI-RIGID CABLE

#### Straight Plug without Center Contact\*

Part Number	Cable Numbers	
055 - 607- 2003890	RG402/U	


<sup>\*</sup>Center conductor of cable is used as contact

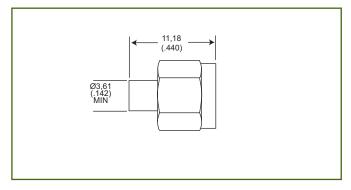

Assembly Instructions Al-302 (Page 48)

#### Straight Plug with Center Contact


Part Number	Cable Numbers	Α
055 - 607- 9172890	RG405/U	2,20 (.088)
055 - 607 - 9173890	RG402/U	3,60 (.142)

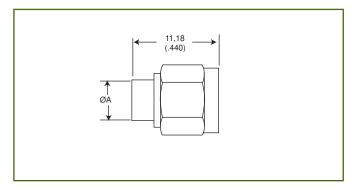

Assembly Instructions AI-252 (Page 47)

#### Right Angle Plug

Part Number	Cable Numbers	Α
055 - 611- 3702890	RG405/U	2,20 (.088)
055 - 611- 3703890	RG402/U	3,60 (.142)

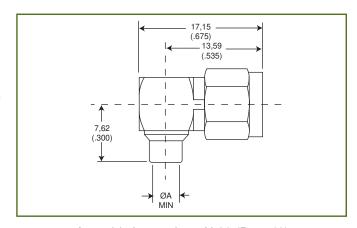

Assembly Instructions AI-98 (Page 42)


The surface finish on these products is passivated stainless steel. For gold plated versions change last three digits of the the part number from 890 to 310.



#### FLANGE MOUNT RECEPTACLES


Straight Jack, Stub Contact, Extended Dielectric

Part Numbers	
Square Flange	Narrow Hange
050 - 645 - 9009890	050 - 645 - 4540890

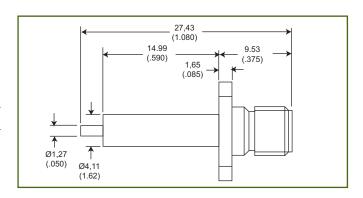


Straight Jack, Solder Pot Contact, Flush Dielectric

Part Numbers		
Square Hange	Narrow Hange	
050 - 645 - 9019890	Contact Customer Service	

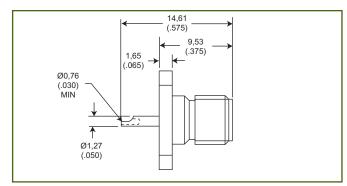

Straight Jack, Tab Contact, Hush Dielectric


Part Numbers		
Square Hange	Narrow Hange	
050 - 645 - 4575890	050 - 645 - 4528890	

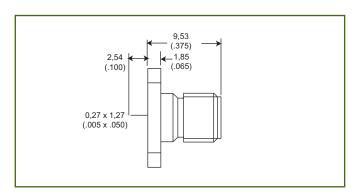

Hange Dimensions for Hange Mount Peceptacles and Panel Jacks

ALL FLANGE MOUNT RECEPTACLES HAVE CAPTIVATED CONTACTS

The surface finish on these products is passivated stainless steel. For gold plated versions change last three digits of the the part number from 890 to 310.

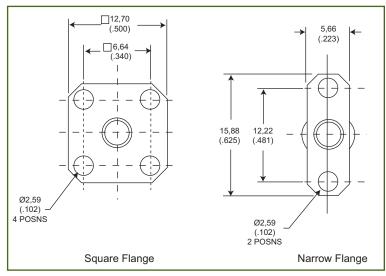




#### PRINTED CIRCUIT RECEPTACLES

Straight Jack

Part Number

050 - 651 - 0000310

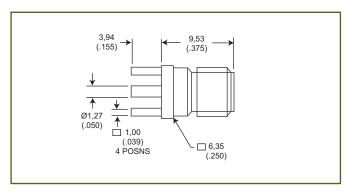


Mounting Plan D (Page 40)

Right Angle Jack

Part Number

050 - 653 - 0000310

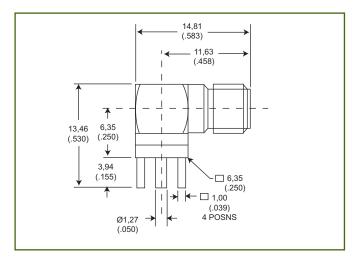

Mounting Plan D (Page 40)




#### **IN-SERIES ADAPTORS**

Plug to Plug Adaptor, Straight

Part Number


050 - 673 - 0000890

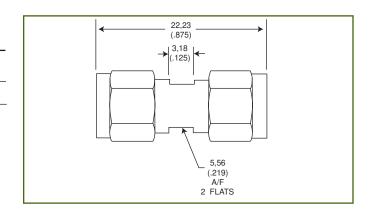

Plug to Jack Adaptor, Straight

Part Number


050 - 674 - 0000890

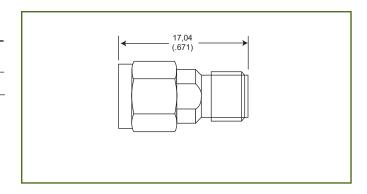

Jack to Jack Adaptor, Bulk Head Mount, Straight

Part Number

050 - 675 - 0000890

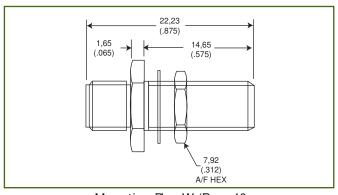

Mounting Plan W (Page 40

Plug to Jack Adaptor, Fight Angle

Part Number

050 - 678 - 0000890

The surface finish on these products is passivated stainless steel. For gold plated versions change last three digits of the the part number from 890 to 310.



15,88 (.625) 12,70 (.500)

Cannon's Commercial SMA connectors are subminiature devices that provide repeatable electrical performance through the frequency range DC to 18.0 GHz. These 50 ohm connectors offer minimum attenuation with low reflection which makes them extremely popular in the RF and microwave industry. The MIL-C-39012 series SMA interface ensures they can be mated with all connectors meeting the MIL specification dimensions. They are designed for use with a variety of subminiature coaxial cables. This includes semi-rigid and hand formable cables as well as the popular RG series of flexible cable and commercial cables meeting these dimensions.

These SMA connectors feature stand-off legs on the PCB mount designs to enhance soldering, cleaning and inspection. The straight plugs feature crimp / solder contacts for speed of assembly and high performance. SMA connectors are found in many diverse applications including amplifiers, dividers, filters and attenuators.


The standard units are supplied in gold plate. Nickel plated versions are available on request.




#### **Key Features**

- Crimp /solder contacts on straight plugs and bulkhead jacks
- · Stand-off legs on PCB mounts
- Intermateable with all SMAs to MIL-C-39012

#### **MATING INTERFACES**

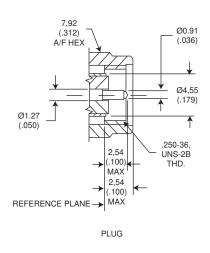

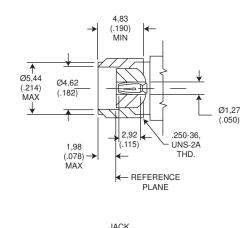

ELECTRICAL	Impedance	$50\Omega$	
Frequency Range		0 to 18.0 GHz	
	for RG-402 & RG-405 semi-rigid cable - 0 to 18 GHz		
		for flexible cable - 0 to t	he maximum frequency of the cable per MIL-C-17
	Voltage Pating	RG402 (0.141" OD.)	550 volts rms maximum
		RG405 (0.085" OD.)	335 volts rms maximum
		RG58, 141, 142, 223	550 volts rms maximum
		RG174, 188, 316	335 volts rms maximum
	Insulation Resistance	5000 MΩ minimum	
	Contact Resistance	Center Contact = 5.0 m	$\Omega$ maximum
		Outer Contact = 1.0 mg	2 maximum
	Insertion Loss	0.04 dB maximum x $$	f GHz (straight)
		0.06 dB maximum x $\sqrt{1}$	f GHz (right angle)
	RF Leakage	-(90-f GHz) dB minimum	1
Voltage Standin	g Wave Ratio (VSWR)	1.05+ 0.15 x f GHz maxi	mum (straight)
-		1.15+ 0.15 x f GHz maxi	mum (right angle)
		RG402 (0.141" OD)	1.05+ 0.005 x f GHz maximum
		RG405 (0.085" OD)	1.05+ 0.005 x f GHz maximum
		RG58, 141, 142, 223	1.10+0.01 x f GHz maximum (straight)
			1.15+ 0.02 x f GHz maximum (right angle)
		RG174, 188, 316	1.15+ 0.01 x f GHz maximum (straight)
			1.18+ 0.02 x f GHz maximum (right angle)
Dielectric \	Withstanding Voltage	RG402 (0.141" OD)	1000 volts rms maximum
		RG405 (0.085"OD)	750 volts rms maximum
		RG58, 141, 142, 223	1000 volts rms maximum
		RG174, 188, 316	750 volts rms maximum
MECHANICAL &	ENVIRONMENTAL		
	Mating	1/4" - 36 threaded coup	ling
	Durability	500 matings	
Co	upling Nut Retention	Minimum 60 lbs	
	d Nut Mating Torque	8 inch-pounds	
	Cable Retention	RG58, 141, 142, 223 40	lbs minimum
		RG174, 188, 316 20	lbs minimum
	Temperature Range	-65° C to 165° C	
	Vibration	MIL-STD-202 Method 20	4 test condition D
	Salt Spray	MIL-STD-202, Method 1	01, test condition B
	Temperature Cycling	MIL-STD-202, Method 1	02 test condition C
//ATERIAL		Material	Plating
	Connector Body	Brass	Gold or nickel
	Center Contact	Male: Brass	Gold over nickel
	of the second	Female: beryllium-coppe	
	Insulation	Teflon	None
	modiation		* *
	Gasket	Silicone	None




Specifications and dimensions subject to change

#### CRIMP ATTACHMENTS FOR FLEXIBLE CABLE

#### Straight Crimp Plug


Part Number	Cable Numbers	
F50 - E22 - 9141000	RG141	
F50 - E22 - 9142000	RG142	

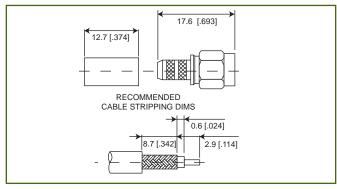

Assembly Instructions CSMA 1 (Page 54)

#### Straight Crimp Plug


Part Number	Cable Numbers	
F50 - E22- 9188000	RG316	
F50 - E22 - 9875000	RD316	

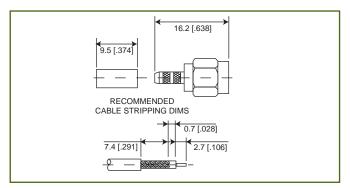

Assembly Instructions CSMA 1 (Page 54)

#### Right Angle Crimp Plug


Part Number	Cable Numbers	
F50 - E28 - 9141000	RG141	
F50 - E28 - 9142000	RG142	

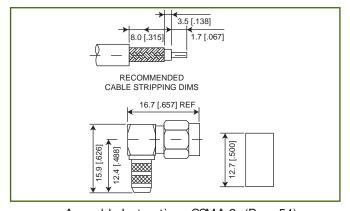

#### Assembly Instructions CSMA 2 (Page 54)

#### Right Angle Crimp Plug

Part Number	Cable Numbers	
F50 - E28 - 9188890	RG316	
F50 - E28 - 9875000	RD316	

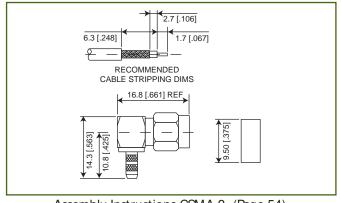


Assembly Instructions CSMA 2 (Page 54)

**♦**ITT

#### CRIMP ATTACHMENTS FOR FLEXIBLE CABLE

Bulkhead Crimp Jack		
Part Number	Cable Numbers	
F50 - E27 - 9188000	RG316	
F50 - F27 - 9875000	RD316	

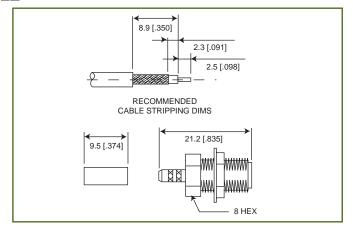


Assembly Instructions CSMA 1 (Page 54)
Panel Mounting Plan W (Page 40)

#### PRINTED CIRCUIT BOARD

Straight Jack for Printed Circuit Board


Part Number	Cable Numbers	
F50 - E51- 0000000	N/A	

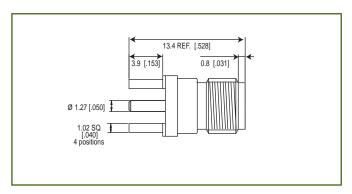

PCB Mounting Plan D (Page 40)

Right Angle Jack for Printed Circuit Board

Part Number	Cable Numbers	
F50 - E53- 0000000	N/A	

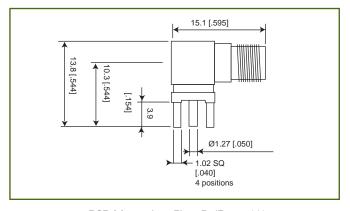


PCB Mounting Plan D (Page 40)



#### DIRECT SOLDER FOR SEMI-RIGID CABLE

#### Straight Cable Plug Without Contact


Part Number	Cable Numbers
F55 - E07- 2003000	RG402

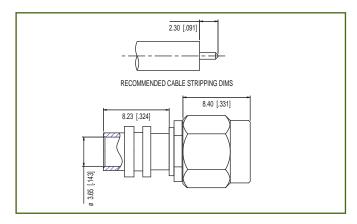

Assembly Instructions CSMA 3 (Page 55)

#### Straight Cable Plug With Contact


Part Number	Cable Numbers	
F55 - E07 - 9172000	RG405	
F55 - E07 - 9173000	RG402	

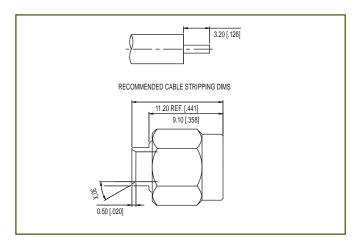

Assembly Instructions CSMA 4 (Page 56)

#### Right Angle Cable Plug


Part Number	Cable Numbers	Α	В
F55 - E11 - 370200	0 RG405	8,1 [.319]	4,6 [.181]
F55 - E11 - 370300	0 RG402	11,5 [.453]	8,1 [.319]

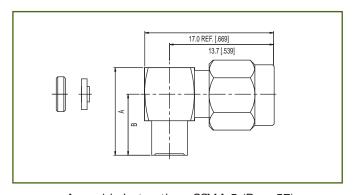


Assembly Instructions CSMA 5 (Page 57)




The designs shown in this catalogue are not the entire range. Examples of some of the many styles that are available on request are shown below. Should you require styles that are not shown please contact our nearest sales department listed on the back cover.

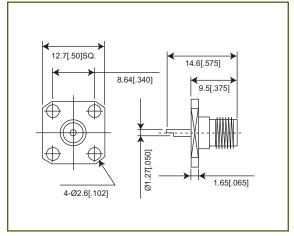


Panel Mount Jack - Solder Pot Contact

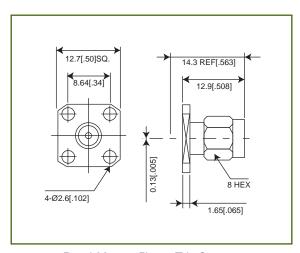

Panel Mount Plug - Tab Contact

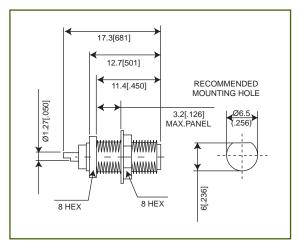

Bulkhead Mount Jack - Solder Pot Contact

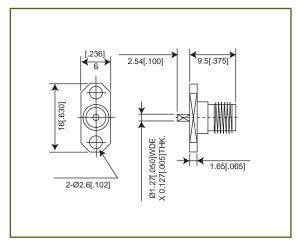

Panel Mount Plug - Tab Contact



Cannon's SMB Snap-on and SMC Screw-on subminiature coaxial connectors have been specifically engineered for high performance and high reliability applications in both military and commercial equipment operating at frequencies up to 4 GHz (SMB) and 12.4 GHz (SMC).

The Snap-on mating engagement allows a rapid connect/disconnect facility. The Screw-on mating engagement allows a low VSWR under vibration conditions and a matched impedance of 50 ohms.

Cannon SMB/SMC connectors are compatible with all SMB/SMC type connectors conforming with MIL-C-39012, BS 9210, UTE C93 561, UTE C93 562, CECC 22 130 and CECC 22 140.


In addition to this range we also offer FAKRA SMB connectors for automotive applications.



#### **Key Features**

- Rapid connect / disconnect (SMB)
- Standoff legs on PCB
- Frequency range to 12.4 GHz (SMC) or 4 GHz (SMB)
- Vibration withstanding design (SMC)

#### **MATING INTERFACES**

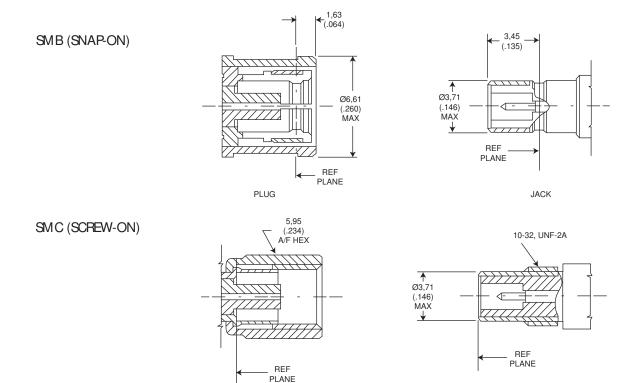

PLUG

#### **NOTES**

- 1) Inside diameter of female contact to meet VSWR mating characteristics and connector durability when mated with a 0,48  $\pm$  0,53 (.019  $\pm$  .021) diameter male contact.
- 2) All undimensioned pictorial representations are for reference purposes only.
- 3) Side-on versions of most SMB female styles, prefix 052, are available. For slide-on male interconnection use male SMB (snap-on type).

JACK



www.ittcannon.com


	Impedance	50Ω				
ELECTRICAL	·	SMB = 0  to  4.0  G	2Hz 2MC _ 0 to	12.4.647		
	Frequency Pange Voltage Pating				300 Vrms. At 21km (7	70k foot) 75 \/rma
	voitage rating				,	*
		-		oie: Al Sealleve = 40	00 Vrms. At 21km (70)	(1eet) = 100 virins
	Insulation Resistance	1000 MΩ minimu		1 0 0	0 ' "	<del> </del>
	Contact resistance				$\Omega$ maximum after	
					2 maximum after	environment
		Braid to Body =		n		
	Contact Current Rating	1.5 A dc maximu				
	Insertion Loss	0.25 dB maximun				
	RF Leakage	SMB = -55 dB mi	_			
		SMC = -60  dB mi				
Voltage Stand	ing Wave Ratio (VSWR)			tor Configuration		
To 10 GHz o	or 80% of upper cut-off		SMB		SMC	
frequency of the	cable, whichever is lower.	Cable group	Straight	Right Angle	Straight	Right Angle
pplicable to 50	$\Omega$ cables only.(F= GHz)	RG196/U Series	1.30 + .04F	1.45 + .06F	1.25 + .04F	1.40 + .06F
		RG188/U Series	1.20 + .04F	1.35 + .04F	1.20 + .04F	1.30 + .04F
MECHANICAL	Engagement Design	SMB per MIL-C-39	012, Series SMB	SMC per MIL-C-	39012, Series SM (	С.
	Engagement Forces	SMB: Initial = 62	N (14 lbs.) max.	engagement. Af	ter 500 matings =	62 N (14 lbs.)
		max. engagemen	t and disengagen	nent = $8.9 N (2)$	lbs.) min. disenga	gement. SMC:
		0.11 Nm (16 in. c	z. ) torque max.			
	Mating Torque	SMB: N/A SMC	C: 0.42 to 0.50 N	m (60 to 70 in.oz	z)	
	Locknut Torque	que 0.56 to 0.64 Nm (80 to 90 in. oz)				
Coupling Nut Retention SMB: N/A SMC: 155 N (35 lbs. ) minimum						
	Materials	Body, Body Comp	onents and Male	Contacts: Brass,	half hard. Female	Contacts:
		Beryllium Copper,	heat treated. Ins	sulators: PTFE. Lo	ckwashers: Phospl	nor Bronze. Crim <sub>l</sub>
		Ferrule: Annealed	copper alloy. Ga	skets: Silicone rul	bber	
	Finish/Plating	Center Contacts:	Gold plated. Oth	er Metal Parts: Go	old plated or nicke	el plated (as
		specified) to mee	t the finish and c	orrosion requiren	nents of MIL-C-39	012
ENVIRONMEN <sup>-</sup>	TAL Temperature Rating	-65° C to 165° C				
	Corrosion (salt spray)	MIL-STD-202, Me	thod 101, test co	ndition B, 5% sal	t solution	
Vib	oration, High Frequency	MIL-STD-202, Method 204, SMB: test condition B (15 G/s). SMC: test condition D (20 G/s				
	Shock	MIL-STD-202, Method 213, SMB: test condition B, 75 G's @ 6 milliseconds, 1/2 sine.				
		SMC: test condition	on C, 100 G's @	6 milliseconds, 1/	2 sine.	
	Thermal Shock	MIL-STD-202, Me	thod 107, test co	ndition B, except	high temperature	e shall be 85º C
		High temperature	shall be 200°C f	or connectors us	ing 200°C cables.	
	Moisture Resistance	MIL-STD-202, Meth	od 106, when inter	face gasket is used	. No measurement a	at high humidity.
		Insulation resistance	shall be 200 M $\Omega$ mir	nimum within five m	inutes after removal f	rom humidity.
GENERAL	Connector Durability	500 matings mini	mum			
	Contact Captivation	Unless otherwise sp	ecified, all connecto	ors feature captivat	ed contacts. When o	captivated the
		contacts will withst	and 17,8 N (4 lbs.)	minimum axial forc	ce. OEOC 22 130 = 1	0 N(2.25 lb.)
	Cable Retention				braided coaxial ca	
	Casio i Storition	retention is equal				,
	Body Plating Options				d for SMB/SMC Co	nnectors:
	2007 Harring Options	220	gold body	1		
		910	nickel body			
<u> </u>		C90	nickel body			
♦ ITT						nown in mm (inch)

#### STRAIGHT PLUGS AND JACKS

#### Straight Crimp Plug

Part Number	Cable Numbers	
B51 - 024 - 0000220	RG174/U, 316/U	
B51 - 024 - 3196220	RG178/U, 196/U	
B51 - 024 - 9399220	RD316, 179	

#### SMB connectors have solder center contacts.

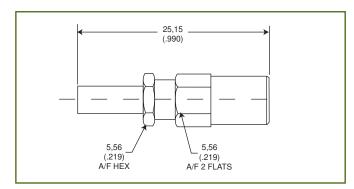

Assembly Instructions BAI-003 (Page 50)

# Straight Crimp Bulkhead Jack Part Number Cable Numbers 051 - 027 - 0000220 RG174/U, 316/U 051 - 027 - 3196220 RG178/U, 196/U 051 - 027 - 9399220 RD316, 179


# 28,06 (1.125) 10,80 (.425) 5,56 (.219) A/F HEX

Mounting Plan V (Page 40) Assembly Instructions BAI-003 (Page 50)

#### **RIGHT ANGLE PLUGS**

#### Right Angle Crimp Plug

Part Number	Cable Numbers	
B51 - 328 - 3188220	RG174/U, 316/U	
B51 - 328 - 3196220	RG178/U, 196/U	
B51 - 328 - 9399220	RD316, 179	
B51 - 328 - 9019AU0	BT3002, T2C75024	

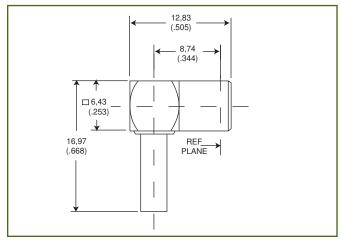


Assembly Instructions BAI-015 (Page 49)

#### **IN-SERIES ADAPTORS**

Jack to Jack Adaptor, Bulkhead Mounting

Part Number

051 - 075 - 0000220

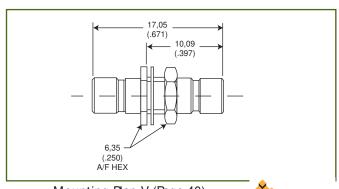

Mounting Plan V (Page 40)




#### **BULKHEAD JACKS**

Straight Bulkhead Jack, Solder Pot, Mounting Nut Outside Panel

Part Number

051 - 043 - 0000220

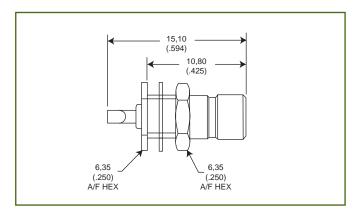


Mounting Plan V (Page 40)

Straight Bulkhead Jack, Solder Pot, Mounting Nut Inside Panel

Part Number

051 - 045 - 0000220

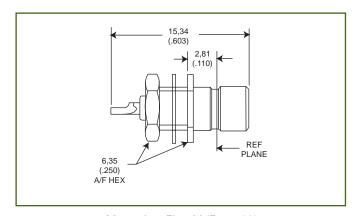


Mounting Plan V (Page 40)

Right Angle Bulkhead Jack, Solder Pot, Mounting Nut Inside Panel

Part Number

051 - 047 - 0000220

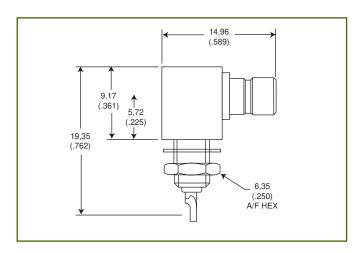

Mounting Plan V (Page 40)



#### PRINTED CIRCUIT BOARD JACKS

SMB PCB preferred styles feature stepped legs. This allows the jacks to be raised from the surface of the PCB, thereby preventing the accumulation of soldering fluids and foreign bodies. A single piece conductor overcomes the problem of internal joint separation during continuous wave / flow soldering operations.

Straight PCB Jack, 1,00 (.039) sq Legs

Part Number

B51 - 351 - 0000220

Straight PCB Jack, 0,81 (.032) sq Legs

Part Number

B51 - 051 - 9029220

Right Angle PCB Jack, 1,00 (.039) sq Legs


Part Number

B51 - 053 - 0000220


Right Angle PCB Jack, 0,81 (.032) sq Legs

Part Number


B51 - 053 - 9029220

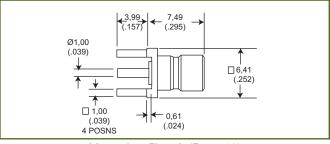


Mounting Plan A (Page 40)

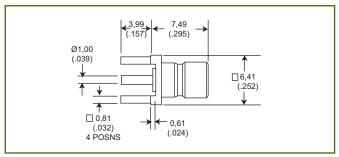

Mounting Plan B (Page 40)

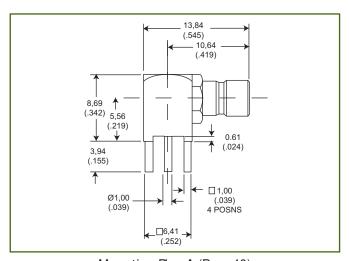

Mounting Plan A (Page 40)

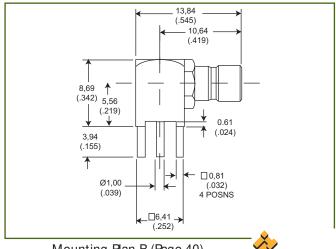

Mounting Plan B (Page 40)




#### STRAIGHT PLUGS AND JACKS

#### Straight Clamp Plug

	Part Number	Cable Numbers	
Ī	050 - 007 - 0000220	RG174/U, 316/U	


#### SMC CONNECTORS HAVE SOLDER CENTER CONTACTS

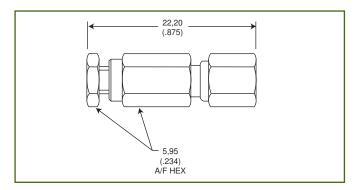

Assembly Instructions BAI-001 (Page 52)

#### Straight Crimp Plug


Part Number	Cable Numbers
050 - 024 - 0000220	RG174/U, 316/U

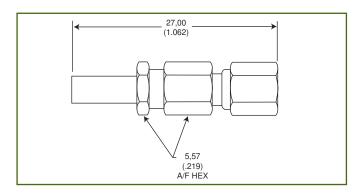

Assembly Instructions BAI-003 (Page 50)

#### Straight Crimp Bulkhead Jack

Part Number	Cable Numbers
050 - 027 - 0000220	RG174/U, 316/U

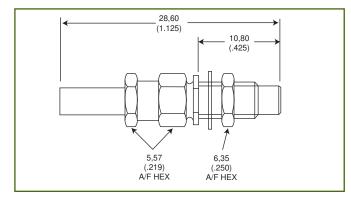


Mounting Plan V (Page 40)
Assembly Instructions BAI-003 (Page 50)

#### **RIGHT ANGLE PLUGS**

#### Right Angle Crimp Plug

Part Number	Cable Numbers
B50 - 328 - 3188220	RG174/U, 316/U
B50 - 328 - 9399220	RD316, 179

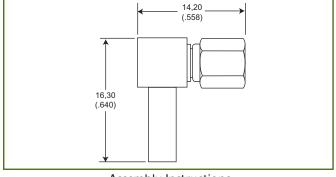

Assembly Instructions BAI-015 (Page 49)




www.ittcannon.com

#### **BULKHEAD JACKS**

Straight Bulkhead Jack, Solder Pot, Mounting Nut outside Panel

Part Number

050 - 043 - 0000220

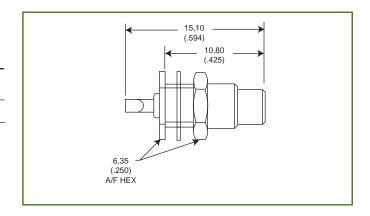


Mounting Plan V (Page 40)

Straight Bulkhead Jack, Solder Pot , Mounting Nut inside Panel

Part Number

050 - 045 - 0000220

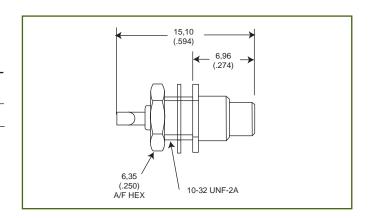


Mounting Plan V (Page 40)

Fight Angle Bulkhead Jack, Solder Pot, Mounting Nut inside Panel

Part Number

050 - 047 - 0000220

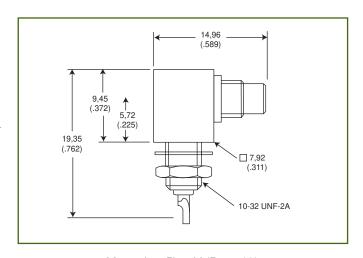

Mounting Plan V (Page 40)




#### PRINTED CIRCUIT BOARD JACKS

SMC PCB preferred styles feature stepped legs. This allows the jacks to be raised from the surface of the PCB, thereby preventing the accumulation of soldering fluids and foreign bodies. A single piece conductor overcomes the problem of internal joint separation during continuous wave/flow soldering operations.

Straight PCB Jack, 1,00 (.039) square legs

Part Number

B50 - 051 - 0000220

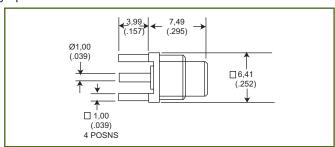


Mounting Plan A (Page 40)


Straight PCB Jack, 0,81 (.032) square legs

Part Number

B50 - 051 - 9019220

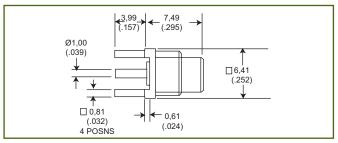

Mounting Plan B (Page 40)

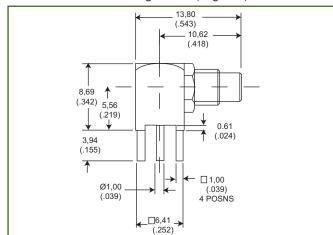


Right Angle PCB Jack, 1,00 (.039) square legs

Part Number

B50 - 053 - 0000220

Mounting Plan A (Page 40)

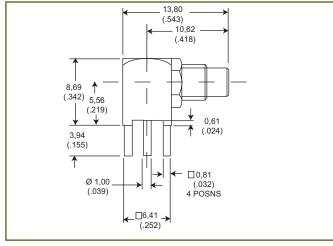

Mounting Plan B (Page 40)

Right Angle PCB Jack, 0,81 (.032) sq Legs

Part Number

B50 - 053 - 9019220



This range of 50 ohm microminiature radio frequency connectors is suitable for both military and commercial equipment operating at frequencies up to 4 GHz (SSMB) and 12.4 GHz (SSMC). They provide a choice of Snap-on (SSMB) or Screw-on (SSMC) and are available for a wide range of flexible cables.

SSMC connectors are used where a positive mechanical engagement is required and where space permits the use of torque wrenches. SSMB connectors are quick disconnect versions of the SSMC and are used in applications where limited space prohibits the use of torque wrenches or when components or modules must be quickly changed to keep down time to a minimum.




#### **Key Features**


- Small size
- Low mass
- Close packing density
- Used in airborne applications

#### **MATING INTERFACE**

#### SSMB (SNAP-ON)

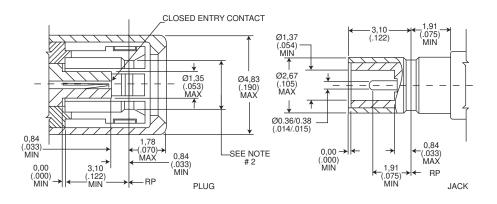

#### SSMC (SCREW-ON)

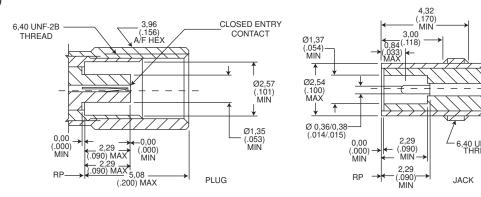

#### **NOTES**

1) Inside diameter of female contact to meet VSWR, mating characteristics and connector durability, when mated with a 0,36 - 0,38 (.014 - .015) diameter male contact.

Dimensions shown in mm (inch)
Specifications and dimensions subject to change

2) Must meet the force to engage and disengage when mated with its mating part.



SPECIFICA	TIONS					
ELECTRICAL	Impedance	50Ω				
	Frequency Range	SSMB = 0  to  4.0  G	SHz. SSMC = 0	to 12.4 GHz		
	Voltage Rating	At Sea Level = 250	Vrms. at 21km	1 (70  k feet) = 60	Vrms	
	Insulation Resistance	1000 M $\Omega$ minimur	n			
	Contact resistance	Center Contact = 4	4.0 m $\Omega$ maxim	um initial. 6.0 m	$\Omega$ maximum after	environment
		Outer Contact = 1	.0 m $\Omega$ maximu	ım initial. 1.5 m 🕻	2 maximum after	environment
		Braid to Body = $1$ .	$0 \text{ m } \Omega \text{ maximu}$	m		
(	Contact Current Rating	1.0 A dc maximum	1			
	Insertion Loss	0.30 dB maximum	@ 1.5 GHz			
	RF Leakage	SSMB = -40  dB mi	nimum @ 2 - 3	GHz		
		SSMC = -50  dB mi	nimum @ 2 - 3	GHz		
Voltage Standii	ng Wave Ratio (VSWR)		Connec	ctor Configuration	ı	
To 12.4 GHz or	r 80% of upper cut-off		SSMB		SSMC	;
frequency of the	cable, whichever is lower.	Cable group	Straight	Right Angle	Straight	Right Angle
Applicable to 5	$0\Omega$ cables only.(F= GHz)	RG178/U, 196/U	1.25 + .02F	1.25 + .03F	1.20 + .02F	1.20 + .03F
		RG188/U, 316/U	1.30 + .02F	1.30 + .03F	1.25 + .03F	1.30 + .02F
MECHANICAL	Engagement Forces	SSMB: Initial $= 26.7$	,	0 0	,	0 0
		After 500 matings =			nd 4.4 N (1 lb.) min	. disengagement.
		SSMC: 0.11 Nm (1	, ,			
	Mating Torque			.23 Nm (28 - 32 i	n.oz)	
	Locknut Torque	0.28 Nm to 0.35 N				
Cc	oupling Nut Retention		•	5 lbs. ) minimum		
	Materials	Body, Body Compon			•	• •
		Insulators: PTE Lock			·	· · ·
	Finish/Plating	Center Contacts: G	•		old or nickel plate	ed to meet the
ENVIRONM ENT		finish and corrosio	n requirements	of MIL-C-39012		
	Temperature Rating	-65° C to 165° C				
	Corrosion (salt spray)	MIL-STD-202, Meth				
Vibr	ration, High Frequency	MIL-STD-202, Metho		· · · · · · · · · · · · · · · · · · ·	<u>,                                      </u>	` '
	Shock					
		SSMC: test condition	on C, 100 G's @	6 milliseconds, 1	1/2 sine.	

Thermal Shock

Cable Retention

**GENERAL** 

Connector Durability Contact Captivation

High temperature shall be 200°C for connectors using 200°C cables. 500 matings minimum

8,9 N (2 lbs.) minimum axial force.

When properly assembled to the compatible single braided coaxial cable, the retention is equal to the breaking strength of the cable.

MIL-STD-202, Method 107, test condition B, except high temperature shall be 85° C.

Body plating options

The following part number suffices can be specified for SSMB and SSMC connectors.

...220 gold body


...910 nickel body



#### PLUGS, JACKS AND RECEPTACLES

#### Straight Plug

Part Number	Cable Numbers	А
051 - 424 - 3188220	RG174/U, 316/U	20,01 (.790)
A51 - 424 - 3196220	RG178/U, 196/U	19,33 (.761)

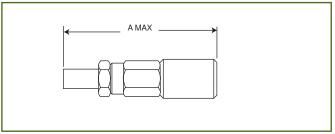


Assembly Instructions

051 - 424 - 3188220 Al 663 (Page 44) A51 - 424 - 3196220 Al 128 (Page 44)

#### Right Angle Plug

Part Number	Cable Numbers	А
A51 - 428 - 3188220	RG174/U, 316/U	9,55 (.376)
A51 - 428 - 3196220	RG178/U, 196/U	9,55 (.376)
A51 - 428 - 3875220	RD316	10,16 (.400)

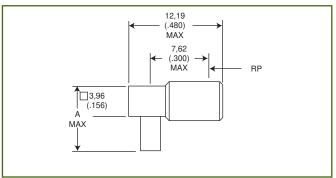


Assembly Instructions

A51 - 428 - 3188220 Al 129 (Page 45) A51 - 428 - 3196220 Al 696 (Page 45)

A51 - 428 - 3875220 Al 696 (Page 45)

#### Bulkhead Jack

Part Number	Cable Numbers	А
051 - 427 - 3188220	RG174/U, 316/U	9,93 (.391)
A51 - 427 - 3196220	RG178/U, 196/U	10,41 (.410)

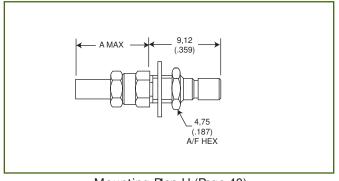


Mounting Plan U (Page 40) Assembly Instructions Al-128 (Page 44)

Bulkhead Receptacle - Rear Mount Mounting Nut Outside Panel

Part Number

051 - 443 - 0000220

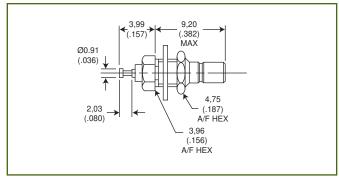

Mounting Plan U (Page 40)


**ॐ**ITT

#### **BULKHEAD AND PRINTED CIRCUIT RECEPTACLES**

Bulkhead Receptacle - Front Mount Mount Nut Inside Panel

Part Number

051 - 445 - 0000220

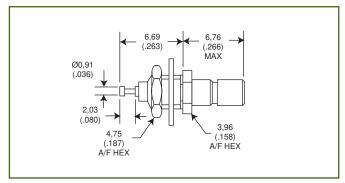


Mounting Plan U (Page 40)

Printed Circuit Receptacle - Straight Jack

Part Number

A51 - 451 - 0000220

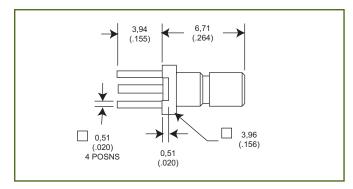


Mounting Plan C (Page 40)

Printed Circuit Receptacle - Straight Plug

Part Number

051 - 452 - 0000220

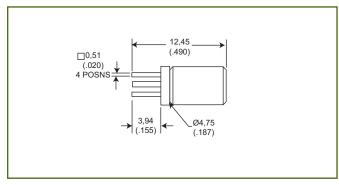


Mounting Plan C (Page 40)

Printed Circuit Receptacle - Right Angle Jack

Part Number

A51 - 453 - 0000220

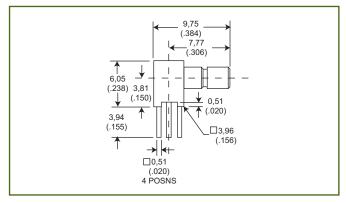


Mounting Plan C (Page 40)



#### **PLUGS AND RECEPTACLES**

#### Straight Plug

Part Number	Cable Numbers
050 - 424 - 3188220	RG174/U, 316/U
050 - 424 - 3196220	RG178/U, 196/U

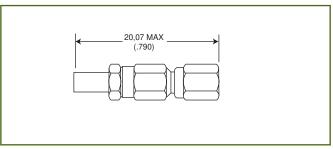


Assembly Instructions

050 - 424 - 3188220 Al 663 (Page 44) 050 - 424 - 3196220 Al 128 (Page 44)

#### Right Angle Plug

Part Number	Cable Numbers	Α
050 - 428 - 3188220	RG174/U, 316/U	10,16 (.400)
050 - 428 - 3196220	RG178/U, 196/U	9,40 (.370)

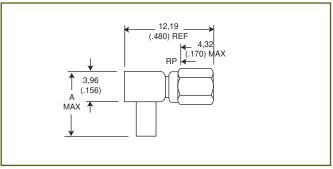

Assembly Instructions


050 - 428 - 3188220 Al 286 (Page 45)

050 - 428 - 3196220 Al 696 (Page 45)

Bulkhead Receptacle - Rear Mount Mounting Nut Outside Panel

Part Number

050 - 443 - 0000220

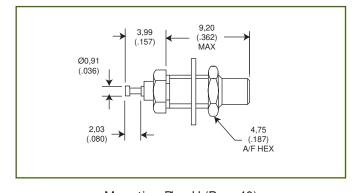


Mounting Plan U (Page 40)

#### Bulkhead Receptacle - Front Mount Mounting Nut Inside Panel

Part Number

050 - 445 - 0000220

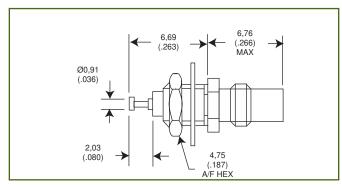

Mounting Plan U (Page 40)

Dimensions shown in mm (inch)
Specifications and dimensions subject to change



31




#### PRINTED CIRCUIT RECEPTACLES

Printed Circuit Receptacle - Straight Jack

Part Number

050 - 451 - 0000220

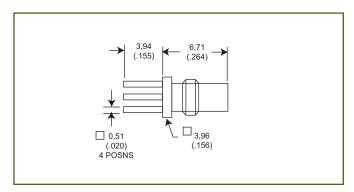


Mounting Plan C (Page 40)

Printed Circuit Receptacle, Right Angle Jack

Part Number

050 - 453 - 0000220

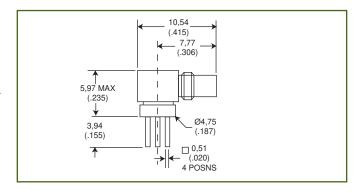

Mounting Plan C (Page 40)



Cannon's Coaxial Terminators provide a low cost means of joining cable to a printed circuit where engagement and disengagement are not required. This method of terminating cable on PCBs eliminates the inconsistency associated with hard wiring.

Styles are available for a variety of popular RG series cable types and cables of similar dimensions. The tapered leg is an interference fit into the PCB hole enabling pre-assembly for wave soldering.

All parts have electro-plated tin finish.



#### Coaxial Terminators feature:

- Low cost
- · Easy to assemble
- · Only two piece parts
- · Surface mount option
- · No solder transfer down braid
- Good stability ± two point fixing
- Variable pitch, 2,50 (.098) ± 10,00 (.393)


#### **TERMINATORS**

#### Single Leg


Part Number	Cable Numbers	
055 - 939 - 9019AR6	RG178/U, 196/U	
055 - 939 - 9029AR6	RG174/U, 179/U, 188/U, 316/U	

#### NOTE

Both part numbers may be assembled with leg either at front or rear.

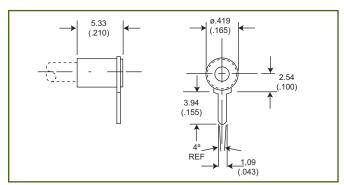

Assembled with leg at front. Mounting Plan R (Page 40)

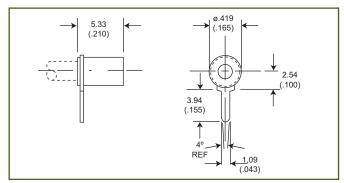


Assembled with leg at rear. Mounting Plan S (Page 40)
Assembly Instructions
BBAI-1203 (Page 53)



#### **TERMINATORS**

#### Two Legs at Front, Standard


Part Number	Cable Numbers	
055 - 939 - 9039AR6	RG178/U, 196/U	
055 - 939 - 9049AR6	RG174/U, 179/U, 188/U, 316/U	

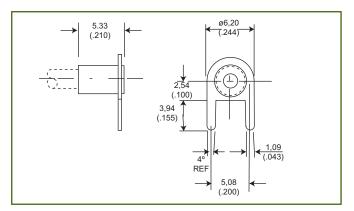

Mounting Plan T (Page 40) Assembly Instruction BBAI-1203 (Page 53)

#### Two Legs at Front, Surface and Vertical Mount

Part Number	Cable Numbers
055 - 939 - 9059AR6	RG178/U, 196/U
055 - 939 - 9069AR6	RG174/U, 179/U, 188/U, 316/U

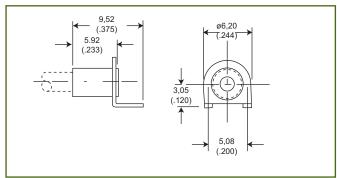

Mounting Plan T (Page 40)
Assembly Instruction BBAI-1203 (Page 53)



Between Series Adaptors are widely used for high efficiency transitions between various types of RF coaxial connectors. They are used for connecting test equipment to systems employing a different type connector or they are used as a component in electronic equipment where it is desirable to have one type of connector for external connections and another type for internal connections.

All Between Series Adaptors are designed for lowest VSWR characteristics up to the frequency limits of the connector types involved. All popular types of miniature, subminiature and micro-miniature designs are available.

The designs shown here are not the entire range. If you require a style not shown, please contact our Customer Service group.




#### **Key Features**

- Rugged construction
- · Precision performance
- Low VSWR
- · Ready to use no assembly required

#### SMA Jack to SMC Plug

Part Number


050 - 074 - 6201310

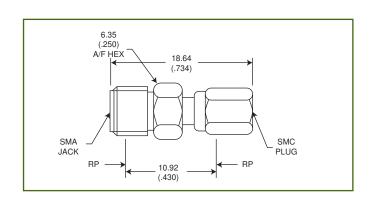

#### SMA Jack to SMB Plug

Part Number

050 - 674 - 6302310

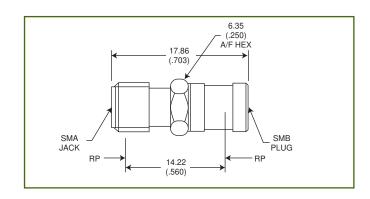




SMA Slide-On Plug to SMA Standard Jack Adaptor - Straight (Connector Saver)

Part Number


050 - 674 - 6324990

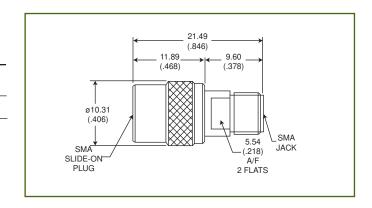

#### BNC Bulkhead Jack to SMA Jack

Part Number

050 - 675 - 6801890

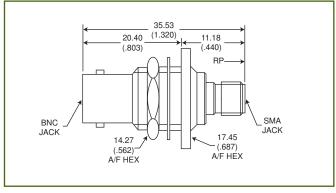

Mounting Plan Z (Page 40 ) Panel Thickness 3,18 (.125) max.

#### N Plug to SMA Jack


Part Number

050 - 674 - 6700890

#### VSWR:

1.10 + .01f (GHz) DC - 12.4GHz

1.10 + .016f (GHz) 12.4 - 18 GHz

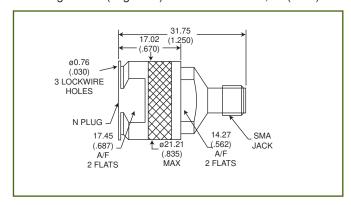

#### N Bulkhead Jack to SMA Jack


Part Number

050 - 675 - 6705890

#### VSWR:

1.06 + .005f (GHz) DC - 12.4GHz

1.06 + .010f (GHz) 12.4 - 18 GHz

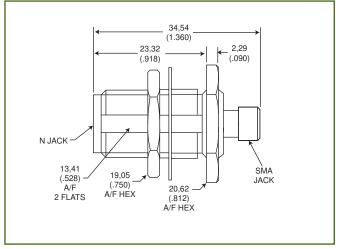

Mounting Plan GG (Page 40) Panel Thickness 6,35 (.250) max.



Sealflex 2 microwave cable assemblies are designed for applications requiring consistent microwave performance through to 18 GHz and may be used with minimal degradation to 26 GHz with SMA connectors.

All connector designs exhibit "mode free" characteristics to 18 GHz, thereby allowing low VSWR to be specified without "spikes" being present in the upper frequency spectrum.

Each assembly is 100% tested for VSWR and insertion loss and test plots are supplied with each item.

Sealflex 2 assemblies have been adopted for use in various avionic systems, missiles, military ground and shipborne applications as well as commercial communications equipment.

Impedance





## **Key Features**

- · Fully flexible cable
  - Does not require detailed drawing (unlike semi-rigid)
- Triple screens (90 dB RF shielding)
- DC to 26 GHz frequency range
- 100% electrically tested
  - VSWR and insertion loss plots supplied

# **SPECIFICATIONS**

ELECTRICAL


Impedance				
Voltage Standing Wave Ratio (VSWR)	1.25 (2 - 12.4 GHz) 1.35 (12.4 - 18 GHz)			
Attenuation	See graph on next page			
Shielding RF	-90 dB			
MECHANICAL				
Connector Retention	137 N (30.9 lbs) minimum			
Connector / Cable Torque	1.7 Nm (15 in. lbs) minimum	1		
Minimum Bend Radii	Cable Diameter	Static	Hexing	
	3,18 (.125)	13,00 (.511)	25,00 (.984)	
	4,57 (.180)	19,00 (.748)	38,00 (1.496)	
	6,35 (.250)	25,00 (.984)	51,00 (2.007)	
INVIRONMENTAL				
Operating Temperature	-65° C to 165° C			
Moisture Resistance	MIL-STD-202, Method 106			
Vibration	MIL-STD-202, Method 204(C	)		
Shock	MIL-E-5272, Para. 4.15.5.1			
Thermal Shock	MIL-STD-202, Method 107(C	)		
Corrosion	MIL-STD-202, Method 101(B	)		
Solvent Resistance	7 days at 200°C, JP6 (MIL-J-2	2658) and hydraulic fluid (M	/IL-H-5806)	

 $50\Omega$  nominal

NOTES: Tighter specifications are subject to special quotation.




#### **Attenuation**

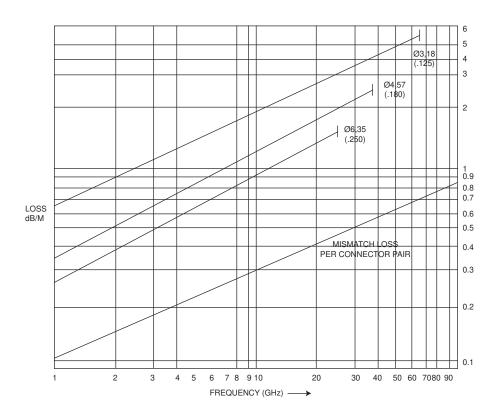


Cable Maximum Frequency ( $f_c$ ): Ø 3,18 (.125) = 65.3 GHz (single mode operation) Ø 4,57 (.180) = 36.8 GHz Ø 6,35 (.250) = 23.7 GHz

# Typical Return Loss (VSWR) Part Number 065-9AA-1000000

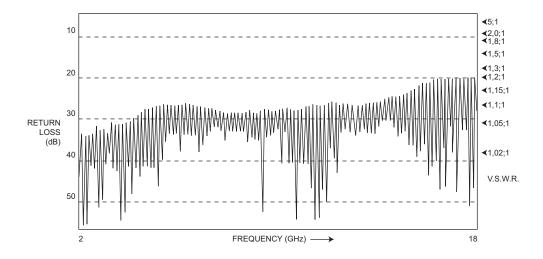




#### MICROWAVE CABLE ASSEMBLIES

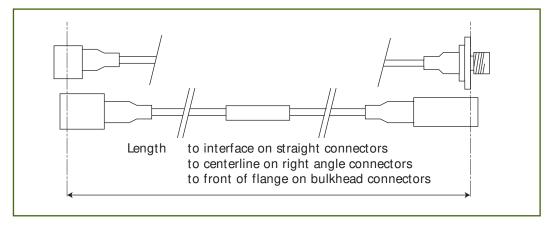

Standard Tolerances Length up to 1 m (39.370) -0 + 10,00 (.393) 1 m (39.370) to 3 m (118.00) -0 + 20,00 (.787) 3 m (118.00) to 15 m (1771.65) -0 + 30,00 (1.181)

## ORDERING INFORMATION

This table shows how the part numbers for coaxial connectors are constructed.

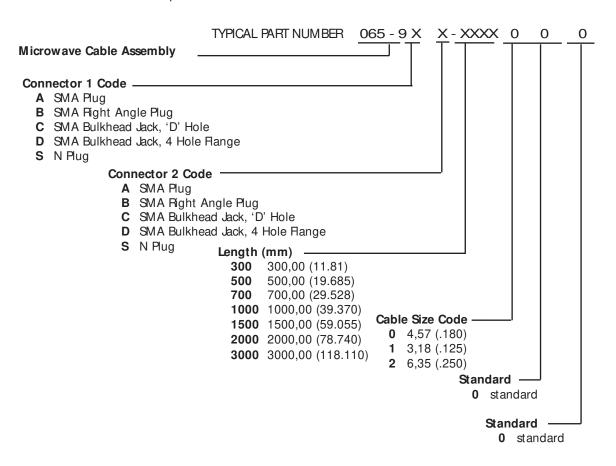


Example: 065-9AS-1000000 = Sealfex 2 cable assembly; 4,57 (.180) with 1 SMA plug and 1 N plug on 1 metre length of cable

Dimensions shown in mm (inch)
Specifications and dimensions subject to change


**♦**ITT


## RECOMMENDED MOUNTING HOLE DIMENSIONS


Plan	Α	B (min.) 4 positions	C (min.) 1 position
Α	5,08 (.200)	ø 1,70/1,85 (.067/.080)	ø 1,17/1,35 (.046/.053)
В	5,08 (.200)	ø 1,30 (.051)	ø 1,30 (.051)
С	2,54 (.100)	ø 0,97 (.038)	ø 0,91 (.036)
D	5,08 (.200)	ø 1,70 (.067)	ø 1,70 (.067)

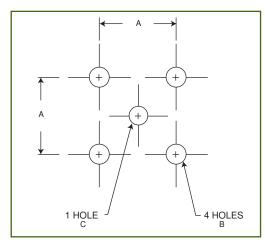

Plan A - D

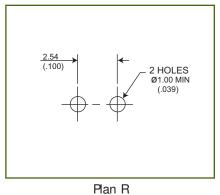

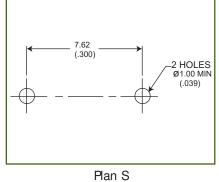

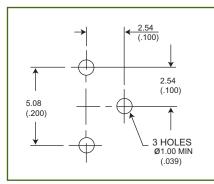

K		Har


	_
Llon	- 1
пап	

Plan	Thread Size	A + 0,13 (.005) - 0,00 (.000)	B + 0,13 (.005) - 0,00 (.000)
U	6-40 UNF-2A	3,56 (.140)	3,20 (.126)
V	10-32 UNF-2A	4,95 (.195)	4,50 (.177)
W	1/4-36 UNS-2A	6,73 (.265)	5,92 (.233)
Z	1/2-28 UNEF-2A	13,08 (.515)	12,19 (.480)

A A
-----

Plan U - Z


Plan Thread S	Size A + 0,10	B + 0,10 (.004) 3 (.001) B + 0,10 (.004) - 0,03 (.001)
GG 5/8-24 UN	EF-2A 15.9 (.625)	13.5 (.531)

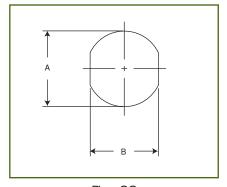


Plan GG




# Al-90 SM A Right Angle Connectors, Crimp Type for Braided Cable

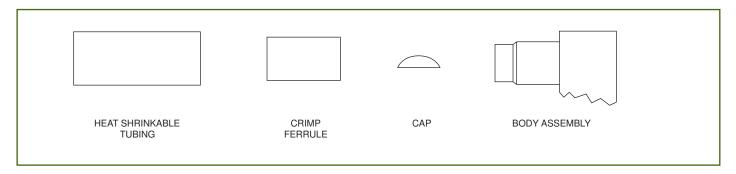

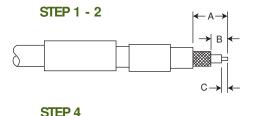

- 1. Side ferrule and (if supplied) heat shrinkable tubing on to cable.
- 2. Trim cable to dimensions shown:

Assembly Instruction N	o. A	В	С
AI-90	11,10 (.437)	5,16 (.203)	1,57 (.062)

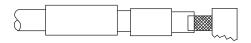


STEP 5

STEP 8

- 3. Tin center conductor (DO NOT OVER TIN).
- 4. Side body over cable dielectric and under the braid until braid is flush against underside of body. Ensure center conductor is located in the forked end of the contact. NOTE: When using cables with inflexible jackets it is permissible to make two 3,17 (.125) longitudinal slits in the outer jacket.




- 5. Slide ferrule flush against the body and crimp in position using Cannon's Crimp Tool and suitable Die Set (see table).
- Using a small soldering iron solder center conductor to contact.
   NOTE: The center conductor should not protrude beyond the contact or touch the body. Solder should not protrude beyond the slotted section of the contact.

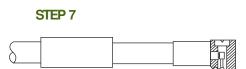

- 7. Locate the cap in rear of body and dimple or lightly punch to ensure it is locked in position.
- 8. Side heat shrinkable tubing over ferrule flush against body and heat until tubing shrinks down.

Only common cable retention features are shown in detail. Various body configurations can apply.


Cable Numbers	Cable Code	Die Size	Die Set
RG142/U	9142	5,42 (.213)	K29265
RG196/U	9196	2,67 (.105)	K29263
RG316/U	9188	3,25 (.128)	K29263
RD316	9399/9875	3,84 (.151) T1025/9	

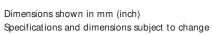



# Al-98 SM A Right Angle Connectors, Direct Solder Type for Semi-Rigid Cable



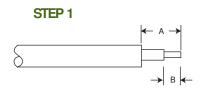


 Trim cable jacket, dielectric and center conductor to dimensions shown, being careful not to fracture the center conductor. Tin center conductor (DO NOT OVER TIN).

$$A = 4,75 + /-0,13 (.187 + /-.005)$$

$$B = 2,29 + /-0,13 (.097 + /-.005)$$

STEP 2

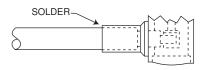

2. Side cable into body and solder into place.


STEP 3




3. Solder center conductor to contact (do not over solder), then locate the cap in rear of body and dimple or lightly punch to ensure it is locked in position.

# Al-102 & Al-236


# SM A Straight Connectors, Crimp Type for Braided Cable

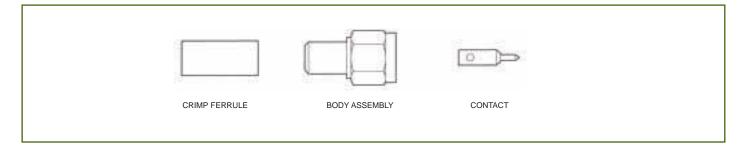

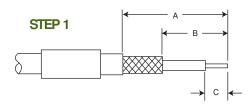


 Trim cable to dimensions shown being careful not to nick the braid or center conductor. Tin center conductor, (DO NOT OVER TIN) then slip ferrule (and shrink tubing if supplied) over cable.

Assembly Instruction No.	Α	В	С
AI-102 & AI-236	10,31 (.406)	4,37 (.172)	2,77 (.109)

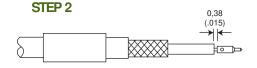


2. Solder center conductor to contact. With Al-102 and Al-236 the gap shown is to be maintained.

## STEP 3

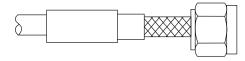


 Insert trimmed cable into the rear of the body assembly. Tubular body extension will slide under the braid with the rear portion of extension fitting under the jacket as shown. NOTE: When using cables with inflexible jackets it is permissible to make two 3,17 (.125) long longitudinal slits in the outer jacket.

#### STEP 4

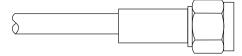

## STEP 5

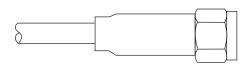


4. Slide ferrule flush against the body and crimp in position using Cannon's Crimp Tool and suitable Die Set (see table).

Cable Numbers	Cable Code	Die Size	Die Set
RG141/U	9141	5,42 (.213)	K29265
RG142/U	9142	5,42 (.213)	K29265
RG188/U	9188	3,25 (.128)	K29263
RG196/U	9196	2,67 (.105)	K29263
RD316	9399/9875	3,84 (.151)	T1025/9


 Side heat shrinkable tubing over ferrule and apply heat until tubing shrinks down.


# Al-128 & Al-663


# SSMB / SSMC Straight Connectors, Crimp Type for Braided Cable

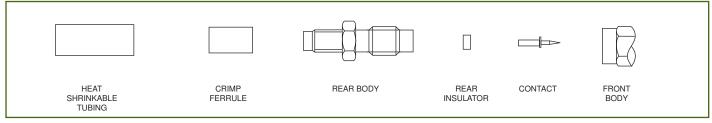




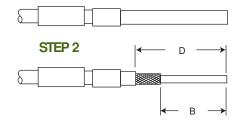


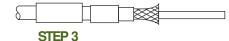


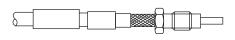


STEP 4

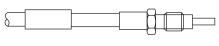

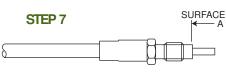

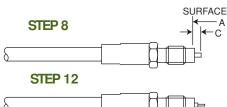



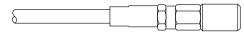

- 1. Side heat shrinkable tubing and ferrule on to cable.
- 2. Trim cable to dimensions shown:

Assembly Instruction No.	В	С	D
AI-663	6,86 (.270)	2,29 (.090)	10,41 (.410)
Al-128 for center conductors ø 0.51 (.020)	6,76 (.266)	2,29 (.090)	9,53 (.375)
Al-128 for all other conductor sizes	7,54 (.297)	3,05 (.120)	10,31 (.406)

- Slide rear body over dielectric and under the braid until braid is flush with flange. N.B. When using cable with inflexible jackets it is permissible to make two 3,00 (.118) long longitudinal slits in the outer jacket.
- 4. Side ferrule over exposed braid up to hex. flange.
- 5. Orimp using Cannon's Orimp Tool and suitable Die Set (see table). Ensure ferrule is held close to hex. flange.
- 6. Side heat shrinkable tubing over crimp and heat shrink into place using hot air gun. Air temperature should be approximately 125° C.
- 7. Trim dielectric flush with surface "A" on body using a sharp knife. Take care not to nick center conductor.
- Trim center conductor as shown.
- 9. Tin center conductor (do not allow solder to touch end of body or dielectric).
- 10. Place a small solder preform made from 0,26 0,31 (.010 .012) dia. (28 swg) multi-core solder in rear of contact.
- 11. Place rear insulator over center conductor. When insulator has counterbore, the contact fits into the counterbore.
- 12. Assemble contact onto center conductor, heat to make solder connection. Do not allow solder to protrude outside spill hole.
- 13. Solder should be visible at inspection hole, if excess solder runs from inspection hole, remove with sharp blade taking care not to damage plating.
- 14. Screw on the front body and tighten to a torque of 0.14Nm (20 in. ozs)


Only common cable retention features are shown in detail. Various body configurations can apply.

Cable Numbers	Cable Code	Die Size	Die Set
RG196/U	3196	2,67 (.105)	K29263
RG316/U	3188	3,25 (.128)	K29263
RD316	3875	3,84 (.151)	T1025/9




# Al-129, Al-286 & Al-696

# SSMB / SSMC Right Angle Connectors, Crimp Type for Braided Cable

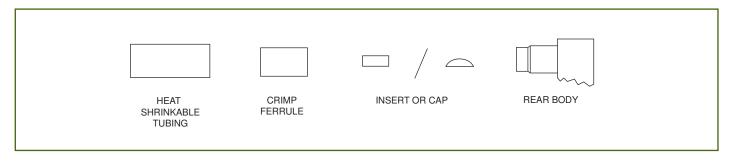


- 1. Side heat shrinkable tubing and ferrule on to cable.
- 2. Trim cable to dimensions shown:

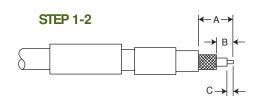


Assembly Instruction No.	Α	В	С
AI-129	5,56 (.219)	2,77 (.109)	1,19 (.047)
AI-286	6,35 (.250)	2,77 (.109)	0,79 (.031)
AI-696	6,22 (.245)	2,54 (.100)	1,14 (.045)

STEP 4

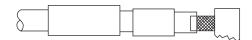

- 3. Tin center conductor. (DO NOT OVER TIN).
- 4. Side body over cable dielectric and under the braid until braid is flush against underside of rear body. Ensure center conductor is located in the forked end of the contact. NOTE: When using cables with inflexible jackets it is permissible to make two 3,00 (.118) longitudinal slits in the outer jacket.

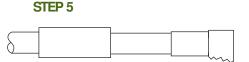

5. Slide ferrule flush against the body and crimp in position using Cannon's Crimp Tool and suitable Die Set (see table).




6. Using a small soldering iron solder center conduct to contact. NOTE: The center conductor should not protrude beyond the contact or touch the body. Solder should not protrude beyond the slotted section of the contact.



7. Press insert into place or locate the cap in rear of body and dimple or lightly punch to ensure it is locked into position (recommended tool, flat pin Ø 3,07 + /- 0.05) (.121 + /- .002).



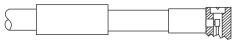

8. Side heat shrinkable tubing over ferrule flush against body and heat until tubing shrinks down.


STEP 8	
8	

Cable Numbers	Cable Code	Die Size	Die Set
RG196/U	3196	2,67 (.105)	T1025/1
RG316/U	3188	3,25 (.128)	T1025/4
RD316	3875	3,84 (.151)	T1025/9

Only common cable retention features are shown in detail. Various body configurations can apply.




# Al-227 SM A Straight Connectors, Crimp Type for Braided Cable, Captive Contact

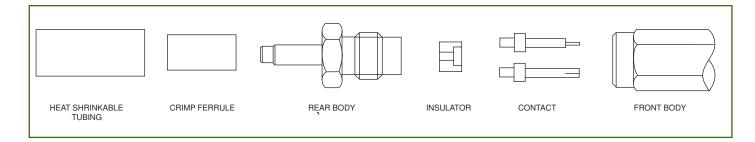


- 1. Side ferrule and heat shrinkable tubing on to cable.
- 2. Trim cable to dimensions shown:

А	В	С	
15,00 (.590)	9,00 (.354)	3,00 (.118)	

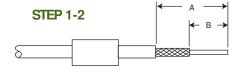



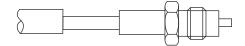


- Slide body over cable dielectric and under the braid until the braid is flush against the rear of the hexagonal nut. NOTE: When using cables with inflexible jackets, it is permissible to make two 3,17 (.125) longitudinal slits in the outer jacket.
- 4. Slide ferrule flush against the body and crimp in position using Cannon's Crimp Tool and suitable Die Set (see table).
- 5. Trim back dielectric and center conductor to dimensions shown.
- 6. Tin center conductor (DO NOT OVER TIN).

- 0.80 Nm (100-110 in. ozs.).

- 7. Assemble insulator over center conductor with counterbore in direction shown.
- 8. Place a small solder preform made from 0,26 0,31 (.010 .012) dia.(28 swg) multi-core solder in rear of contact.
- Assemble contact on center conductor, heat to make solder connection ensuring shoulder of contact is flush against rear insulator. Do not allow solder to protrude outside spill hole.

10. Insert crimped assembly into back end of body and tighten to a torque of 0.70

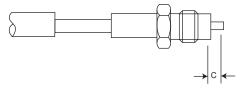



STEP 9


STEP 5



11. Slide heat shrinkable tubing over ferrule and apply heat until tubing shrinks

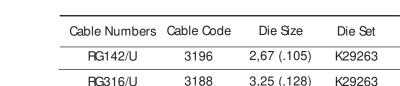

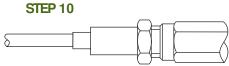

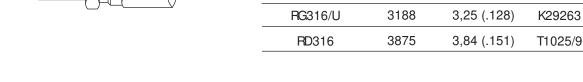


down.




# Al-252 & Al-278

# SMA Straight Connectors, Direct Solder (Separate Center Contact) Type for Semi-Rigid Cable

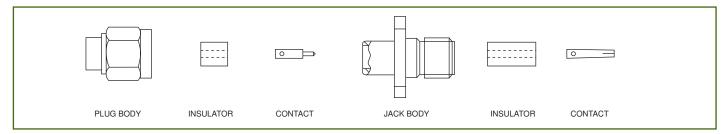


STEP 1 - 2

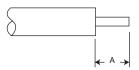

1. Cut cable end square. Trim the cable outer conductor and dielectric as shown taking care not to nick the center conductor. Deburr outer conductor at point of cut.


A	ssembly Instruction NoC	onfigurati	ion A	В
_	Al-252	Plug	3,18 + /- 0,25 (.125 + /010)	0,38 (.015)
	AI-278	Jack	2,54 + /- 0,25 (.100 + /010)	0,38 (.015)

#### STEP 3

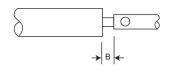


- 2. Tin center conductor (DO NOT OVER TIN).
- Solder contact to center conductor ensuring that dimension shown is maintained. Remove any excess solder.
- 4. Clean housing area of outer conductor with abrasive paper and clean in a suitable agent.
- 5. Place connector assembly in Assembly Jig T1848, or other suitable clamping arrangement, with contact in locator tool as shown.

Tighten screw to secure cable between inserts then tighten locator to seat cable firmly. Place solder ring around cable adjacent to connector body and heat the connector body using an appropriate heat source (solder tongs with variable control). Apply sufficient heat for solder to flow but using minimum heat cycle.

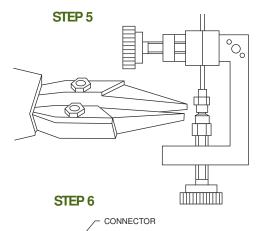


- 6. Using dielectric insertion Tool T2508 (for plugs) or T2509 (for jacks), press insulator into body. Assembly is now ready for use.
  - N.B. Various body configurations can apply.

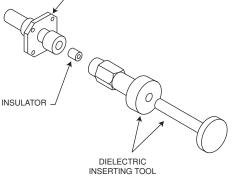




# Al-302 SM A Straight Connectors, Direct Solder (Cable Conductor used as Center Contact) Type for Semi-Rigid Cable

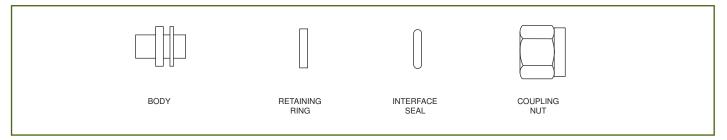


#### STEP 1

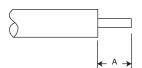

1. Trim the cable outer conductor and dielectric as shown taking care not to nick the center conductor. Deburr outer conductor at point of cut.


$$A = 2,16 + /-0,13 (.085 + /-.005)$$

# STEP 2

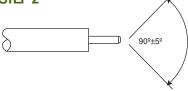


- 2. Point the end of the center conductor using a miniature file.
- 3. If style 9073 is being assembled slip the coupling nut onto the cable.

# STEP 4

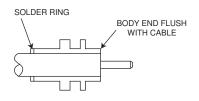

4. Clean housing area of outer conductor with abrasive paper and clean in a suitable agent. Place 24 s.w.g. soldering ring and connector body on prepared end of cable. Ensure body is correct way round. End of cable to be flush with end of connector body as shown.


#### STEP 5

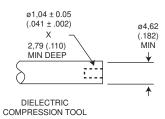


- Compress expanded dielectric back into cable outer conductor with Dielectric Compression Tool as shown, until it is flush with end of body and outer conductor.
- 6. Fit the interface seal.
- 7. Install the spring retaining ring, compress with Tool T0557/1 and fit the coupling nut.




# BAI-015 SMB Right Angle Connectors, Crimp Type for Braided Cable

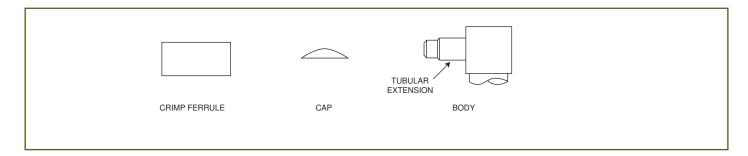

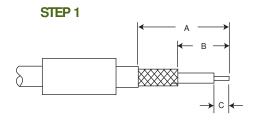

 Trim cable to dimensions shown taking care not to nick braid or center conductor. Tin center conductor (DO NOT OVER TIN) then slip crimp ferrule over cable.

Assembly Instruction No.	Α	В	С
BAI-015	10,00 (.393)	4,00 (.157)	1,50 (.059)

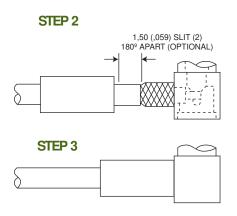

- Insert trimmed cable into back end of body. The tubular body extension will slide under the braid with the rear portion of extension fitting under the jacket as shown. The center conductor will extend into slot in contact. NOTE: On smaller diameter cables, two longitudinal slits in the jacket, 180° apart, may be cut to ease assembly.
- 3. Slip ferrule up over braid to face of square body and crimp, using Cannon's Crimp Tool and suitable Die Set (see table).


Cable Numbers	Cable Code	Die Size	Die Set
RG142/U	9052	5,41 (.213)	K29265
RG196/U	3196	2,67 (.105)	K29263
RG316/U	0000	3,25 (.128)	K29263
RG316/U	3188	3,25 (.128)	K29263
RD316	9399	3,84 (.151)	T1025/9


- 4. Using a small soldering iron solder center conductor to contact. NOTE: The center conductor should not protrude beyond the contact to touch the body. Solder should not protrude beyond the slotted section of the contact.
- Locate the cap in rear of body and dimple or lightly punch to ensure it is locked in position. (A flat punch is recommended). SUPPORT BODY ON SHOULDER DURING THIS OPERATION.

Only common cable retention features are shown in detail. Various body configurations can apply.



# BAI-003 SMB / SMC Straight Connectors, Crimp Type for Braided Cable

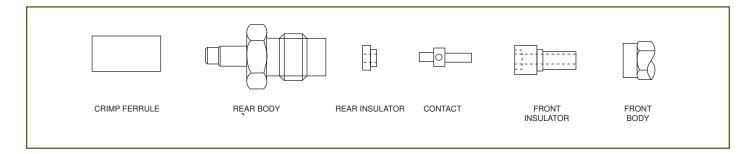

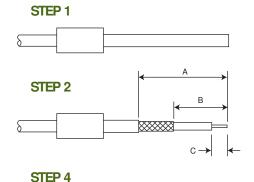



- 1. Side ferrule on cable.
- 2. Trim cable to dimensions shown taking care not to nick braid or center conductor.


Assembly Instruction No.	Α	В	С
BAI-003	15,50 (.610)	9,50 (.374)	2,50 (.098)

- 3. Tin center conductor (DO NOT OVER TIN).
- 4. Side rear body over cable dielectric and under the braid until the braid is flush against the rear of the hexagonal nut. NOTE: When using cables with inflexible jackets two 3,17 (.125) slits in the outer jacket are permissible.
- Side on rear insulator so that the counterbore rests against the cable dielectric.
- 6. Place a small solder preform made from 0,26 0,31 (.010 .012) dia (28 swg) multi-core solder in rear of contact.
- 7. Assemble contact on center conductor, heat to make solder connection ensuring shoulder of contact is flush against rear insulator. NOTE: Do not allow solder to protrude outside spill hole.
- 8. Side ferrule against body and crimp using Cannon's Crimp Tool and suitable Die Set (see table below).
- 9. Side on front insulator (if not already assembled in body).
- 10. Screw on front body and tighten to 0,63 0,70 Nm (90 100 in. ozs.)

Only common cable retention features are shown in detail. Various body configurations can apply.

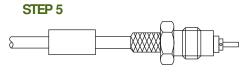


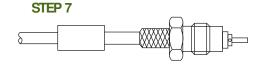


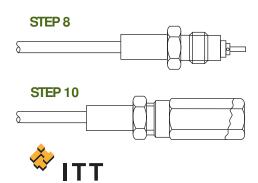

Cable Numbers	Cable Code	Die Size	Die Set
RG142/U	9052	5,41 (.213)	K29265
RG196/U	3196	2,67 (.105)	K29263
RG316/U	0000	3,25 (.128)	K29263
RD316	9399	3,84 (.151)	T1025/9

# Al-703 SM A Straight Connectors, Captive Contact, Crimp Type for Braided Cable

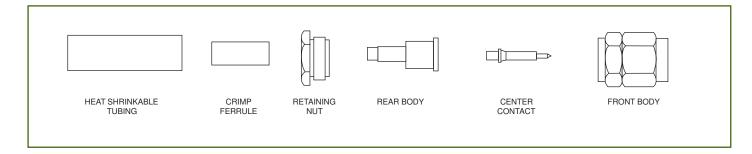

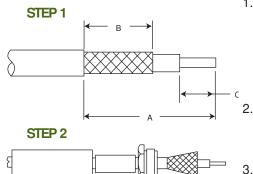


Strip cable to dimensions shown. Do not nick outer or inner conductors.
 Tin inner conductor.

 Α	В	С	
13,46 (.530)	7,11 (.280)	3,56 (.140)	

- Place shrink tubing, crimp ferrule and retaining nut on cable. Hare the cable outer conductor as shown.
- Insert cable dielectric into rear body until it bottoms firmly against insulator as shown.
- STEP 3


  STEP 4
- 4. Place a 0,38 (.015) dia. X 2,50 + /- 0,51 (.100 + /- .020) long solder wire into solder hole of the center contact. Heat center contact and push it over cable inner conductor until it bottoms against insulator as shown. Pemove excess solder if necessary.
- Insert rear body into front body. Engage threads of retaining nut to front body and hand tighten retaining nut. Hold front body firmly with a 7,93 (.312) hex. torque wrench and torque it to 1,13 - 1,69 Nm (10-15 in. lbs) by turning retaining nut only.
- 6. Side crimp ferrule over flared portion of cable outer conductor. Crimp outer sleeve in place as shown. Push cable firmly toward connector when crimping. Trim and remove any excess outer conductor strands if necessary. Position shrink tubing over crimp sleeve apply indirect heat to shrink tubing down.

Cable Numbers	Cable Code	Die Size	Die Set
RG142/U	9142	5,41 (.213)	K29265
RG316/U	9188	3,25 (.128)	K29263
RD316	9875	3,84 (.151)	T1025/9

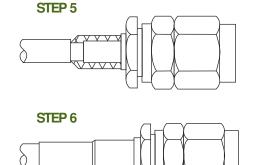



# BAI-001 SMB / SMC Straight Connectors, Clamp Type for Braided Cable

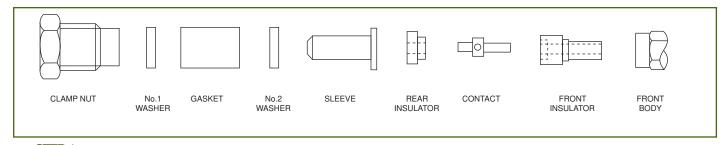

# STEP 1 STEP 2 (216) STEP 3

- STEP 5

  STEP 7

  (.138)

  STEP 9

  (.098)
- STEP 11


  STEP 12

  STEP 13

- 1. Slide clamp nut, No.1 washer, gasket and No.2 washer over cable.
- 2. Trim cable to dimension shown taking care not to nick the braid.
- 3. Thumb braid out radially at right angles to dielectric.
- 4. A small chamfer may now be cut on the end of cable dielectric, to assist assembly of sleeve.
- 5. Slide sleeve over cable dielectric and under braid and outer jacket until the flange of the sleeve is flush against the braid.
- Move No. 2 washer up to braid and trim braid flush with the flange of the sleeve.
- 7. Trim cable dielectric and center conductor to dimensions shown taking care not to nick the center conductor.
- 8. Tin center conductor (DO NOT OVER TIN).
- 9. Slide rear insulator over cable.
- 10. Place a small solder preform made from 0,26 0,31 (.010 .012) dia (28 swg) multi-core sodler in rear of contact.
- 11. Push contact on center conductor as far as possible. Heat center conductor and push until the shoulder of the contact is flush against the rear insulator. Do not allow solder to protrude outside spill hole.
- 12. Side on front insulator flush against rear insulator (if not already assembled in body).
- Move clamp nut, No.1 washer and gasket up to No. 2 washer, slide on front body and tighten clamp nut to required torque: 0,63 - 0,70 Nm (90-100 in. ozs.)

Only common cable retention features are shown in detail. Various body configurations can apply.


# BBAI-1203 Coaxial Terminations, 1 and 2 Point Direct PCB

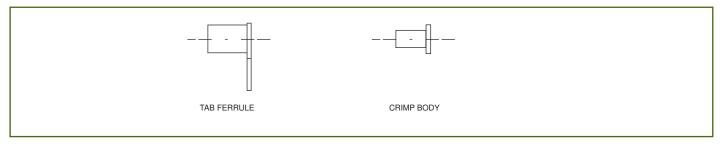

## 

1. Trim cable to dimensions shown being careful not to nick or damage braids or center conductor. Trim center conductor. \* These dimensions suit 2,54 (.100) and 7,62 (.300) PCB pitches, for other pitches see Note 4.

#### STEP 2

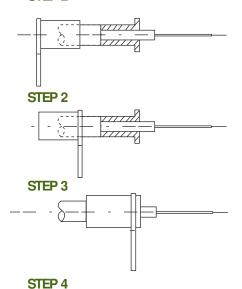

(.300)


2. Side Tab-Ferrule over cable.

NOTE: Orientation of tab-ferrule is optional depending upon mounting requirements. Hare braids and slide crimp body over cable dielectric until braids meet flange on crimp body.

3. Slide tab-ferrule over braids to face of flange and crimp using Cannon's Crimp Tool and suitable Die Set (see table).


Cable Numbers	Die Size	Die Set	
RG174/U	3,25 (.128)	K29263	
RG178/U	2,67 (.105)	K29263	
RG179/U	3,25 (.128)	K29263	
RG188/U	3,25 (.128)	K29263	
RG196/U	2,67 (.105)	K29263	
RG316/U	3,25 (.128)	K29263	


4. Bend center conductor to dimension shown depending upon preferred orientation. These dimensions suit 2,54 (.100) and 7,62 (.300) PCB pitches. For other pitches of 2,54 (.100) multiples add 2,54 (.100) multiples to the 12,70 (.500) and 6,35 (.250) dimensions in the cable stripping instructions Note 1.

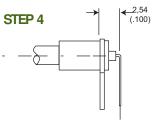



# CSMA 1 - SMA Straight Connectors, Crimp Type for Braided Cable

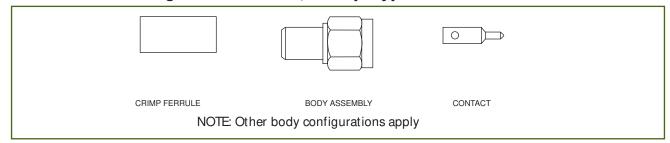


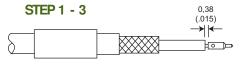

- Side ferrule on to cable.
- 2. Trim cable dimension shown next to the applicable connector drawing on page 15 or page 16.
- Solder contact attachment: Solder contact to inner conductor.


## Crimp contact attachment:

Crimp contact to inner conductor using Cannon's Hand Tool T4897 with positioner T4898 (for male contacts) and T4899 (for female contacts).

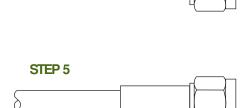


- 4. Insert trimmed cable into the rear of the body assembly. Tubular body extension will slide under the braid with the rear portion of extension fitting under the jacket as shown. NOTE: When using cables with inflexible jackets it is permissible to make two 3.17 (.125) long longitudinal slits in the outer jacket.
- Slip ferrule flush against the body and crimp in position using Cannon's Crimp Tool and Suitable Die Set (see table on page 58).

# CSMA 2 - SMA Right Angle Connectors, Crimp Type for Braided Cable

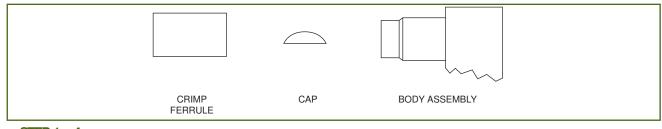



STEP 4

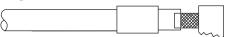


STEP 5






#### STEP 7

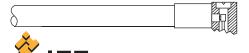


- 1. Side ferrule on to cable.
- 2. Trim cable dimension shown next to the applicable connector drawing on page 15.
- 3. Tin center conductor (DO NOT OVER TIN).
- 4. Side body over cable dielectric and under the braid until braid is flush against underside of body. Ensure center conductor is is located in the forked end of the contact. NOTE: When using cables with inflexible jackets it is permissible to make two 3.17 (.125) longitudinal slits in the outer jacket.
- Side ferrule flush against the body and crimp in position using Cannon's Crimp Tool and Suitable Die Set (see table on page 58).
- Using a small soldering iron solder center conductor to contact.
   NOTE: The center conductor should not protrude beyond the contact or touch the body. Solder should not protrude beyond the slotted section of the contact.
- Locate the cap in rear of body and press flush to outer body to ensure it is locked in position.


# CSM A 3 - SM A Straight Connectors, Direct Solder (Cable Conductor used as Center Contact) Type for Semi-Rigid Cable

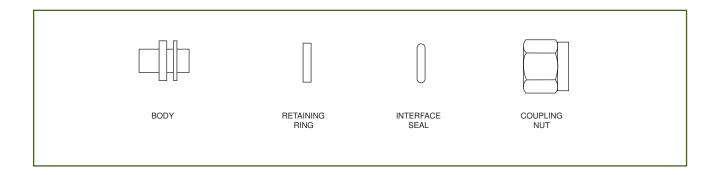

#### STEP 1

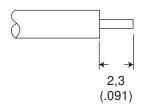


 Remove the cable outer conductor and dielectric to the dimension shown taking care not to nick the center conductor using cable cutting tool. Deburr outer conductor at point of cut.

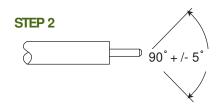


Point the end of the center conductor using a miniature file or suitable tool.

STEP 3

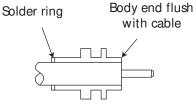


- Clean housing area of outer conductor with abrasive paper and clean in a suitable agent. Ensure body is correct way round. Solder body ensuring end of cable to be flush with end of connector body as shown.
- 4. Fit the interface seal.
- 5. Install the spring retaining ring, compress with circlip pliers and fit the coupling nut.


# CSM A 4 - SM A Straight Connectors, Direct Solder (Separate Center Contact) Type for Semi-Rigid Cable

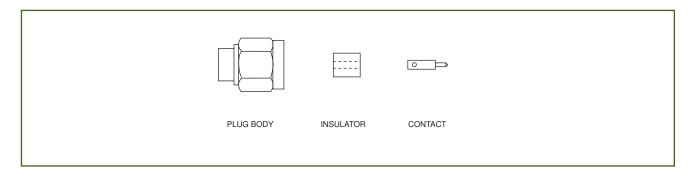


#### STEP 1

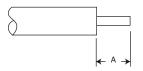


#### STEP 3

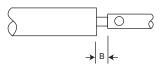

#### STEP 5

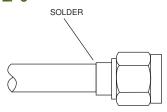

#### STEP 6

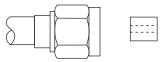



 Cut cable end square. Pemove the cable outer conductor and dielectric to the dimension shown taking care not to nick the center conductor. Deburr outer conductor at point of cut.

Α	В
3.18 + /- 0.25 (.125 + /010)	0.38 (.015)

- 2. Tin center conductor. (DO NOT OVER TIN)
- 3. Solder contact to center conductor ensuring that the dimension shown is maintained. Pemove any excess solder.
- 4. Clean housing area of outer conductor with abrasive paper and clean in a suitable agent.
- 5. Clamp the connector assembly in a suitable fixture. Ensure that the contact is in the correct interface position. Place soldering ring around cable adjacent to connector body and heat the connector body using an appropriate heat source. Apply sufficient heat for solder to flow but using minimum heat cycle.
- 6. Using dielectric insertion Tool T2508, press insulator into body. Assembly is now ready for use.

# CSM A 5 - SM A Right Angle Connectors, Direct Solder Type for Semi-Rigid Cable

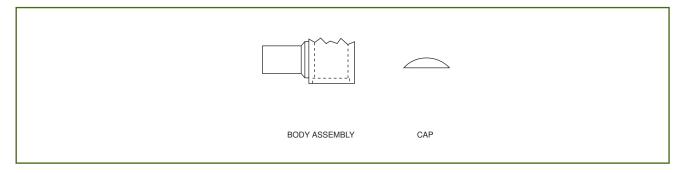

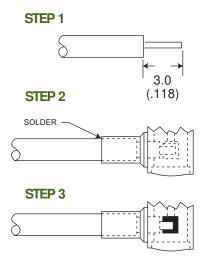

- Remove cable outer conductor and dielectric to the dimension shown, being careful not to fracture the center conductor. Tin center conductor (DO NOT OVER TIN).
- 2. Side cable into body and solder into place.
- 3. Solder center conductor to contact (do not over solder), then locate the cap in rear of body and press flush to outer body to ensure it is locked in position.



## Centre Contact Crimp Tool

Part Number


995-001-584

#### Positioner for use with T4897

Part Number

T4898 for male contacts


T4899 for female contacts

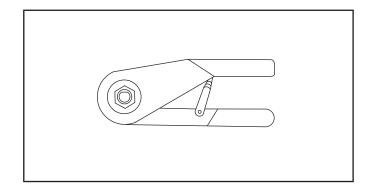

## Ferrule Crimp Tool

Part Number


T1025 / -

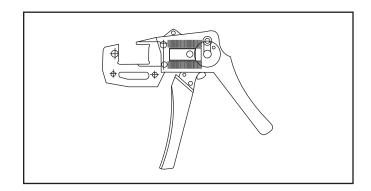

#### Die Set for use with T1025 / -


Part Number Cable Numbers			Die Size	Part Number
	RG142/U 9142		5.42 (.213)	K29265
			5.42 (.213)	K29265
			3.25 (.128)	K29263 *
	RD316	9875	3.84 (.151)	T1025/9

<sup>\*</sup> Three way die set (illustrated)

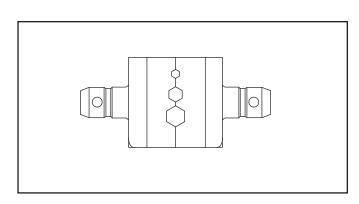

# Torque Wrench (for SMA coupling nut - mating)

Jaw Size	Torque Nm (in oz)	Part Number
7.92 (.312)	0.99 - 1.06 (140-150)	T0854/12/E

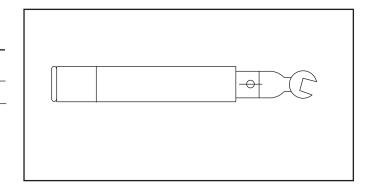



# **TORQUE WRENCHES**

Torque Wrench Application	Jaw Size	Torque Nm (in. ozs.)	Torque Wrench Part Number
SMA Coupling Nut	7,92 (.312)	0,99-1,06 (140-150)	T0854/12/E
SMA Assembly	7,92 (.312)	0,99-1,06 (140-150)	T0854/12/E
SMA Locknut	7,92 (.312)	1,50-1,54 (212-218)	T0854/12/Z4
SMB Coupling Nut SMB Assembly SMB Locknut	5,57 (.219) 6,35 (.250)	0,64-0,71 (90-100) 0,71-0,78 (100-110)	N/A T0854/8/C T0854/10/D
SMC Coupling Nut	5,95 (.234)	0,42-0,49 (60-70)	T0854/9/A
SMC Assembly (Crimp)	5,57 (.219)	0,64-0,71 (90-100)	T0854/8/C
SMC Assembly (Clamp)	5,95 (.234)	0,64-0,71 (90-100)	T0854/9/C
SMC Locknut	6,35 (.250)	0,71-0,78 (100-110)	T0854/10/D
SSMB Coupling Nut SSMB Assembly SSMB Locknut	3,97 (.156) 4,75 (.187)	0,13-0,14 (18-20) 0,25-0,30 (35-50)	N/A T0854/7/G contact customer service
SSMC Coupling Nut	3,97 (.156)	0,18-0,21 (25-30)	T0854/7/M
SSMC Assembly	3,97 (.156)	0,13-0,14 (18-20)	T0854/7/G
SSMC Locknut	4,75 (.187)	0,25-0,30 (35-50)	contact customer service
BNC Adaptor Locknut	14,27 (.562)	2,9-3,1 (411-439)	
Type N Adaptor Coupling	17,45 (.687)	1,2-1,6 (170-227)	
Type N Adaptor Locknut	19,05 (.750)	1,8-2,2 (255-312)	

Note: This is not the entire range of Torque Wrenches. Please contact customer service for details of other styles.

# **CRIMP TOOLS AND DIE SETS**

Description	Old Part Number	New Part Number		
Crimp Tool without Die Set	050-000-0000000	T1025/-		
Die Set for Cables RG178/U, 196U	050-000-0290000 *	K29263 *2,67 (.105)		
Die Set for Cables FG174/U, 316/U, 179U	050-000-0290000 *	K29263 * 3,25 (.128)		A/F Dimensions
Die Set for Cable RG142/U	050-000-0291000 **	K29265 5,41 (.213)	* 3 way die set	2,67 (.105) 3,25 (.128)
Die Set for Cable RD316	050-000-0292000	T1025/9 3,84 (.151)		4,52 (.178)
Die Set for Cable RG196 (for SSMB / SSMC Series)	-	T1025/1 2,67 (.105)	** 2 way die set	3,25 (.128) 5,41 (.213)
Die Set for Cable PG316 (for SSMB / SSMC Series)		T1025/4 3,25 (.128)		

Note: This is not the entire range of Crimp Tools. Please contact customer service for details of other styles.

**♦**ITT

Dimensions shown in mm (inch)

Specifications and dimensions subject to change

Attenuation - Decrease in power due to resistance or mismatch in transmission line.

Back Mounted - When applied to a coaxial connector it is that connector mounted from the rear of a panel with the fixing nut on the outside.

Bandwidth - Distance between two frequencies over which a RF or microwave device is intended to work.

Between Series Adaptor - An adaptor used to connect two different generic types of connector.

BNC - Bayonet Nut Connector.

Braid - A weave of metal strands used as an electrical shield for an insulated conductor or group of conductors.

Bulkhead Mount - The type of connector fitted to a chassis using a single cut-out hole.

Cable Retention - The mechanism that joins the connector

Cable Retention Force - The axial force which a connector / cable join can withstand.

Captive - A component such as a contact which is held firmly in position.

Characteristic Impedance - That impedance at which the transmission line is intended to work. A change from the characteristic impedance along its length will cause mismatch and loss of power.

Clamp - The holding of a cable by use of a screw thread

Closed Entry Contact - A female contact which is designed to prevent insertion of a contact larger than

Coaxial Cable - A transmission line where the one conductor is concentric inside another, often abbreviated

Coaxial Termination - A resistive element used to end a coaxial line in its characteristic impedance.

Coaxial Terminator - A device for terminating coaxial cable to a PCB or bulkhead mount (a mechanical device and should not be confused with coaxial termination)

Conhex - Tradename covering SMB and SMC, both in 50 Ohm and 75 Ohm impedance (discontinued)

Connector Durability - The number of times a connector can be physically mated and still maintain its specified

Contact Resistance - The measurement of the DC electrical resistance between a pair of mated contacts. Usually specified as being measured after a given number of mating cycles.

Corona - A discharge of electricity caused by the ionisation of the air around a conductor just prior to total breakdown or flashover.

Crimp - The action of distorting a metal tube to give intimate contact with a conductor; a good crimp should be gas tight and not be impacted by environmental change.

Crimp Dies - The tool inserts which determine the shape of the distortion to create a consistently good crimp.

Crimp Tool - The tool which holds crimp dies to apply the necessary force.

Cross Talk - The amount of signal which may be transferred from one signal carrying line to an adjacent

Cut Off Frequency - The frequency at which the loss exceeds a predetermined level

Decibel (dB) - A unit of measurement of

Dielectric - The insulating medium which holds the center conductor concentric within the connector or cable.

Dielectric Constant - The electrical value of dielectric which determines the impedance in cables or connectors with constant diameters.

Dielectric Withstanding Voltage - The maximum voltage that a dielectric material can withstand without failure.

Direct Solder - A common method of terminating connectors to semi-rigid cable by soldering the cable jacket to the connector.

Discontinuity - A dramatic change in characteristic impedance which gives rise to a reflected wave.

Dissipation - The unused or lost energy in a system e.g. heat

Distortion - An unwanted change in a signal wave form.

Dummy Load - A device connected to the end of a transmission line to absorb transmitted power and prevent reflected energy.

Dust Cap - A mechanical device attached to the mating face of an unmated connector to prevent ingress of contaminants and provide protection against mechanical damage.

Electromagnetic Compatibility (EMC) - The ability of a device to operate within its intended environment without being effected by or generating electromagnetic interference (EMI).

Engagement and Separation Forces - The forces required to mate and unmate a pair of connectors. The forces are usually specified as a max & min for each action.

Environmentally Sealed - A connector that is provided with seals or other devices to prevent ingress of dust moisture or other contaminants while mated which might impair performance.

Rexible Cable - A coaxial cable where the outer conductor is flexible (usually braided).

Gigahertz (GHz) - A measure of frequency representing 1 billion Hertz (cycles per second).

Impedance - See 'Characteristic Impedance'

In-Series Adaptor - An adaptor which enables the connection of two connectors of the same generic type.

Insertion Loss - The loss of power due to a particular component in a transmission line (e.g. cable).

Insulation Pesistance - The electrical resistance between two conductors separated by an insulating medium.

Intermodulation - The mixing of two or more frequencies

Interface - The two surfaces of a connector which come into intimate contact when the two halves are mated.

Inter-series Adaptor - See 'Between Series Adaptor'

Isolation - The measure of interaction between two or more transmission lines.

Jack - One half of a mating pair of connectors. The jack interface normally goes inside the plug interface.

Mean Power - The mean value of the rate at which energy is transmitted from one place to another.

Micro Strip - A transmission line consisting of a flat conductor on a dielectric above a single ground plane. (the ground plane is frequently a metalized face of the dielectric).

Microwave - Very short electromagnetic waves. Frequency range above 1 GHz.

MIL-C-39012 - The generic specification covering USA Military coaxial connectors.

MIL-C-17 - The generic MIL spec covering coaxial cables.

Mismatch - The condition in which the impedance of the source and load are not the same. This reduces power transfer and causes reflections.

Mounting Plan - The design of the PCB or panel cut-out used to mount the connector.

N Connector - This was the first true microwave

connector capable of working to 18 GHz, initially designed for test applications.

Nanohex - Trade name covering SSMB & SSMC (discontinued)

Noise - An external electromagnetic signal which interferes with the desired signal.

Non-captive - A component such as a contact which does not have a retention feature.

Passivation - This is a surface treatment applied primarily to stainless steel. The process removes contaminating iron particles and produces a passive surface.

Peak Power - Is the maximum power which may be handled by a connector or cable.

Plug - One half of a mating pair of connectors. The plug interface normally goes outside the jack interface.

POSNS - Abbreviation for "positions".

PTFE - Abbreviation of polytetrafluorethylene. This is the most commonly used dielectric (insulator) used in professional coaxial connectors.

QPL - Qualified Parts List. Parts approved to MIL-C-390 12 specification.

Receptacle - A term used to describe a connector assembly usually bulkhead or PCB mounted.

Return Loss - A reason for loosing RF energy due to signals being reflected due to a mismatch in a

RF Leakage - The RF power lost from a transmission line or device. Measured in dB

RG - The traditional prefix for MIL spec coaxial cables.

Screw-on - The mating action of connectors which are joined using a screw thread (e.g. SMC)

Sealflex2™ - Cannon trade name for a flexible microwave cable assembly which has a performance similar to semirigid cable.

Semi-rigid Cable - A coaxial cable where the outer conductor is a solid metal tube.

Skin Effect - The tendency of alternating currents to flow near to the surface of a conductor; this increases resistance and becomes more marked the higher the frequency.

SMD - Sometimes used as an abbreviation for slide-on variants of SMB. This is a misnomer, the more common use is for Surface Mount Device.

Snap-on - A term used to describe the mating action of SMB and SSMB connectors.

Solderless SMA - An SMA connector that can be connected to semi-rigid cable by compressing the inner body rather than by soldering (sometimes referred to as semi-rigid 'crimp' connectors).

Stripline - A method of building a microwave circuit. The circuitry is sandwiched between 2 ground planes. Sometimes referred to as Tri-plate.

Teflon - DuPont tradename for PTFE.

Tensile Strength - The greatest force a device can withstand without tearing or pulling apart. This is frequently the method of determining the effectiveness of

TNC - Thread Nut Connector same size as BNC; the only obvious difference is the coupling nut.

Tri-plate - See Stripline.

UG Symbol - Used to indicate a connector made to US government spec.

Voltage Standing Wave Patio (VSWR) - A way of expressing the resultant loss of power as a result of signal reflections due to discontinuity.



050-007-0000220         24         051-427-3188220         29         B51-024-0000220         21           050-027-0000220         24         051-445-0000220         29         B51-024-3989220         21           050-027-0000220         25         051-445-0000220         30         B51-051-9029220         23           050-047-0000220         25         055-607-2003890         9         B51-053-9000220         23           050-047-0000220         25         055-607-9173890         9         B51-053-9029220         23           050-047-6201310         35         055-607-9173890         9         B51-328-3188220         21           050-424-3198220         31         055-611-3702890         9         B51-328-3196220         21           050-428-3188220         31         055-611-3703890         9         B51-328-9019AU0         21           050-428-3196220         31         055-939-9029AR6         33         B51-328-9019AU0         21           050-443-9000220         31         055-939-9029AR6         33         B51-351-0000220         23           050-445-0000220         31         055-939-9034R6         34         F50-E22-9142000         15           050-451-0000220         32         055-939-9069AR6 <th>Part Number</th> <th>Page</th> <th>Part Number</th> <th>Page</th> <th>Part Number</th> <th>Page</th>	Part Number	Page	Part Number	Page	Part Number	Page
DSD-024-0000220	050-007-0000220	24	051-427-3188220	29	B51-024-0000220	21
050-027-0000220						
650-043-0000220         25         051-462-0000220         23           050-047-0000220         25         055-607-2003890         9         B51-053-0000220         23           050-047-0000220         25         055-607-9172890         9         B51-053-9009220         23           050-074-6201310         35         055-607-9173890         9         B51-328-3188220         21           050-0424-3196220         31         055-611-3702890         9         B51-328-3188220         21           050-428-3188220         31         055-611-3703890         9         B51-328-9019AU0         21           050-428-3186220         31         055-939-9019AH6         33         B51-328-9399200         21           050-428-3186220         31         055-939-9029AH6         34         F50-E22-9141000         15           050-445-0000220         31         055-939-9059AH6         34         F50-E22-9142000         15           050-451-0000220         32         055-939-9059AH6         34         F50-E22-9142000         15           050-622-9875890         8         065-9AA-050000         39         F50-E22-9975000         15           050-622-9875890         8         065-9AA-1000000         39         F50-E28-9141000 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
DSD-045-0000220   25						
650-047-0000220         25         055-607-9172890         9         B51-328-3188220         21           050-074-6201310         35         055-607-9173890         9         B51-328-3188220         21           050-0424-3186220         31         055-611-3702890         9         B51-328-3196220         21           050-0428-3188220         31         055-939-9019AP6         33         B51-328-9399220         21           050-0428-3196220         31         055-939-9029AP6         33         B51-351-0000220         23           050-0443-0000220         31         055-939-9039AP6         34         F50-E22-9142000         15           050-0445-0000220         31         055-939-9049AP6         34         F50-E22-9142000         15           050-0451-0000220         32         055-939-9059AP6         34         F50-E22-9188000         15           050-622-9188890         8         065-9AA-0300000         39         F50-E22-9188000         15           050-622-9188890         8         065-9AA-0500000         39         F50-E27-9875000         16           050-628-9188890         8         065-9AA-1500000         39         F50-E28-9141000         15           050-628-9875890         8         065-9AA-15000						
650-074-6201310         35         055-607-9173890         9         B51-328-3186220         21           050-424-3186220         31         055-611-3702890         9         B51-328-3196220         21           050-424-3196220         31         055-611-3703890         9         B51-328-9019AU0         21           050-428-3186220         31         055-939-9019AR6         33         B51-328-9399220         21           050-443-0000220         31         055-939-9029AR6         33         B51-351-0000220         23           050-443-0000220         31         055-939-9039AR6         34         F50-E22-9141000         15           050-445-0000220         32         055-939-9069AR6         34         F50-E22-9188000         15           050-453-0000220         32         055-939-9069AR6         34         F50-E22-9188000         15           050-622-9188890         8         065-9AA-0500000         39         F50-E22-9875000         15           050-622-9188890         8         065-9AA-0750000         39         F50-E28-914800         16           050-628-9875890         8         065-9AA-1500000         39         F50-E28-918800         15           050-628-9878890         8         065-9AA-200000						
050-424-3188220   31						
050-424-3196220   31						
050-428-3188220   31						
050-428-3196220         31         055-939-9029AR6         33         B51-351-0000220         23           050-443-0000220         31         055-939-9039AR6         34         F50-E22-9141000         15           050-445-0000220         32         055-939-9059AR6         34         F50-E22-9188000         15           050-451-0000220         32         055-939-9069AR6         34         F50-E22-9188000         15           050-622-9188890         8         065-9AA-0300000         39         F50-E27-9875000         16           050-622-9188890         8         065-9AA-0500000         39         F50-E27-9875000         16           050-627-9188890         8         065-9AA-0500000         39         F50-E28-9148000         15           050-628-9188890         8         065-9AA-1050000         39         F50-E28-9141000         15           050-628-9875890         8         065-9AA-1000000         39         F50-E28-9188000         15           050-628-9875890         8         065-9AA-2000000         39         F50-E28-918800         15           050-628-9875890         8         065-9AA-2000000         39         F50-E28-918800         15           050-645-4528890         10         065-9AS-0500000						
050-443-0000220         31         055-939-9039AP6         34         F50-E22-9141000         15           050-445-0000220         31         055-939-9049AP6         34         F50-E22-9188000         15           050-451-0000220         32         055-939-9059AP6         34         F50-E22-918800         15           050-622-9188890         8         065-9AA-0300000         39         F50-E27-9188000         16           050-622-9875890         8         065-9AA-0500000         39         F50-E27-9875000         16           050-627-9875890         8         065-9AA-1000000         39         F50-E28-9141000         15           050-627-9875890         8         065-9AA-1500000         39         F50-E28-9144000         15           050-628-9188890         8         065-9AA-1500000         39         F50-E28-9144000         15           050-628-9188890         8         065-9AA-2000000         39         F50-E28-9188000         15           050-645-45289875890         8         065-9AA-2000000         39         F50-E28-918800         15           050-645-4528890         10         065-9AS-0500000         39         F50-E51-000000         16           050-645-4575890         10         065-9AS-1000000 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
050-445-0000220         31         055-939-9049AF6         34         F50-E22-9142000         15           050-451-0000220         32         055-939-9069AF6         34         F50-E22-9188000         15           050-453-0000220         32         055-939-9069AF6         34         F50-E22-9875000         15           050-622-9188890         8         065-9AA-0300000         39         F50-E27-9875000         16           050-622-9875890         8         065-9AA-0750000         39         F50-E28-9141000         15           050-627-9875890         8         065-9AA-1750000         39         F50-E28-9142000         15           050-628-9188890         8         065-9AA-1000000         39         F50-E28-9142000         15           050-628-9875890         8         065-9AA-2000000         39         F50-E28-9188000         15           050-645-4528890         10         065-9AA-2000000         39         F50-E28-9875000         15           050-645-4540890         10         065-9AS-1000000         39         F50-E51-000000         16           050-645-457890         10         065-9AS-2000000         39         F55-E07-9172000         17           050-63-000310         11         065-9S5-100000						
050-451-0000220         32         055-939-9059AF6         34         F50-E22-9188000         15           050-453-0000220         32         055-939-9069AF6         34         F50-E22-9875000         15           050-622-9188890         8         065-9AA-0300000         39         F50-E27-9875000         16           050-622-9188890         8         065-9AA-0500000         39         F50-E28-91841000         15           050-627-9188890         8         065-9AA-1500000         39         F50-E28-9148000         15           050-628-9188890         8         065-9AA-1500000         39         F50-E28-9148000         15           050-628-9875890         8         065-9AA-2000000         39         F50-E28-918800         15           050-648-4528890         10         065-9AA-2000000         39         F50-E28-9875000         15           050-645-4528890         10         065-9AS-0500000         39         F50-E28-9875000         15           050-645-4578890         10         065-9AS-1000000         39         F50-E53-000000         16           050-645-9009890         10         065-9AS-2000000         39         F55-E07-200300         17           050-651-0000310         11         065-9SS-0500000 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
050-453-0000220         32         055-939-9069AF6         34         F50-E22-9875000         15           050-622-9188890         8         065-9AA-0300000         39         F50-E27-9188000         16           050-622-9875890         8         065-9AA-0750000         39         F50-E28-9141000         15           050-627-9875890         8         065-9AA-1000000         39         F50-E28-9142000         15           050-628-9188890         8         065-9AA-1500000         39         F50-E28-9188000         15           050-628-9875890         8         065-9AA-2000000         39         F50-E28-9188000         15           050-645-4528890         10         065-9AA-2000000         39         F50-E28-9875000         15           050-645-4528890         10         065-9AS-0500000         39         F50-E28-9050000         15           050-645-4575890         10         065-9AS-0500000         39         F50-E53-0000000         16           050-645-4575890         10         065-9AS-000000         39         F55-E07-2003000         17           050-645-909890         10         065-9AS-2000000         39         F55-E07-9172000         17           050-653-000310         11         065-9SS-2000000						
050-622-9188890         8         065-9AA-0300000         39         F50-E27-9188000         16           050-622-9875890         8         065-9AA-0500000         39         F50-E27-9875000         16           050-627-9875890         8         065-9AA-1000000         39         F50-E28-9141000         15           050-628-9188890         8         065-9AA-1000000         39         F50-E28-9188000         15           050-628-9875890         8         065-9AA-2000000         39         F50-E28-9875000         15           050-645-4528890         10         065-9AA-2000000         39         F50-E28-9875000         15           050-645-4528890         10         065-9AS-2000000         39         F50-E28-9875000         16           050-645-457890         10         065-9AS-0500000         39         F50-E21-0000000         16           050-645-4575890         10         065-9AS-1000000         39         F55-E07-2003000         17           050-645-9009890         10         065-9AS-2000000         39         F55-E07-9172000         17           050-651-000310         11         065-9SS-1000000         39         F55-E07-9173000         17           050-674-0000890         12         065-9SS-2000000 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
050-622-9875890         8         065-9AA-0500000         39         F50-E27-9875000         16           050-627-9188890         8         065-9AA-0750000         39         F50-E28-9141000         15           050-627-9875890         8         065-9AA-1000000         39         F50-E28-9182000         15           050-628-9188890         8         065-9AA-1500000         39         F50-E28-9875000         15           050-628-9875890         8         065-9AA-2000000         39         F50-E28-9875000         15           050-645-4528890         10         065-9AS-2000000         39         F50-E53-0000000         16           050-645-4576890         10         065-9AS-1000000         39         F50-E53-0000000         17           050-645-9098890         10         065-9AS-2000000         39         F55-E07-9172000         17           050-651-0000310         11         065-9SS-1000000         39         F55-E07-9173000         17           050-673-0000890         12         065-9SS-1000000         39         F55-E17-9173000         17           050-674-0000890         12         065-9SS-3000000         39         F55-E11-3702000         17           050-674-6302310         35         A50-624-9188890 </td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
050-627-9188890         8         065-9AA-0750000         39         F50-E28-9141000         15           050-627-9875890         8         065-9AA-1000000         39         F50-E28-9142000         15           050-628-9875890         8         065-9AA-1500000         39         F50-E28-9188000         15           050-645-4528890         10         065-9AA-2000000         39         F50-E28-9875000         15           050-645-4540890         10         065-9AS-0500000         39         F50-E53-0000000         16           050-645-4575890         10         065-9AS-1000000         39         F55-E07-2003000         17           050-645-9009890         10         065-9AS-2000000         39         F55-E07-9172000         17           050-651-0000310         11         065-9SS-0500000         39         F55-E07-9173000         17           050-663-0000310         11         065-9SS-2000000         39         F55-E11-3702000         17           050-674-0000890         12         065-9SS-3000000         39         F55-E11-3703000         17           050-674-6700890         36         A50-624-9188890         8         K29263         59           050-675-608090         36         A51-424-3196220						
050-627-9875890         8         065-9AA-1000000         39         F50-E28-9142000         15           050-628-9875890         8         065-9AA-1500000         39         F50-E28-9875000         15           050-645-4528890         10         065-9AA-2000000         39         F50-E51-0000000         16           050-645-4528890         10         065-9AS-0500000         39         F50-E51-0000000         16           050-645-4575890         10         065-9AS-1000000         39         F55-E07-2003000         17           050-645-9009890         10         065-9AS-2000000         39         F55-E07-9172000         17           050-651-0000310         11         065-9SS-000000         39         F55-E07-9173000         17           050-673-0000310         11         065-9SS-2000000         39         F55-E11-3702000         17           050-673-0000890         12         065-9SS-2000000         39         F55-E11-3702000         17           050-674-6302310         35         A50-624-9188890         8         K29263         59           050-674-6700890         36         A50-624-9188890         8         K29265         59           050-675-605890         36         A51-424-3196220         29<						
050-628-9188890         8         065-9AA-1500000         39         F50-E28-9188000         15           050-628-9875890         8         065-9AA-2000000         39         F50-E28-9875000         15           050-645-4528890         10         065-9AA-2000000         39         F50-E51-0000000         16           050-645-4575890         10         065-9AS-1000000         39         F55-E07-2003000         17           050-645-9009890         10         065-9AS-2000000         39         F55-E07-9172000         17           050-651-0000310         11         065-9SS-0500000         39         F55-E07-9173000         17           050-673-0000890         12         065-9SS-2000000         39         F55-E11-3702000         17           050-673-0000890         12         065-9SS-3000000         39         F55-E11-3703000         17           050-674-6302310         35         A50-624-9188890         8         K29263         59           050-674-63022310         35         A50-624-9188890         8         T0854/10D         59           050-674-670890         36         A51-424-3196220         29         T0854/12/E         59           050-675-6801890         36         A51-428-3188220         29<						
050-628-9875890         8         065-9AA-2000000         39         F50-E28-9875000         15           050-645-4528890         10         065-9AA-2000000         39         F50-E51-0000000         16           050-645-4540890         10         065-9AS-0500000         39         F50-E53-0000000         17           050-645-957890         10         065-9AS-2000000         39         F55-E07-2003000         17           050-645-9009890         10         065-9AS-2000000         39         F55-E07-9172000         17           050-651-0000310         11         065-9SS-0500000         39         F55-E07-9173000         17           050-653-0000310         11         065-9SS-1000000         39         F55-E11-3702000         17           050-673-0000890         12         065-9SS-2000000         39         F55-E11-3703000         17           050-674-6302310         35         A50-624-9188890         8         K29263         59           050-674-6302310         35         A50-624-9188890         8         K29265         59           050-674-6700890         36         A51-424-3196220         29         T0854/12/E         59           050-675-0705890         36         A51-428-3186220         29 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
050-645-4528890         10         065-9AA-2000000         39         F50-E51-0000000         16           050-645-4540890         10         065-9AS-0500000         39         F50-E53-0000000         16           050-645-9009890         10         065-9AS-2000000         39         F55-E07-2003000         17           050-651-0000310         11         065-9SS-0500000         39         F55-E07-9173000         17           050-653-0000310         11         065-9SS-1000000         39         F55-E11-3702000         17           050-653-0000310         11         065-9SS-2000000         39         F55-E11-3702000         17           050-673-0000890         12         065-9SS-3000000         39         F55-E11-3702000         17           050-674-6302310         35         A50-624-9188890         8         K29263         59           050-674-6302310         35         A50-624-9188890         8         K29265         59           050-674-63024990         36         A51-424-3196220         29         T0854/12/E         59           050-675-000890         12         A51-427-3196220         29         T0854/12/E         59           050-675-6801890         36         A51-428-3188220         29						
050-645-4540890         10         065-9AS-0500000         39         F50-E53-0000000         16           050-645-4575890         10         065-9AS-1000000         39         F55-E07-2003000         17           050-645-9009890         10         065-9AS-2000000         39         F55-E07-9172000         17           050-651-0000310         11         065-9SS-0500000         39         F55-E07-9173000         17           050-673-0000890         12         065-9SS-2000000         39         F55-E11-3702000         17           050-674-0000890         12         065-9SS-2000000         39         F55-E11-3703000         17           050-674-6302310         35         A50-624-9188890         8         K29263         59           050-674-6302310         35         A50-624-9188890         8         K29265         59           050-674-63024990         36         A50-624-9875890         8         T0854/10D         59           050-675-000890         12         A51-424-3196220         29         T0854/12/E         59           050-675-6705890         36         A51-428-3188220         29         T0854/7/G         59           051-027-0000220         21         A51-453-0000220         30         <						
050-645-4575890         10         065-9AS-1000000         39         F55-E07-2003000         17           050-645-9009890         10         065-9AS-2000000         39         F55-E07-9172000         17           050-651-0000310         11         065-9SS-0500000         39         F55-E07-9173000         17           050-653-0000310         11         065-9SS-1000000         39         F55-E11-3702000         17           050-673-0000890         12         065-9SS-2000000         39         F55-E11-3703000         17           050-674-0000890         12         065-9SS-3000000         39         K29263         59           050-674-6302310         35         A50-624-9188890         8         K29265         59           050-674-6302310         36         A50-624-9188890         8         K29265         59           050-674-670890         36         A51-424-3196220         29         T0854/10D         59           050-675-6705890         36         A51-428-3188220         29         T0854/12/E         59           050-678-6801890         36         A51-428-3186220         29         T0854/7/M         59           051-027-3196220         21         A51-453-0000220         30         T0854/						
050-645-9009890         10         065-9AS-2000000         39         F55-E07-9172000         17           050-651-0000310         11         065-9SS-0500000         39         F55-E07-9173000         17           050-653-0000310         11         065-9SS-1000000         39         F55-E11-3702000         17           050-673-0000890         12         065-9SS-2000000         39         F55-E11-3703000         17           050-674-0000890         12         065-9SS-3000000         39         K29263         59           050-674-6302310         35         A50-624-9188890         8         K29265         59           050-674-670890         36         A50-624-9875890         8         T0854/10D         59           050-675-6700890         36         A51-424-3196220         29         T0854/12/E         59           050-675-6705890         36         A51-428-3188220         29         T0854/7/G         59           050-675-6801890         36         A51-428-3186220         29         T0854/7/M         59           051-027-0000290         21         A51-428-3875220         29         T0854/9/A         59           051-027-3196220         21         A51-455-0000220         30         T0854/9/A						
050-651-0000310         11         065-9SS-0500000         39         F55-E07-9173000         17           050-653-0000310         11         065-9SS-1000000         39         F55-E11-3702000         17           050-673-0000890         12         065-9SS-2000000         39         F55-E11-3703000         17           050-674-0000890         12         065-9SS-3000000         39         K29263         59           050-674-6302310         35         A50-624-9188890         8         K29265         59           050-674-6324990         36         A50-624-9875890         8         T0854/10D         59           050-674-6700890         36         A51-424-3196220         29         T0854/12/E         59           050-675-6705890         36         A51-428-3188220         29         T0854/7/G         59           050-675-6801890         36         A51-428-3188220         29         T0854/7/M         59           051-027-0000290         12         A51-428-3875220         29         T0854/8/C         59           051-027-9399220         21         A51-451-0000220         30         T0854/9/A         59           051-043-0000220         21         A51-50000220         30         T0854/9/C						
050-653-0000310         11         065-9SS-1000000         39         F55-E11-3702000         17           050-673-0000890         12         065-9SS-2000000         39         F55-E11-3703000         17           050-674-0000890         12         065-9SS-3000000         39         K29263         59           050-674-6302310         35         A50-624-9188890         8         K29265         59           050-674-6324990         36         A50-624-9875890         8         T0854/10D         59           050-674-6700890         36         A51-424-3196220         29         T0854/12/E         59           050-675-0000890         12         A51-427-3196220         29         T0854/12/Z4         59           050-675-6705890         36         A51-428-3188220         29         T0854/7/G         59           050-675-6801890         36         A51-428-3196220         29         T0854/7/M         59           051-027-0000290         12         A51-428-3875220         29         T0854/8/C         59           051-027-9399220         21         A51-453-0000220         30         T0854/9/A         59           051-043-0000220         21         B50-051-0000220         26         T1025/1						
050-673-0000890         12         065-9SS-2000000         39         F55-E11-3703000         17           050-674-0000890         12         065-9SS-3000000         39         K29263         59           050-674-6302310         35         A50-624-9188890         8         K29265         59           050-674-6324990         36         A50-624-9875890         8         T0854/10D         59           050-674-6700890         36         A51-424-3196220         29         T0854/12/E         59           050-675-0000890         12         A51-427-3196220         29         T0854/12/Z4         59           050-675-6705890         36         A51-428-3188220         29         T0854/7/G         59           050-675-6801890         36         A51-428-3196220         29         T0854/7/M         59           050-678-0000890         12         A51-428-3875220         29         T0854/8/C         59           051-027-0000220         21         A51-451-0000220         30         T0854/9/A         59           051-027-3196220         21         A51-453-0000220         30         T0854/9/C         59           051-043-0000220         21         B50-051-9019220         26         T1025/- <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td></td<>						
050-674-0000890         12         065-9SS-3000000         39         K29263         59           050-674-6302310         35         A50-624-9188890         8         K29265         59           050-674-6324990         36         A50-624-9875890         8         T0854/10D         59           050-674-6700890         36         A51-424-3196220         29         T0854/12/E         59           050-675-0000890         12         A51-427-3196220         29         T0854/12/Z4         59           050-675-6705890         36         A51-428-3188220         29         T0854/7/M         59           050-675-6801890         36         A51-428-3196220         29         T0854/7/M         59           050-678-0000890         12         A51-428-3196220         29         T0854/8/C         59           051-027-0000220         21         A51-428-3875220         29         T0854/9/A         59           051-027-3196220         21         A51-451-0000220         30         T0854/9/A         59           051-027-9399220         21         B50-051-0000220         26         T1025/-         58           051-043-0000220         22         B50-051-9019220         26         T1025/9         59						
050-674-6302310         35         A50-624-9188890         8         K29265         59           050-674-6324990         36         A50-624-9875890         8         T0854/10D         59           050-674-6700890         36         A51-424-3196220         29         T0854/12/E         59           050-675-0000890         12         A51-427-3196220         29         T0854/12/Z4         59           050-675-6705890         36         A51-428-3188220         29         T0854/7/G         59           050-675-6801890         36         A51-428-3196220         29         T0854/7/M         59           050-678-0000890         12         A51-428-3875220         29         T0854/8/C         59           051-027-0000220         21         A51-451-0000220         30         T0854/9/A         59           051-027-3196220         21         A51-453-0000220         30         T0854/9/C         59           051-027-9399220         21         B50-051-0000220         26         T1025/-         58           051-045-0000220         22         B50-053-0000220         26         T1025/9         59           051-047-0000220         22         B50-053-9019220         26         T4897         58						
050-674-6324990       36       A50-624-9875890       8       T0854/10D       59         050-674-6700890       36       A51-424-3196220       29       T0854/12/E       59         050-675-0000890       12       A51-427-3196220       29       T0854/12/Z4       59         050-675-6705890       36       A51-428-3188220       29       T0854/7/G       59         050-675-6801890       36       A51-428-3196220       29       T0854/7/M       59         050-678-0000890       12       A51-428-3875220       29       T0854/8/C       59         051-027-0000220       21       A51-451-0000220       30       T0854/9/A       59         051-027-3196220       21       A51-453-0000220       30       T0854/9/C       59         051-027-9399220       21       B50-051-0000220       26       T1025/-       58         051-043-0000220       22       B50-051-9019220       26       T1025/1       58         051-047-0000220       22       B50-053-0000220       26       T1025/9       59         051-075-0000220       21       B50-328-3188220       24       T4898       58						
050-674-6700890       36       A51-424-3196220       29       T0854/12/E       59         050-675-0000890       12       A51-427-3196220       29       T0854/12/Z4       59         050-675-6705890       36       A51-428-3188220       29       T0854/7/G       59         050-675-6801890       36       A51-428-3196220       29       T0854/7/M       59         050-678-0000890       12       A51-428-3875220       29       T0854/8/C       59         051-027-0000220       21       A51-451-0000220       30       T0854/9/A       59         051-027-3196220       21       A51-453-0000220       30       T0854/9/C       59         051-027-9399220       21       B50-051-0000220       26       T1025/-       58         051-043-0000220       22       B50-051-9019220       26       T1025/-       58         051-047-0000220       22       B50-053-0000220       26       T1025/9       59         051-047-0000220       21       B50-053-9019220       26       T4897       58         051-075-0000220       21       B50-328-3188220       24       T4898       58						
050-675-0000890       12       A51-427-3196220       29       T0854/12/Z4       59         050-675-6705890       36       A51-428-3188220       29       T0854/7/G       59         050-675-6801890       36       A51-428-3196220       29       T0854/7/M       59         050-678-0000890       12       A51-428-3875220       29       T0854/8/C       59         051-027-0000220       21       A51-451-0000220       30       T0854/9/A       59         051-027-3196220       21       A51-453-0000220       30       T0854/9/C       59         051-027-9399220       21       B50-051-0000220       26       T1025/-       58         051-043-0000220       22       B50-051-9019220       26       T1025/1       58         051-045-0000220       22       B50-053-0000220       26       T1025/9       59         051-047-0000220       22       B50-053-9019220       26       T4897       58         051-075-0000220       21       B50-328-3188220       24       T4898       58						
050-675-6705890       36       A51-428-3188220       29       T0854/7/G       59         050-675-6801890       36       A51-428-3196220       29       T0854/7/M       59         050-678-0000890       12       A51-428-3875220       29       T0854/8/C       59         051-027-0000220       21       A51-451-0000220       30       T0854/9/A       59         051-027-3196220       21       A51-453-0000220       30       T0854/9/C       59         051-027-9399220       21       B50-051-0000220       26       T1025/-       58         051-043-0000220       22       B50-051-9019220       26       T1025/1       58         051-045-0000220       22       B50-053-0000220       26       T1025/9       59         051-047-0000220       22       B50-053-9019220       26       T4897       58         051-075-0000220       21       B50-328-3188220       24       T4898       58						
050-675-6801890       36       A51-428-3196220       29       T0854/7/M       59         050-678-0000890       12       A51-428-3875220       29       T0854/8/C       59         051-027-0000220       21       A51-451-0000220       30       T0854/9/A       59         051-027-3196220       21       A51-453-0000220       30       T0854/9/C       59         051-027-9399220       21       B50-051-0000220       26       T1025/-       58         051-043-0000220       22       B50-051-9019220       26       T1025/1       58         051-045-0000220       22       B50-053-0000220       26       T1025/9       59         051-047-0000220       22       B50-053-9019220       26       T4897       58         051-075-0000220       21       B50-328-3188220       24       T4898       58						
050-678-0000890       12       A51-428-3875220       29       T0854/8/C       59         051-027-0000220       21       A51-451-0000220       30       T0854/9/A       59         051-027-3196220       21       A51-453-0000220       30       T0854/9/C       59         051-027-9399220       21       B50-051-0000220       26       T1025/-       58         051-043-0000220       22       B50-051-9019220       26       T1025/1       58         051-045-0000220       22       B50-053-0000220       26       T1025/9       59         051-047-0000220       22       B50-053-9019220       26       T4897       58         051-075-0000220       21       B50-328-3188220       24       T4898       58						
051-027-0000220       21       A51-451-0000220       30       T0854/9/A       59         051-027-3196220       21       A51-453-0000220       30       T0854/9/C       59         051-027-9399220       21       B50-051-0000220       26       T1025/-       58         051-043-0000220       22       B50-051-9019220       26       T1025/1       58         051-045-0000220       22       B50-053-0000220       26       T1025/9       59         051-047-0000220       22       B50-053-9019220       26       T4897       58         051-075-0000220       21       B50-328-3188220       24       T4898       58						
051-027-3196220       21       A51-453-0000220       30       T0854/9/C       59         051-027-9399220       21       B50-051-0000220       26       T1025/-       58         051-043-0000220       22       B50-051-9019220       26       T1025/1       58         051-045-0000220       22       B50-053-0000220       26       T1025/9       59         051-047-0000220       22       B50-053-9019220       26       T4897       58         051-075-0000220       21       B50-328-3188220       24       T4898       58						
051-027-9399220       21       B50-051-0000220       26       T1025/-       58         051-043-0000220       22       B50-051-9019220       26       T1025/1       58         051-045-0000220       22       B50-053-0000220       26       T1025/9       59         051-047-0000220       22       B50-053-9019220       26       T4897       58         051-075-0000220       21       B50-328-3188220       24       T4898       58						
051-043-0000220       22       B50-051-9019220       26       T1025/1       58         051-045-0000220       22       B50-053-0000220       26       T1025/9       59         051-047-0000220       22       B50-053-9019220       26       T4897       58         051-075-0000220       21       B50-328-3188220       24       T4898       58						
051-045-0000220       22       B50-053-0000220       26       T1025/9       59         051-047-0000220       22       B50-053-9019220       26       T4897       58         051-075-0000220       21       B50-328-3188220       24       T4898       58						
051-047-0000220       22       B50-053-9019220       26       T4897       58         051-075-0000220       21       B50-328-3188220       24       T4898       58						
051-075-0000220 21 B50-328-3188220 24 T4898 58						
051-424-3188220 29 B50-328-9399220 24 T4899 58						
	051-424-3188220	29	B50-328-9399220	24	T4899	58



THIS NOTE MUST BE READ IN CONJUNCTION WITH THE PRODUCT DATA SHEET/CATALOG, FAILURE TO OBSERVE THE ADVICE IN THIS INFORMATION SHEET AND OPERATING CONDITIONS SPECIFIED IN THE PRODUCT DATA SHEET/ CATALOG COULD RESULT IN HAZARDOUS SITUATIONS.

#### MATERIAL CONTENT AND PHYSICAL FORM

Electrical connectors do not usually contain hazardous materials. They contain conducting and non-conducting materials and can be divided into two aroups.

- a) Printed circuit types and low cost audio types which employ all plastic insulators and casings.
- b) Rugged, Fire Barrier and High Reliability types with metal casings and either natural rubber, synthetic rubber, plastic or glass insulating materials. Contact materials vary with type of connector and also application and are usually manufactured from either: Copper, copper alloys, nickel, alumel, chromel or steel. In special applications, other alloys may be specified.

#### 2. FIRE CHARACTERISTICS AND **ELECTRIC SHOCK HAZARD**

There is no fire hazard when the connector is correctly wired and used within the specified parameters. Incorrect wiring or assembly of the connector or careless use of metal tools or conductive fluids, or transit damage to any of the component parts may cause electric shock or burns. Live circuits must not be broken by separating mated connectors as this may cause arcing, ionization and burning. Heat dissipation is greater at maximum resistance in a circuit. Hot spots may occur when resistance is raised locally by damage, e.g. cracked or deformed contacts, broken strands of wire. Local overheating may also result from the use of the incorrect application tools or from poor quality soldering or slack screw terminals. Overheating may occur if the ratings in the product Data Sheet/Catalog are exceeded and can cause breakdown of insulation and hence electric shock. If heating is allowed to continue it intensifies by further increasing the local resistance through loss of temper of spring contacts, formation of oxide film on contacts and wires and leakage currents through carbonization of insulation and tracking paths. Fire can then result in the presence of combustible materials and this may release noxious fumes. Overheating may not be

apparent. Burns may result from touching overheated components.

#### 3. HANDLING

Care must be taken to avoid damage to any component parts of electrical connectors during installation and use. Although there are normally no sharp edges, care must be taken when handling certain components to avoid injury to fingers. Electrical connectors may be damaged in transit to the customers, and damage may result in creation of hazards. Products should therefore be examined prior to installation/use and rejected if found to be damaged.

#### 4. DISPOSAL

Incineration of certain materials may release noxious or even toxic fumes.

#### 5. APPLICATION

Connectors with exposed contacts should not be selected for use on the current supply side of an electrical circuit. because an electric shock could result from touching exposed contacts on an unmated connector. Voltages in excess of 30 V ac or 42.5 V dc are potentially hazardous and care should be taken to ensure that such voltages cannot be transmitted in any way to exposed metal parts of the connector body. The connector and wiring should be checked, before making live, to have no damage to metal parts or insulators, no solder blobs, loose strands, conducting lubricants, swarf, or any other undesired conducting particles. Circuit resistance and continuity check should be made to make certain that there are no high resistance joints or spurious conducting paths. Always use the correct application tools as specified in the Data Sheet/Catalog. Do not permit untrained personnel to wire, assemble or tamper with connectors. For operation voltage please see appropriate national regulations.

#### IMPORTANT GENERAL INFORMATION (i) Air and creepage paths/Operating voltage. The admissible operating voltages depend on the individual applications and the valid national and other applicable safety regulations.

For this reason the air and creepage path data are only reference values. Observe reduction of air and creepage paths due to PC board and/or harnessing.

#### (ii) Temperature

All information given are temperature limits. The operation temperature depends on the individual application.

(iii) Other important information


Cannon continuously endeavors to improve their products. Therefore, Cannon products may deviate from the description, technical data and shape as shown in this catalog and data sheets.

"Engineered for life" is a registered trademark of ITT Corporation © 2007. All or registered other trademarks trademarks are property of their respective owners. All data subject to change without notice.

#### **Product Warranty**

ITT Electronic Components, a Division of ITT Corporation manufactures the highest quality products available in the marketplace: however these products are intended to be used in accordance with the specifications in this publication. Any use or application that deviates from the stated operating specifications is not recommended and may be unsafe. No information and data contained in this publication shall be construed to create any liability on the part of Cannon. Any new issue of this publication shall automatically invalidate and supersede any and all previous issues. A limited warranty applies to Cannon products. Except for obligations assumed by Cannon under this warranty, Cannon shall not be liable for any loss, damage, cost of repairs, incidental or consequential damages of any kind, whether or not based on express or implied warranty, contract, negligence or strict liability arising in connection with the design, manufacture, sale, use or repair of the products. Product availability, prices and delivery dates are exclusively subject to our respective order confirmation form; the same applies to orders based on development samples delivered. This publication is not to be construed as an offer. It is intended merely as an invitation to make an offer. By this publication, Cannon does not assume responsibility or any liability for any patent infringements or other rights of third parties which may result from its use. Reprinting this publication is generally permitted, indicating the source. However, Cannon's prior consent must be obtained in all cases.



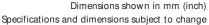



www.ittcannon.com





# **Customer Support Locations**

#### ASIA

Tuopandun Industrial Area, Jinda Cheng, Xiner Village, Shajing Town, Baoan District, Shenzhen City, Guangdong, China 518125

Tel: +86 755 2726 7238 Fax: +86 755 2726 7515

#### **GERMANY**

Cannonstrasse 1 Weinstadt, 71364 Tel: +49.7151.699.0 Fax: +49.7151.699.217

#### ITALY

Corso Europa 41/43 Lainate (MI), Italy 20020 Tel: +39.02938721

Fax: +39.0293872300

#### UK

Jays Close, Viables Estate Basingstoke, Hants, RG22 4BA

Tel: +44.1256.311200 Fax: +44.1256.323356

#### **USA**

100 New Wood Road Watertown, CT 06796 Tel: 860.945.0206 Toll Free: 800.683,7666

Fax: 860.645.0303

#### www.ittcannon.com