


# Raspberry Pi Motor Driver Board v1.0

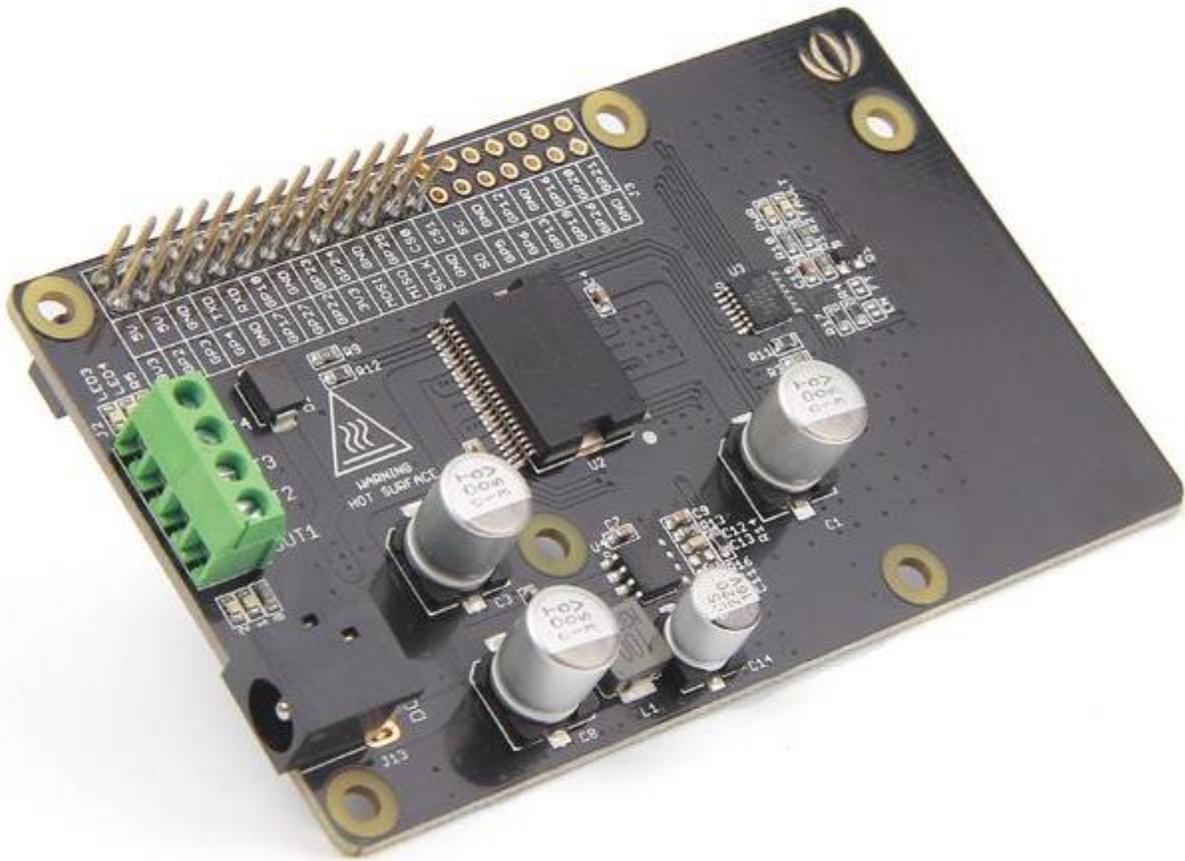

Raspberry Pi Motor Driver Board v1.0 is based on the Freescale MC33932 dual H-Bridge Power IC, which can control inductive loads with currents up to 5.0A peak per single bridge. It lets you drive two DC motors with your Raspberry Pi B/B+/A+ and Pi 2 Model B, controlling the speed and direction of each one independently.

Raspberry Pi Motor Driver Board v1.0 support a very wide range of input voltage from 6V~28V. otherwise ,the on board DC/DC converter support a very wide range of input voltage, and can provide a 5V power supply for the Raspberry Pi with 1000mA maximum current. So, you just need one power supply to drive the motors and power up the Raspberry Pi.


## Features

- Output short-circuit protection (short to VPWR or GND)
- Over-current limiting (regulation) via internal constant-off-time PWM
- Temperature dependant current limit threshold reduction
- Raspberry Pi compatible

## Specifications

Item	Min	Typical	Max	Unit
Operating Voltage	6	/	28	VDC
DC/DC output:	/	5V/1000mA	/	
Output Current (For Each Channel)	/	2 (continuous operation)	5 (peak)	A
PWM Frequency	/	/	11	kHz
Output Duty Range	0	/	100	%
Logic Input Voltage	-0.3	/	7	V
Operating Temperature	-40	/	120	°C
Dimensions	91.20 * 56.15 * 32			mm

## Hardware Overview

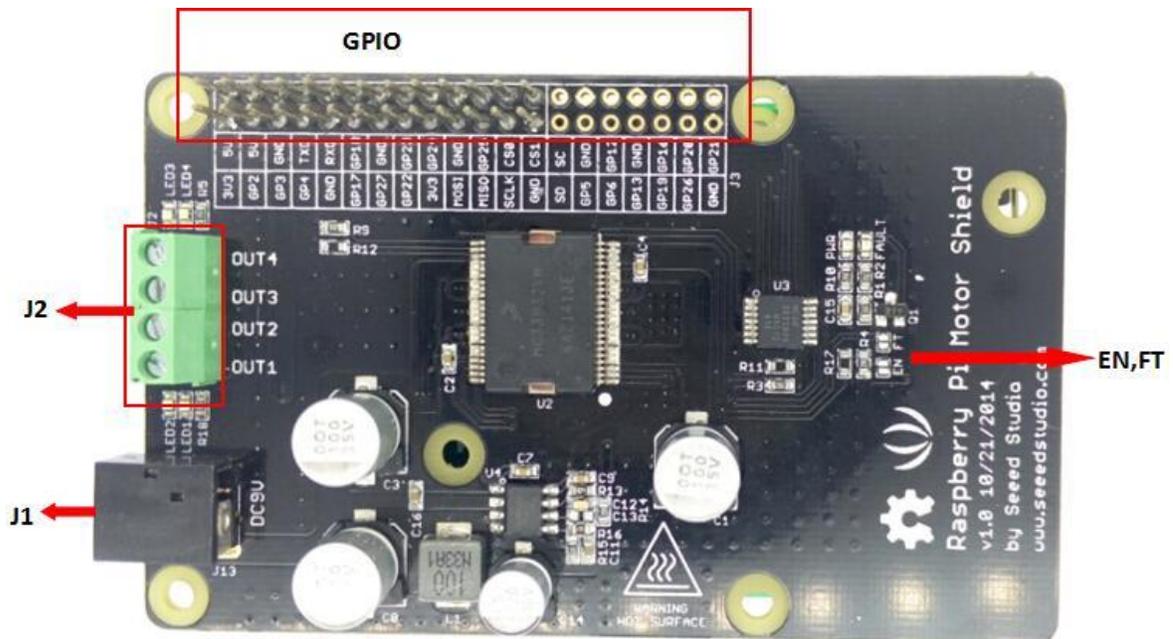

- **J1:**DC Input connector.
- **J2:**Motor Driver output connector.
- **EN,FT:**Jumpers for EN control and Fault flag detection.If short circuit the EN jumper, the EN signal was mapped to the D4 pin ,you can control the H-Bridge disable output or reset the Fault flag by D4 pin. If short circuit the FT jumper, the fault flag signal was mapped to D3 pin ,you can read the fault flag from the D3 pin ether.
- **IO:**Logic Voltage level Select Jumper. You can choose the control logic voltage level from this jumper.
- **Power Supply:** You have to power up the shield from the J1(DC input connector).The input voltage range can be set up to 6Vdc ~ 28Vdc.The on board DC/DC converter can convert the DC input voltage to 5Vdc output voltage to supply the logic circuit.The DC/DC converter can also power up the microcontroller board(Arduino/Seeeduino) form "5V" pin for maximun 100mA current.
- **Motor Interface :** Out 1 and Out 2 (Out 3 and Out 4) connect Motor A(B) for DC Motor.

**Caution**  
Do not touch the H-bridge IC or PCB board during working. Its temperature can reach up to 100 degrees in the case of full load operating.


## Usage

This demo is using Raspberry Pi B to show that Raspberry Pi Motor Driver Board v1.0 be use to control DC motor forward and backward.

## Hardware Installation

- Raspberry Pi B & Raspberry Pi Motor Driver Board v1.0
- Hardware connection as shown

Connect to network and power.

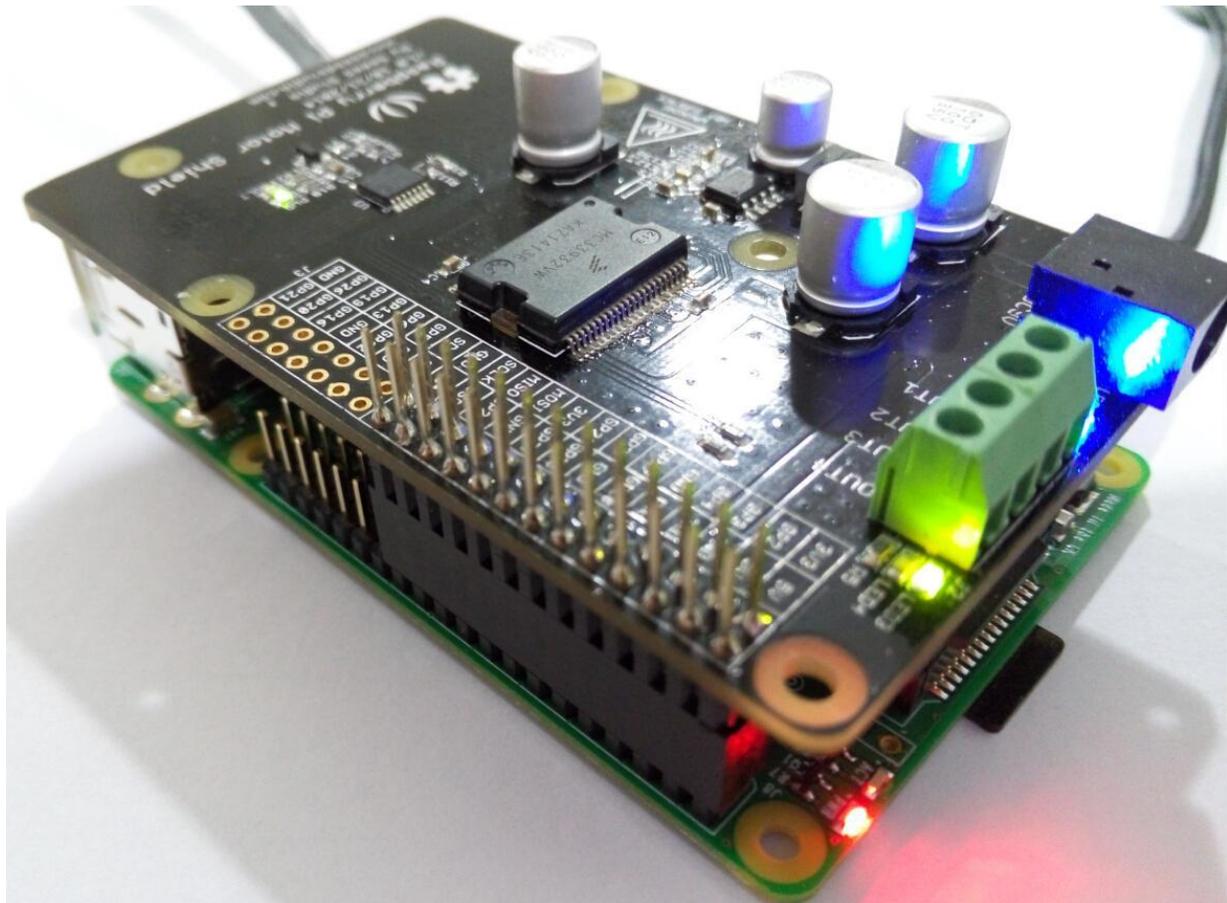

## Software Part

1. Download Motor\_Driver.py and PiSoftPwm.py into same folder. Here is the code of Motor\_Driver.py.

```
1#!/usr/bin/python
2import RPi.GPIO as GPIO
3import time
4import signal
5
6from PiSoftPwm import *
7
8#print 'Go_1...'
9#frequency = 1.0 / self.sc_1.GetValue()
10#speed = self.sc_2.GetValue()
11
12class Motor():
13    def __init__(self):
14        # MC33932 pins
15        self.PWMA = 25
16        self.PWMB = 22
17        self._IN1 = 23
18        self._IN2 = 24
19        self._IN3 = 17
20        self._IN4 = 27
21
22        # Initialize PWMA PWMB
23        GPIO.setmode(GPIO.BCM)
24        GPIO.setup(self.PWMA, GPIO.OUT)
25        GPIO.setup(self.PWMB, GPIO.OUT)
26        GPIO.output(self.PWMA, True)
27        GPIO.output(self.PWMB, True)
28
29        # Initialize PWM outputs
30        self.OUT_1 = PiSoftPwm(0.1, 100, self._IN1, GPIO.BCM)
31        self.OUT_2 = PiSoftPwm(0.1, 100, self._IN2, GPIO.BCM)
32        self.OUT_3 = PiSoftPwm(0.1, 100, self._IN3, GPIO.BCM)
33        self.OUT_4 = PiSoftPwm(0.1, 100, self._IN4, GPIO.BCM)
34
35        # Close pwm output
36        self.OUT_1.start(0)
37        self.OUT_2.start(0)
38        self.OUT_3.start(0)
39        self.OUT_4.start(0)
40
41        self.frequency = 0.01
42        self.duty = 60
43
44    def Setting(self, frequency, duty):
45        self.frequency = frequency
46        self.duty = duty
47
48    def Go_1(self):
49        self.OUT_1.changeBaseTime(self.frequency)
50        self.OUT_2.changeBaseTime(self.frequency)
51        self.OUT_1.changeNbSlicesOn(self.duty)
52        self.OUT_2.changeNbSlicesOn(0)
```

```

53
54 def Back_1(self):
55     self.OUT_1.changeBaseTime(self.frequency)
56     self.OUT_2.changeBaseTime(self.frequency)
57     self.OUT_1.changeNbSlicesOn(0)
58     self.OUT_2.changeNbSlicesOn(self.duty)
59
60 def Go_2(self):
61     self.OUT_3.changeBaseTime(self.frequency)
62     self.OUT_4.changeBaseTime(self.frequency)
63     self.OUT_3.changeNbSlicesOn(0)
64     self.OUT_4.changeNbSlicesOn(self.duty)
65
66 def Back_2(self):
67     self.OUT_3.changeBaseTime(self.frequency)
68     self.OUT_4.changeBaseTime(self.frequency)
69     self.OUT_3.changeNbSlicesOn(self.duty)
70     self.OUT_4.changeNbSlicesOn(0)
71
72 def Stop(self):
73     self.OUT_1.changeNbSlicesOn(0)
74     self.OUT_2.changeNbSlicesOn(0)
75     self.OUT_3.changeNbSlicesOn(0)
76     self.OUT_4.changeNbSlicesOn(0)
77
78 if __name__ == "__main__":
79     motor=Motor()
80     # Called on process interruption. Set all pins to "Input" default
81 mode.
82     def endProcess(signalnum = None, handler = None):
83         motor.OUT_1.stop()
84         motor.OUT_2.stop()
85         motor.OUT_3.stop()
86         motor.OUT_4.stop()
87         motor.GPIO.cleanup()
88         exit(0)
89
90     # Prepare handlers for process exit
91     signal.signal(signal.SIGTERM, endProcess)
92     signal.signal(signal.SIGINT, endProcess)
93     signal.signal(signal.SIGHUP, endProcess)
94     signal.signal (signal.SIGQUIT, endProcess)
95
96     motor.Setting(0.01, 60)
97     print 'motor start...'
98     while True:
99         print 'motor A turning forward...'
100         motor.Go_1()
101         time.sleep(1)
102         print 'motor A turning backward...'
103         motor.Back_1()
104         time.sleep(1)
105         print 'motor A stop...'
106         motor.Stop()
107         time.sleep(1)
108         print 'motor B turning forward...'
109         motor.Go_2()

```



