



ZULU-DONGLE

Features

- Intelligent RF modem module
- Serial data interface with handshake
- Host data rates up to 57,600 baud
- RF Data Rates to 115Kbps
- Range up to 1Km
- Minimal external components
- Direct LED drive shows data flow
- Secure data protocol
- Ultra low power 2.4 - 3.6V operation
- CE compliant for licence free use
- 868MHz multi channel operation
- 100mW transmit power (+20dBm)
- Receiver sensitivity -121dBm



Applications

- Remote networking
- USB/RS232 cable replacement
- Remote data log
- Meter reading

Description

The ZULU DONGLE is a highly integrated RF modem and intelligent controller with a plug and play (virtual comm port) USB interface. The ZULU DONGLE can achieve a wireless serial data link at up to 38K4bps over a 1Km range. Range may be further extended with suitable antenna.

The user interface is standard USB operating at low voltage. All RF operation is automatically controlled (with error checking etc) so the ZULU DONGLE can be treated as a simple serial communications device.

Possible applications include one-to-one and multi-node wireless links in applications including car and building security, EPOS, inventory tracking, remote industrial monitoring and computer networking.

Because of the small size and low power requirements these modules are ideal for use in handheld terminals also.

Ordering Information


Part Number	Description
ZULU-DONGLE	Radio Modem 868MHz +20dBm
ZULU-DONGLE915	Radio Modem 915MHz +20dBm

ZULU-DONGLE Modem



Product overview

This product is Plug and Play, connect the antenna to the SMA connector and plug into a USB port. Two or more ZULU-DONGLEs (or other compatible items) are needed for operation.

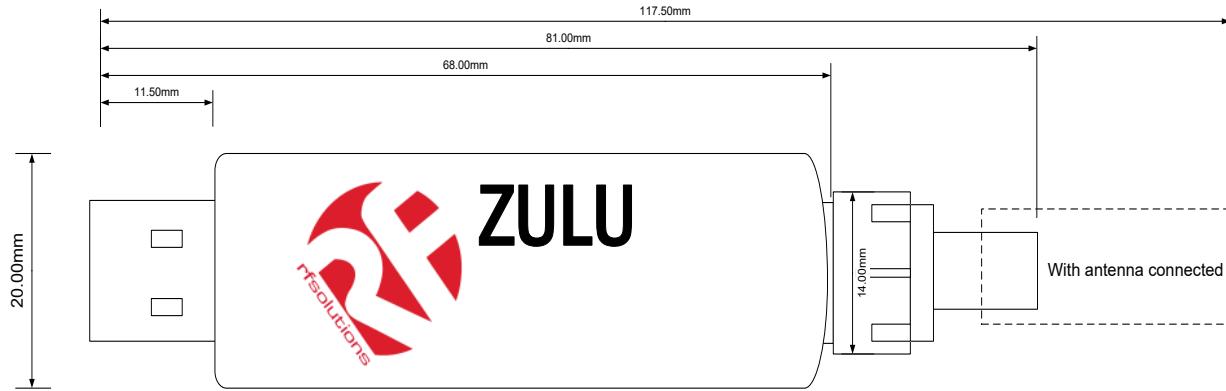

Power supply:

Power is supplied directly from the USB port - external power option is not offered.

Tx/Rx LED:

The LED operates whenever there is RF activity.

Operational overview:

1. Plug in the ZULU-DONGLE into a PC or host via USB
2. Configure the USB port and the virtual comm port created as below:

Serial data format:

Baud rate: 19,200kbps as default - can be configured.
Data bits: 8
Parity: None
Stop bits: 1
Flow control: Hardware CTS / RTS

3. Data is passed between the two modems

Notes on compatibility with other products

ZULU-DONGLE is fully compatible with:

- **ZULU-M868** (SMT and PDIP versions: Firmware R1.4 and newer when Unit ID (R7) is set to the correct value D3)
- **KAPPA-M868** (SMT and PDIP)
- **BLIZZARD-868** IP68 radio modem
- **ZULU-M-ARDUNIO SHIELD**
- **ZULUEVAL-M**

Check the configuration set-up for new features and any changes to defaults.

ZULU-DONGLE Modem



Operation Overview

The ZULU DONGLE provides a simple interface to the host controller. It handles all RF data communications automatically and without any requirement from the user (RF packetising, preamble, encoding, CRC check etc).

With this powerful high-speed radio link, the following networks can be realised:

Networking

One-to-One; For point to point data communication.

One-to-Many/Broadcast; A network consisting a master and many slaves (all receivers have the same address).

Many-to-One; Where all transmitters with different addresses send to a single receiver address.

Note: Because each ZULU-DONGLE can be given a unique address, multiple ZULU-DONGLE networks can co-exist in the same area. This type of operation requires clear timing between transmissions or corruption of packets can occur.

Addressing Networks

Each ZULU-DONGLE has a generic pre-configured default address (7F7F7F). This can be modified during configuration. When data received via RF it is examined and the address header embedded within it is compared with its address. Only data received with matching address will be processed and output to the host, all other data will be discarded.

When sending data, the ZULU-DONGLE has a default destination address set to 7F7F7F, this can be user configured.

By setting the two addresses appropriately the above network types can be easily achieved.

Operating Modes

Configuration Mode: In configuration mode the ZULU-DONGLE can receive commands to set internal registers to define its eventual operation. In this mode the ZULU-DONGLE is 'Offline' and cannot send or receive RF data.

Normal Operation: The ZULU DONGLE is 'Online' automatically transmitting and receiving data from its serial interface across its RF network.

Acknowledge Secure Mode: In this mode each time a ZULU DONGLE transmits an RF packet, an additional 'packet ID' is added. This ID is a rolling verification counter to receiving ZULU DONGLE modems.

Any correctly addressed receiving ZULU-DONGLE replies with an RF acknowledgement also containing the 'packet ID'. If the transmitting ZULU DONGLE fails to receive the expected acknowledgement it will transmit the packet again (up to 10 times).

Handshaking

The ZULU DONGLE requires the handshaking (RTS/CTS) to communicate with its host interface.

ZULU-DONGLE Modem



Configuration Mode (offline)

Commands can be set using a standard terminal program or by sending the relevant ASCII characters.

Each command must be followed by the Carriage Return <CR> or 'Enter' except "+++"

Command	Description	Response from ZULU-DONGLE
+++	Enter Configuration Mode Note: This command must be sent as a string with no characters in front or behind. This is to ensure that the +++ is not mistakenly received in mid-data. (<CR> is not to be used with +++).	ZULU-DONGLE responds with status info
?	Retrieve the current register values	ZULU-DONGLE responds with all register values
F	Pre-configured factory defaults; R1=7F7F7F R2=7F7F7F R3 = Ch2 (869.450MHz) R4 = 7 (+20dBm) R5 = 1 (19K2)	'OK'
H	Help	Brief description of commands available
P	Ping ModeThis sends a ping request .On receiving, the recipient ZULU DONGLEs will respond with its address and the level of RSSI (Received Signal Strength) The Ping command is continuously repeated every 1 second until any command or character is entered. Please note: R1 and R2 on both devices must be set to the same address for RSSI signal strength to show.	The originating ZULU-DONGLE will respond with the recipient ZULU modems' address. eg. Received from 7F7F7F (D5) Where 7F7F7F = the recipient address D5= RSSI RSSI Is a hex value corresponding to the received signal strength Min = 20hex Max = E0hex
S	Save Configuration	'SAVED'
Q	Exit configuration mode and return to online mode	No response

Note: All commands are entered in upper case

ZULU-DONGLE Modem



Register Values (Configuration Mode)

Set a register:

To set a register, type 'R#=x' where # is the register number (1-6) and x is the value to set.

For example, to set the RF channel to 3 type : R3=3<CR>

(Where <CR> is carriage return or enter on the keyboard)

Register	Value Range	Description	Example
R1	0000 - FFFFFF (24 bit address) Default: 7F7F7F	Sets the recipient ZULU-DONGLE address	R1=000100 (Data sent to ZULU DONGLE with address)
R2	0000 - FFFFFF (24 bit address) Default: 7F7F7F	Set ZULU-DONGLE address	R2=F00100 (Data sent is from ZULU-DONGLE)
R3	CHO to CH4	Sets the RF channel selection page 7.	R3=2 (Transmit on channel 2)
R4	0 = +1dBm 1 = +2dBm 2 = +5dBm 3 = +8dBm 4 = +11dBm 5 = +14dBm 6 = +17dBm 7 = +20dBm	Set the RF transmit power output*	R4=7 (sets transmit power to max)*
R5	0 = 9,600 1 = 19,200 2 = 28,800 3 = 56,000 4 = 115,200	Set the RF baud rate*	R5=3 (sets the RF data rate to 56Kbps)
R6	0 = Off 1 = On	(Acknowledge) Secure mode enable	R6=1 (Secure Mode on)
R7	0-FF (hex) Default = D4	Unique system identifier	R7=A3 Identifier set to A3.
R8	0 = 4800 1 = 9600 2 = 14400 3 = 19200 4 = 28800 5 = 38400 6 = 56000 7 = 57600	Host baud rate - software override. FF - uses DR1 and DR1 pins.	R8=3 Baud rate set to 19K2
R9	0 or 1	Data whitening enable	R9=1 Enable
R0	00 or 01	OTA Enable Over the air configuration	R0=1 Enable

ZULU-DONGLE Modem



Using Configuration Mode

Baud rates:

It is possible to set both host and RF baud rate via configuration mode. The RF Baud rate should always be twice the host baud rate for best operation.

Secure mode

See "Operating Modes" Page 4.

Unique system identifier

Adds a unique identifier at the RF stage. This allows unmatched data packets to be ignored without the need to decode - saving processor time and making a more efficient system when many nodes are present in one location. Systems with the same identifier will operate together. Use for multiple networks in one location. **Do not use addresses: FF, AA or 55**

OTA - Over the air configuration

It is possible to have a remote node enter configuration mode and change that node's register settings by sending it the unique code <918273> (including the <>) Instead of usual +++ command.

After entering OTA mode - all subsequent communications must be sent as macros and will need to include the Line Feed <LF> (do not send "<LF>" this command must be sent as ASCII code 10 which can vary depending on the software used).

Examples:

Send:	Response:	Send:	Response:	Send:	Response:
<918273	7F7F7F	?<LF>	7F7F7F	R4=05<L	OK
>	7F7F7F		7F7F7F	F>	
02		02			OK
00		00		R5=02<L	
03		03		F>	NONE
00		00			
D4		D4		Q<LF>	NONE
01		01			
01		01		S<LF>	
01		01			
01		01			

IMPORTANT Notes:

1. In OTA mode all values are entered in hex and sent as ASCII. Registers must be set in multiples of two characters - ie to set register 6 you must send 06 - as above examples show.
1. Changes made in OTA mode will be lost if not saved.
2. OTA mode cannot be used in conjunction with acknowledge secure mode.

ZULU-DONGLE Modem



RF Channel Selection

The EU standard sets maximum power transmission limits dependent on frequency, bandwidth and application. Please check the relevant standards are being met when implementing your Application. A rough guidance applicable to the ZULU DONGLE channel numbers is given below:

Channel Number	Frequency Centre (MHz)	EU Power Allowance mW / dBm	Notes
0	868.400	25 / 14	Applicable standard - EN300-220
1	868.900	25 / 14	
2	869.450	100 / 20*	
3	869.600	100 / 20*	
4	869.800	25 / 14	

*Maximum power is only achievable if the USB port can supply the required amount of current.

DC Characteristics

Parameter	Min	Typical	Max	Units
Supply Voltage		5		V
Operating Temperature	-40		+85	°C
Pi Tx Supply Current: When Transmitting When sleeping		100 disabled		mA
Pi Rx Supply Current: When Receiving When sleeping		18.5		mA

AC Characteristics

Parameter	Min	Typical	Max	Units
Operating Frequency - 868: see freq channel setting	868		870	MHz
Operating Temperature	-40		+85	°C
Band width per channel		100		KHz
Deviation		45		KHz
ZULU DONGLE Tx MAX Output Power			+20	dBm
ZULU DONGLE Tx—Rx FSK Raw RF Data Rate			115	Kbps
ZULU DONGLE Rx Sensitivity		-121		dBm

ZULU-DONGLE Modem



Range

The antenna choice and position affects controls the system range. Keep the antenna clear of any large metal components in the system. The best position by far, is protruding vertically from the top of the product. This is often not desirable for practical reasons and thus a compromise may be needed. Note that the space around the antenna is as important as the antenna itself. All radio systems are dependent on a radio signal being received through airspace.

The range quoted is the optimal in direct line of sight without obstacles and in good atmospheric conditions.

Range is affected by many things, for example local environmental conditions, atmospheric conditions, interference from other radio transmitters. For evaluating the local environment please see our RF meter (DS006).

In the worst case, range quoted may be drastically reduced.

FCC compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna -Increase the separation between the equipment and receiver—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected - Consult the dealer or an experienced radio/TV technician for help.



ZULU-DONGLE Modem

Simplified Declaration of Conformity (RED)

BG - С настоящото RF Solutions Limited декларира, че този тип радиосъоръжение дефинирани в този документ е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: www.rfsolutions.co.uk

CS - Tímto RF Solutions Limited prohlašuje, že typ rádiového zařízení definované v tomto dokumentu je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: www.rfsolutions.co.uk

DA - Hermed erklærer RF Solutions Limited, at radioudstyrstypen defineret i dette dokument er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: www.rfsolutions.co.uk

DE - Hiermit erklärt RF Solutions Limited, dass der Funkanlagentyp in diesem Dokument definiert der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: www.rfsolutions.co.uk

EL - Με την παρούσα ο/η RF Solutions Limited , δηλώνει ότι ο ραδιοεξπλομός ορίζεται σε αυτό το έγγραφο πληρού την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: www.rfsolutions.co.uk

EN - Hereby, RF Solutions Limited declares that the radio equipment type defined within this document is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.rfsolutions.co.uk

ES - Por la presente, RF Solutions Limited declara que el tipo de equipo radioeléctrico definido dentro de este documento es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: www.rfsolutions.co.uk

ET - Käesolevaga deklareerib RF Solutions Limited, et käesolev raadioseadme tüüp määratletud selles dokumendis vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: www.rfsolutions.co.uk

FI - RF Solutions Limited vakuuttaa, että radiolaitetyyppi määratletut selles dokumendis on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetsivulla: www.rfsolutions.co.uk

FR - Le soussigné, RF Solutions Limited, déclare que l'équipement radioélectrique du type défini dans ce document est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: www.rfsolutions.co.uk

HR - RF Solutions Limited ovime izjavljuje da je radijska oprema tipa definiran u ovom dokumentu u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: www.rfsolutions.co.uk

HU - RF Solutions Limited igazolja, hogy a dokumentumban meghatározottak szerint típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: www.rfsolutions.co.uk

IT - Il fabbricante, RF Solutions Limited, dichiara che il tipo di apparecchiatura radio definito all'interno di questo documento è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: www.rfsolutions.co.uk

LT - Aš, RF Solutions Limited, patvirtinu, kad radiojo įrenginių tipas apibrėžta šiame dokumente atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: www.rfsolutions.co.uk

LV - Ar šo RF Solutions Limited deklarē, ka radioiekārtā kas definēts šajā dokumentā atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: www.rfsolutions.co.uk

MT - B'dan, RF Solutions Limited, niddikjara li dan it-tip ta' tagħmir tar-radju definit f'dan id-dokument huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: www.rfsolutions.co.uk

NL - Hierbij verklaar ik, RF Solutions Limited, dat het type radioapparatuur gedefinieerd in dit document conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: www.rfsolutions.co.uk

PL - RF Solutions Limited niniejszym oświadcza, że typ urządzenia radiowego zdefiniowane w tym dokumencie jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: www.rfsolutions.co.uk

PT - O(a) abaixo assinado(a) RF Solutions Limited declara que o presente tipo de equipamento de rádio definido neste documento está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: www.rfsolutions.co.uk

RO - Prin prezenta, RF Solutions Limited declară că tipul de echipamente radio definit în acest document este în conformitate cu Directiva 2014/53/EU. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: www.rfsolutions.co.uk

SK - RF Solutions Limited týmto vyhlasuje, že rádiové zariadenie typu definované v tomto dokumente je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: www.rfsolutions.co.uk

SL - RF Solutions Limited potrjuje, da je tip radijske opreme opredeljeno v tem dokumentu skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o sukladnosti je na voljo na naslednjem spletnem naslovu: www.rfsolutions.co.uk

SV - Härfmed försäkrar RF Solutions Limited att denna typ av radioutrustning definieras i detta dokument överensstämmelser med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: www.rfsolutions.co.uk

RF Solutions Ltd. Recycling Notice

Meets the following EC Directives:

DO NOT

Discard with normal waste, please recycle.



ROHS Directive 2011/65/EU and amendment 2015/863/EU

Specifies certain limits for hazardous substances.

WEEE Directive 2012/19/EU

Waste electrical & electronic equipment. This product must be disposed of through a licensed WEEE collection point. RF Solutions Ltd., fulfills its WEEE obligations by membership of an approved compliance scheme.

Environment Agency producer registration number: **WEE/JB0104WV**.

Waste Batteries and Accumulators Directive 2006/66/EC

Where batteries are fitted, before recycling the product, the batteries must be removed and disposed of at a licensed collection point.

RF Solutions battery producer number: **BPRN00060**.

Disclaimer:

Whilst the information in this document is believed to be correct at the time of issue, RF Solutions Ltd does not accept any liability whatsoever for its accuracy, adequacy or completeness. No express or implied warranty or representation is given relating to the information contained in this document. RF Solutions Ltd reserves the right to make changes and improvements to the product(s) described herein without notice. Buyers and other users should determine for themselves the suitability of any such information or products for their own particular requirements or specification(s). RF Solutions Ltd shall not be liable for any loss or damage caused as a result of user's own determination of how to deploy or use RF Solutions Ltd's products. Use of RF Solutions Ltd products or components in life support and/or safety applications is not authorised except with express written approval. No licences are created, implicitly or otherwise, under any of RF Solutions Ltd's intellectual property rights. Liability for loss or damage resulting or caused by reliance on the information contained herein or from the use of the product (including liability resulting from negligence or where RF Solutions Ltd was aware of the possibility of such loss or damage arising) is excluded. This will not operate to limit or restrict RF Solutions Ltd's liability for death or personal injury resulting from its negligence.