

. . eescale Semiconductor Technical Data

CATV Amplifier Module

Features

- · Specified for 77 and 110 Channel Loading
- Lower DC Current Requirements
- Excellent Distortion Performance
- Excellent DC Current Stability over Temperature
- Silicon Bipolar Transistor Technology
- Unconditionally Stable Under All Load Conditions

Applications


- CATV Systems Operating in the 40 to 750 MHz Frequency Range
- Output Stage Amplifier in Optical Nodes, Line Extenders and Trunk Distribution Amplifiers for CATV Systems
- Driver Amplifier in Linear General Purpose Applications
- Amplifier Requiring Lower Power Dissipation While Maintaining Excellent
 Output Performance

Description

INFORMA

ARCHIVE


- 24 Vdc Supply, 40 to 750 MHz, CATV Forward Power Doubler Amplifier Module
- Replaced MHW7185CL. There are no form, fit or function changes with this part replacement.
- RoHS Compliant

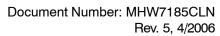

VRoHS



750 MHz 19.2 dB GAIN 110-CHANNEL CATV AMPLIFIER MODULE

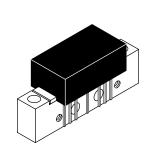

CASE 714Y-04, STYLE 1

Table 1. Maximum Ratings

Rating	Symbol	Value	Unit
RF Voltage Input (Single Tone)	V _{in}	+70	dBmV
DC Supply Voltage	V _{CC}	+28	Vdc
Operating Case Temperature Range	т _с	-20 to +100	°C
Storage Temperature Range	T _{stg}	-40 to +100	°C

Table 2. Electrical Characteristics (V_{CC} = 24 Vdc, T_C = +30°C, 75 Ω system unless otherwise noted)

Characteristic		Symbol	Min	Тур	Max	Unit
Frequency Range		BW	40	—	750	MHz
Power Gain	50 MHz 750 MHz	G _p	18 18.7	18.5 19.2	19 19.7	dB
Slope	40 - 750 MHz	S	0.3	0.6	1.3	dB
Gain Flatness (40 - 750 MHz, Peak to Valley)		G _F	—	0.3	0.6	dB
Return Loss — Input/Output (Z _o = 75 Or	ms) @ 40 MHz @ f > 40 MHz (Derate)	IRL/ORL	20 —		 0.007	dB dB/MHz
Composite Second Order (V _{out} = +44 dBmV/ch., Worst Case)	110-Channel FLAT 77-Channel FLAT	CSO ₁₁₀ CSO ₇₇		-70 -83	-64 -68	dBc
Cross Modulation Distortion @ Ch 2 (V _{out} = +44 dBmV/ch., FM = 55 MHz)	110-Channel FLAT 77-Channel FLAT	XMD ₁₁₀ XMD ₇₇		- 66 - 69	-63 -67	dBc






Characteristic	;	Symbol	Min	Тур	Max	Unit
Composite Triple Beat (V _{out} = +44 dBmV/ch., Worst Case)	110-Channel FLAT 77-Channel FLAT	CTB ₁₁₀ CTB ₇₇	_	-63.5 -70	-61 -68	dBc
Noise Figure	50 MHz 550 MHz 750 MHz	NF	 	5.3 5.8 6.5	6.2 — 7.5	dB
DC Current (V _{DC} = 24 V, T _C = -20 to +1	00°C)	I _{DC}	345	370	385	mA

MHW7185CLN



PACKAGE DIMENSIONS

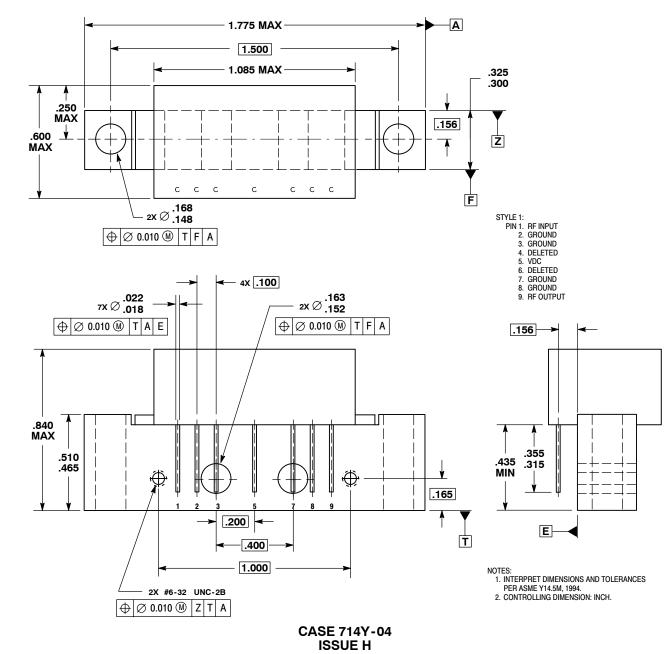

ARCHIVE INFORMATION



Home Page: www.freescale.com

E-mail: support@freescale.com

USA/Europe or Locations Not Listed:

Freescale Semiconductor Technical Information Center, CH370 1300 N. Alma School Road Chandler, Arizona 85224 +1-800-521-6274 or +1-480-768-2130 support@freescale.com

Europe, Middle East, and Africa:

Freescale Halbleiter Deutschland GmbH Technical Information Center Schatzbogen 7 81829 Muenchen, Germany +44 1296 380 456 (English) +46 8 52200080 (English) +49 89 92103 559 (German) +33 1 69 35 48 48 (French) support@freescale.com

Japan:

RCHIVE INFORMATION

Freescale Semiconductor Japan Ltd. Headquarters ARCO Tower 15F 1-8-1, Shimo-Meguro, Meguro-ku, Tokyo 153-0064 Japan 0120 191014 or +81 3 5437 9125 support.japan@freescale.com

Asia/Pacific:

Freescale Semiconductor Hong Kong Ltd. Technical Information Center 2 Dai King Street Tai Po Industrial Estate Tai Po, N.T., Hong Kong +800 2666 8080 support.asia@freescale.com

For Literature Requests Only:

Freescale Semiconductor Literature Distribution Center P.O. Box 5405 Denver, Colorado 80217 1-800-441-2447 or 303-675-2140 Fax: 303-675-2150 LDCForFreescaleSemiconductor@hibbertgroup.com Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

Freescale [™] and the Freescale logo are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners. © Freescale Semiconductor, Inc. 2006-2008. All rights reserved.

RoHS-compliant and/or Pb-free versions of Freescale products have the functionality and electrical characteristics of their non-RoHS-compliant and/or non-Pb-free counterparts. For further information, see http://www.freescale.com or contact your Freescale sales representative.

For information on Freescale's Environmental Products program, go to http://www.freescale.com/epp.

