
## **EMV 1200**

EMV 1200 is an easy to mount LCD digital panel meter. The module features a 4 to 25V measurement range with 100mV resolution and is powered from the signal it is measuring. Only valid readings are displayed; the module indicates "LO" at voltages below 4V and "HI" at voltages above 25V. To install the meter, the user need only drill a single 5.5mm / 7/22" hole in the panel. The module is fitted to the panel by locating its threaded stud through the hole, fitting the washer and tightening the nut provided. The module's connecting wires pass through the hollow stud into the target application for connection. A rubber seal is included, providing splashproof protection for the unit when fitted to the meter during installation.

- C Single Hole Mounting
- 2-Wire Operation Ŀ
- 4 to 25V d.c. Full Scale Reading (L
- 12.5mm / 0.5" LCD Digit Height l
- **Reverse Polarity Protection** Ŀ
- **Splashproof**

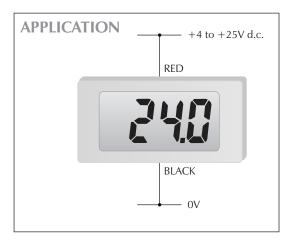

			Sh	own Actual Size
Easy Mounting Voltmeter EMV				
Specification	Min.	Тур.	Max.	Unit
Accuracy (overall error)		0.2		V (±1 count)
Linearity			±1	count
Valid displayed reading*	4.0		25.0	V d.c.

0

3

\* At voltages below 4.0V d.c., the LCD will display LO and will ultimately go blank.

The module includes reverse polarity protection up to 30V for up to 30 seconds. Operation and accuracy at voltages above 25.0V or below 4.0V are not specified.

At Voltages in excess of 25.0V d.c., the LCD will display HI. Do NOT exceed 50V d.c., as this may damage the meter.

100

3

50

50

3

mV d.c

sample/sec

°C

V d.c

mA

## SAFETY

To comply with the Low Voltage Directive (LVD 93/68/EEC), input voltages to the module's wires must not exceed 60Vd.c. The user must ensure that the incorporation of the meter into the user's equipment conforms to the relevant sections of BS EN 61010 (Safety Requirements for Electrical Equipment for Measuring, Control and Laboratory Use).


Resolution

Sample rate

Supply voltage

Supply current

Operating temperature range

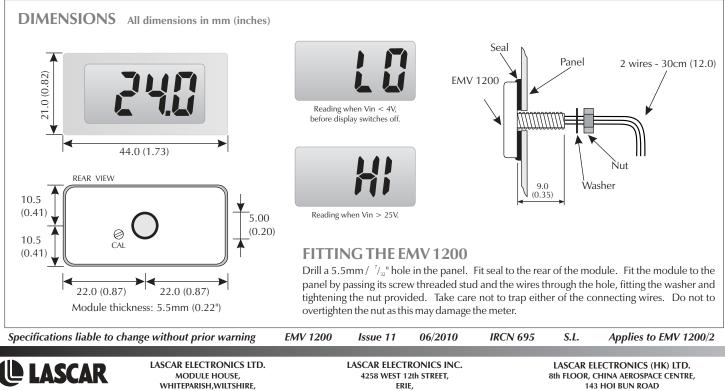


SP5 2SJ, UK TEL: +44 (0)1794 884567 FAX: +44 (0)1794 884616 E-MAIL: sales@lascar.co.uk

PA 16505, USA TEL: +1 (814) 835 0621 FAX: +1 (814) 838 8141 E-MAIL: us-sales@lascarelectronics.com

KWUN TONG, KOWLOON, HONG KONG TEL: +852 2389 6502 FAX: +852 2389 6535 E-mail: saleshk@lascar.com.hk

## **EMV 1200**

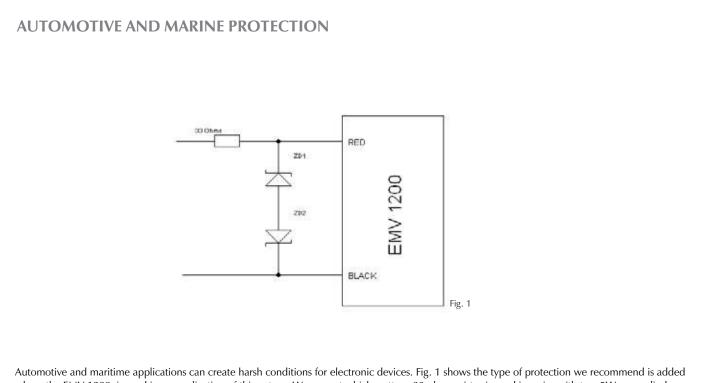

when the EMV 1200 is used in an application of this nature. We suggest a high wattage 33 ohm resistor is used in series with two 5W zener diodes where the value of each zener is at least 3V higher than the maximum you intend to measure. Alternatively it is possible to use a single 1500W transient voltage suppressor (TVS) in place of the zener diodes. In addition it is recommended that the meter is connected as close to the battery as is convenient.

Specifications liable to change without prior warning EMV 1200 Issue 11 06/2010 IRCN 695 S.L. Applies to EMV 1200/2



LASCAR ELECTRONICS LTD. MODULE HOUSE, WHITEPARISH,WILTSHIRE, SP5 2SJ, UK TEL: +44 (0)1794 884567 FAX: +44 (0)1794 884616 E-MAIL: sales@lascar.co.uk LASCAR ELECTRONICS INC. 4258 WEST 12th STREET, ERIE, PA 16505, USA TEL: +1 (814) 835 0621 FAX: +1 (814) 838 8141 E-MAIL: us-sales@lascarelectronics.com LASCAR ELECTRONICS (HK) LTD. 8th FLOOR, CHINA AEROSPACE CENTRE, 143 HOI BUN ROAD KWUN TONG, KOWLOON, HONG KONG TEL: +852 2389 6502 FAX: +852 2389 6535 E-mail: saleshk@lascar.com.hk