FUSEHOLDERS

SPECIAL TYPES

For ATO[®] Fuses In-Line Type

SPECIFICATIONS:

Electrical: Intended for use with 32 volts Autofuse[®] fuses rated to 20 or 30 amperes depending on wire size and terminal combinations.

Mounting: Capable of snap-mounting to panel from rear. Fuseholders interlock for multiple mounting.

Molded Parts: Black Thermoplastic (UL 94V2).

Terminals: Brass. Tin-plated. Snap-lock into body.

Ambient Temperature: -40°C to +85°C.

Wire: Stranded with PVC insulation, black #14 AWG for 155 300 Series and orange #10 AWG for 155 400 Series. PATENTED

ORDERING INFORMATION:

Catalog Number

Catalog Number			
Unassembled	Assembled with 8" Wire Loop, No Fuse	Assembled with 8" Wire Loop and Fuse	Fuse Amperage Rating
155 320U	155 300	155 303A	3
(Terminals designed	(#14 wire/	155 304A	4
for #14 AWG	terminals rated	155 305A	5
stranded wire and	to 20A).	155 37.5A	7.5
marked "14").		155 310A	10
		155 315A	15
		155 320A	20
155 430U	155 400	155 425A	25
(Terminals designed for #10 AWG stranded wire and marked "10").	(#10 wire/ terminals rated to 30A).	155 430A	30

For ATO[®] Fuses P.C. Board Mount Type

SPECIFICATIONS:

Electrical: Intended for use with 32 volts ATO[®] fuses rated to 15 amperes.

Molded Parts: Black Thermoplastic

Terminals: Copper Alloy, Tin Plated

Ambient Temperature: -40°C to +85°C.

ORDERING INFORMATION:

Catalog Number: 04450715

For MINI[®] FUSES In-Line Type — Easy Crimp Fuseholder

SPECIFICATIONS:

Terminals: Copper Alloy/Tin plated.

Body: Black Thermoplastic.


Operating Temperature: -40°C to +105°C.

Use standard crimping tool and crimp the matted area to secure wire. (Possible crimp tool - Ideal #30-428 [Toothed Die slot] or equivalent).

ORDERING INFORMATION:


Catalog Number	Description
153 002	20A Max. Rating — Terminals will accept #16–22 AWG (1.0- .33 mm ²) stranded wire (use appropriate wire size based on fuse usage). For example — Use #16 AWG wire for 20A fuse.
153 003	30A Max. Rating — Terminals will accept #10–14 AWG (5.0- 2.0 mm ²) stranded wire (use appropriate wire size based on fuse usage). For example — Use #10 AWG wire for 30A fuse.

Tool For Fuse Removal or Replacement; Part No. 097024.

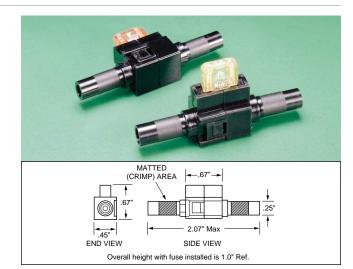

UNASSEMBL

Typical Multiple Mounting (fuseholders interlocked)



1/2 Littelfuse

