

# IS31CS8975 EB Board User Guide

## GENERAL DESCRIPTION

CS8975 is a general-purpose MCU with 16KB Code e-Flash memory with ECC, 1K SRAM with ECC. The embedded flash for code storage has built-in ECC that corrects 1-bit error and detects two-bit errors. CPU accesses the e-Flash through program address read and through Flash Controller which can perform software read/writer operations of e-Flash.

CPU in CS8975 is 1-T 8051 with enhanced multiplication and division accelerator. There are two clock sources for the system, one is a 16MHz/32MHz IOSC (manufacturer calibrated +/- 2%) and another one is 128KHz SOSC. Both clock sources have a clock-programmable divider for scaling down the frequency to save power dissipations. The clock selections are combined with flexible power management schemes, including NORMAL, STOP, and SLEEP modes to balance speed and power consumption.

There are T0/T1/T2/T3/T4/T5 timers coupled with CPU and three WDTs where WDT1 is clocked by SYSCLK, and WDT2/WDT3 are clocked by a non-stop SOSC. An 8-bit/16-bit checksum and 16-bit CRC accelerator is included. There are EUART/LIN controller and I2C master/Slave controller as well as SPI master/slave controller. The interfaces of these controllers are multiplexed with GPIO pins. Other useful peripherals include a buzzer control, 6 channels of 12-bit PWM, and one channel of 16-bit timer/capture and quadrature decoder.

Analog peripherals include an 11-bit ADC with an internal temperature sensor, an 8-bit voltage output DAC, and four analog comparators with a programmable threshold. A touch key controller with up to 20-bit resolutions is also included. The touch key controller also has shield output capability for moisture immunity. The touch key controller allows sleep mode (under 10uA) and uses auto-detection for wakeup. The maximum number of key inputs can be scanned is 11.

CS8975 also provides a flexible means of flash programming that supports ISP and IAP. The protection of data loss is implemented in hardware by access restriction of critical storage segments. The code security is reinforced with sophisticated writer commands and ISP commands. The on-chip breakpoint processor also allows easy debugging which can be integrated with ISP. Reliable power-on-reset circuits and low supply voltage detection allow reliable operations under harsh environments.

## FEATURES

### CPU and Memory

- 1-Cycle 8051 CPU core up to 32MHz
- 16-bit Timers T0/T1/T2/T3/T4 and 24-bit T5
- Checksum and CRC accelerator

- ◆ WDT1 by SYSCLK, WDT2/WDT3 by SOSC
- ◆ Clock fault monitoring
- ◆ Up to 6 external interrupts shared with GPIO pins
- ◆ Power saving modes – Normal, STOP, and SLEEP modes
- ◆ 256B IRAM and 768B XRAM with ECC check
- ◆ 16KB Code e-Flash with ECC and two 512x16 Information Block
  - Program read with hardware ECC
  - Software read/write direct access 16-bit wide
  - Code security and data loss protection
  - 100K endurance and 10 years retention

### Clock Sources

- ◆ Internal oscillator at +/- 2% 16MHz/32MHz
  - Spread Spectrum option
- ◆ Internal low-power oscillator 128KHz
- ◆ External clock option

### Digital Peripherals

- ◆ 6 CH 8/10/12-bit center-aligned PWM controller
  - Trigger interrupt and ADC conversion
  - Output polarity
- ◆ One 16-bit Timer/Capture and One 16-bit quadrature decoder
- ◆ Buzzer/Melody generator
- ◆ One I<sup>2</sup>C Master
- ◆ One I<sup>2</sup>C Slave – also for ISP and debug
- ◆ One SPI Master/Slave Controller
- ◆ One EUART1 and one EUART2/LIN

### Analog Peripherals

- ◆ Capacitance sense touch-key controller scan up to 11 key inputs
  - Shield output for moisture immunity
  - Low power sleep mode wakeup (<5uA).
- ◆ 11-Bit SAR ADC with GPIO analog input
  - Temperature sensor and supply measurement
- ◆ 8-Bit DAC and four analog comparators
- ◆ Power on reset and Low voltage detect (2.3V-4.5V)

### Miscellaneous

- ◆ Up to 12 GPIO pins with multi-function options
  - Configurable IO structure and noise filters
- ◆ 2.3V to 5.5V single supply
- ◆ Active current < 150uA/MHz in Normal mode
- ◆ Low power standby (< 1uA) in SLEEP mode
- ◆ Operating temperature -40°C to 85°C/125°C
- ◆ SOP-8/TSSOP-16 package
- ◆ RoHS & Halogen-Free compliant package

# IS31CS8975 EB Board User Guide

## QUICK START

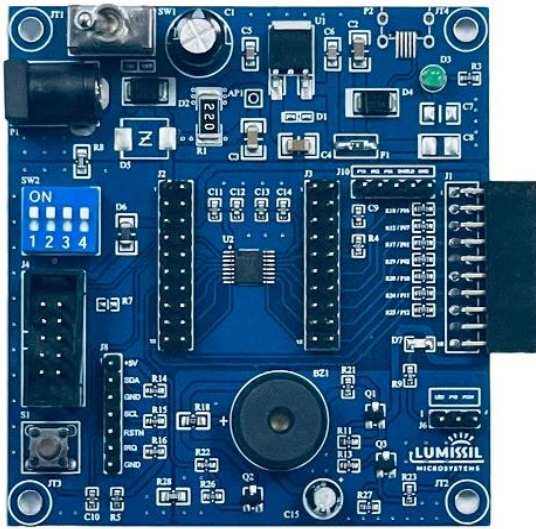


Figure 1: Photo of IS31CS8975 EB Top View

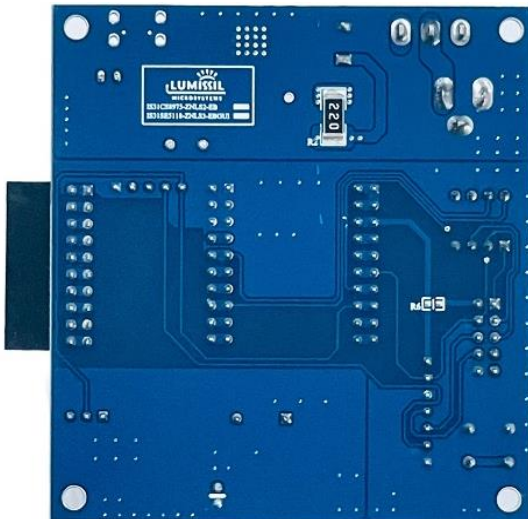


Figure 2: Photo of IS31CS8975 EB Bottom View

- 9V~15V, 1.0A power supply

### ABSOLUTE MAXIMUM RATINGS

- ≤ 25V power supply

**Caution: Do not exceed the conditions listed above, otherwise the board will be damaged.**

### PROCEDURE

The IS31CS8975 evaluation board is fully assembled and tested. Follow the steps listed below to verify board operation.

**Caution: Do not turn on the power supply until all connections are completed.**

For standalone IS31CS8975 EB operation, the user can plug in the power adapter into the power jack P1 and make sure SW1 is ON. For operation with EzISP, the external power adapter is not necessary.

### EzISP PROGRAMMING BOARD OPERATION

The IS31CS8975 EB offers flexible flash programming that can be programmed via the Write Mode or Fast Write Mode of the EzISP Programming Board. The Write Mode and Fast Writer Mode of the EzISP Programming Board require 7 pins of hardware (RSTN, TCK, TMS, TDO, TDI, GND, VDD, etc.).

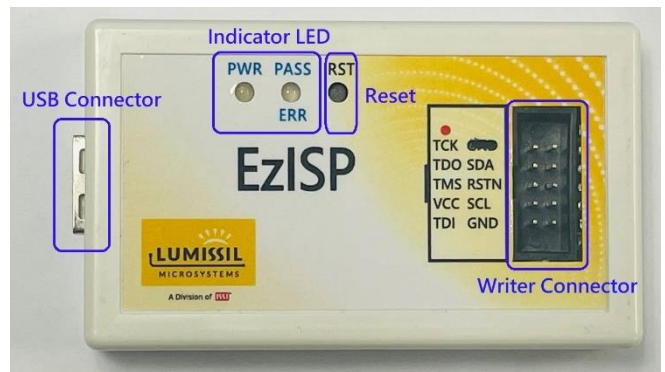


Figure 3: Photo of EzISP Programming Board

## RECOMMENDED EQUIPMENT

## ORDERING INFORMATION

| Part No.            | Temperature Range | Package  |
|---------------------|-------------------|----------|
| IS31CS8975-ZNLS2-EB | -40°C to +85°C    | TSSOP-16 |


Table 1: Ordering Information

For pricing, delivery, and ordering information, please contact LUMISSIL's marketing and sales team at <http://www.lumissil.com/company/office-locations> or (408) 969-6600.


## BOARD ASSEMBLY

## IS31CS8975 EB Board User Guide

Please refer to the Bill of Materials for a description of components, *Figure 4 & 5* for components placement, and *Figure 11* for the EB Schematic.

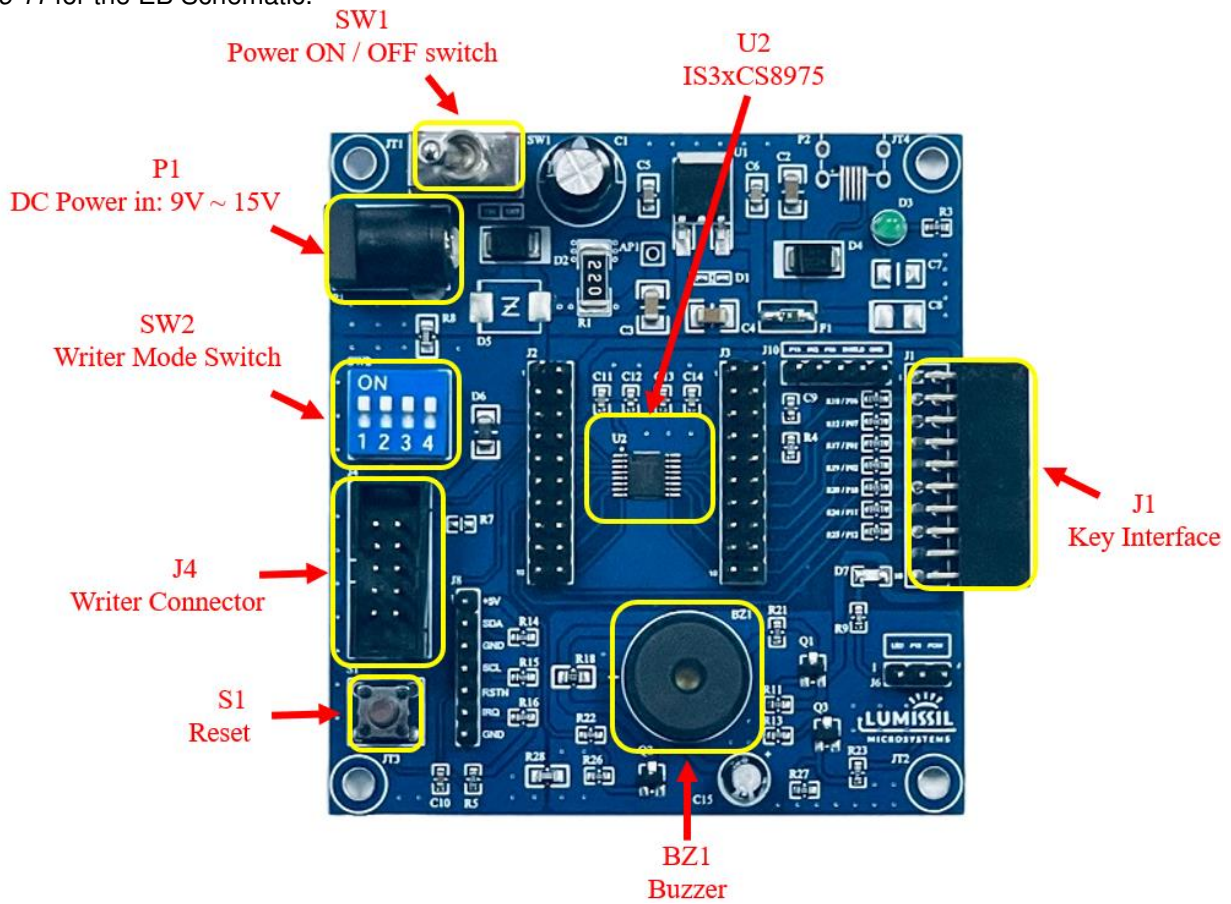

**Figure 4: Photo of IS31CS8975 EB Assembly Top View**

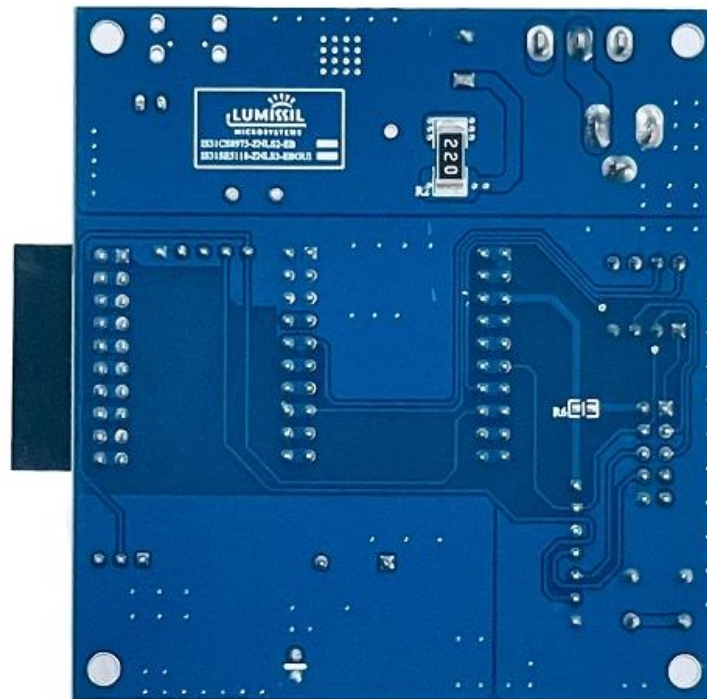

**Figure 5: Photo of IS31CS8975 EB Assembly Bottom View**



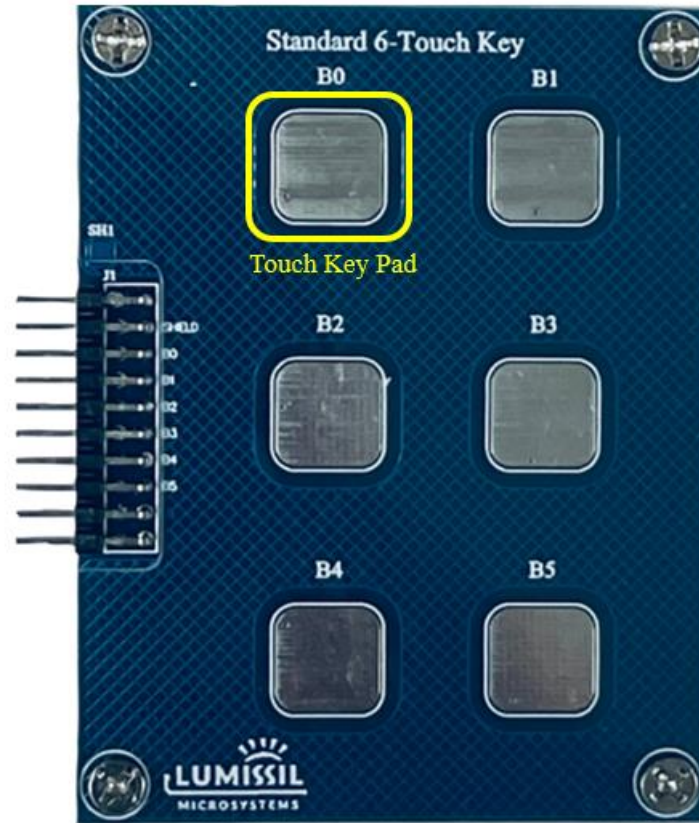


Figure 6: Photo of Accessory Board

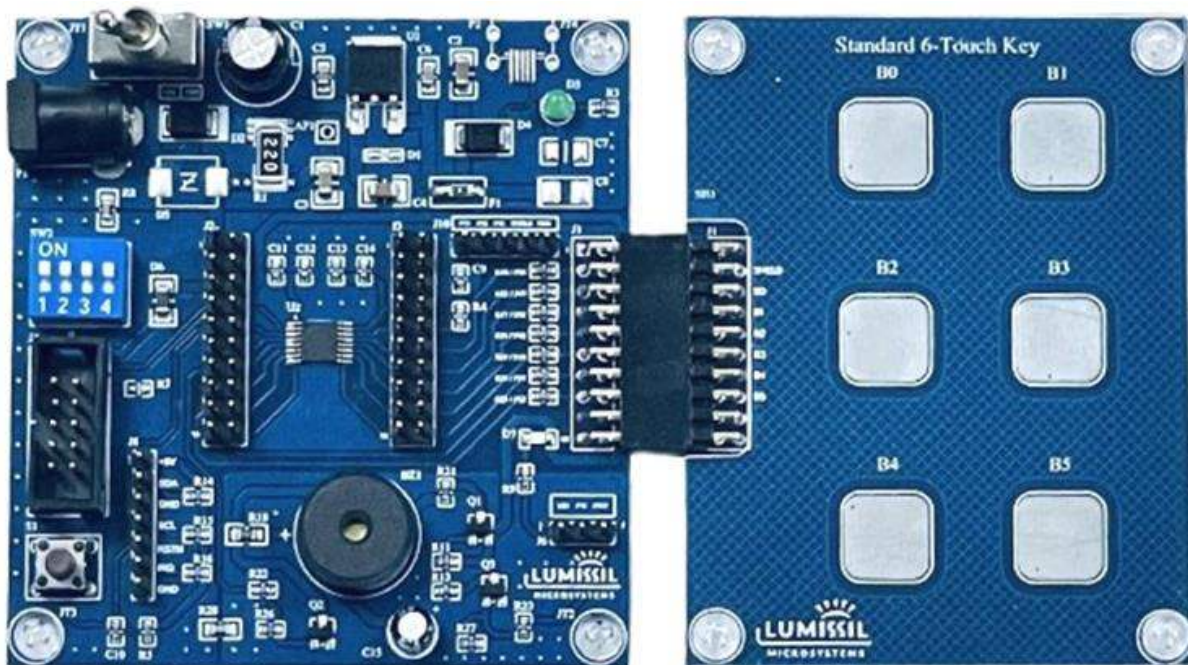



Figure 7: Photo of IS31CS8975 EB Environment

# IS31CS8975 EB Board User Guide

## SOFTWARE SUPPORT

Before starting up IS31CS8975 Touch Key GUI software, it is required that the PC is installed with the EzISP USB driver and related files (for example: Microsoft Framework and C++ library) to check and update device boot code and flash if necessary. Users can unzip the file EzISP v3.3.x.zip (downloadable from our company web site) and run EzISP setup v3.3.x.exe for installation. And this installation needs the login Windows user with administrator privilege.

EzISP software supports WinXP / Win 7 / Win 8 / Win 10/Win 11 operating system.

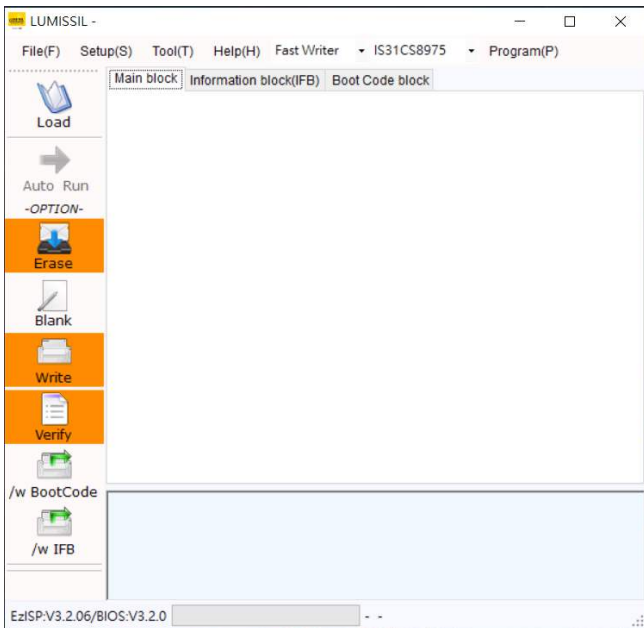

**Figure 8: Photo of EzISP software operation interface**

EzISP Writer Mode programming operation procedures are as follows:

- 1) Connect USB cable between the write connector of the EzISP Programming Board and the USB port of your PC.
- 2) Use a 10-pin 2x5 Socket-Socket 1.27mm IDC cable from the writer connector on the EzISP Programming Board to the writer connector on the IS31CS8975 EB Board.
- 3) Turn all switches of DIP switch (SW2) to ON position.
- 4) Execute EzISP software.
- 5) Select the MCU chip type and programming mode (for example Writer Mode or Fast Writer Mode).
- 6) Click the "Load" button and select the programming code (\*.hex) to load.


- 7) Click the "Auto Run" button, the EzISP software will immediately perform "Erase", "Write" and "Verify". Then the prompt information will be displayed at the bottom of the window. The prompt message includes the programming result and the running time.
- 8) Turn all switches of DIP switch (SW2) to OFF position.

After successful programming, the IS31CS8975 chip will start running the program.

**Caution: In the Fast Writer/Writer mode, on-chip Boot code WILL BE erased! Once it's erased, ISP mode cannot function anymore.**

EzISP ISP Mode programming operation process is as following items:

- 1) Connect USB cable between the writer connector of the EzISP Programming Board and the USB port of your PC.
- 2) Use a 10-pin 2x5 Socket-Socket 1.27mm IDC cable from the writer connector on the EzISP Programming Board to the writer connector on the IS31CS8975 EB.
- 3) Run EzISP software.
- 4) Select the MCU chip type and programming mode (for example: ISP Mode).
- 5) Click the "Load" button and select the programming code (\*.hex) to load.
- 6) Click the "Auto Run" button, and the EzISP software will immediately perform "Erase", "Write" and "Verify". Then the prompt information will be displayed at the bottom of the window. The prompt message includes the programming result and the running time.

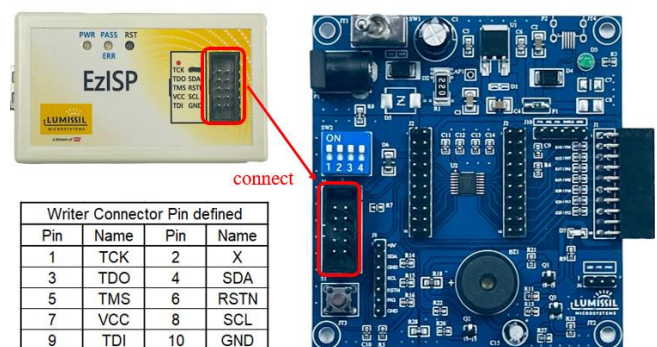

**Figure 9: Photo of EzISP Programming Board and IS31CS8975 EB Board connection**

The steps listed below are examples of GPIO control using the IS31CS8975.


- 1) Use the test code in Appendix I and compile the test code in the Keil C51 development

## IS31CS8975 EB Board User Guide

---

environment (IDE, Keil  $\mu$ Vision).

- 2) Create a Hex file of the test code in Keil C51 and load the hex file of the test code in the EzISP software to update the firmware to the IS31CS8975 flash.
- 3) After the firmware update is complete, the IS31CS8975 chip will automatically reset and execute the program.
- 4) In this example, you can measure if the P02 pin on the IS31CS8975 EB Board has been toggled.

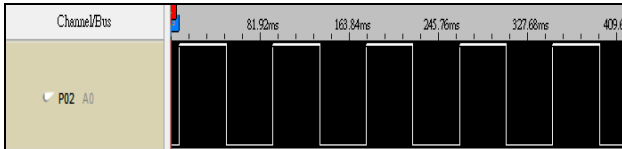

**Figure 10: Photo of P02 pin toggling on the IS31CS8975 EB Board**

# IS31CS8975 EB Board User Guide

## SCHEMATICS AND LAYOUT

### SCHEMATICS OF IS31CS8975 EB BOARD

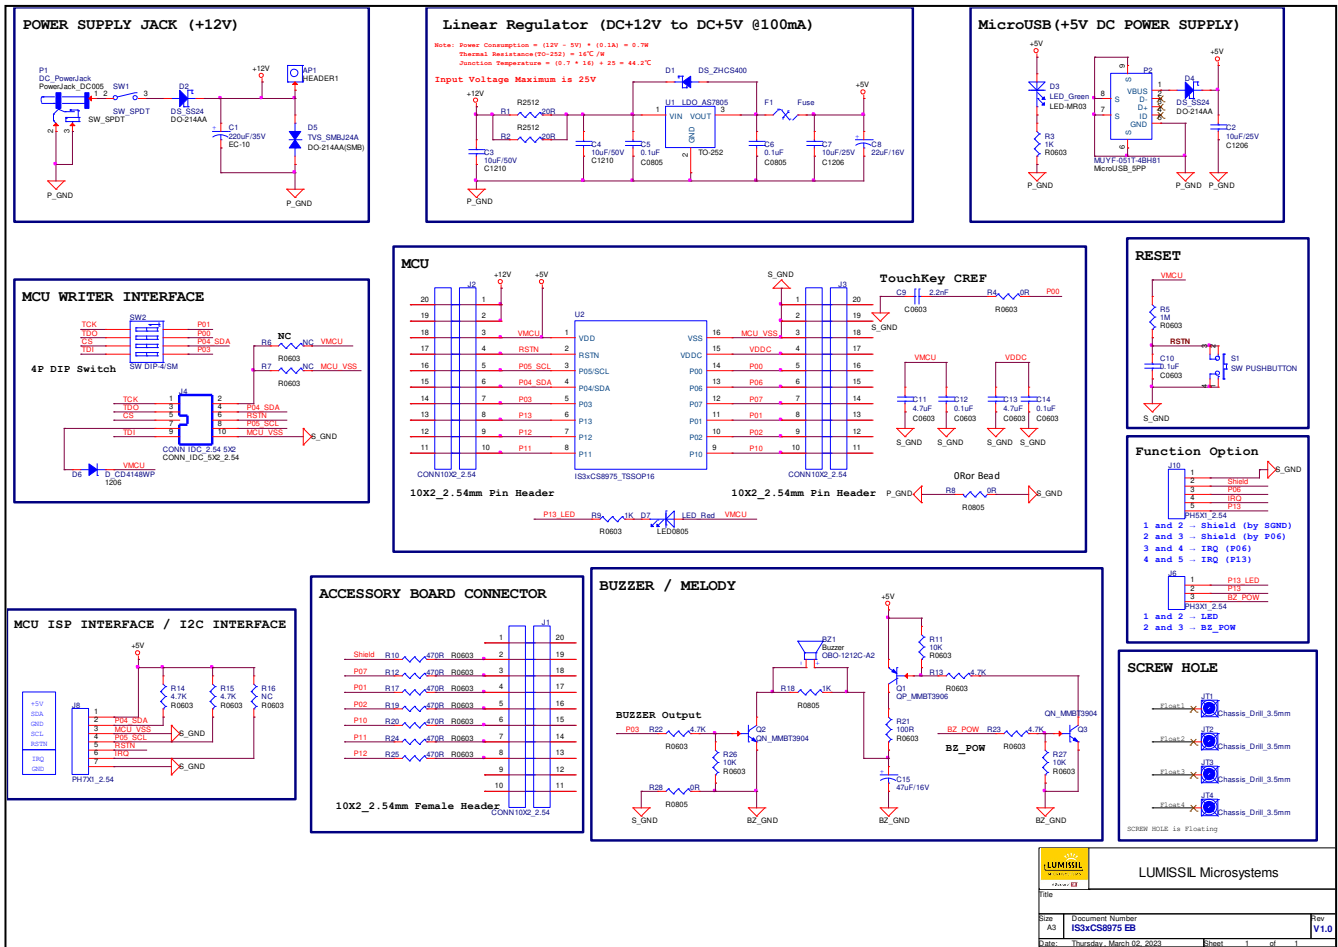


Figure 11: IS31CS8975 Evaluation Board Application Schematic

**Note:**

The DIP switch SW2 should be set to all OFF if ISP mode is selected ( boot code pre-programmed)

The DIP switch SW2 should be set to all ON if writer mode is selected (The boot code will be erased, and ISP won't be available)



## IS31CS8975 EB Board User Guide

### BILL OF MATERIALS

| Item | Q'ty | Symbol              | Value                   | PCB Footprint                   | Description        |
|------|------|---------------------|-------------------------|---------------------------------|--------------------|
| 1    | 1    | AP1                 | TP/NC                   | HEADER1                         | 1x1 Header         |
| 2    | 1    | BZ1                 | OBO-1212C-A2            | BUZZER\$2F\$2P-3\$2<br>F\$7.6MM | NC                 |
| 3    | 1    | C1                  | 100uF/50V               | EC-10                           | Capacitance        |
| 4    | 2    | C2,C7               | 10uF/25V                | C1206                           | SMD<br>Capacitance |
| 5    | 2    | C3,C4               | 10uF/50V                | C1210                           | SMD<br>Capacitance |
| 6    | 2    | C5,C6               | 0.1uF                   | C0805                           | SMD<br>Capacitance |
| 7    | 1    | C8                  | 22uF/16V                | C3528-21                        | SMD<br>Capacitance |
| 8    | 1    | C9                  | 2.2nF                   | C0603                           | SMD<br>Capacitance |
| 9    | 3    | C10,C12,<br>C14     | 0.1uF                   | C0603                           | SMD<br>Capacitance |
| 10   | 2    | C11,C13             | 4.7uF                   | C0603                           | SMD<br>Capacitance |
| 11   | 1    | C15                 | 47uF/16V                | C_AL6.3_7                       | Capacitance        |
| 12   | 1    | D1                  | DS_ZHCS400              | SOD323-Z                        | NC                 |
| 13   | 2    | D2,D4               | DS_SS24                 | DO-214AA                        | Dioded             |
| 14   | 1    | D3                  | LED_Green               | LED-MR03                        | LED Green          |
| 15   | 1    | D5                  | TVS_SMBJ24A             | DO-214AA(SMB)                   | NC                 |
| 16   | 1    | D6                  | 0R                      | D1206                           | 0R or Bead         |
| 17   | 1    | D7                  | LED_Red                 | LED0805                         | LED Red            |
| 18   | 1    | F1                  | Fuse                    | FUSE-30R110                     | 1.5A Fuse          |
| 19   | 4    | JT1,JT2,<br>JT3,JT4 | Chassis_Drill_3.5m<br>m | MTHOLE1                         |                    |
| 20   | 1    | J1                  | CONN10X2_2.54           | HEADER10X2                      | 10x2 Header        |
| 21   | 2    | J2,J3               | CONN10X2_2.54           | PH10X2_2.54                     | 10x2 Header        |
| 22   | 1    | J4                  | CONN IDC_2.54<br>5X2    | CONN_IDC_5X2_2.5<br>4           | Writer connector   |
| 23   | 1    | J6                  | PH3X1_2.54              | PH3X1_2.54                      | 3x1 Header         |
| 24   | 1    | J8                  | PH7X1_2.54              | PH7X1_2.54                      | 7x1 Header         |
| 25   | 1    | J10                 | PH5X1_2.54              | PH5X1_2.54                      | 5x1 Header         |
| 26   | 1    | P1                  | DC_PowerJack            | PowerJack_DC005                 | DC PowerJack       |
| 27   | 1    | P2                  | MUYF-051T-4BH81         | MIRCO_USB5PP                    | NC                 |
| 28   | 1    | Q1                  | QP_MMBT3906             | SOT23-123                       | PNP                |
| 29   | 2    | Q2,Q3               | QN_MMBT3904             | SOT23-123                       | NPN                |
| 30   | 2    | R1,R2               | 20R                     | R2512                           | SMD Resistor       |
| 31   | 2    | R3,R9               | 1K                      | R0603                           | SMD Resistor       |
| 32   | 1    | R4                  | 0R                      | R0603                           | SMD Resistor       |
| 33   | 1    | R5                  | 1M                      | R0603                           | SMD Resistor       |




**IS31CS8975 EB Board User Guide**

|    |   |   |                        |                        |              |
|----|---|---|------------------------|------------------------|--------------|
| 34 | 2 | R6,R7                                   | NC                     | R0603                  | NC           |
| 35 | 2 | R8,R28                                  | 0R                     | R0805                  | SMD Resistor |
| 36 | 7 | R10,R12,<br>R17,R19,<br>R20,R24,<br>R25 | 470R                   | R0603                  | SMD Resistor |
| 37 | 3 | R11,R26,<br>R27                         | 10K                    | R0603                  | SMD Resistor |
| 38 | 6 | R13,R14,<br>R15,R16,<br>R22,R23         | 4.7K                   | R0603                  | SMD Resistor |
| 39 | 1 | R18                                     | 1K                     | R0805                  | SMD Resistor |
| 40 | 1 | R21                                     | 100R                   | R0603                  | SMD Resistor |
| 41 | 1 | SW1                                     | SW_SPDT                | SW_SPDT                | SPDT Switch  |
| 42 | 1 | SW2                                     | SW DIP-4/SM            | SW_EDS_SPST_4P         | Switch       |
| 43 | 1 | S1                                      | SW PUSHBUTTON          | SW_TACT_4.5_SMD        | Push Button  |
| 44 | 1 | U1                                      | LDO_AS7805             | TO-252                 | LDO          |
| 45 | 1 | U2                                      | IS31CS8975_TSS<br>OP16 | TSSOP16_IS31CS8<br>975 | MCU          |

*Bill of Materials, refer to Figure 11*

**IS31CS8975 EB Board User Guide**  
**LAYOUT OF IS31CS8975 EB BOARD**

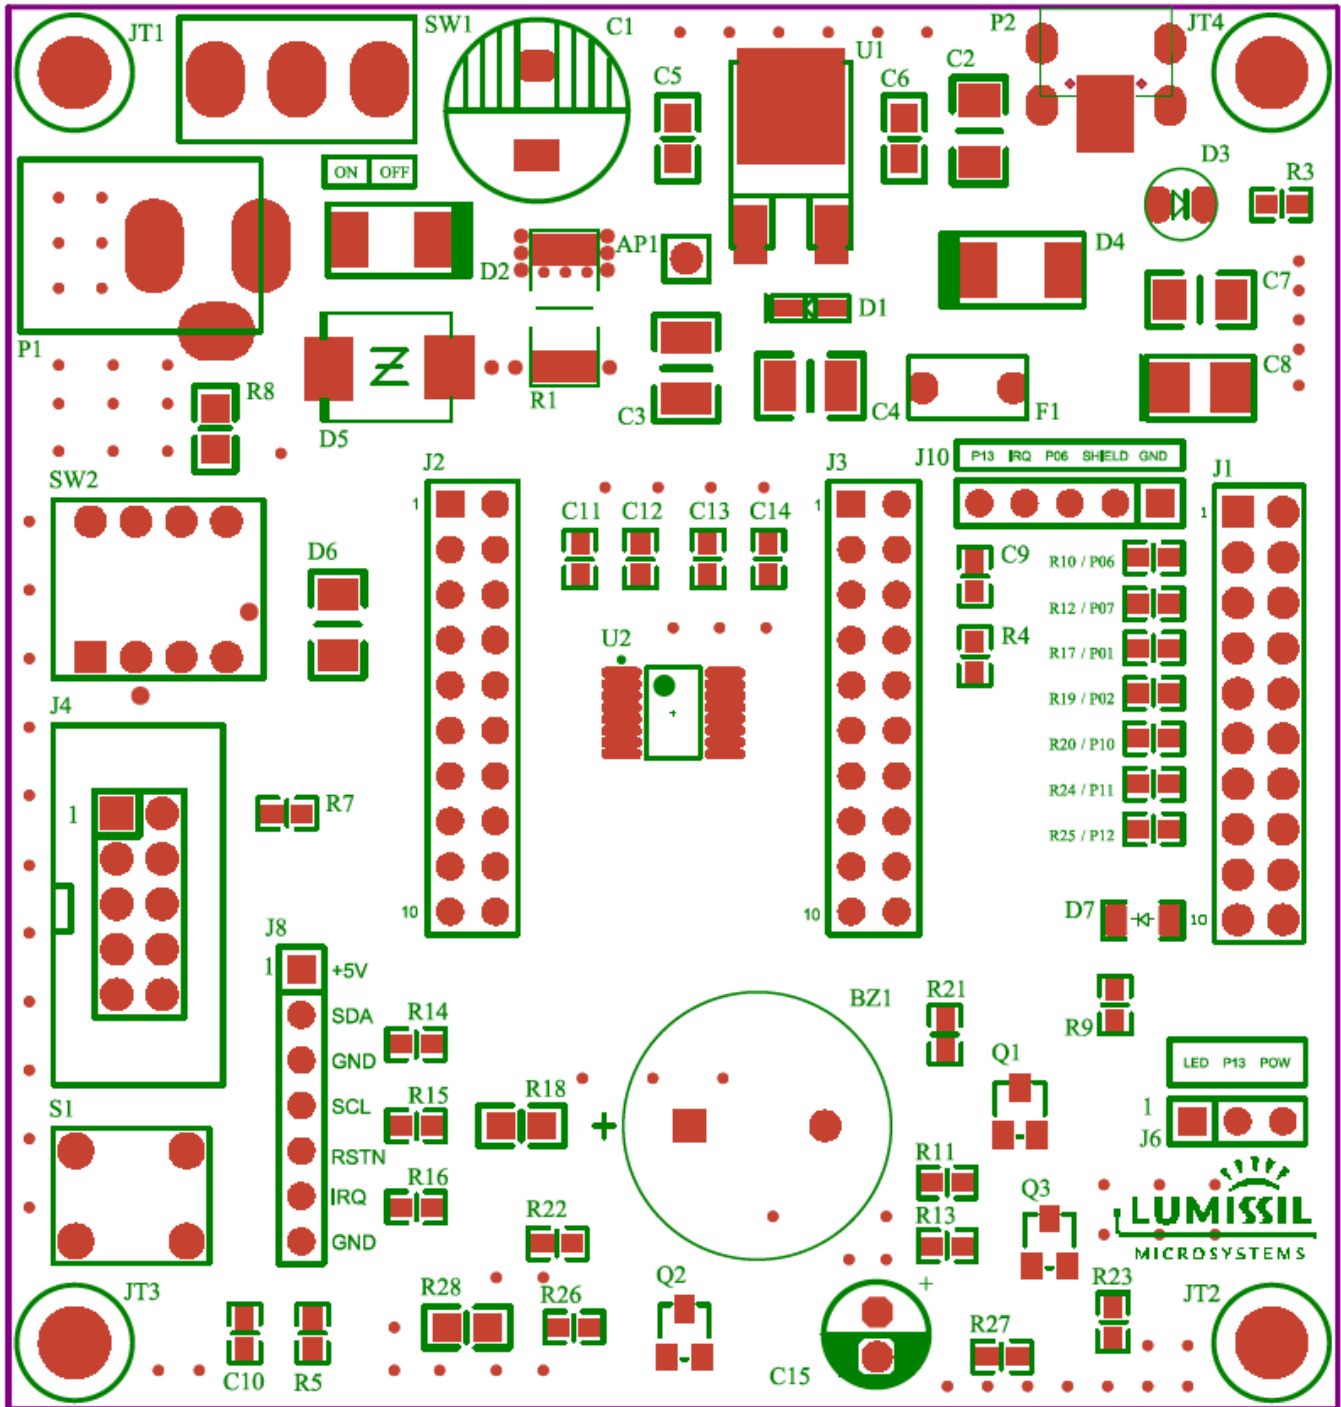

**Figure 12: IS31CS8975 Evaluation Board Component Placement Guide - Top Layer**

# IS31CS8975 EB Board User Guide

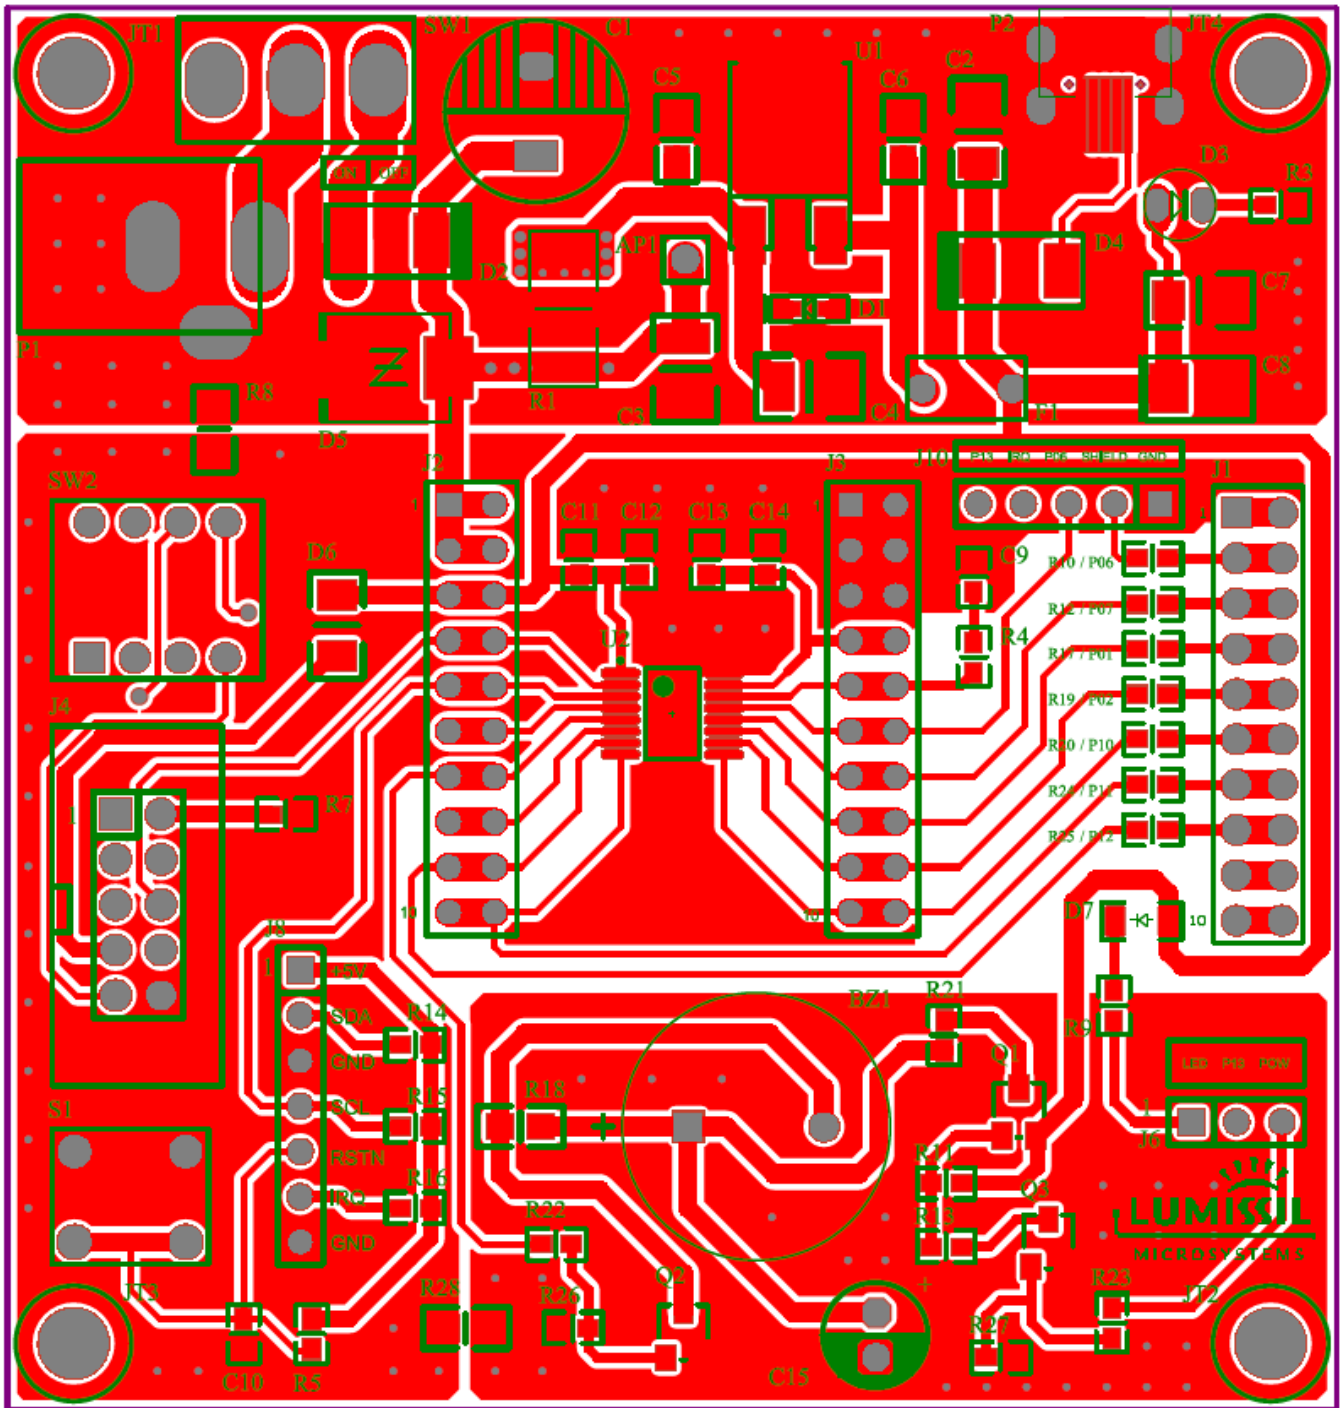


Figure 13: IS31CS8975 Evaluation Board PCB Layout - Top Layer



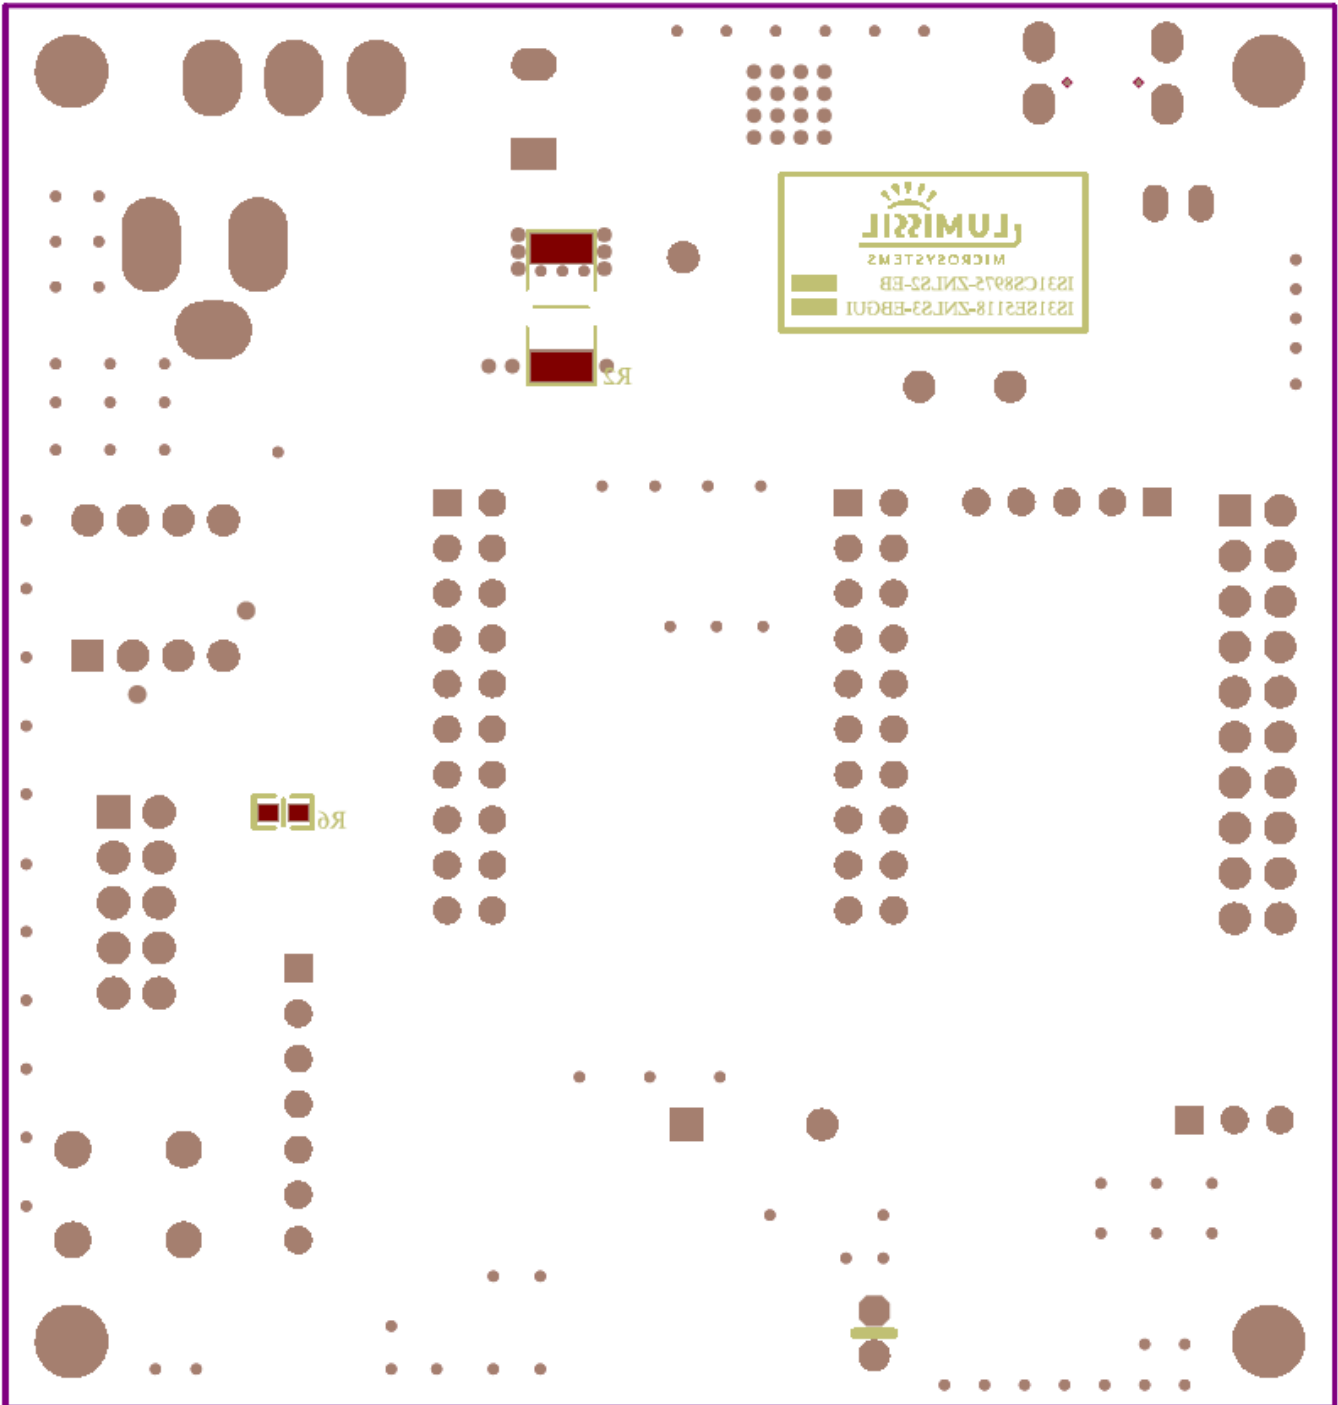


Figure 14: IS31CS8975 Evaluation Board Component Placement Guide - Bottom Layer

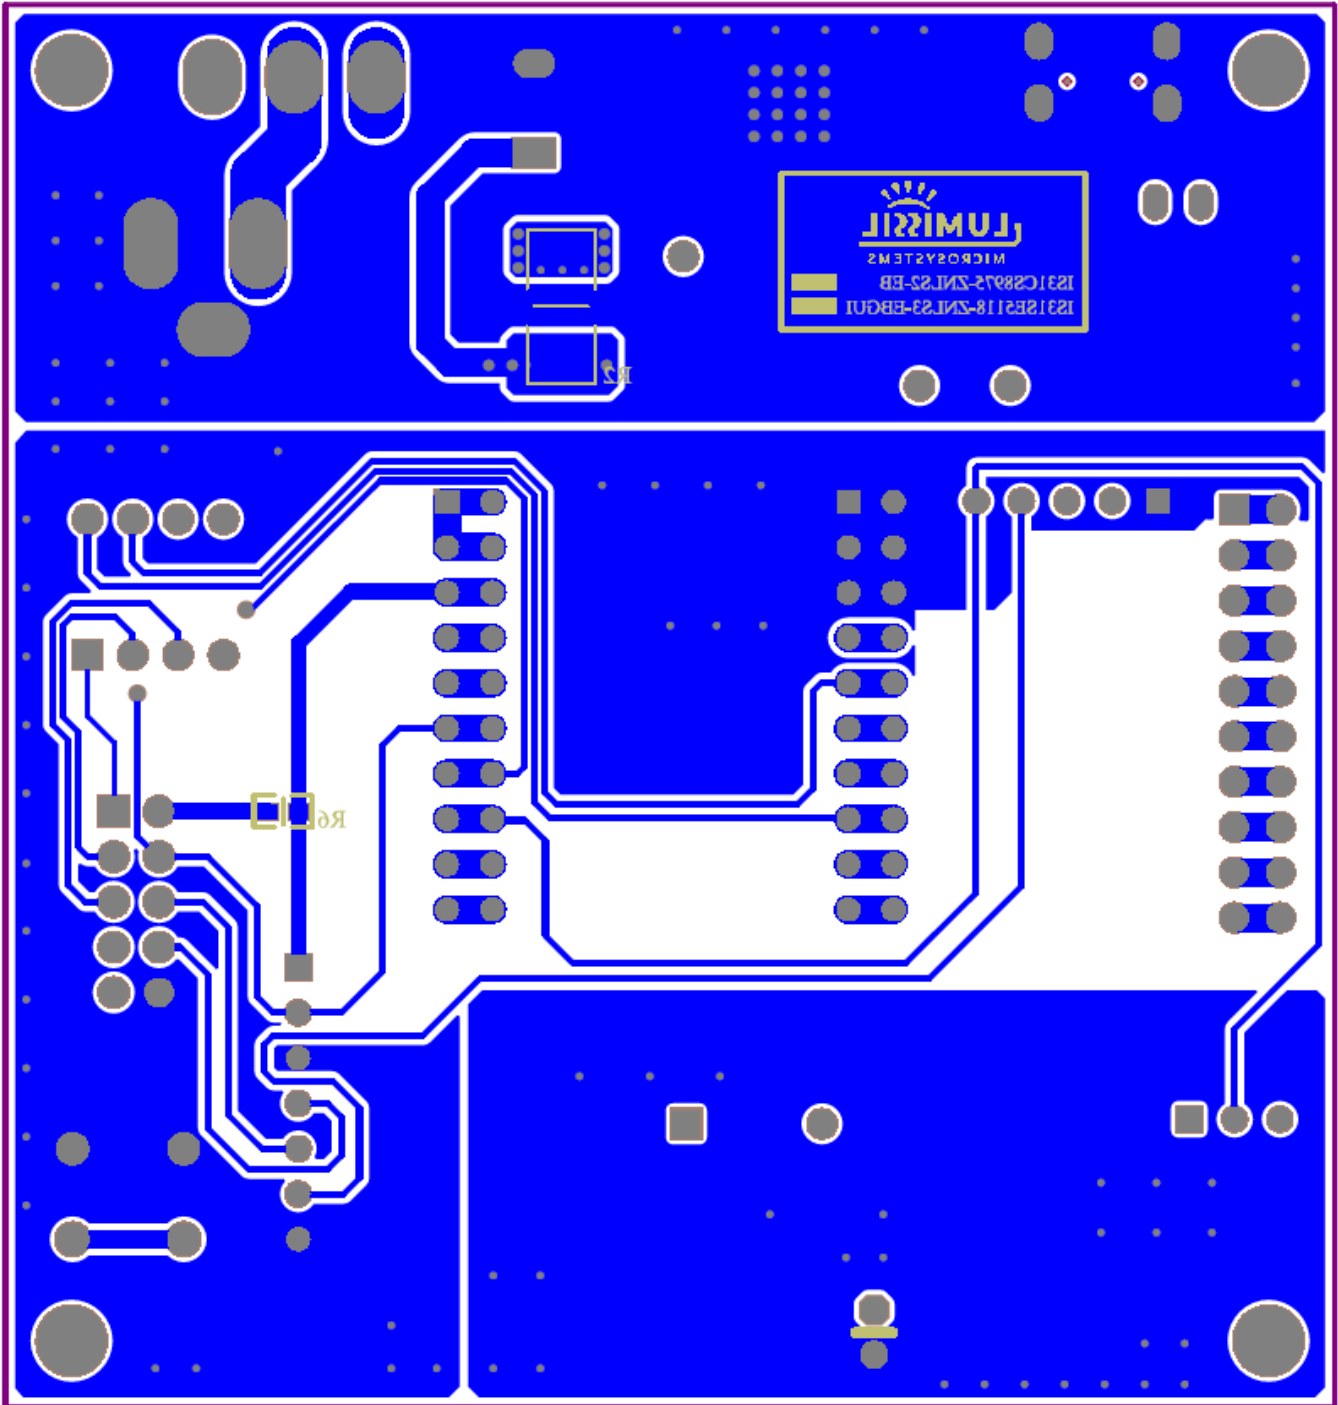


Figure 15: IS31CS8975 Evaluation Board PCB Layout - Bottom Layer

# IS31CS8975 EB Board User Guide

## REVISION HISTORY

| Revision | Detailed Information   | Date       |
|----------|--|------------|
| A        | Initial release  | 2020.06.24 |
| B        | <ol style="list-style-type: none"> <li>1. Add Figures 4 &amp; 5 for Photos of IS31CS8975 EB Assembly Top and Bottom Views</li> <li>2. Add Figures 6 for Photo of Accessory Board</li> <li>3. Add Figures 7 for Photo of Connection of IS31CS8975 EB and Accessory Board</li> <li>4. Add ISP mode procedures</li> <li>5. Add Win 11 support for IS31CS8975 EB software</li> </ol> | 2023.03.06 |

Copyright © 2023 Lumissil Microsystems. All rights reserved. Lumissil Microsystems reserves the right to make changes to this specification and its products at any time without notice. Lumissil Microsystems assumes no liability arising out of the application or use of any information, products or services described herein. Customers are advised to obtain the latest version of this device specification before relying on any published information and before placing orders for products.

Lumissil Microsystems does not recommend the use of any of its products in life support applications where the failure or malfunction of the product can reasonably be expected to cause failure of the life support system or to significantly affect its safety or effectiveness. Products are not authorized for use in such applications unless Lumissil Microsystems receives written assurance to its satisfaction, that:

- a.) the risk of injury or damage has been minimized;
- b.) the user assumes all such risks; and



## IS31CS8975 EB Board User Guide

### APPENDIX I : IS31CS8975 Test Code — GPIO toggle

```

/*****/
/**
 *   IS31CS8975 Sample Code
 * Function: GPIO Toggle Test
 * Version: 1.0
 * Copyright(c)   All right reserved
 */
/*****/

#define _main_

#include "CS8975_SFR.h"
#include "CS8975_XFR.h"
#include <intrins.h>

/* SYSCLK */
#define SYSCLK      iSYSCLK
#define iSYSCLK     16000000
#define xSYSCLK    22118400
#define SOSC       128000

/* EUART configuration macro*/
#define baud_rate 115200
#define BUAD_H (UInt8)((SYSCLK/ baud_rate)/256) // MSB
#define BUAD_L (UInt8)(SYSCLK/ baud_rate)

#define UART_SB 0      // 0: 1 Stop bit, 1: 2 Stop bit
#define UART_WLS 3    // frame length = WordLength+5 range 0~3
#define UART_Break 0  // set TX as low if 1 until Break ast as 0
#define UART_OP 0     // 0: even parity, 1: odd parity
#define UART_PE 0     // 0: no parity, 1: parity enable
#define UART_SP 0     // 1: always set parity bit as 1

#define UART_SCON (UART_SB<<6)+(UART_WLS<<4)+(UART_Break<<3)+(UART_OP<<2)+(UART_PE<<1)+UART_SP

#define dfn8_RX_CMD_length 3

//=====
/**
 *   Delay10ms
 *
 */
void Delay10ms(unsigned char delay)
{
    unsigned char i, j, k;

```

## IS31CS8975 EB Board User Guide

---

```

    for(i=0; i<delay; i++)
        for(j=0; j<100; j++)
            for(k=0; k<200; k++);
}
//=====
/**
 *   Initial_REGTRM
 *
 *   REGTRM value for 1.5V
 *
 */
void Initial_REGTRM(unsigned char regtrm)
{
    TB = 0xAA;
    TB = 0x55;
    REGTRM = regtrm;
    TB = 0x00;
}
//=====
/**
 *   Initial_IOSC
 *
 *   IOSC ITRM value and IOSC VTRM value for 16MHz
 *
 */
void Initial_IOSC(unsigned char ITRM, unsigned char VTRM)
{
    TB = 0xAA;
    TB = 0x55;
    IOSCI TRM = ITRM;
    TB = 0x00;

    Delay10ms(1);

    TB = 0xAA;
    TB = 0x55;
    IOSCVTRM = VTRM;
    TB = 0x00;
}
//=====
/**
 *   IFB_Read_1Byte
 *
 *   Read 1 byte from Information block IFB
 *
 */

```

## IS31CS8975 EB Board User Guide

```

*/
unsigned char IFB_Read_1Byte(unsigned char ADD)
{
    unsigned char IFB_DAT;

    TB = 0xAA;
    TB = 0x55;
    FLSHADH = 0x00;
    FLSHADL = ADD;
    FLSHCMD = 0x02; //IFB Read
    TB = 0x00;

    TB = 0xAA;
    TB = 0x55;
    IFB_DAT = FLSHDATL;
    TB = 0x00;

    return IFB_DAT;
}
//=====
/**
 *   Reset_WDT3
 *
 *   Watchdog Timer3 Configuration
 *
 */
void Reset_WDT3(void)
{
    TB = 0xAA;
    TB = 0x55;
    WDT3CF = 0xD0; //clear WDT3 counter, Stop WDT3 increment in STOP/SLEEP mode, clear Reset flag
    TB = 0x00;
}
//=====
/**
 *   IO_setting
 *
 *   Setting IO Configuration and Multi-Function(IOCFGOxx, IOCFGIdx, MFCFGxx)
 *
 */
void IO_setting(unsigned char* xIOCFG0, unsigned IOCFG0_V, unsigned IOCFG1_V, unsigned MFCFG_V)
{
    unsigned char* tmp;
    tmp = xIOCFG0;
    tmp += 0x20;
    *tmp = MFCFG_V;
}

```



## IS31CS8975 EB Board User Guide

```

tmp -= 0x10;
*tmp = IOCFG1_V;
tmp -= 0x10;
*tmp = IOCFG0_V;
}
//=====
/**
 *   Initial_IO
 *
 */
void Initial_IO(void)
{
    /* Initial Port0 / 1 / 2 / 3 */
    P0 = 0;
    P1 = 0;
    /* Port0 */
    IO_setting(&IOCFG00, IO_PNDRV, IO_Input_EN, MFCFG_GPIO);
    IO_setting(&IOCFG001, IO_PNDRV, IO_Input_EN, MFCFG_GPIO);
    IO_setting(&IOCFG002, IO_PNDRV, IO_Input_EN, MFCFG_GPIO);
    //IO_setting(&IOCFG003, IO_PNDRV, IO_Input_EN, MFCFG_GPIO);
    IO_setting(&IOCFG004, IO_PNDRV, IO_Input_EN, MFCFG_GPIO);
    IO_setting(&IOCFG005, IO_PNDRV, IO_Input_EN, MFCFG_GPIO);
    IO_setting(&IOCFG006, IO_PNDRV, IO_Input_EN, MFCFG_GPIO);
    IO_setting(&IOCFG007, IO_PNDRV, IO_Input_EN, MFCFG_GPIO);
    /* Port1 */
    IO_setting(&IOCFG010, IO_PNDRV, IO_Input_EN, MFCFG_GPIO);
    IO_setting(&IOCFG011, IO_PNDRV, IO_Input_EN, MFCFG_GPIO);
    IO_setting(&IOCFG012, IO_PNDRV, IO_Input_EN, MFCFG_GPIO);
    IO_setting(&IOCFG013, IO_PNDRV, IO_Input_EN, MFCFG_GPIO);
}
//=====
/**
 *   Initial_EUART1
 *
 *   Initial EUART1 Configuration
 *
 */
void Initial_EUART1(void)
{
    /* P0_7 : TXD1, P0_6: RXD1 */
    IOCFG007 = 0x60;
    IOCFG107 = 0x00;
    MFCFG07 = 0x0A;
    IOCFG006 = 0x02;
    IOCFG106 = 0x08;
    MFCFG06 = 0x0B;
}

```

## IS31CS8975 EB Board User Guide

---

```

SBR1L = BUAD_L;
SBR1H = BUAD_H;
SCON1 = UART_SCON;
SFIFO1 = 0x30; //RX FIFO = 3, TX FIFO = 0
SCON1 = UART_SCON | 0x80;
}
//=====
/**
 *   EUART1_tx_byte
 *
 *   EUART1 transmit 1 byte
 *
 */
void EUART1_tx_byte(unsigned char p)
{
    while((SFIFO1 & 0x08));
    SBUF1 = p;
}
void main(void)
{
    unsigned char tmp;

    /* Disable Watchdog timer */
    TA = 0xAA; //Clear and disable watchdog
    TA = 0x55;
    WDCON = 0x00;
    TA = 0x00;

    /* Setup Wait Stat */
    TA = 0xAA; //Wait State Cycle = 0
    TA = 0x55;
    WTST = 0;
    TA = 0x00;

    /* Regulator Trim & IOSC Trim */
    Initial_REGTRM(IFB_Read_1Byte(0x20)); //Regulator Voltage
    Initial_IOSC(IFB_Read_1Byte(0x21), IFB_Read_1Byte(0x22)); //IOSC = 16MHz

    /* Initial EUART */
    Initial_EUART1();

    /* Initial IO */
    Initial_IO();

    EUART1_tx_byte(0x55);

```

## IS31CS8975 EB Board User Guide

---

```
EUART1_tx_byte(0xAA);
```

```
tmp = 0;
```

```
while(1)
```

```
{
```

```
    Reset_WDT3(); //Clear WDT3
```

```
    EUART1_tx_byte(tmp);
```

```
    P0_0 = !P0_0;
```

```
    P0_1 = !P0_1;
```

```
    P0_2 = !P0_2;
```

```
    P0_4 = !P0_4;
```

```
    P0_5 = !P0_5;
```

```
    P0_6 = !P0_6;
```

```
    P0_7 = !P0_7;
```

```
    P1_0 = !P1_0;
```

```
    P1_1 = !P1_1;
```

```
    P1_2 = !P1_2;
```

```
    P1_3 = !P1_3;
```

```
    tmp ++;
```

```
}
```

```
}
```