















Input voltage: 36~75V

Single output: 12V Output power: 360W

The E48SC12030 series, eighth brick, 36~75V input, single output 12V, are full digital control DC/DC converter, and are the latest offering from a world leader in power system and technology and manufacturing — Delta Electronics, Inc. This product provides up to 360 watts of power at 36~75V input in an industry standard, DOSA compliant footprint and pin out. The E48SC12030 offers more than 94.5% high efficiency at 48V input, 12V output and 30A load. There is a built-in digital PWM controller in the E48SC12030 series, which is used to complete the Vo feedback, PWM signal generation, fault protection, output voltage trim, on/off control and PMBUS communications, and so on. With the digital control, many design and application flexibility, advanced performance, and reliability are obtained.

#### **FEATURES**

- Efficiency: 94.5% @ 48Vin/30A
- Output voltage range (trim and PMBUS) 8V~13.2V
- Size:
  - 58.4mm x 22.8mm x 12.7mm(2.3" x 0.9" x 0.5")
- Industry standard DOSA compliant pin out
- Fully protected: Input UVLO, Output OCP and OVP, OTP
- 1500V isolation
- No minimum load required
- Fixed frequency operation
- ISO 9001, TL 9000, ISO 14001, QS9000, OHSAS18001 certified manufacturing facility
- UL/CUL 60950-1 (US & Canada) Recognized

#### **OPTIONS**

- Positive or Negative On/Off logic
- With heat-spreader option
- Digital PMBus interface option

#### **APPLICATIONS**

- Datacom / Networking
- Wireless Networks
- Optical Network Equipment
- Server and Data Storage
- Industrial / Testing Equipment



T<sub>A</sub>=25°C, airflow rate=400 LFM, V<sub>in</sub>=48Vdc, nominal Vout unless otherwise noted.)

| PARAMETER   | NOTES and CONDITIONS  |       | E48SC                               | 12030     |                                  |
|---|---|-------|-------------------------------------|-----------|----------------------------------|
|   |   | Min.  | Тур.                                | Max.      | Units                            |
| ABSOLUTE MAXIMUM RATINGS  |   |       |                                     |           |                                  |
| Input Voltage   |   |       |                                     |           |                                  |
| Continuous  | 100ms   | 0     |                                     | 75<br>100 | Vdc<br>Vdc                       |
| Transient (100ms) Output negative voltage   | TOUTIS  |       |                                     | 0.3       | Vac                              |
| Operating ambient Temperature   |   | -40   |                                     | 85        | °C                               |
| Storage Temperature   |   | -55   |                                     | 125       | °C                               |
| Input/Output Isolation Voltage  |   |       |                                     | 1500      | Vdc                              |
| INPUT CHARACTERISTICS   |   |       |                                     |           |                                  |
| Operating Input Voltage   |   | 36    | 48                                  | 75        | Vdc                              |
| Input Under-Voltage Lockout   |   |       |                                     |           |                                  |
| Turn-On Voltage Threshold<br>(Adjustable via PMBus, VIN ON)   |   | 34    |                                     | 36        | Vdc                              |
| Turn-Off Voltage Threshold  |   |       |                                     |           |                                  |
| (Adjustable via PMBus, VIN_OFF)   |   | 31    |                                     | 35        | Vdc                              |
| Lockout Hysteresis Voltage  |   |       | 2                                   |           | Vdc                              |
| Maximum Input Current   | 30A Load, 36Vin   |       |                                     | 12        | Α                                |
| No-Load Input Current   | Vin=48V   | 60    |                                     | 130       | mA                               |
| Off Converter Input Current   | Vin=48V   | 10    |                                     | 30        | mA                               |
| Input Capacitance   |   | 100   |                                     | 4         | uF                               |
| Inrush Current (I <sup>2</sup> t) Input Reflected-Ripple Current  | P-P thru 12μH inductor, 5Hz to 20MHz  |       | 25                                  | 1         | A <sup>2</sup> S<br>mA           |
| Input Voltage Ripple Rejection  | 120Hz   |       | 50                                  |           | dB                               |
| OUTPUT CHARACTERISTICS  | 120112  |       | 30                                  |           | UD.                              |
| Output Voltage Set Point  | Vin 40V In 04 T- 0500   | 11.00 | 10                                  | 10.10     | \/-I.                            |
| (Adjustable via PMBus)  | Vin=48V, Io=0A , Ta=25°C  | 11.88 | 12                                  | 12.12     | Vdc                              |
| Output Voltage Regulation   |   |       |                                     |           |                                  |
| Over Line   | Vin=36V to 75V, lo=100% load  |       |                                     | ±48       | mV                               |
| Over Load   | Vin=36V to 75V, lo=lo,min to lo,max   |       |                                     | ±48       | mV                               |
| Over tempearture  | Vin=36V to 75V, lo=100% load, Ta= -40C to 85C  Trim and PMBUS,Vin=36V to 75V, Pout ≦ max rated power,   |       |                                     | ±108      | mV                               |
| Total output voltage Range (Note1)  | lo ≤ lo.max   | 8.00  |                                     | 13.20     | Vdc                              |
| Output Over-Voltage Lockout (Adjustable via PMBus, VOUT OV FAULT LIMIT)   |   |       | 15.2                                |           | Vdc                              |
| Output Capacitance  |   | 300   |                                     | 10000     | μF                               |
| Output Voltage Ripple and Noise   | Vin=48V, Full load, 20MHz bandwidth   |       |                                     |           |                                  |
| Peak-to-Peak  | Co= 220uF/16V (polymer) + 10u/16V (Tantalum Capacitor)  |       | 90                                  |           | mV                               |
|   | +1u/16V (Ceramic )  Co= 220uF/16V (polymer ) + 10u/16V (Tantalum Capacitor)   |       |                                     |           |                                  |
| RMS   | +1u/16V (Ceramic)   |       | 40                                  |           | mV                               |
| Operating Output Current Range  | Vin=36V to 75V  | 0     |                                     | 30        | Α                                |
| Output Over Current Protection(hiccup mode)   | Output Voltage 10% Low  | 35    | 38                                  | 41        | Α                                |
| DYNAMIC CHARACTERISTICS   |   |       |                                     |           |                                  |
| Output Voltage Current Transient  | Vin=48V, Load Slew rate 0.1A/µs with a 1µF ceramic ,  |       |                                     |           |                                  |
| Positive Step Change in Output Current  | a 10uF tantalum, and a 220uF polymer capacitor 50% Io.max to 75% Io.max   |       | 300                                 |           | mV                               |
| Negative Step Change in Output Current  | 75% lo.max to 75% lo.max  |       | -300                                |           | mV                               |
| Settling Time (within 1% Vout nominal)  | 10/0 to:max to 00/0 to:max  |       | 500                                 |           | μs                               |
| Turn-On Transient   |   |       | 550                                 |           | μο                               |
| (Adjustable via PMBus)  |   |       |                                     |           |                                  |
| Start-Up Time, From On/Off Control  | From On/off to 90%Vo final value  |       | 40                                  |           | ms                               |
| Chart I in Time Frame Input   | From Input to 90%Vo final value   |       | 55                                  |           | ms                               |
| Start-Up Time, From Input   | F 100/1/- f   |       | 20                                  | I         | ms                               |
| Output voltage Rise Time  | From 10%Vo final value to 90%Vo final value   |       | 20                                  |           |                                  |
| Output voltage Rise Time<br>EFFICIENCY  |   |       |                                     |           | 0/                               |
| Output voltage Rise Time<br>EFFICIENCY<br>100% Load   | Vin=36V   |       | 94.6                                |           | <b>%</b>                         |
| Output voltage Rise Time<br>EFFICIENCY  |   |       |                                     |           | %<br>%<br>%                      |
| Output voltage Rise Time EFFICIENCY 100% Load 100% Load   | Vin=36V<br>Vin=48V  |       | 94.6<br>94.5                        |           | %                                |
| Output voltage Rise Time  EFFICIENCY  100% Load  100% Load  60% Load  ISOLATION CHARACTERISTICS  Input to Output  | Vin=36V<br>Vin=48V  |       | 94.6<br>94.5                        | 1500      | %<br>%<br>Vdc                    |
| Output voltage Rise Time  EFFICIENCY  100% Load  100% Load  60% Load  ISOLATION CHARACTERISTICS  Input to Output  Isolation Resistance  | Vin=36V<br>Vin=48V  | 10    | 94.6<br>94.5<br>95.0                | 1500      | %<br>%<br>Vdc<br>MΩ              |
| Output voltage Rise Time  EFFICIENCY  100% Load  100% Load  60% Load  ISOLATION CHARACTERISTICS  Input to Output Isolation Resistance Isolation Capacitance   | Vin=36V<br>Vin=48V  | 10    | 94.6<br>94.5                        | 1500      | %<br>%<br>Vdc                    |
| Output voltage Rise Time  EFFICIENCY  100% Load  100% Load  60% Load  ISOLATION CHARACTERISTICS  Input to Output  Isolation Resistance  Isolation Capacitance  FEATURE CHARACTERISTICS  | Vin=36V<br>Vin=48V  | 10    | 94.6<br>94.5<br>95.0<br>6900        | 1500      | %<br>%<br>Vdc<br>MΩ<br>pF        |
| Output voltage Rise Time  EFFICIENCY  100% Load  100% Load  60% Load  ISOLATION CHARACTERISTICS  Input to Output  Isolation Resistance  Isolation Capacitance  FEATURE CHARACTERISTICS  Switching Frequency   | Vin=36V<br>Vin=48V<br>Vin=48V   | 10    | 94.6<br>94.5<br>95.0                | 1500      | %<br>%<br>Vdc<br>MΩ              |
| Output voltage Rise Time  EFFICIENCY  100% Load  100% Load  60% Load  ISOLATION CHARACTERISTICS  Input to Output  Isolation Resistance  Isolation Capacitance  FEATURE CHARACTERISTICS  Switching Frequency  ON/OFF Control, Remote On/Off logic  | Vin=36V Vin=48V Vin=48V  Default Negative logic   |       | 94.6<br>94.5<br>95.0<br>6900        |           | %<br>%<br>Vdc<br>MΩ<br>pF        |
| Output voltage Rise Time  EFFICIENCY  100% Load  100% Load  60% Load  ISOLATION CHARACTERISTICS  Input to Output  Isolation Resistance  Isolation Capacitance  FEATURE CHARACTERISTICS  Switching Frequency  ON/OFF Control, Remote On/Off logic  Logic Low (Module On)   | Vin=36V Vin=48V Vin=48V  Vin=48V  Default Negative logic Von/off at lon/off=1.0mA   | 0     | 94.6<br>94.5<br>95.0<br>6900        | 0.8       | %<br>%<br>Vdc<br>MΩ<br>pF<br>KHz |
| Output voltage Rise Time  EFFICIENCY  100% Load  100% Load  100% Load  SOLATION CHARACTERISTICS  Input to Output  Isolation Resistance  Isolation Capacitance  FEATURE CHARACTERISTICS  Switching Frequency  ON/OFF Control, Remote On/Off logic  Logic Low (Module On)  Logic High (Module Off)  | Vin=36V Vin=48V Vin=48V  Default Negative logic   |       | 94.6<br>94.5<br>95.0<br>6900        |           | %<br>%<br>Vdc<br>MΩ<br>pF        |
| Output voltage Rise Time  EFFICIENCY  100% Load  100% Load  100% Load  ISOLATION CHARACTERISTICS  Input to Output  Isolation Resistance  Isolation Capacitance FEATURE CHARACTERISTICS  Switching Frequency ON/OFF Control, Remote On/Off logic  Logic Low (Module On)  Logic High (Module Off)  ON/OFF Current (for both remote on/off logic)  | Vin=36V Vin=48V Vin=48V  Vin=48V  Default Negative logic Von/off at lon/off=1.0mA Von/off at lon/off=0.0 μA   | 0     | 94.6<br>94.5<br>95.0<br>6900        | 0.8       | %<br>%<br>Vdc<br>MΩ<br>pF<br>KHz |
| Output voltage Rise Time  EFFICIENCY  100% Load  100% Load  100% Load  SOLATION CHARACTERISTICS  Input to Output  Isolation Resistance  Isolation Capacitance  FEATURE CHARACTERISTICS  Switching Frequency  ON/OFF Control, Remote On/Off logic  Logic Low (Module On)  Logic High (Module Off)  | Vin=36V Vin=48V Vin=48V  Vin=48V  Default Negative logic Von/off at lon/off=1.0mA Von/off at lon/off=0.0 μA   | 0     | 94.6<br>94.5<br>95.0<br>6900        | 0.8       | %<br>%<br>Vdc<br>MΩ<br>pF<br>KHz |
| Output voltage Rise Time  EFFICIENCY  100% Load  100% Load  60% Load  ISOLATION CHARACTERISTICS  Input to Output  Isolation Resistance  Isolation Capacitance  FEATURE CHARACTERISTICS  Switching Frequency  ON/OFF Control, Remote On/Off logic  Logic Low (Module On)  Logic High (Module Off)  ON/OFF Current (for both remote on/off logic)  GENERAL SPECIFICATIONS  MTBF  Weight | Vin=36V Vin=48V Vin=48V  Vin=48V  Default Negative logic Von/off at lon/off=1.0mA Von/off at lon/off=0.0 μA lon/off at Von/off=0.0V  Io=80% of lo max; Ta=25°C; Airflow=300LFM With heat-spreader | 0     | 94.6<br>94.5<br>95.0<br>6900<br>175 | 0.8       | % % Vdc MΩ pF KHz V Magrams      |
| Output voltage Rise Time  EFFICIENCY  100% Load  100% Load  60% Load  ISOLATION CHARACTERISTICS Input to Output Isolation Resistance Isolation Capacitance FEATURE CHARACTERISTICS Switching Frequency ON/OFF Control, Remote On/Off logic Logic Low (Module On) Logic High (Module Off) ON/OFF Current (for both remote on/off logic)  GENERAL SPECIFICATIONS  MTBF                  | Vin=36V Vin=48V Vin=48V  Vin=48V  Default Negative logic Von/off at lon/off=1.0mA Von/off at lon/off=0.0 μA lon/off at Von/off=0.0V  lo=80% of lo max; Ta=25°C; Airflow=300LFM                    | 0     | 94.6<br>94.5<br>95.0<br>6900<br>175 | 0.8       | % Vdc MΩ pF KHz V V mA           |

Note1: 11.5~12.5V trim range was disabled. To get more margin, please use≤11.4V for trim down and ≥12.6V for trim up application.

Note2: Please attach thermocouple on NTC resistor to test OTP function, the hot spots' temperature is just for reference. And the OTP is Adjustable via PMBus.



## DIGITAL INTERFACE SPECIFICATIONS

| PARAMETER  | NOTES and CONDITIONS  |      | E48SC      | 12030 |       |
|--|---|------|------------|-------|-------|
|  |   | Min. | Тур.       | Max.  | Units |
| PMBUS SIGNAL INTERFACE CHARACTERISTICS                   |   |      |            |       |       |
| Input High Voltage (CLK, DATA)                           |   | 2.1  |            | 3.6   | Vdc   |
| Input Low Voltage (CLK, DATA)                            |   | 0    |            | 0.8   | Vdc   |
| Input high level current (CLK, DATA)                     |   | -10  |            | 10    | uA    |
| Input low level current (CLK, DATA)                      |   | -10  |            | 10    | uA    |
| Output Low Voltage (SMBALERT#)                           | SMBALERT, sink current 2mA  |      |            | 0.4   | Vdc   |
| Output high level open drain leakage current (SMBALERT#) | SMBALERT, 3.6V  | 0    |            | 10    | uA    |
| PMBus Operating frequency range                          |   |      | 100 or 400 |       | kHz   |
| Measurement System Characteristics                       |   |      |            |       |       |
| Output current reading accuracy                          | 10A <iout<30a< td=""><td>-5</td><td></td><td>+4</td><td>%</td></iout<30a<>      | -5   |            | +4    | %     |
| Output current reading accuracy                          | 0.56A <iout<10a< td=""><td>-1.4</td><td></td><td>2.7</td><td>Α</td></iout<10a<> | -1.4 |            | 2.7   | Α     |
| VOUT reading accuracy                                    |   |      | 1          |       | %     |
| VIN reading accuracy                                     |   | -2   |            | +2    | Vdc   |
| Temperature sense range                                  |   | 0    |            |       | °C    |
| Temperature reading accuracy                             |   | -5   |            | +5    | °C    |


#### **PIN DEFINATION**

| Pin# | Name    | Function                   | Pin# | Name     | Function   |
|------|---------|----------------------------|------|----------|--|
| 1    | VIN(+)  |                            | 7    | C2       | PGOOD pin, and this pin also could be configured as secondary on/off control pin |
| 2    | ON/OFF  | Primary on/off control pin | 8    | SIG_GND  | Signal ground  |
| 3    | VIN(-)  |                            | 9    | DATA     | PMBus data line  |
| 4    | VOUT(-) |                            | 10   | SMBALERT | PMBus SMBAlert line  |
| 5    | TRIM    | Trim note 1                | 11   | CLOCK    | PMBus clock line   |
| 6    | VOUT(+) |                            | 12   | ADDR1    | ADDR1 pin sets the high order digit of the address.                              |
|      |         |                            | 13   | ADDR0    | ADDR0 pin sets the low order digit of the address.                               |


Note1: see the last page.



## SIMPLIFIED APPLICATION CIRCUIT

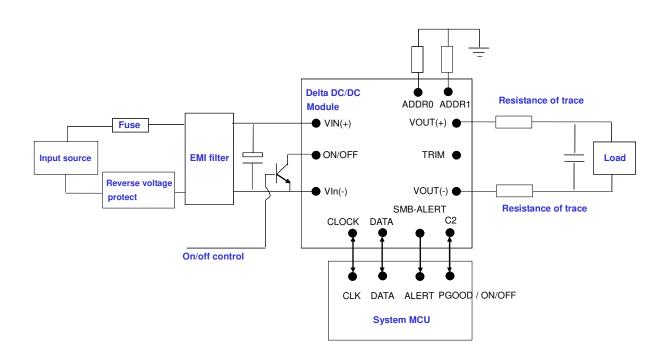



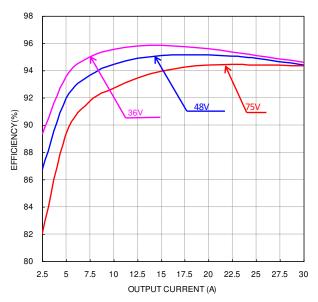

**Figure 1:** Efficiency vs. load current for minimum, nominal, and maximum input voltage at 25°C.


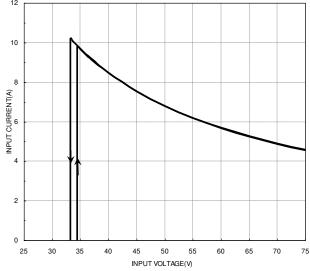



Figure 3: Typical full load input characteristics at room temperature.




**Figure 2:** Power loss vs. load current for minimum, nominal, and maximum input voltage at 25°C.

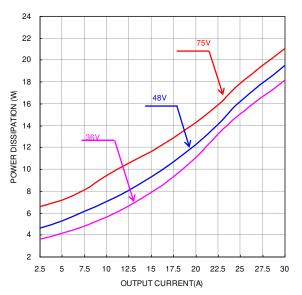

#### For Negative Remote ON/OFF Logic

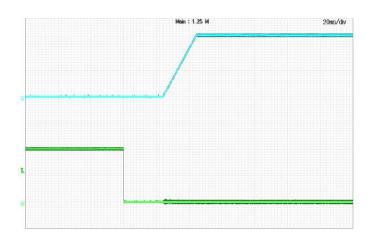


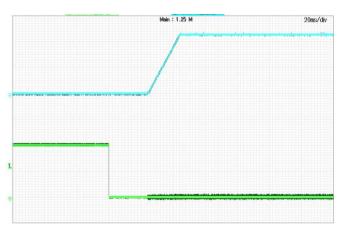



**Figure 4:** Turn-on transient at zero load current) (20ms/div). Top Trace: Vout; 5V/div; Bottom Trace: ON/OFF input: 5V/div.

Figure 5: Turn-on transient at full rated load current (20ms/div). Top Trace: Vout:5V/div; Bottom Trace: ON/OFF input:5V/div.

#### For Input Voltage Start up

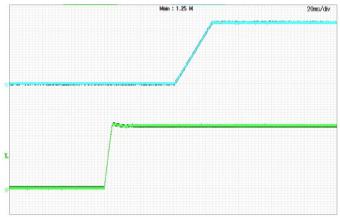




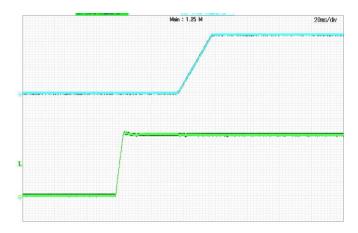

**Figure 7**: Turn-on transient at full rated load current (20 ms/div). Top Trace: Vout; 5V/div; Bottom Trace: input voltage: 30V/div.



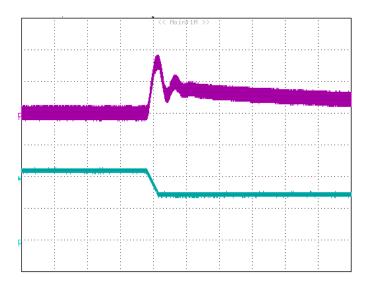



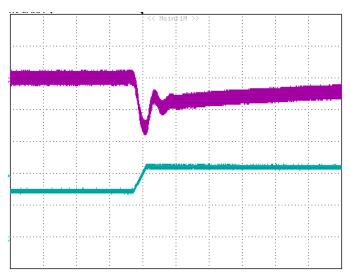


Figure 8: Output voltage response to step-change in load current (75%-50% of Io, max; di/dt = 0.1A/μs, Vin=48V). Load cap:220μF, electrolytic capacitor; 10μF, tantalum capacitor and 1μF ceramic capacitor. Top Trace: Vout (200mV/div, 200us/div); Bottom Trace: Io (10A/div, 200us/div). Scope measurement should be made using a BNC cable (length shorter than 20 inches). Position the load between 51 mm to 76 mm (2 inches to 3 inches) from the module.

Figure 9: Output voltage response to step-change in load current (50%-75% of Io, max; di/dt = 0.1A/μs, Vin=48V). Load cap: 220μF, electrolytic capacitor;10μF, tantalum capacitor and 1μF ceramic capacitor. Top Trace: Vout (200mV/div, 200us/div); Bottom Trace: Io (10A/div, 200us/div). Scope measurement should be made using a BNC cable (length shorter than 20 inches). Position the load between 51 mm to 76 mm (2 inches to 3 inches) from the module.

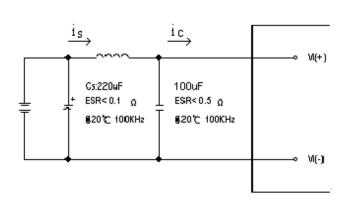

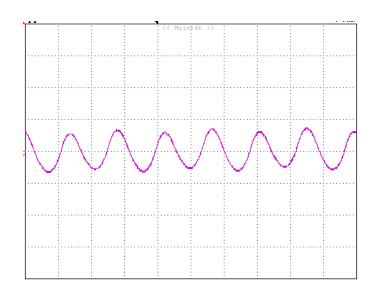


**Figure 10:** Test set-up diagram showing measurement points for Input Terminal Ripple Current and Input Reflected Ripple Current.

Note: Measured input reflected-ripple current with a simulated source Inductance (LTEST) of 12 µH. Capacitor Cs offset possible battery impedance. Measure current as shown above.

**Figure 11:** Input Terminal Ripple Current, i<sub>c</sub>, at full rated output current and nominal input voltage with 12μH source impedance and 100μF electrolytic capacitor (1A/div, 2us/div).



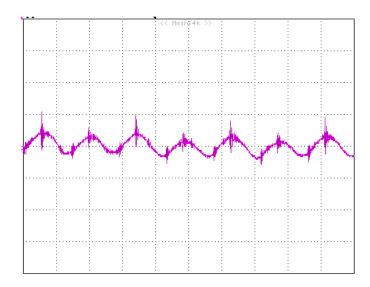

Copper Strip

Vo(+)


SCOPE

RESISTIVE
LOAD

220uF(Electrolytic)+18uF
(Tantalun)+1uF(Ceramic)

**Figure 12:** Input reflected ripple current, i<sub>s</sub>, through a 12μH source inductor at nominal input voltage and rated load current (20mA/div, 2us/div).

Figure 13: Output voltage noise and ripple measurement test setup.

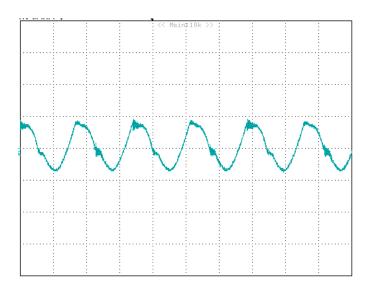

14
12
10
(N) 8
8
17
10
0
5
10
15
20
25
30
35
40
OUTPUT CURRENT(A)

**Figure 14:** Output voltage ripple at nominal input voltage and rated load current (lo=30A)(50 mV/div, 2us/div) Loadcapacitance:220uF(Electrolytic)+10uF(Tantalum)+1uF(Ce ramic) and min Co. Bandwidth: 20 MHz.

Figure 15: Output voltage vs. load current showing typical current limit curves and converter shutdown points.



#### **DESIGN CONSIDERATIONS**


#### **Input Source Impedance**

The impedance of the input source connecting to the DC/DC power modules will interact with the modules and affect the stability. A low ac-impedance input source is recommended. If the source inductance is more than a few  $\mu$ H, we advise adding a 100 $\mu$ F electrolytic capacitor (ESR < 0.2  $\Omega$  at 100 kHz) mounted close to the input of the module to improve the stability.


#### **Layout and EMC Considerations**

Delta's DC/DC power modules are designed to operate in a wide variety of systems and applications. For design assistance with EMC compliance and related PWB layout issues, please contact Delta's technical support team. Below is the reference design for an input filter and tested result which can meet class B in CISSPR 22.

#### **Schematic:**

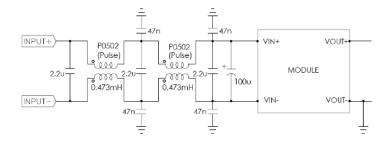

#### Test result:

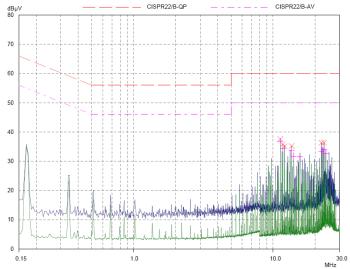

25C, 48Vin, full load, Green line is average peak mode and blue line is quasi mode.

#### **Safety Considerations**

The power module must be installed in compliance with the spacing and separation requirements of the end-user's safety agency standard, i.e., UL60950-1, CSA C22.2 NO. 60950-1 2nd, IEC 60950-1 2nd: 2005,EN 60950-1 2nd: 2006+A11+A1: 2010, if the system in which the power module is to be used must meet safety agency requirements.

When the input source is SELV, the power module meets SELV (safety extra-low voltage) requirements. If the input source is a hazardous voltage which is greater than 60 Vdc and less than or equal to 75 Vdc, for the module's output to meet SELV requirements, all of the following must be met:

- The input source must be insulated from the ac mains by reinforced or double insulation.
- The input terminals of the module are not operator accessible.
- One Vout pin is grounded.
- A SELV reliability test is conducted on the system where the module is used, in combination with the module, to ensure hazardous voltage does not appear at the module's output.

When installed into a Class II equipment (without grounding), spacing consideration should be given to the end-use installation, as the spacing between the module and mounting surface have not been evaluated.

The power module has extra-low voltage (ELV) outputs when all inputs are ELV.

This power module is not internally fused. To achieve optimum safety and system protection, an input line fuse is highly recommended. The safety agencies require a normal-blow fuse with 20A maximum rating to be installed in the ungrounded lead. A lower rated fuse can be used based on the maximum inrush transient energy and maximum input current.

#### **Soldering and Cleaning Considerations**

Post solder cleaning is usually the final board assembly process before the board or system undergoes electrical testing. Inadequate cleaning and/or drying may lower the reliability of a power module and severely affect the finished circuit board assembly test. Adequate cleaning and/or drying is especially important for un-encapsulated and/or open frame type power modules. For assistance on appropriate soldering and cleaning procedures, please contact Delta's technical support team.



#### **DESIGN CONSIDERATIONS**

#### **FEATURES DESCRIPTIONS**

#### **Over-Power Protection**

The modules include an internal output over-power protection circuit, which will endure power limiting for an unlimited duration during output overload. If the output current exceeds the OCP set points, the modules will automatically shut down (hiccup mode).

The modules will try to restart after shutdown. If the overload condition still exists, the modules will shut down again. This restart trial will continue until the overload condition is corrected.

The OCP function could be changed via PMBUS. The command related to OCP function are IOUT\_OC\_WARN\_LIMIT, IOUT\_OC\_FAULT\_LIMIT and IOUT\_OC\_FAULT\_RESPONSE.

#### **Over-Temperature Protection**

The over-temperature protection consists of circuitry that provides protection from thermal damage. If the temperature exceeds the over-temperature threshold, the modules will shut down, and enter the auto-restart mode.

For auto-restart mode, the module will monitor the module temperature after shutdown. Once the temperature of module is decreased by an OTP hysteresis, the module will restart.

The OTP function could be changed via PMBUS. The command related to OTP function are OT \_WARN\_LIMIT, OT\_FAULT\_LIMIT and OT\_FAULT \_RESPONSE.

#### **Input Under Voltage Lockout**

When Vin exceeds Vin turn on threshold, the module output is enabled, when Vin falls below Vin turn off threshold, the module output is disabled. Vin turn on threshold and Vin turn off threshold can be reconfigured via the PMBus interface.

The Vin UVP function could be changed via PMBUS. The command related to Vin UVP function are VIN\_ON and VIN OFF.

#### **Output Overvoltage Protection**

The module can detect and respond to output overvoltage conditions. If the overvoltage condition causes the output voltage to rise above the limit in the Specifications Table, the module will shut down.

The modules will try to restart after shutdown. If fault condition still exists, the modules will shut down again. This restart trial will continue until the fault condition is corrected.

The Vo OVP function could be changed via PMBUS. The command related to Vo OVP function are VOUT\_OV\_WARN\_LIMIT, VOUT\_OV\_FAULT\_LIMIT and VOUT\_OV\_FAULT\_RESPONSE.

#### **Input Over Voltage Lockout**

The module can detect and respond to input overvoltage conditions. If the input voltage rises above the limit in the Specifications Table, the module will shut down.

The module is factory default configured for auto-restart operation. The auto-restart feature continually monitors the input voltage and will restart the module when the level falls 6V below the Input OVP level.

The Vin OVP function could be changed via PMBUS. The command related to Vin OVP function are VIN\_OV\_FAULT\_LIMIT and VIN\_OV\_FAULT\_RESPONSE

#### Remote ON/OFF (ENABLE)

The remote ON/OFF (ENABLE) feature on the module is negative logic. The low logic turns the modules on. And the high logic, or floating, turns the modules off.

Remote ON/OFF (ENABLE) can be controlled by an external switch between the on/off terminal and the Vin(-) terminal. The switch can be an open collector or open drain.



For the negative logic, if the remote ON/OFF (ENABLE) feature is not used, please maintain the ENABLE pin to Vin(-).

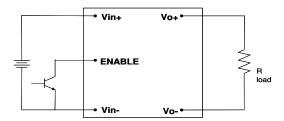


Figure 16: Remote ON/OFF (ENABLE) implementation

#### Secondary Remote On/Off

Reference to the Vo(-) terminal, there is a C2 pin. The default configuration is set to PGOOD function. And such pin can be reconfigured as secondary remote on/off pin by the PMBus interface including either negative or positive logic. Negative logic turns the module on during a logic low and off during a logic high. Positive logic turns the modules on during a logic high and off during a logic low. The secondary remote on/off can be controlled by an external switch between the on/off terminal and the Vo(-) terminal. The switch can be an open collector or open drain.

MFR\_C1\_C2\_ARA\_CONFIG, MFR\_ C2\_LOGIC, MFR\_PGOOD\_POLARITY are used to config C2 pin function.

#### **Configurable Control Pins**

The module contains one configurable control pins C2, referenced to the module secondary SIG\_GND. See Mechanical Views for pin locations. The following table list the default factory configurations for the functions assigned to the pin.

| Pin Designation/Function C2 | Configuration       |
|-----------------------------|---------------------|
| Power Good                  | Factory Default     |
| On/Off                      | Optional Vias PMBUS |

#### Output Voltage Adjustment (TRIM) note1

To increase or decrease the output voltage set point, connect an external resistor between the TRIM pin and either the Vo(+) or Vo(-). The TRIM pin should be left open if this feature is not used.

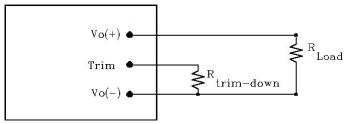



Figure 17: Circuit configuration for trim-down (decrease output voltage)

If the external resistor is connected between the TRIM and Vo (-) pins, the output voltage set point decreases (Fig. 17). The external resistor value required to obtain a percentage of output voltage change  $^{\triangle}\%$  is defined as:

$$Rtrim\_down = \left[\frac{511}{\Delta} - 10.2\right] (K\Omega)$$

Ex. When Trim-down -10% (12V×0.9=10.8V)

$$Rtrim\_down = \left\lceil \frac{511}{10} - 10.2 \right\rceil (K\Omega) = 40.9 (K\Omega)$$

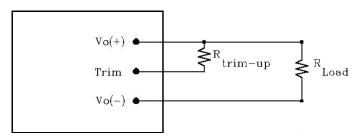

**Figure 18:** Circuit configuration for trim-up (increase output voltage)

If the external resistor is connected between the TRIM and Vo (+) the output voltage set point increases (Fig.18) The external resistor value required to obtain a percentage output voltage change  ${}^{\triangle}$ % is defined as:

$$Rtrim_{-}up = \frac{5.11\text{Vo}(100 + \Delta)}{1.225\Delta} - \frac{511}{\Delta} - 10.2(K\Omega)$$

Ex. When Trim-up +10% (12V×1.1=13.2V)

$$Rtrim\_up = \frac{5.11 \times 12 \times (100 + 10)}{1.225 \times 10} - \frac{511}{10} - 10.2 = 489.3 (K\Omega)$$

Please note 11.5~12.5V trim range was disabled. To get more margin, please use≤11.4V for trim down and ≥12.6V for trim up application.



Care should be taken to ensure that the maximum output power of the module remains at or below the maximum rated power.

Note1: see the last page.

#### Power Good, PG

The module provides a Power Good (PG) signal which is provided by the IC inside module, voltage level 3.3V, to indicate that the output voltage is within the normal output voltage range of the power module. The PG signal will be de-asserted to a low state if any condition such as over temperature, overcurrent or loss of regulation occurs that would result in the output voltage going below the normal voltage range value.

The Vout PG function could be changed via PMBUS. The command related to Vout PG function are POWER\_GOOD\_ON and POWER\_GOOD\_OFF.

E-mail: <a href="mailto:dcdc@deltaww.com/dcdc">dcdc@deltaww.com/dcdc</a>
<a href="mailto:http://www.deltaww.com/dcdc">http://www.deltaww.com/dcdc</a>



#### THERMAL CONSIDERATIONS


Thermal management is an important part of the system design. To ensure proper, reliable operation, sufficient cooling of the power module is needed over the entire temperature range of the module. Convection cooling is usually the dominant mode of heat transfer.

Hence, the choice of equipment to characterize the thermal performance of the power module is a wind tunnel.

#### **Thermal Testing Setup**

Delta's DC/DC power modules are characterized in heated vertical wind tunnels that simulate the thermal environments encountered in most electronics equipment. This type of equipment commonly uses vertically mounted circuit cards in cabinet racks in which the power modules are mounted.

The following figure shows the wind tunnel characterization setup. The power module is mounted on a 185mmX185mm,70µm (2Oz),6 layers' test PWB and is vertically positioned within the wind tunnel. The space between the neighboring PWB and the top of the power module is constantly kept at 6.35mm (0.25").

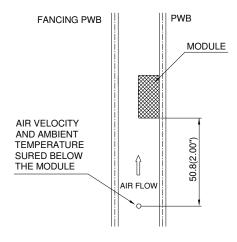


Note: Wind Tunnel Test Setup Figure Dimensions are in millimeters and (Inches)

Figure 19: Wind tunnel test setup

#### **Thermal Derating**

Heat can be removed by increasing airflow over the module. To enhance system reliability, the power module should always be operated below the maximum operating temperature. If the temperature exceeds the maximum module temperature, reliability of the unit may be affected.


# THERMAL CURVES (WITH HEAT SPREADER)

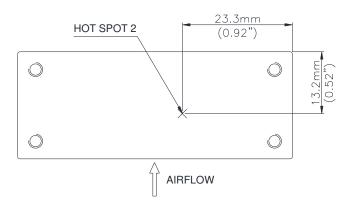

#### Input

## Output

**Figure 20:** \* Hot spot temperature measured points, the allowed maximum hot spot temperature is defined at  $100 \, ^{\circ}$ C.

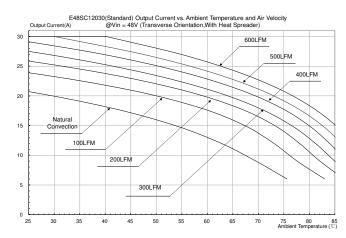

**Figure 21:** Output current vs. ambient temperature and air velocity @Vin=48V(Transverse Orientation, airflow from Vinto Vin+, with heat spreader)



#### **DIGITAL FEATURE DESCRIPTIONS**

The module has a digital PMBus interface to allow the module to be monitored, controlled and configured by the system. The module supports 4 PMBus signal lines, Data, Clock, SMBALERT (optional), Control (C2 pin, optional), and 2 Address line Addr0 and Addr1. More detail PMBus information can be found in the PMB Power Management Protocol Specification, Part I and part II, revision 1.2; which is shown in http://pmbus.org . Both 100kHz and 400kHz bus speeds are supported by the module. Connection for the PMBus interface should be following the High Power DC specifications given in section 3.1.3 in the SMBus specification V2.0 or the Low Power DC specifications in section 3.1.2. The complete SMBus specification is shown in http://smbus.org.

The module supports the Packet Error Checking (PEC) protocol. It can check the PEC byte provided by the PMBus master, and include a PEC byte in all message responses to the master. And the module also can communicate with the master that does not implement the PEC mechanism.

SMBALERT protocol is also supported by the module. SMBALERT line is also a wired-AND signal; by which the module can alert the PMBUS master via pulling the SMBALERT pin to an active low. There is only one way that the master and the module response to the alert of SMBALERT line.

This way is for the module used in a system that does not support Alert Response Address (ARA). The module is to retain its resistor programmed address, when it is in an ALERT active condition. The master will communicate with the slave module using the programmed address, and using the various READ\_STATUS commands to find who cause for the SMBALERT. The CLEAR\_FAULTS command will clear the SMBALERT.




The module contains a data flash used to store configuration settings, which will not be programmed into the device data flash automatically. The STORE\_DEFAULT\_ALL command must be used to commit the current settings are transfer from RAM to data flash as device defaults.

#### PMBUS Addressing

The Module has flexible PMBUS addressing capability. When connect different resistor from Addr0 and Addr1 pin to GND pin, 64 possible addresses can be acquired. The address is in the form of octal digits; Each pin offers one octal digit, and then combine together to form the decimal address as shown in below.

Address = 8 \* ADDR1 + ADDR0

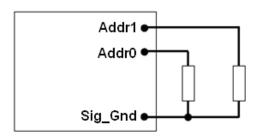


Corresponded to each octal digit, the requested resistor values are shown in below, and +/-1% resistors accuracy can be accepted. If there are any resistances exceeding the requested range, address 127 will be return. 0-12 and 40, 44, 45, and 55 in decimal address can't be used, since they are reserved according to the SMBus specifications, and which will also return address 127.

| Octal digit | Resistor(Kohm) |
|-------------|----------------|
| 0           | 10             |
| 1           | 15.4           |
| 2           | 23.7           |
| 3           | 36.5           |
| 4           | 54.9           |
| 5           | 84.5           |
| 6           | 130            |
| 7           | 200            |

#### **PMBus Data Format**

The module receives and report date in LINEAR format. The Exponent of the data words is fixed at a reasonable value for the command; altering the exponent is not supported. DIRECT format is not supported by the module.

For commands that set or report any voltage thresholds related to the output voltage, the module supports the linear data format consisting of a two-byte value with a 16-bit, unsigned mantissa, and a fixed exponent of -12. The format of the two data bytes is shown below:



The equation can be written as:

Vout = Mantissa x 2(-12)


For example, considering set Vout to 12V by VOUT\_COMMAND, the read/write data can be calculated refer to below process:

Mantissa =  $Vout/2^{(-12)} = 12/2^{(-12)} = 49152$ ;

Converter the calculated Mantissa to hexadecimal 0xC000.



For commands that set or report all other thresholds, including input voltages, output current, temperature, time and frequency, the supported linear data format is a two-byte value with: an 11 bit, two's complement mantissa, and a 5 bit, two's complement exponent (scaling factor). The format of the two data bytes is shown as in below.

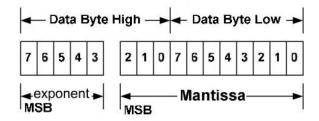

The equation can be written as:

Value = Mantissa x 2<sup>(exponent)</sup>

For example, considering set the turn on threshold of input under voltage lockout to 34V by VIN\_ON command; the read/write data can be calculated refer to below process:

Get the exponent of Vin, -3; whose binary is 11101 Mantissa = $Vin/2^{(-3)}$ =34/2<sup>(-3)</sup>=272;

Converter the calculated Mantissa to hexadecimal 110, then converter to binary 00100010000; Combine the exponent and the mantissa, 11101 and 00100010000; Converter binary 1110100100010000 to hexadecimal E910.



#### **SUPPORTED PMBUS COMMANDS**

The main PMBus commands described in the PMBus 2.0 specification are supported by the module. Partial PMBus commands are fully supported; Partial PMBus commands have difference with the definition in PMBus 2.0 specification. All the supported PMBus commands are detail summarized in below table

| Command             | Command<br>Code | Command description  | Transf<br>-er<br>type | Compatible with standard PMBUS or not?         | Data<br>Format | Default<br>value | Range<br>limit | Data<br>units | Expon<br>-ent | Note   |
|---------------------|-----------------|--|-----------------------|--|----------------|------------------|----------------|---------------|---------------|--|
| OPERATION           | 0x01            | Turn the module on or off by PMBUS command                         | R/W<br>byte           | Refer to below description;                    | Bit field      | 0x80             | /              | /             | /             | /  |
| ON_OFF_CONFIG       | 0x02            | Configures the combination of primary on/off pin and PMBUS command | R/W<br>byte           | Not support turn off delay and fall time setup | Bit field      | 0x1D             | /              | /             | /             | 0x1D (Neg Logic); 0x1F (Pos Logic);                                      |
| CLEAR_FAULTS        | 0x03            | Clear any fault bits that have been set                            | Send<br>byte          | Yes  | /              | /                | /              | /             | /             | /  |
| STORE_DEFAULT_ALL   | 0x11            | Stores operating parameters from RAM to data flash                 | Send<br>byte          | Yes  | 1              | /                | /              | /             | /             | This command is effective to the parameter of all command in this table. |
| RESTORE_DEFAULT_ALL | 0x12            | Restores operating parameters from data flash to RAM               | Send<br>byte          | Yes  | /              | /                | /              | /             | /             | This command can't be issued when the power unit is running.             |
| VOUT_MODE           | 0x20            | Read Vo data format  | Read<br>byte          | Yes  | mode+exp       | 0x14             | /              | /             | /             | /  |
| VOUT_COMMAND        | 0x21            | Set the output voltage normal value                                | R/W<br>word           | Yes  | Vout Linear    | 12               | 8<br>~13.2     | Volts         | -12           | /  |
| VOUT_MARGIN_HIGH    | 0x25            | Set the output voltage margin high value                           | R/W<br>word           | Yes  | Vout Linear    | 12.6             | 10.2           | Volts         | -12           | /  |
| VOUT_MARGIN_LOW     | 0x26            | Set the output voltage margin low value                            | R/W<br>word           | Yes  | Vout Linear    | 11.4             | 10.2<br>~13    | Volts         | -12           | /  |
| FREQUENCY_SWITCH    | 0x33            | Set the switching frequency  | R/W<br>word           | Yes  | Frequency      | 175              | 140 ~<br>180   | KHz           | -2            | Write command need module off condition                                  |



| Command                    | Command<br>Code | Command description   | Transf<br>-er<br>type | Compatible with standard PMBUS or not? | Data<br>Format | Default<br>value |            | Data<br>units |     | Note  |
|----------------------------|-----------------|---|-----------------------|--|----------------|------------------|------------|---------------|-----|---|
| VIN_ON                     | 0x35            | Set the turn on voltage<br>threshold of Vin under<br>voltage lockout      | R/W<br>word           | Yes                                    | Vin<br>Linear  | 35               | 33~36      | V             | -3  | VIN_ON should be higher than VIN_OFF                                  |
| VIN_OFF                    | 0x36            | Set the turn off voltage<br>threshold of Vin under<br>voltage lockout     | R/W<br>word           | Yes                                    | Vin<br>Linear  | 33               | 31~34      | V             | -3  | VIN_ON should be higher than VIN_OFF                                  |
| VOUT_OV_FAULT_L            | 0x40            | Set the output overvoltage fault threshold.                               | R/W<br>word           | Yes                                    | Vout<br>Linear | 15               | 11~16      | V             | -12 | Must be higher than the value of VOUT_COMMAND and VOUT_OV_WARN_LIMIT; |
| VOUT_OV_FAULT_<br>RESPONSE | 0x41            | Instructs what action to take in response to an output overvoltage fault. | Read<br>byte          | Refer to below description;            | Bit field      | 0xB8             | /          | N/A           | /   | Default Hiccup mode   |
| VOUT_OV_WARN_L             | 0x42            | Set a threshold causing an output voltage high warning.                   | R/W<br>word           | Yes                                    | Vout<br>Linear | 14               | 11~16      | >             | -12 | Must be the same or less than VOUT_OV_FAULT_LIMIT value               |
| IOUT_OC_FAULT_LI           | 0x46            | Set the output overcurrent fault threshold.                               | R/W<br>word           | Yes                                    | lout<br>Linear | 38               | 20~40      | Α             | -4  | Must be greater than IOUT_OC_WARN_LIMIT value                         |
| IOUT_OC_FAULT_R<br>ESPONSE | 0x47            | Instructs what action to take in response to an output overcurrent fault. | Read<br>byte          | Refer to below description;            | Bit field      | 0xF8             | /          | N/A           | /   | Default Hiccup mode   |
| IOUT_OC_WARN_LI            | 0x4A            | Set a threshold causing an output current high warning.                   | R/W<br>word           | Yes                                    | lout<br>Linear | 32               | 20~40      | Α             | -4  | Must be less than IOUT_OC_FAULT_LIMIT value                           |
| OT_FAULT_LIMIT             | 0x4F            | Set the over temperature fault threshold.                                 | R/W<br>word           | Yes                                    | TEMP<br>Linear | 125              | 25~14<br>0 | Deg.<br>C     | -2  | Must be greater than OT_WARN_LIMIT value                              |
| OT_FAULT_RESPO             | 0x50            | Instructs what action to take in response to an over temperature fault.   | Read<br>byte          | Refer to below description;            | Bit field      | 0xB8             | 1          | N/A           | /   | Default Hiccup mode   |



| Command                 | Comman<br>d Code | Command description   | Transf<br>-er type | Compatible with standard PMBUS or not? | Data<br>Format | Default<br>value | Range<br>limit | Data<br>units | Expon<br>-ent | Note                                       |
|-------------------------|------------------|---|--------------------|--|----------------|------------------|----------------|---------------|---------------|--|
| OT_WARN_<br>LIMIT       | 0x51             | Set a threshold causing a temperature high warning.   | R/W word           | Yes                                    | TEMP<br>Linear | 100              | 25~140         | Deg.C         | -2            | Must be less than OT_FAULT_LI MIT value    |
| VIN_OV_FA ULT_LIMIT     | 0x55             | Set the input overvoltage fault threshold.  | R/W word           | Yes                                    | Vin<br>Linear  | 100              | 48~110         | V             | -3            | Endure Transient (100V/100ms)              |
| VIN_OV_FA ULT_RESPO NSE | 0x56             | Instructs what action to take in response to an input overvoltage fault.                        | Read byte          | Refer to below description;            | Bit field      | 0XF8             | /              | N/A           | /             | Default Hiccup<br>mode                     |
| POWER_GO                | 0x5E             | Sets the output voltage at which the bit 3 of STATUS_WORD high byte should be asserted.         | R/W word           | Yes                                    | Vout<br>Linear | 11               | 8 ~13.2        | V             | -12           | Must be greater than POWER_GOO D_OFF value |
| POWER_GO                | 0x5F             | Sets the output voltage at which the bit 3 of STATUS_WORD high byte should be negated.          | R/W word           | Yes                                    | Vout<br>Linear | 9                | 8 ~13.2        | V             | -12           | Must be less than POWER_GOO D_ON value     |
| TON_DELAY               | 0x60             | Sets the time from a start condition is received until the output voltage starts to rise        | R/W word           | Yes                                    | Time<br>Linear | 20               | 5~500          | ms            | -1            | /  |
| TON_RISE                | 0x61             | Sets the time from the output starts to rise until the voltage has entered the regulation band. | R/W word           | Yes                                    | Time<br>Linear | 30               | 15~500         | ms            | -1            | 1  |
| STATUS_W<br>ORD         | 0x79             | Returns the information with a summary of the module's fault/warning                            | Read<br>word       | Refer to below description;            | Bit field      | 1                | /              | 1             | /             | /  |
| STATUS_VO<br>UT         | 0x7A             | Returns the information of the module's output voltage related fault/warning                    | R/W byte           | Refer to below description;            | Bit field      | /                | /              | /             | /             | /  |
| STATUS_IO UT            | 0x7B             | Returns the information of the module's output current related fault/warning                    | R/W byte           | Refer to below description;            | Bit field      | /                | /              | /             | /             | ,  |



| Command                | Comman<br>d Code | Command description  | Transf -er type | Compatible with standard PMBUS or not? | Data<br>Format             | Default<br>value | Range<br>limit | Data<br>units | Expon<br>-ent | Note  |
|------------------------|------------------|--|-----------------|--|----------------------------|------------------|----------------|---------------|---------------|---|
| STATUS_IN PUT          | 0x7C             | Returns the information of the module's input over voltage and under voltage fault | R/W byte        | Refer to below description;            | Bit field                  | /                | /              | /             | /             | /   |
| STATUS_TE MPERATUR E   | 0x7D             | Returns the information of the module's temperature related fault/warning          | R/W byte        | Refer to below description;            | Bit field                  | /                | /              | /             | /             | /   |
| STATUS_CM<br>L         | 0x7E             | Returns the information of the module's communication related faults.              | R/W byte        | Refer to below description;            | Bit field                  | /                | /              | /             | /             | /   |
| READ_VIN               | 0x88             | Returns the input voltage of the module  | Read            | Yes                                    | Vin<br>Linear              | /                | /              | V             | -3            | /   |
| READ_VOU               | 0x8B             | Returns the output voltage of the module   | Read<br>word    | Yes                                    | Vout<br>Linear             | /                | /              | ٧             | -12           | /   |
| READ_IOUT              | 0x8C             | Returns the output current of the module   | Read<br>word    | Yes                                    | lout<br>Linear             | /                | /              | А             | -4            | /   |
| READ_TEM PERATURE_ 1   | 0x8D             | Returns the module's hot spot temperature of the module                            | Read<br>word    | Yes                                    | TEMP<br>Linear             | /                | /              | Deg.C         | -2            | /   |
| PMBUS_RE<br>VISION     | 0x98             | Reads the revision of the PMBus  | Read byte       | Yes                                    | Bit field                  | 0x42             | /              | /             | /             | /   |
| MFR_C1_C2<br>_ARA_CONF | 0xE0             | Config C2 pin function   | R/W byte        | Refer to below description;            | Bit field                  | 0x00             | /              | /             | /             | 1   |
| MFR_C2_ Configure      | 0xE1             | Config C2 pin logic  | R/W byte        | Refer to below description;            | Bit field                  | 0x00             | /              | /             | /             | /   |
| MFR_PGOO  D  _POLARITY | 0xE2             | Config Power Good logic  | R/W byte        | Refer to below description;            | Bit field                  | 0x01             | /              | /             | /             | /   |
| MFR_SERIA<br>L         | 0x9E             | Reads the SN of module   | Read<br>block   | 1                                      | Total 11 ASCII charact ers | ,xxxxxxxx        | /              | 1             | /             | The SN number of module use 11 ASCII characters |



#### OPERATION [0x01]

| Bit number | Purpose                   | Bit Value | Meaning                   | Default<br>Settings,<br>0x80 |
|------------|---------------------------|-----------|---------------------------|------------------------------|
| 7:         | Enable/Disable the module | 1         | Output is enabled         | 1                            |
|            |                           | 0         | Output is disabled        |                              |
| 6:         | Reserved                  |           |                           | 0                            |
| 5:4        | Margins                   | 00        | No margin                 | 00                           |
|            |                           | 01        | Margin low(Act on Fault)  |                              |
|            |                           | 10        | Margin high(Act on Fault) |                              |
| 3:0        | Reserved                  |           |                           | 0000                         |

## VOUT\_OV\_FAULT\_RESPONSE [0x41]

| Bit number | Purpose            | Bit Value | Meaning   | Default<br>Settings,<br>0xB8 |
|------------|--------------------|-----------|---|------------------------------|
| 7:6        | Response settings  | 10        | Unit shuts down and responds according to the retry settings          | 10                           |
| 5:3        | Retry setting      | 111       | Unit continuously restarts while fault is present until commanded off | 111                          |
|            |                    | 000       | Unit does not attempt to restart on fault                             |                              |
| 2:0        | Delay time setting | 000       | No delay supported  | 000                          |

## IOUT\_OC\_FAULT\_RESPONSE [0x47]

| Bit number | Purpose            | Bit Value | Meaning   | Default<br>Settings, 0xF8 |
|------------|--------------------|-----------|---|---------------------------|
| 7:6        | Response settings  | 11        | Unit shuts down and responds according to the retry settings          | 11,                       |
| 5:3        | Retry settings     | 111       | Unit continuously restarts while fault is present until commanded off | 111                       |
|            |                    | 000       | Unit does not attempt to restart on fault                             |                           |
| 2:0        | Delay time setting | 000       | No delay supported  | 000                       |

## OT\_FAULT\_RESPONSE [0x50]

| Bit number | Purpose            | Bit Value | Meaning   | Default<br>Settings, 0x80 |
|------------|--------------------|-----------|---|---------------------------|
| 7:6        | Response settings  | 10        | Unit shuts down and responds according to the retry settings          | 10,                       |
| 5:3        | Retry settings     | 111       | Unit continuously restarts while fault is present until commanded off | 000                       |
|            |                    | 000       | Unit does not attempt to restart on fault                             |                           |
| 2:0        | Delay time setting | 000       | No delay supported  | 000                       |



## VIN\_OV\_FAULT\_RESPONSE [0x56]

| Bit number | Purpose            | Bit Value | Meaning   | Default<br>Settings, 0XF8 |
|------------|--------------------|-----------|---|---------------------------|
| 7:6        | Response settings  | 11        | Unit shuts down and responds according to the retry settings          | 11                        |
| 5:3        | Retry setting      | 111       | Unit continuously restarts while fault is present until commanded off | 111                       |
|            |                    | 000       | Unit does not attempt to restart on fault                             |                           |
| 2:0        | Delay time setting | 000       | No delay supported  | 000                       |

### STATUS\_WORD [0x79]

## High byte

| Bit number | Purpose  | Bit Value | Meaning     |
|------------|--|-----------|-------------|
| 7          | An output over voltage fault or warning            | 1         | Occurred    |
|            |  | 0         | No Occurred |
| 6          | An output over current fault or warning            | 1         | Occurred    |
|            |  | 0         | No Occurred |
| 5          | An input voltage fault, including over voltage and | 1         | Occurred    |
|            | undervoltage                                       | 0         | No Occurred |
| 4          | Reserved   |           |             |
| 3          | Power_Good   | 1         | is negated  |
|            |  | 0         | ok          |
| 2:0        | Reserved   |           |             |

#### Low byte

| Bit number | Purpose   | Bit Value | Meaning     |
|------------|---|-----------|-------------|
| 7          | Reserved  |           |             |
| 6          | OFF (The unit is not providing power to the output, | 1         | Occurred    |
|            | regardless of the reason)                           | 0         | No Occurred |
| 5          | An output over voltage fault                        | 1         | Occurred    |
|            |   | 0         | No Occurred |
| 4          | An output over current fault                        | 1         | Occurred    |
|            |   | 0         | No Occurred |
| 3          | An input under voltage fault                        | 1         | Occurred    |
|            |   | 0         | No Occurred |
| 2          | A temperature fault or warning                      | 1         | Occurred    |
|            |   | 0         | No Occurred |
| 1          | CML (A communications, memory or logic fault)       | 1         | Occurred;   |
|            |   | 0         | No Occurred |
| 0          | Reserved  |           |             |



## STATUS\_VOUT [0x7A]

| Bit number | Purpose                     | Bit Value | Meaning     |
|------------|-----------------------------|-----------|-------------|
| 7          | Output over voltage fault   | 1         | Occurred;   |
|            |                             | 0         | No Occurred |
| 6          | Output over voltage warning | 1         | Occurred;   |
|            |                             | 0         | No Occurred |
| 5:0        | Reserved                    |           |             |

## STATUS\_IOUT [0x7B]

| Bit number | Purpose                     | Bit Value | Meaning     |
|------------|-----------------------------|-----------|-------------|
| 7          | Output over current fault   | 1         | Occurred;   |
|            |                             | 0         | No Occurred |
| 6          | Reserved                    |           |             |
| 5          | Output over current warning | 1         | Occurred;   |
|            |                             | 0         | No Occurred |
| 4:0        | Reserved                    |           |             |

## STATUS\_INPUT [0x7C]

| Bit number | Purpose                   | Bit Value | Meaning     |
|------------|---------------------------|-----------|-------------|
| 7          | Input over voltage fault  | 1         | Occurred;   |
|            |                           | 0         | No Occurred |
| 6: 5       | Reserved                  |           |             |
| 4          | Input under voltage fault | 1         | Occurred;   |
|            |                           | 0         | No Occurred |
| 3:0        | Reserved                  |           | _           |

#### STATUS\_TEMPERATURE [0x7D]

| Bit number | Purpose                  | Bit Value | Meaning     |
|------------|--------------------------|-----------|-------------|
| 7          | Over temperature fault   | 1         | Occurred;   |
|            |                          | 0         | No Occurred |
| 6          | Over temperature warning | 1         | Occurred;   |
|            |                          | 0         | No Occurred |
| 5:0        | Reserved                 |           |             |

## STATUS\_CML [0x7E]

| Bit number | Purpose                              | Bit Value | Meaning     |
|------------|--------------------------------------|-----------|-------------|
| 7          | Invalid/Unsupported Command Received | 1         | Occurred;   |
|            |                                      | 0         | No Occurred |
| 6          | Invalid/Unsupported Data Received    | 1         | Occurred;   |
|            |                                      | 0         | No Occurred |
| 5          | Packet Error Check Failed            | 1         | Occurred;   |
|            |                                      | 0         | No Occurred |
| 4:0        | Reserved                             |           |             |



## MFR\_C1\_C2\_ARA\_CONFIG [0xE0]

| Bit number | Purpose           | Bit Value | Meaning                        |
|------------|-------------------|-----------|--------------------------------|
| 7:5        | Reserved          | 000       | Reserved                       |
| 4          | ARA               | 0         | ARA not functional, module     |
|            |                   |           | remains at resistor programmed |
|            |                   |           | address when SMBLAERT is       |
|            |                   |           | asserted                       |
| 3:0        | PIN Configuration | 0000      | C2 pin: POWER_GOOD             |
|            |                   | 0010      | C2 pin: ON/OFF (Secondary)     |

#### MFR\_ C2\_Configure [0xE1]

| Bit number | Purpose                     | Bit Value | Meaning  |
|------------|-----------------------------|-----------|--|
| 7:2        | Reserved                    | 000000    | Reserved   |
| 1          | ON/OFF Configuration        | 0         | Secondary side on/off pin state when mapped to C2 is ignored |
|            |                             | 1         | AND – Primary and Secondary side on/off                      |
| 0          | Secondary Side ON/OFF Logic | 0         | Negative Logic (Low Enable: Input < 0.8V wrt Vout(-)         |
|            |                             | 1         | Positive Logic (High Enable:<br>Input > 2.0V wrt Vout(-)     |

#### MFR\_PGOOD\_POLARITY [0xE2]

| Bit number | Purpose          | Bit Value | Meaning              |
|------------|------------------|-----------|----------------------|
| 7:1        | Reserved         | 0000000   | Reserved             |
| 0          | Power Good Logic | 0         | Negative PGOOD logic |
|            |                  | 1         | Positive PGOOD logic |


DS\_E48SC12030\_05212019

E-mail: dcdc@deltaww.com
http://www.deltaww.com/dcdc



#### **MECHANICAL DRAWING**

\*For modules with through-hole pins and the optional heat spreader, they are intended for wave soldering assembly onto system boards, please do not subject such modules through reflow temperature profile.

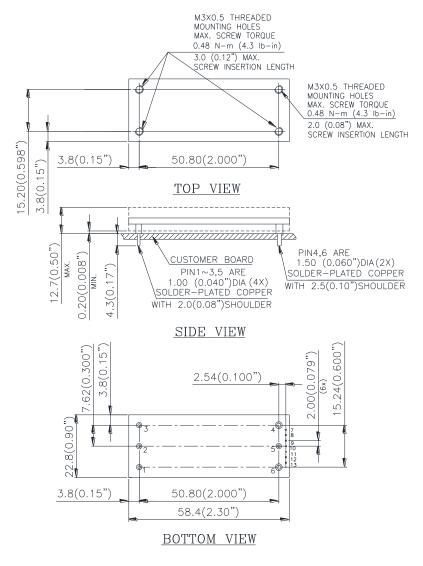

| Pin# | Function | D_pin  | Pin# | Function | D_pin |  |
|------|----------|--------|------|----------|-------|--|
| 1    | VIN(+)   | Ø1.00  | 7    | C2       | SQ0.5 |  |
| 2    | ON/OFF   | Ø1.00  | 8    | SIG_GND  | SQ0.5 |  |
| 3    | VIN(-)   | Ø1.00  | 9    | DATA     | SQ0.5 |  |
| 4    | VOUT(-)  | ø1.50  | 10   | SMBALERT | SQ0.5 |  |
| 5    | TRIM     | Ø1.00  | 11   | CLK      | SQ0.5 |  |
| 6    | VOUT(+)  | ø 1.50 | 12   | ADDR1    | SQ0.5 |  |
|      |          |        | 13   | ADDRO    | SQ0.5 |  |

NOTES


DIMENSIONS ARE IN MILLIMETERS AND (INCHES)
TOLERANCES: X.Xmm±0.5mm(X.XX in.±0.02 in.)
X.XXmm±0.25mm(X.XXX in.±0.010 in.)

#### **Pin Specification:**

Pins 1-3, 5 Pins 4,6 Pins 7-13 1.00mm (0.040") diameter (All pins are copper with matte Tin plating over Nickel under plating) 1.50mm (0.059") diameter (All pins are copper with matte Tin plating over Nickel under plating) SQ 0.50mm(0.020") ( All pins are copper with gold flash plating)



#### **RECOMMENDED PAD LAYOUT**

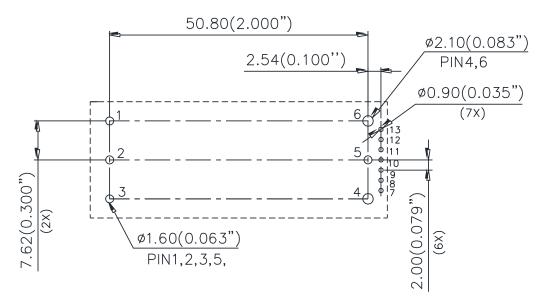

RECOMMENDED P.W.B. PAD LAYOUT

| Pin# | Function | Pin# | Function |
|------|----------|------|----------|
| 1    | VIN(+)   | 7    | C2       |
| 2    | ON/OFF   | 8    | SIG_GND  |
| 3    | VIN(-)   | 9    | DATA     |
| 4    | VOUT(-)  | 10   | SMBALERT |
| 5    | TRIM     | 11   | CLK      |
| 6    | VOUT(+)  | 12   | ADDR1    |
|      |          | 13   | ADDR0    |

NOTES:

DIMENSIONS ARE IN MILLIMETERS AND (INCHES)

TOLERANCES: X.Xmm±0.5mm(X.XX in.±0.02 in.)

X.XXmm±0.25mm(X.XXX in.±0.010 in.)



| PART NUMBERING SYSTEM |         |            |         |           |         |          |            |              |             |                       |             |                  |
|-----------------------|---------|------------|---------|-----------|---------|----------|------------|--------------|-------------|-----------------------|-------------|------------------|
| E                     | 48      | S          | С       | 120       | 30      | N        | R          | F            | н           |                       |             |                  |
| Form                  | Input   | Number     | Product | Output    | Output  | ON/OFF   | Pin        |              | Option Code |                       |             |                  |
| Factor                | Voltage | of         | Series  | Voltage   | Current | Logic    | Length     |              |             |                       |             |                  |
|                       |         | Outputs    |         |           |         |          |            |              |             |                       |             |                  |
| E -                   | 48 -    | S - Single | C -     | 120 - 12V | 30A     | N -      | N - 0.145" | F - RoHS 6/6 |             | PMBUS<br>pin(7~13pin) | Trim<br>pin | Heat<br>spreader |
| Eighth                | 36V~75V |            | Series  |           |         | Negative | R - 0.170" | (Lead Free)  | С           | No                    | Yes         | Yes              |
| Brick                 |         |            |         |           |         | P -      | K - 0.110" |              | Н           | Yes                   | Yes         | Yes              |
|                       |         |            |         |           |         | Positive | T - 0.220" |              | E           | No                    | No          | Yes              |
|                       |         |            |         |           |         |          |            |              | I           | Yes                   | No          | Yes              |

| MODEL LIST     |         |     |     |                   |       |  |  |  |
|----------------|---------|-----|-----|-------------------|-------|--|--|--|
| MODEL NAME     | INP     | IJΤ | оит | EFF @<br>100%LOAD |       |  |  |  |
| E48SC12030NRFH | 36V~75V | 12A | 12V | 30A               | 94.5% |  |  |  |

<sup>\*</sup> For modules with through-hole pins and the optional heatsink, they are intended for wave soldering assembly onto system boards; please do not subject such modules through reflow temperature profile.

Note1: If use VOUT\_COMMAND of PMBUS to trim Vout set point, then the function of trim pin(5 pin) will be disabled immediately. And if need enable the function of trim pin(5pin) to trim Vout set point again, should turn off and turn on the input voltage of module to restart module.

CONTACT: www.deltaww.com/dcdc

USA: Telephone:

East Coast: 978-656-3993 West Coast: 510-668-5100 Fax: (978) 656 3964 Email: dcdc@deltaww.com

Europe:

Phone: +31-20-655-0967 Fax: +31-20-655-0999 Asia & the rest of world:

Telephone: +886 3 4526107 ext 6220~6224

Fax: +886 3 4513485

#### WARRANTY

Delta offers a two (2) year limited warranty. Complete warranty information is listed on our web site or is available upon request from Delta.

Information furnished by Delta is believed to be accurate and reliable. However, no responsibility is assumed by Delta for its use, nor for any infringements of patents or other rights of third parties, which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Delta. Delta reserves the right to revise these specifications at any time, without notice.