### DESCRIPTION

Demonstration Circuit 1189 is a high efficiency USB power manager with PowerPath<sup>TM</sup> control and Liion/Polymer battery charger featuring the LTC<sup>®</sup>4088-1. The LTC4088-1 includes a synchronous switching input regulator, a full-featured battery charger and an ideal diode. Designed specifically for USB applications, the LTC4088-1's switching regulator automatically limits its input current to either 100mA, 500mA or 1A for wallpowered applications via logic control.

The switching input stage provides power to VOUT where power sharing between the application circuit and the battery charger is managed. Charge current is automatically reduced to maintain a regulated 3.6V VOUT during low battery conditions. As the battery is charged, VOUT tracks VBAT for high efficiency charging. This feature allows the LTC4088-1 to provide more power to the application and eases thermal issues in constrained applications.

An ideal diode ensures that system power is available from the battery when the input current limit is reached or if the USB or wall supply is removed. The external P-channel MOSFET supplements the internal ideal diode by reducing  $R_{on}$  and increasing efficiency.

LTC4088-1

A CHRG LED indicates four possible states of the battery charger. Charging is indicated when the LED is steady-ON. Not charging is indicated by a steady-OFF. A NTC fault is indicated by a slow blinking rate (1.5Hz) and a bad battery is indicated by a fast blinking rate (6.1Hz).

The LTC4088-1 is available in the low profile 14-Lead 4mm  $\times$  3mm  $\times$  0.75mm DFN surface mount package.

# Design files for this circuit board are available. Call the LTC factory.

▲7, LTC and LT are registered trademarks of Linear Technology Corporation. PowerPath is a trademark of Liner Technology Corporation.

Input Voltage Range, VBUS	4.35V to 5.5V
VOUT	3.5V to 4.7V (Mode and load dependent)
3.3V	3.3V (Load and VOUT dependent)
Output Float Voltage V <sub>BAT</sub> (constant voltage mode)	4.2V
Output Charge Current I <sub>BAT</sub> (constant current mode)	0.5A ( $R_{PROG}$ equals 2.00K $\Omega$ )

#### Table 1. Typical Specifications (25°C)

### **QUICK START PROCEDURE**

Refer to Table 1 for a listing of the inputs and outputs of the 1189 Demo Circuit. Demo Circuit 1189 is best evaluated using a Li-Ion/Polymer battery. When using a battery simulator for evaluation, oscillations must be verified with a real battery at the same conditions because it is difficult to match the impedance of a real battery, which is required for battery charger stability. Refer to Figure 1 for the proper measurement and equipment setup and follow the procedure below.

 If using an external supply, connect a 0 to 6V, 1.5A supply with voltage adjusted to 0V between the VBUS and GND terminals. Connect a Voltmeter across the VBUS and GND terminals. If using the USB input option, have cable ready to plug in when all loads and jumpers are set.

#### QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1189A HIGH EFFICIENCY BATTERY CHARGER/USB POWER MANAGER WITH REGULATED OUTPUT VOLTAGE

#### LTC4088-1

Do **not** use the USB input and an external supply at the same time.

- Set JP1, NTC jumper to INT to use the demo board resistor. To use an external 100kOhm NTC resistor, connect the NTC resistor between J2-3 and the GND terminal. Then set the NTC jumper to EXT.
- 3. Use Table 2 to set JP2, JP3, and JP4 (D0, D1, and D2 respectively) to select the desired input current limit and charger status.

D0	D1	D2	CHARGER	I <sub>LIM</sub>
0	0	0	OFF	100mA(1x)
0	0	1	ON	100mA(1x)
0	1	0	OFF	500mA(5x)
0	1	1	ON	500mA(5x)
1	0	0	OFF	1A(10x)
1	0	1	ON	1A(10x)
1	1	0	OFF	2.5mA(Susp High)
1	1	1	OFF	500uA(Susp Low)

#### **TABLE 2. Controlled Input Current Limit**

- 4. Connect a 0 to 2A adjustable load in series with an ammeter between the VOUT terminal and the GND terminal. Connect a Voltmeter between the VOUT and GND terminals.
- 5. Connect a partially charged (~3.6V) Lithium ion battery with the positive lead to the BAT terminal and the negative lead to a GND terminal. Connect the positive lead of a Voltmeter to the BAT terminal and the negative lead to the GND terminal. Connect the positive terminal of a Voltmeter to PROG and the negative terminal to GND to measure the current flowing into the battery. The voltage on PROG will read 1 Volt when the maximum charge current is reached. The voltage on CLPROG will read 1.188 Volts when the input current limit is reached. Observe VOUT.

$$I_{BAT} = \frac{V_{PROG}}{R_{PROG}} \bullet 1031$$
$$I_{VBUS} = I_{BUSQ} + \frac{V_{CLPROG}}{R_{CLPROG}} \bullet (h_{CLPROG} + 1)$$

See the datasheet for the proper values of  $I_{\rm BUSQ}$  and  $h_{\rm CLPROG}$  in the 1X, 5X and 10X modes.

- 6. If using the USB input, plug in the USB cable and observe the battery charge current and VOUT. If using an external power supply, slowly increase the supply and observe that the LTC4088-1 starts to use the VBUS input power as VBUS reaches 4.35V.
- 7. Discharge the battery to 2.5 volts. If Charger mode is on, observe it is charging in trickle charge mode and the charge current is 50mA. As the battery voltage increases above 2.85V observe that the charger goes into full constant current mode. Observe that VOUT stays above 3.6V when the input current limit is not exceeded. Remove the NTC jumper on JP2. Observe the CHRG LED slow blinking rate. Also observe the 35KHz pulse with varying duty cycle between 4.7% and 95.3% on the CHRG terminal with an oscilloscope. Reinstall the NTC jumper.
- 8. Increase the VOUT load and observe when the input current starts to limit ( $V_{cLPROG}$ =1.188 V). When input current limit is reached, VOUT drops from 300 mV above the BAT voltage to 15mV below the BAT voltage and the additional load transitions to the battery through the ideal diode. Due to the high efficiency of the switching regulator, the charge and load current may be significantly above the input current depending on the voltage on the BAT pin.

### LTC4088-1

- 9. Repeat step 9 with different current limit modes.
- 10. Set the VBUS input supply to 5V. Observe the battery current as the battery voltage increases above 4.1V. The Charge current starts to decrease as the battery voltage increases towards 4.2V.

See the latest LTC4088 data sheet for more information on how this part performs.

### **APPLICATION INFORMATION**

This demo circuit is designed to demonstrate the full capability of the LTC4088-1 High Efficiency Battery Charger. Not all components are required in all applications. The critical circuit components are on the top of the board near the IC and listed in the Required Circuit Components section of the Bill-of-Materials below.

The input capacitor network of C7 and R13 is used to dampen source lead inductances that commonly occur in laboratory setups with twisted leads and a bench power supply. When using an USB cable or adaptor cable this input damping network will likely not be required. Please note that the in-circuit capacitance of the specified 10uF, 0805 ceramic capacitor for C2 and C7 is approximately 5uF each at a VBUS greater than 4.25 Volts. Capacitor C4 is only required when using the 10X mode. The LTC4088-1 requires a minimum of 10uF on the VOUT pin in 10X mode for voltage loop stability. As an alternative to using two smaller X5R capacitors, one larger X5R ceramic capacitor would be acceptable, provided that the actual in-circuit capacitance with 4.6 Volts applied is greater than 10uF.

Capacitor C5 is included to simulate a low impedance battery. It is especially helpful when testing the demo circuit with a battery simulator comprised of a standard power supply with a 3.6 Ohm power resistor across it. The leads connecting the power supply to the demo circuit should be a twisted pair to minimize lead inductance; although, even twisted pairs can introduce enough inductance into the circuit to cause instability in the battery charger section without the presence of C5. Capacitor C5 will also provide proper operation of the circuit without a battery present. Refer to the datasheet for more discussion of operation without a battery. If desired, it is possible to use a ceramic capacitor in series with a low valued resistor to stabilize the battery charger when no battery is present. Please refer to the datasheet for the suggested capacitor and resistance range.

#### QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1189A HIGH EFFICIENCY BATTERY CHARGER/USB POWER MANAGER WITH REGULATED OUTPUT VOLTAGE

### LTC4088-1


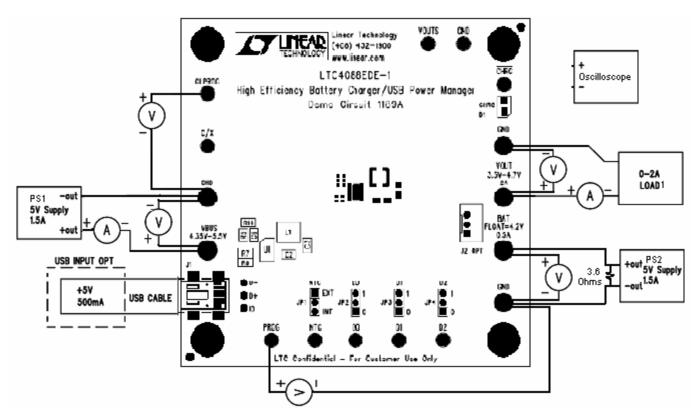


Figure 1. Proper Measurement Equipment Setup for DC1189A

#### QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1189A HIGH EFFICIENCY BATTERY CHARGER/USB POWER MANAGER WITH REGULATED OUTPUT VOLTAGE

LTC4088-1

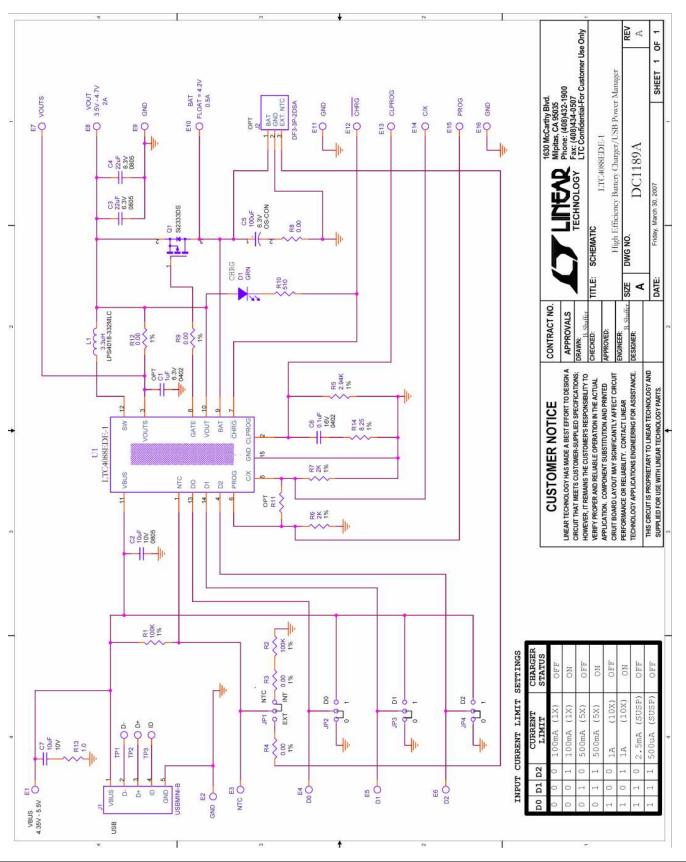

Manufacturer. Part #		MUR, GRM21BR61A106KE19	MUR, GRM21BR60J226ME39	MUR, GRM155R71C104KA88	COILCRAFT, LPS4018-332MLC	VISHAY, CRCW04022K94FKED	VISHAY, CRCW04022K00FKED	VISHAY CRCW04028R25FNED	R LINEAR TECHNOLOGY LTC4088EDE-1		TDK, C1005X5R0J105M	MUR, GRM21BR60J226ME39	SANYO, 6SVPC100MY	MUR, GRM21BR61A106KE19	PANASONIC, LN1351C-(TR)	SILICONIX, Si233DS	VISHAY, CRCW0402100KFKED	VISHAY CRCW04020000Z0ED	VISHAY CRCW0402510RFKED	VISHAY CRCW04020000Z0ED	VISHAY CRCW04021R00FKED	-	TYCO 1734035-2	HIROSE, DF3-3P-2DSA	MILLMAX 2501-2	MILLMAX 2308-2	SAMTEC, TMM-103-02-L-S	
Part Description	COMPONENTS:	CAP, CHIP, X5R, 10uF, 10V, 0805	CAP, CHIP, X5R, 22uF, 6.3V, 0805	CAP, CHIP, X7R, 0.1uF, 16V, 0402	IND, 3.3uH, 0.08 OHMS, 2.2A	RES, 0402 2.94K OHMS 1% 1/10W	RES, 0402 2K OHM 1% 1/10W	RES, 0402 8.25 OHMS 1% 1/16W	BAT CHARGER/USB POWER MANAGER	ADDITIONAL DEMO BOARD CIRCUIT COMPONENTS:	CAP, CHIP, X5R, 1.0uF, 6.3V, 0402	CAP, CHIP, X5R, 22uF, 6.3V, 0805	CAP, CHIP OS-CON, 100uF, 6.3V, B6	CAP, CHIP, X5R, 10uF, 10V, 0805	LED, GREEN	XSTR, MOSFET P- CHANNEL	RES, 0402, 100K OHMS, 1%, 1/10W	RES, 0402 0 OHMS 1% 1/10W	RES, 0402 510 OHMS 1% 1/10W	RES, 0402 0 OHMS 1% 1/10W	RES, 0402 1 OHMS 1% 1/16W	EMO BOARD ONLY:	CONN, USB MINI-B	CONN, DF3-3P-2DSA	TURRET, 0.09 DIA	TURRET, 0.061 DIA	HEADER, 3 PINS 2mm	
Reference - Des	REQUIRED CIRCUIT COMPONENTS	C2		C6	L1	R5	R6, R7	R14	U1	ADDITIONAL DEMO	C1 (OPT) (0	C4	C5	C7	D1	Q1	R1, R2	R3, R4, R8, R9, R12	R10	R11 (OPT)	R13	HARDWARE FOR DEMO BOARD ONLY:	11	J2 (OPT) (	E1,E2,E8,E9,E10,E11	 13,E14,E15,E16	JP1,JP2,JP3,JP4	
Item Qtv		-	~	~	~	~	2	-	~		0	-	-	-	-	-	2	ഹ	-	0	-		-	0	9	10	4	

## LTC4088-1

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1189A HIGH EFFICIENCY BATTERY CHARGER/USB POWER MANAGER WITH REGULATED OUTPUT VOLTAGE

6