

32Kx8 AutoStore nvSRAM with extended temperature

## **FEATURES**

- 35 ns Read Access & R/W Cycle Time
- Unlimited Read/Write Endurance
- Automatic Non-volatile STORE on Power Loss
- Non-Volatile STORE Under Hardware or Software Control
- Automatic RECALL to SRAM on Power Up
- Unlimited RECALL Cycles
- 100k STORE Cycles
- 10-Year Non-volatile Data Retention
- Single 5V ±10% Power Supply
- -55°C to 125°C Operating Range
- 32-Pin 300 mil SOIC (RoHS-Compliant)

## **DESCRIPTION**


The Simtek STK14C88-NF35U is a 256Kb fast static RAM with a non-volatile Quantum Trap storage element included with each memory cell.

The SRAM provides the fast access & cycle times, ease of use and unlimited read & write endurance of a normal SRAM.


Data transfers automatically to the non-volatile storage cells when power loss is detected (the STORE operation). On power up, data is automatically restored to the SRAM (the RECALL operation). Both STORE and RECALL operations are also available under software control.

The Simtek nvSRAM is the first monolithic non-volatile memory to offer unlimited writes and reads. It is the highest performance, most reliable non-volatile memory available.

### **BLOCK DIAGRAM**

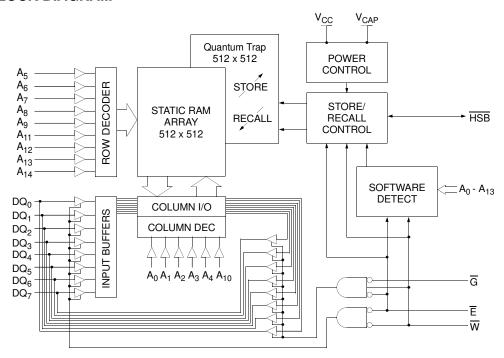

## **PIN CONFIGURATIONS**

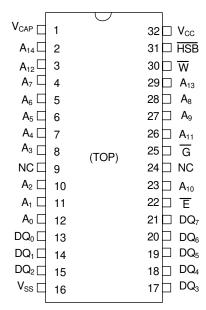

32-Pin 300 mil SOIC

## **PIN DESCRIPTIONS**

Pin Name	I/O	Description
A <sub>14</sub> -A <sub>0</sub>	Input	Address: The 15 address inputs select one of 32,768 bytes in the nvSRAM array
DQ <sub>7</sub> -DQ <sub>0</sub>	I/O	Data: Bi-directional 8-bit data bus for accessing the nvSRAM
Ē	Input	Chip Enable: The active low $\overline{E}$ input selects the device
W	Input	Write Enable: The active low $\overline{W}$ enables data on the DQ pins to be written to the address location latched by the falling edge of $\overline{E}$
G	Input	Output Enable: The active low $\overline{G}$ input enables the data output buffers during read cycles. De-asserting $\overline{G}$ high caused the DQ pins to tri-state.
V <sub>CC</sub>	Power Supply	Power: 5.0V, ±10%
HSB	I/O	Hardware Store Busy: When low this output indicates a Store is in progress. When pulled low external to the chip, it will initiate a nonvolatile STORE operation. A weak pull up resistor keeps this pin high if not connected. (Connection Optional).
V <sub>CAP</sub>	Power Supply	AutoStore Capacitor: Supplies power to nvSRAM during power loss to store data from SRAM to nonvolatile storage elements.
V <sub>SS</sub>	Power Supply	Ground



## **ABSOLUTE MAXIMUM RATINGS**<sup>a</sup>

Voltage on Input Relative to Ground	0.5V to 7.0V
Voltage on Input Relative to V <sub>SS</sub>	$-0.6V$ to $(V_{CC} + 0.5V)$
Voltage on DQ <sub>0-7</sub> or HSB	$-0.5V$ to $(V_{CC} + 0.5V)$
Temperature under Bias	55°C to 125°C
Storage Temperature	–65°C to 150°C
Power Dissipation	1W
DC Output Current (1 output at a time, 1s dur	ration) 15mA

Note a: Stresses greater than those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only, and functional operation of the device at conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

#### DC CHARACTERISTICS

 $(V_{CC} = 5.0V \pm 10\%)^{e}$ 

OVMDOL	DADAMETER	STK140	288-NF35U	LINUTO	NOTEO
SYMBOL	PARAMETER	MIN	MAX	UNITS	NOTES
I <sub>CC1</sub> <sup>b</sup>	Average V <sub>CC</sub> Current		90	mA	t <sub>AVAV</sub> = 35ns
I <sub>CC2</sub> c	Average V <sub>CC</sub> Current during STORE		3	mA	All Inputs Don't Care, V <sub>CC</sub> = max
I <sub>CC3</sub> <sup>b</sup>	Average $V_{CC}$ Current at $t_{AVAV}$ = 200ns 5V, 25°C, Typical		15	mA	$\overline{W} \ge (V_{CC} - 0.2V)$ All Others Cycling, CMOS Levels
I <sub>CC4</sub> <sup>c</sup>	Average V <sub>CAP</sub> Current during AutoStore Cycle		2	mA	All Inputs Don't Care
I <sub>SB1</sub> <sup>d</sup>	Average V <sub>CC</sub> Current (Standby, Cycling TTL Input Levels)		30	mA	$t_{AVAV} = 35ns, \overline{E} \ge V_{IH}$
I <sub>SB2</sub> <sup>d</sup>	V <sub>CC</sub> Standby Current (Standby, Stable CMOS Input Levels)		3	mA	$\overline{E} \ge (V_{CC} - 0.2V)$ All Others $V_{IN} \le 0.2V$ or $\ge (V_{CC} - 0.2V)$
I <sub>ILK</sub>	Input Leakage Current		±1	μА	$V_{CC} = max$ $V_{IN} = V_{SS}$ to $V_{CC}$
I <sub>OLK</sub>	Off-State Output Leakage Current		±5	μА	$V_{CC} = max$ $V_{IN} = V_{SS}$ to $V_{CC}$ , $\overline{E}$ or $\overline{G} \ge V_{IH}$
$V_{IH}$	Input Logic "1" Voltage	2.2	V <sub>CC</sub> + .5	V	All Inputs
V <sub>IL</sub>	Input Logic "0" Voltage	V <sub>SS</sub> 5	0.8	٧	All Inputs
V <sub>OH</sub>	Output Logic "1" Voltage	2.4		V	I <sub>OUT</sub> =-4mA (except <del>HSB</del> )
V <sub>OL</sub>	Output Logic "0" Voltage		0.4	V	I <sub>OUT</sub> = 8mA (except <del>HSB</del> )
$V_{BL}$	Logic "0" Voltage on HSB Output		0.4	V	I <sub>OUT</sub> = 3mA
T <sub>A</sub>	Operating Temperature	55	125	°C	

Note b: I<sub>CC1</sub> and I<sub>CC3</sub> are dependent on output loading and cycle rate. The specified values are obtained with outputs unloaded.

Note c:  $\underline{I}_{CC_2}$  and  $\underline{I}_{CC_4}$  are the average currents required for the duration of the respective *STORE* cycles ( $t_{STORE}$ ).

Note d:  $\overrightarrow{E} \ge V_{\text{IH}}$  will not produce standby current levels until any nonvolatile cycle in progress has timed out.

Note e: V<sub>CC</sub> reference levels throughout this datasheet refer to system V<sub>CC</sub> if that is where the power supply connection is made, or V<sub>CAP</sub> if the IC V<sub>CC</sub> is connected to ground.

#### **AC TEST CONDITIONS**

Input Pulse Levels	_
Input Rise and Fall Times	
Input and Output Timing Reference Levels1.5V	
Output Load See Figure 1	

## **CAPACITANCE**<sup>f</sup> $(T_A = 25^{\circ}C, f = 1.0MHz)$

SYMBOL	PARAMETER	MAX	UNITS	CONDITIONS
C <sub>IN</sub>	Input Capacitance	5	pF	$\Delta V = 0$ to 3V
C <sub>OUT</sub>	Output Capacitance	7	pF	$\Delta V = 0 \text{ to } 3V$

Note f: These parameters are guaranteed but not tested.

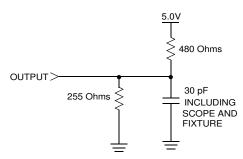


Figure 1: AC Output Loading



## **SRAM READ CYCLES #1 & #2**


$(V_{CC} = 5.0V \pm 10\%)$	%)e
----------------------------	-----

NO.	SYMBO	LS	PARAMETER	STK14C8	UNITS	
NO.	#1, #2	Alt.	FANAMEIEN		MAX	UNITS
1	t <sub>ELQV</sub>	t <sub>ACS</sub>	Chip Enable Access Time		35	ns
2	t <sub>AVAV</sub> <sup>g</sup> , t <sub>ELEH</sub> <sup>g</sup>	t <sub>RC</sub>	Read Cycle Time	35		ns
3	t <sub>AVQV</sub> <sup>h</sup>	t <sub>AA</sub>	Address Access Time		35	ns
4	t <sub>GLQV</sub>	t <sub>OE</sub>	Output Enable to Data Valid		15	ns
5	t <sub>AXQX</sub> <sup>h</sup>	t <sub>OH</sub>	Output Hold after Address Change	5		ns
6	t <sub>ELQX</sub>	t <sub>LZ</sub>	Address Change or Chip Enable to Output Active	5		ns
7	t <sub>EHQZ</sub> i	t <sub>HZ</sub>	Address Change or Chip Disable to Output Inactive		13	ns
8	t <sub>GLQX</sub>	t <sub>OLZ</sub>	Output Enable to Output Active	0		ns
9	t <sub>GHQZ</sub> i	t <sub>OHZ</sub>	Output Disable to Output Inactive		13	ns
10	t <sub>ELICCH</sub> f	t <sub>PA</sub>	Chip Enable to Power Active	0		ns
11	t <sub>EHICCL</sub> f	t <sub>PS</sub>	Chip Disable to Power Standby		35	ns


Note g:  $\overline{W}$  and  $\overline{HSB}$  must be high during SRAM READ cycles.

Note h: I/O state assumes  $\overline{E}$  and  $\overline{G} \le V_{IL}$  and  $\overline{W} \ge V_{IH}$ ; device is continuously selected. Note i: Measured  $\pm$  200mV from steady state output voltage.

## SRAM READ CYCLE #1: Address Controlled<sup>9, h</sup>



## SRAM READ CYCLE #2: E and G Controlled

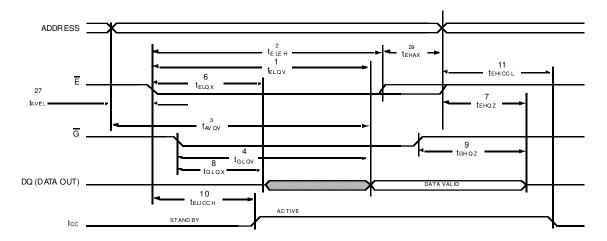



## **SRAM WRITE CYCLES #1 & #2**

$(V_{CC} =$	5.0V	± 10%) <sup>e</sup>
-------------	------	---------------------


NO	SYMBOLS			DADAMETED	STK14C88-NF35U		LIMITE
NO.	#1	#2	Alt.	PARAMETER		MAX	UNITS
12	t <sub>AVAV</sub>	t <sub>AVAV</sub>	t <sub>WC</sub>	Write Cycle Time	35		ns
13	t <sub>WLWH</sub>	t <sub>WLEH</sub>	t <sub>WP</sub>	Write Pulse Width	25		ns
14	t <sub>ELWH</sub>	t <sub>ELEH</sub>	t <sub>CW</sub>	Chip Enable to End of Write	25		ns
15	t <sub>DVWH</sub>	t <sub>DVEH</sub>	t <sub>DW</sub>	Data Set-up to End of Write	12		ns
16	t <sub>WHDX</sub>	t <sub>EHDX</sub>	t <sub>DH</sub>	Data Hold after End of Write	0		ns
17	t <sub>AVWH</sub>	t <sub>AVEH</sub>	t <sub>AW</sub>	Address Set-up to End of Write	25		ns
18	t <sub>AVWL</sub>	t <sub>AVEL</sub>	t <sub>AS</sub>	Address Set-up to Start of Write	0		ns
19	t <sub>WHAX</sub>	t <sub>EHAX</sub>	t <sub>WR</sub>	Address Hold after End of Write	0		ns
20	t <sub>WLQZ</sub> i, j		t <sub>WZ</sub>	Write Enable to Output Disable		13	ns
21	t <sub>WHQX</sub>		t <sub>OW</sub>	Output Active after End of Write	5		ns

Note j:  $\underline{\text{If }\overline{W}}$  is low when  $\overline{\underline{E}}$  goes low, the outputs remain in the high-impedance state.


Note k: E or W must be ≥ V<sub>IH</sub> during address transitions.

Note I: HSB must be high during SRAM WRITE cycles.

## **SRAM WRITE CYCLE #1:** W Controlled<sup>k, I</sup>

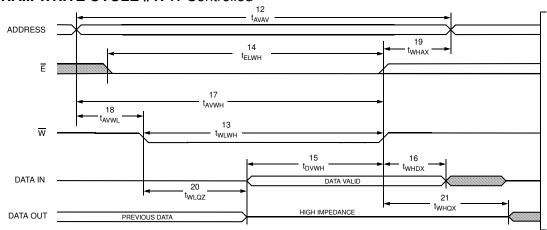

## SRAM WRITE CYCLE #2: E Controlledk, I

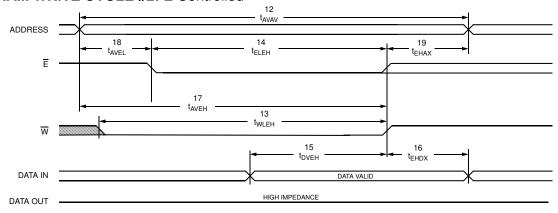



### HARDWARE MODE SELECTION

Ē	w	HSB	A <sub>13</sub> - A <sub>0</sub> (hex)	MODE	I/O	POWER	NOTES
Н	Х	Н	X	Not Selected	Output High Z	Standby	
L	Н	Н	X	Read SRAM	Output Data	Active	t
L	L	Н	X	Write SRAM	Input Data	Active	
Х	Х	L	X	Nonvolatile STORE	Output High Z	I <sub>CC2</sub>	m

Note m: HSB STORE operation occurs only if an SRAM WRITE has been done since the last nonvolatile cycle. After the STORE (if any) completes, the part will go into standby mode, inhibiting all operations until HSB rises.

### HARDWARE STORE CYCLE


 $(V_{CC} = 5.0V \pm 10\%)^{e}$ 

NO.	SYMBOLS		PARAMETER	STK14C8	UNITS	NOTES	
NO.	Standard	Alternate	FARAMETER	MIN	MAX	UNITS	NOTES
22	t <sub>STORE</sub>	t <sub>HLHZ</sub>	STORE Cycle Duration		10	ms	
23	t <sub>DELAY</sub>	t <sub>HLQZ</sub>	Time Allowed to Complete SRAM Cycle	1		μS	
24	t <sub>RECOVER</sub>	t <sub>HHQX</sub>	Hardware STORE High to Inhibit Off		700	ns	n, o
25	t <sub>HLHX</sub>		Hardware STORE Pulse Width	15		ns	
26	t <sub>HLBL</sub>		Hardware STORE Low to STORE Busy		300	ns	

Note n:  $\overline{E}$  and  $\overline{G}$  low and  $\overline{W}$  high for output behavior.

Note o: t<sub>RECOVER</sub> is only applicable after t<sub>STORE</sub> is complete.

### HARDWARE STORE CYCLE

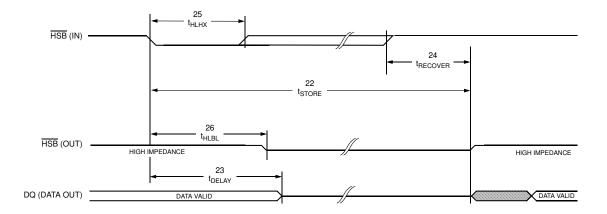




## AutoStore™/POWER-UP RECALL

 $(V_{CC} = 5.0V \pm 10\%)^e$ 

NO.	SYMBOLS		PARAMETER	STK14C8	LIMITE	NOTES	
NO.	Standard	Alternate	FARAWLILA	MIN	MAX	UNITS	NOTES
27	t <sub>RESTORE</sub>		Power-up RECALL Duration		550	μS	р
28	t <sub>STORE</sub>	t <sub>HLHZ</sub>	STORE Cycle Duration		10	ms	n, q
29	t <sub>VSBL</sub>		Low Voltage Trigger (V <sub>SWITCH</sub> ) to HSB Low		300	ns	I
30	t <sub>DELAY</sub>	t <sub>BLQZ</sub>	Time Allowed to Complete SRAM Cycle	1		μS	n
31	V <sub>SWITCH</sub>		Low Voltage Trigger Level	4.0	4.5	٧	
32	V <sub>RESET</sub>		Low Voltage Reset Level		3.6	٧	

Note p:  $\frac{t_{RESTORE}}{t_{RESTORE}}$  starts from the time  $V_{CC}$  rises above  $V_{SWITCH}$ . Note q: HSB is asserted low for  $1\mu s$  when  $V_{CAP}$  drops through  $V_{SWITCH}$ . If an SRAM WRITE has not taken place since the last nonvolatile cycle, HSB will be released and no STORE will take place.

### AutoStore™/POWER-UP RECALL

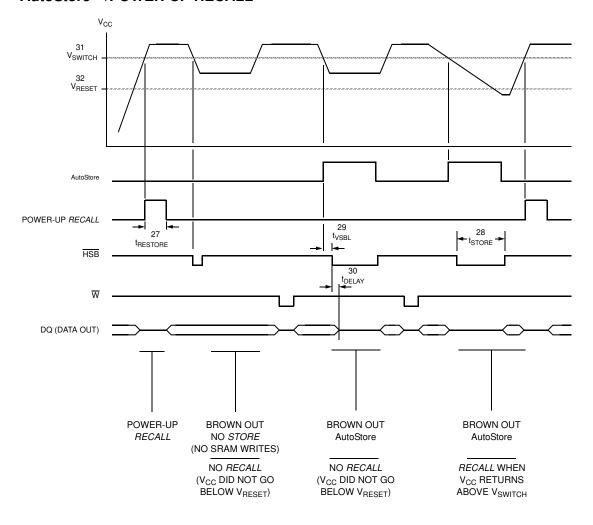



## SOFTWARE STORE/RECALL MODE SELECTION

Ē	w	A <sub>13</sub> - A <sub>0</sub> (hex)	MODE	I/O	POWER	NOTES
L	н	0E38 31C7 03E0 3C1F 303F	Read SRAM Read SRAM Read SRAM Read SRAM Read SRAM	Output Data Output Data Output Data Output Data Output Data Output Data	Active	n, r, s, t
		0FC0	Nonvolatile STORE	Output High Z	I <sub>CC2</sub>	
L	Н	0E38 31C7 03E0 3C1F 303F 0C63	Read SRAM Read SRAM Read SRAM Read SRAM Read SRAM Nonvolatile <i>RECALL</i>	Output Data Output Data Output Data Output Data Output Data Output High Z	Active	n, r, s, t

## SOFTWARE-CONTROLLED STORE/RECALL CYCLEV

 $(V_{CC} = 5.0V \pm 10\%)^{e}$ 

NO	SYMBOLS		DADAMETED	STK14C88-NF35U		LINUTO	NOTEO
NO.	Standard	Alternate	PARAMETER	MIN	MAX	UNITS	NOTES
33	t <sub>AVAV</sub>	t <sub>RC</sub>	STORE/RECALL Initiation Cycle Time	35		ns	n
34	t <sub>AVEL</sub>	t <sub>AS</sub>	Address Set-up Time	0		ns	u,v
35	t <sub>ELEH</sub>	t <sub>CW</sub>	Clock Pulse Width	25		ns	u,v
36	t <sub>ELAX</sub>		Address Hold Time			ns	u, v
37	t <sub>RECALL</sub>		RECALL Duration		20	μS	

The six consecutive addresses must be in the order listed. W must be high during all six consecutive E or G controlled cycles to enable a non-Note r:


While there are 15 addresses on the STK14C88-NF35U, only the lower 14 are used to control software modes. Note s:

Note t: I/O state assumes  $\overline{G} \leq V_{II}$ . Activation of nonvolatile cycles does not depend on state of  $\overline{G}$ .

Note u: The software sequence is clocked on the falling edge of  $\overline{E}$  controlled READs without involving  $\overline{G}$  (double clocking will abort the sequence). See application note: MA0002 http://www.simtek.com/attachments/appNote02.pdf.

Note v: The six consecutive addresses must be read in the order listed in the Software STORE/RECALL Mode Selection Table: (0E38, 31C7, 03E0, 3C1F, 303F, 0FC0) for a STORE cycle or (0E38, 31C7, 03E0, 3C1F, 303F, 0C63) for a RECALL cycle. W must be high during all six consecutive cycles.

## SOFTWARE STORE/RECALL CYCLE: E CONTROLLED

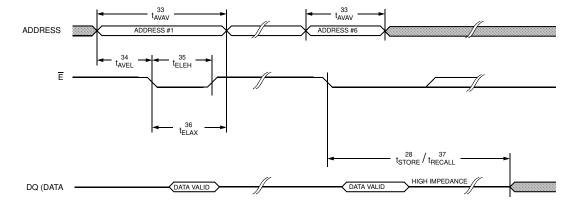



## **nvSRAM OPERATION**

The STK14C88-NF35U has two separate modes of operation: SRAM mode and nonvolatile mode. In SRAM mode, the memory operates as a standard fast static RAM. In nonvolatile mode, data is transferred from SRAM to nonvolatile elements (the *STORE* operation) or from nonvolatile elements to SRAM (the *RECALL* operation). In this mode SRAM functions are disabled.

### **NOISE CONSIDERATIONS**

The STK14C88-NF35U is a high-speed memory and so must have a high-frequency bypass capacitor of approximately 0.1  $\mu\text{F}$  connected between  $V_{\text{CAP}}$  and  $V_{\text{SS}}$ , using leads and traces that are as short as possible. As with all high-speed CMOS ICs, normal careful routing of power, ground and signals will help prevent noise problems.

#### **SRAM READ**

The STK14C88-NF35U performs a READ cycle whenever  $\overline{E}$  and  $\overline{G}$  are low and  $\overline{W}$  and  $\overline{HSB}$  are high. The address specified on pins  $A_{0-14}$  determines which of the 32,768 data bytes will be accessed. When the READ is initiated by an address transition, the outputs will be valid after a delay of  $t_{\underline{AVQV}}$  (READ cycle #1). If the READ is initiated by  $\overline{E}$  or  $\overline{G}$ , the outputs will be valid at  $t_{\underline{ELQV}}$  or at  $t_{\underline{GLQV}}$ , whichever is later (READ cycle #2). The data outputs will repeatedly respond to address changes within the  $t_{\underline{AVQV}}$  access time without the need for transitions on any control input pins, and will remain valid until another address change or until  $\overline{E}$  or  $\overline{G}$  is brought high, or  $\overline{W}$  or  $\overline{HSB}$  is brought low.

#### **SRAM WRITE**

A WRITE cycle is performed whenever  $\overline{E}$  and  $\overline{W}$  are low and  $\overline{HSB}$  is high. The address inputs must be stable prior to entering the WRITE cycle and must remain stable until either  $\overline{E}$  or  $\overline{W}$  goes high at the end of the cycle. The data on the common I/O pins DQ<sub>0-7</sub> will be written into the memory if it is valid  $t_{\text{DVWH}}$  before the end of a  $\overline{W}$  controlled WRITE or  $t_{\text{DVEH}}$  before the end of an  $\overline{E}$  controlled WRITE.

It is recommended that  $\overline{G}$  be kept high during the entire WRITE cycle to avoid data bus contention on common I/O lines. If  $\overline{G}$  is left low, internal circuitry will turn off the output buffers  $t_{WLOZ}$  after  $\overline{W}$  goes low.

#### POWER-UP RECALL

During power up, or after any low-power condition ( $V_{\text{CAP}} < V_{\text{RESET}}$ ), an internal *RECALL* request will be latched. When  $V_{\text{CAP}}$  once again exceeds the sense voltage of  $V_{\text{SWITCH}}$ , a *RECALL* cycle will automatically be initiated and will take  $t_{\text{RESTORE}}$  to complete.

If the STK14C88-NF35U is in a WRITE state at the end of power-up *RECALL*, the SRAM data will be corrupted. To help avoid this situation, a 10K Ohm resistor should be connected either between  $\overline{W}$  and system  $V_{\text{CC}}$  or between  $\overline{E}$  and system  $V_{\text{CC}}$ .

### SOFTWARE NONVOLATILE STORE

The STK14C88-NF35U software *STORE* cycle is initiated by executing sequential  $\overline{E}$  controlled READ cycles from six specific address locations. During the *STORE* cycle an erase of the previous nonvolatile data is first performed, followed by a program of the nonvolatile elements. The program operation copies the SRAM data into nonvolatile memory. Once a *STORE* cycle is initiated, further input and output are disabled until the cycle is completed.

Because a sequence of READs from specific addresses is used for *STORE* initiation, it is important that no other READ or WRITE accesses intervene in the sequence, or the sequence will be aborted and no *STORE* or *RECALL* will take place.

To initiate the software *STORE* cycle, the following READ sequence must be performed:

1.	Read address	0E38 (hex)	Valid READ
2.	Read address	31C7 (hex)	Valid READ
3.	Read address	03E0 (hex)	Valid READ
4.	Read address	3C1F (hex)	Valid READ
5.	Read address	303F (hex)	Valid READ
6.	Read address	0FC0 (hex)	Initiate STORE cycle

The software sequence must be clocked with  $\overline{\mathsf{E}}$  controlled READs.

Once the sixth address in the sequence has been entered, the *STORE* cycle will commence and the chip will be disabled. It is important that READ cycles and not WRITE cycles be used in the sequence, although it is not necessary that  $\overline{G}$  be low for the sequence to be valid. After the  $t_{\text{STORE}}$  cycle time has been fulfilled, the SRAM will again be activated for READ and WRITE operation.



### SOFTWARE NONVOLATILE RECALL

A software *RECALL* cycle is initiated with a sequence of READ operations in a manner similar to the software *STORE* initiation. To initiate the *RECALL* cycle, the following sequence of  $\overline{E}$  controlled READ operations must be performed:

1.	Read address	0E38 (hex)	Valid READ
2.	Read address	31C7 (hex)	Valid READ
3.	Read address	03E0 (hex)	Valid READ
4.	Read address	3C1F (hex)	Valid READ
5.	Read address	303F (hex)	Valid READ
6.	Read address	0C63 (hex)	Initiate RECALL cycle

Internally, RECALL is a two-step procedure. First, the SRAM data is cleared, and second, the nonvolatile information is transferred into the SRAM cells. After the  $t_{RECALL}$  cycle time the SRAM will once again be ready for READ and WRITE operations. The RECALL operation in no way alters the data in the nonvolatile elements. The nonvolatile data can be recalled an unlimited number of times.

#### **AutoStore MODE**

The STK14C88-NF35U can be powered in one of three modes.

During normal AutoStore operation, the STK14C88-NF35U will draw current from  $V_{\text{CC}}$  to charge a capacitor connected to the  $V_{\text{CAP}}$  pin. This stored charge will be used by the chip to perform a single STORE operation. After power up, when the voltage on the  $V_{\text{CAP}}$  pin drops below  $V_{\text{SWITCH}},$  the part will automatically disconnect the  $V_{\text{CAP}}$  pin from  $V_{\text{CC}}$  and initiate a STORE operation.

Figure 2 shows the proper connection of capacitors for automatic store operation. A charge storage

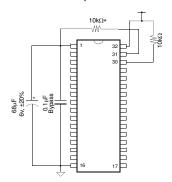


Figure 2: AutoStore Mode

capacitor having a capacity of between  $68\mu F$  and  $220\mu F$  ( $\pm\,20\%$ ) rated at 6V should be provided.

In system power mode, both  $V_{\text{CC}}$  and  $V_{\text{CAP}}$  are connected to the + 5V power supply without the  $68\mu\text{F}$  capacitor. In this mode the AutoStore function of the STK14C88-NF35U will operate on the stored system charge as power goes down. The user must, however, guarantee that  $V_{\text{CC}}$  does not drop below 3.6V during the 10ms STORE cycle.

In order to prevent unneeded *STORE* operations, automatic *STOREs* as well as those initiated by externally driving HSB low will be ignored unless at least one WRITE operation has taken place since the most recent *STORE* or *RECALL* cycle. Software-initiated *STORE* cycles are performed regardless of whether a WRITE operation has taken place.

If the power supply drops faster than 20  $\mu s$ /volt before  $V_{CC}$  reaches  $V_{SWITCH}$ , then a 2.2 ohm resistor should be inserted between the  $V_{CC}$  pin on the IC and the system supply to avoid momentary excess of current between Vcc and Vcap.

#### AutoStore INHIBIT MODE

If an automatic STORE on power loss is not required, then  $V_{cc}$  can be tied to ground and system power applied to  $V_{CAP}$  (Figure 3). This is the AutoStore Inhibit mode, in which the AutoStore function is disabled. If the STK14C88-NF35U is operated in this configuration, references to  $V_{cc}$  should be changed to  $V_{CAP}$  throughout this data sheet. In this mode, STORE operations may be triggered through software control. It is not permissible to change between these three options "on the fly."

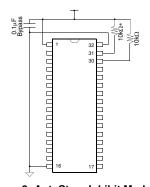


Figure 3: AutoStore Inhibit Mode



<sup>\*</sup>If HSB is not used, it should be left unconnected.

## HSB OPERATION

The STK14C88-NF35U provides the HSB pin for controlling and acknowledging the *STORE* operations. The HSB pin can be used to request a hardware *STORE* cycle. When the HSB pin is driven low, the STK14C88-NF35U will conditionally initiate a *STORE* operation after t<sub>DELAY</sub>, an actual *STORE* cycle will only begin if a WRITE to the SRAM took place since the last *STORE* or *RECALL* cycle. The HSB pin has a very resistive pullup and is internally driven low to indicate a busy condition while the *STORE* (initiated by any means) is in progress. Pull up this pin with an external 10K ohm resistor to V<sub>CAP</sub> if HSB is used as a driver.

SRAM READ and WRITE operations that are in progress when  $\overline{\text{HSB}}$  is driven low by any means are given time to complete before the STORE operation is initiated. After  $\overline{\text{HSB}}$  goes low, the STK14C88-NF35U will continue SRAM operations for  $t_{\text{DELAY}}$  During  $t_{\text{DELAY}}$  multiple SRAM READ operations may take place. If a WRITE is in progress when  $\overline{\text{HSB}}$  is pulled low it will be allowed a time,  $t_{\text{DELAY}}$ , to complete.  $\underline{\text{However}}$ , any SRAM WRITE cycles requested after  $\underline{\text{HSB}}$  goes low will be inhibited until  $\underline{\text{HSB}}$  returns high.

The  $V_{\text{CAP}}$  pins from the other STK14C88-NF35U parts can be tied together and share a single capacitor. The capacitor size must be scaled by the number of devices connected to it. It is essential that all parts have written to the SRAM for this *STORE* to execute properly.

During any *STORE* operation, regardless of how it was initiated, the STK14C88-NF35U will continue to drive the HSB pin low, releasing it only when the *STORE* is complete. Upon completion of the *STORE* operation the <u>STK</u>14C88-NF35U will remain disabled until the HSB pin returns high.

If HSB is not used, it should be left unconnected.

#### **BEST PRACTICES**

nvSRAM products have been used effectively for over 15 years. While ease-of-use is one of the product's main system values, experience gained working with hundreds of applications has resulted in the following suggestions as best practices:

The non-volatile cells in an nvSRAM are programmed on the test floor during final test and quality assurance. Incoming inspection routines at customer or contract manufacturer's sites will sometimes reprogram these values. Final NV pat-

terns are typically repeating patterns of AA, 55, 00, FF, A5, or 5A. End product's firmware should not assume an NV array is in a set programmed state. Routines that check memory content values to determine first time system configuration, cold or warm boot status, etc. should always program a unique NV pattern (e.g., complex 4-byte pattern of 46 E6 49 53 hex or more random bytes) as part of the final system manufacturing test to ensure these system routines work consistently.

- Power up boot firmware routines should rewrite the nvSRAM into the desired state (autostore enabled, etc.). While the nvSRAM is shipped in a preset state, best practice is to again rewrite the nvSRAM into the desired state as a safeguard against events that might flip the bit inadvertently (program bugs, incoming inspection routines, etc.).
- The V<sub>cap</sub> value specified in this datasheet includes a minimum and a maximum value size. Best practice is to meet this requirement and not exceed the max V<sub>cap</sub> value because the nvSRAM internal algorithm calculates V<sub>cap</sub> charge time based on this max Vcap value. Customers that want to use a larger V<sub>cap</sub> value to make sure there is extra store charge and store time should discuss their V<sub>cap</sub> size selection with Simtek to understand any impact on the V<sub>cap</sub> voltage level at the end of a t<sub>RECALL</sub> period.



#### PREVENTING STORES

The <code>STORE</code> function can be disabled on the fly by holding  $\overline{\mbox{HSB}}$  high with a driver capable of sourcing 30mA at a V\_{OH} of at least 2.2V, as it will have to overpower the internal pull-down device that drives  $\overline{\mbox{HSB}}$  low for 20µs at the onset of a <code>STORE</code>. When the STK14C88-NF35U is connected for AutoStore operation (system V\_{CC} connected to chip V\_{CC} and a 68µF capacitor on V\_{CAP}) and V\_{CC} crosses V\_{SWITCH} on the way down, the  $\overline{\mbox{STK}14C88}$ -NF35U will attempt to pull  $\overline{\mbox{HSB}}$  low; if  $\overline{\mbox{HSB}}$  doesn't  $\overline{\mbox{actually get below V}_{IL}$ , the part will stop trying to pull  $\overline{\mbox{HSB}}$  low and abort the  $\overline{\mbox{STORE}}$  attempt.

## HARDWARE PROTECT

The STK14C88-NF35U offers hardware protection against inadvertent *STORE* operation and SRAM WRITEs during low-voltage conditions. When  $V_{\text{CAP}} < V_{\text{SWITCH}}$ , all externally initiated *STORE* operations and SRAM WRITEs will be inhibited.

AutoStore can be completely disabled by tying  $V_{\text{CC}}$  to ground and applying + 5V to  $V_{\text{CAP}}$ . This is the AutoStore Inhibit mode; in this mode *STORE*s are only initiated by explicit request using either the software sequence or the  $\overline{\text{HSB}}$  pin.

#### LOW AVERAGE ACTIVE POWER

The STK14C88-NF35U draws significantly less current when it is cycled at times longer than 50ns. Figure 4 shows the relationship between Icc and READ cycle time. Worst-case current consumption is shown for both CMOS and TTL input levels (commercial temperature range,  $V_{CC} = 5.5V$ , 100% duty cycle on chip enable). Figure 5 shows the same relationship for WRITE cycles. If the chip enable duty cycle is less than 100%, only standby current is drawn when the chip is disabled. The overall average current drawn by the STK14C88-NF35U depends on the following items: 1) CMOS vs. TTL input levels: 2) the duty cycle of chip enable; 3) the overall cycle rate for accesses; 4) the ratio of READs to WRITEs; 5) the operating temperature; 6) the V<sub>cc</sub> level; and 7) I/O loading.

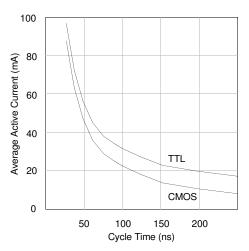


Figure 4: Icc (max) Reads


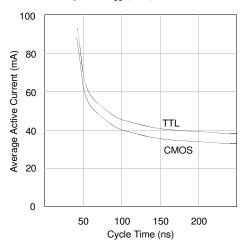


Figure 5: I<sub>cc</sub> (max) Writes



## **Commercial and Industrial Ordering Information**

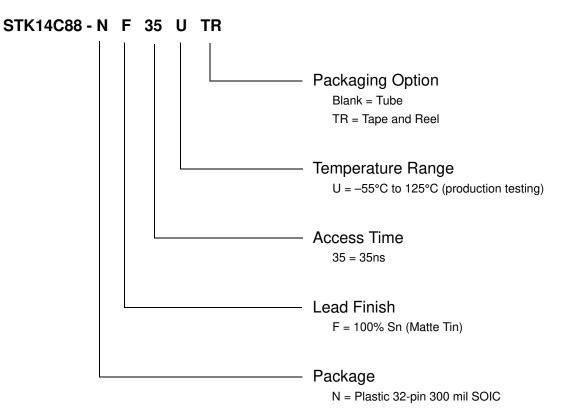


## **Ordering Information**


Part Number	Description	Access Times	Temperature
STK14C88-NF35UTR	5V 32Kx8 AutoStore nvSRAM SOP32-300	35 ns access time	-55ºC to 125 ºC




# **Package Diagrams**

## 32 Lead 300 mil SOIC Gull Wing

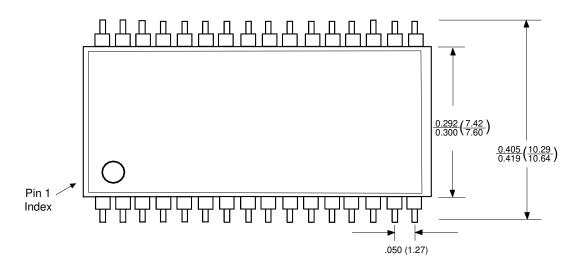

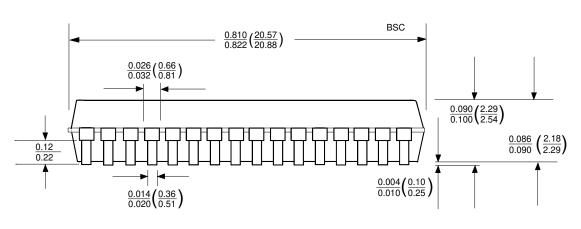



$$\begin{aligned} & \text{DIM} = \text{INCHES} & \quad \frac{\text{MIN}}{\text{MAX}} \\ & \text{DIM} = \text{mm} & \left(\frac{\text{MIN}}{\text{MAX}}\right) \end{aligned}$$



## **Document Revision History**

Revision	Date	Summary
2.0	February 2008	New Document

SIMTEK STK14C88-NF35U Datasheet, February 2008

Copyright 2008, Simtek Corporation. All rights reserved.

This datasheet may only be printed for the expressed use of Simtek Customers. No part of the datasheet may be reproduced in any other form or means without the express written permission from Simtek Corporation. The information contained in this publication is believed to be accurate, but changes may be made without notice. Simtek does not assume responsibility for, or grant or imply any warranty, including MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE regarding this information, the product or its use. Nothing herein constitutes a license, grant or transfer of any rights to any Simtek patent, copyright, trademark, or other proprietary right.

