

Technical Note

Audio Accessory ICs for Mobile Devices

Voice/Audio Mixer & Selector IC

BU7831KN

No.10087EAT02

RoHS

Description

BU7831KN is the sound path selector which include 3 stereo inputs, Stereo headphone amp, 600Ω driver amp, and 2stereooutputs. Each output have a mixer and an attenuator, you can set the variable audio path setting. The variable audio source can connect to Headphone and speaker through this LSI.

Feature

- 1) It has 3stereo inputs.
- 2) It has analog mixer on each input.
- 3) It matches for the application used the Headphone because it has 16Ω audio driver.
- 4) 16 Ω driver has the pop-noise less function.
- 5) The attenuator of 16Ω driver has soft changing and muting function.
- 6) It has 600Ω driver for external output.
- 7) It included stereo output for stereo speaker.
- 8) VQFN20 small package

Applications

It is for portable equipments with audio player.

Absolute maximum ratings

Parameter	Symbol	Ratings	Unit
Supply voltage	VDD	-0.3~4.5	V
Power dissipation	Pd	530 ^{*1}	mW
Operating temperature range	Topr	-30~+85	°C
Storage temperature range	Tstg	-55~+125	°C

*1 Reduce by 5.3 mW/ $^\circ\!C\,$ over 25 $^\circ\!C\,$

Recommended operating range

Parameter	Symbol		Ratings		Unit
Falameter	Symbol	Min.	Тур.	Max.	Unit
Supply voltage	VDD	2.5	3.0	3.3	V

•Electric Characteristics

Unless otherwise specified, Ta=25 °C,AVDD=DVDD=3.0V • Analog Part

Parameter	Symbol		Limits	1	Unit	Conditions
	Cymbol	Min.	Тур.	Max.	onic	Conditione
Stand-by current	lstb	-	-	3	μA	Stand-by mode
Operation current 1	ldd1	-	0.26	0.42	mA	BIAS part. No signal
Operation current 2	ldd2	-	2.3	3.7	mA	ST1R, ST1L to HPR, HPL Exclude Idd1, No signal
Total harmonic distortion 1 (HPL, HPR)	THDhp1	-	0.05	0.5	%	Vo=-10dBV, 20kHzL PF
Output power 1(HPL, HPR)	PO1	-	10	-	mW	THD=10%, RL=16Ω
Output Noise Voltage 1 (HPL, HPR)	V_{NO}	-	-94	-80	dBV	JIS A weighting
Maximum output level 1 (SPL, SPR)	VO _{MAX1}	2.0	-	-	Vp-p	THD≦1%, RL=10kΩ
Maximum output level 2 (EXTO)	VO _{MAX2}	2.0	-	-	Vp-p	THD≦1%, RL=600Ω

Digital input (DC)

Parameter	Parameter Symbol Limits Unit Conditions	Symbol	Limits			
i arameter	Symbol	Min.	Тур.	Max.	Unit	Conditions
Input L level voltage	V _{IL}	-	-	0.7	V	
Input H level voltage	VIH	2.1	-	-	V	
Input current	l _{in}	-	-	±2	μA	0V, 3V force

CPU interface

Parameter	Symbol		Limits		Unit	Conditions
Farameter	Symbol	Min.	Тур.	Max.	Onit	Conditions
Cycle Time	tcyc	250	-	-	ns	
Input Data Hold Time	tdh	50	-	-	ns	
Input Data Setup Time	tds	50	-	-	ns	
Chip Select Setup Time	tcs	50	-	-	ns	
Chip Select Hold Time	tch	50	-	-	ns	


●Reference Data (Unless otherwise specified, Ta=25 °C,AVDD=DVDD=3.0V) 1.0 10 10 CIRCUIT CURRENT : ICC(mA) CIRCUIT CURRENT : ICC(mA) 8 0.8 8 STAND BY CURRENT : Ist(µA) 6 6 0.6 4 4 0.4 2 2 0.2 0 0 00 2.0 2.5 3.0 3.5 4.0 4.5 2.0 2.5 3.0 3.5 4.0 4.5 2.5 3.0 3.5 2.0 4.0 4.5 SUPPLY VOLTAGE : VDD(V) SUPPLY VOLTAGE : VDD(V) SUPPLY VOLTAGE : VDD(V) Fig.1 Stand-by current Fig.2 Operation current Fig.3 Operation current At Headphone AMP part Of All blocks 100.00 100.00 100.00 10.00 10.00 10.00 EXTO : THD+N (%) HPR : THD+N (%) HPL : THD+N (%) 1.00 1.00 1.00 0.10 0.10 0.10 0.01 0.01 0.01 -100 -80 -60 -20 0 0 -40 -80 -60 -40 -100 -20 -100 -80 -60 -40 -20 0 INPUT LEVEL : VIN (dBV) INPUT LEVEL : VIN (dBV) INPUT LEVEL : VIN (dBV) Fig.4 Total harmonic Fig.5 Total Harmonic Fig.6 Total Harmonic Distortion (HPL) Distortion (HPR) Distortion (EXTO) 100.00 100.00 20 0 10.00 10.00 HPL : LINEARITY (dBV) SPR : THD+N (%) SPL : THD+N (%) -20 1.00 -40 1.00 -60 0.10 0.10 -80 0.01 0.01 -100 -80 -100 -60 -40 -20 0 -100 -80 -60 -40 -20 0 -100 -80 -60 -40 -20 0 INPUT LEVEL : VIN (dBV) INPUT LEVEL : VIN (dBV) INPUT LEVEL : VIN (dBV) Fig.9 Linearity (HPL) Fig.7 Total Harmonic Fig.8 Total Harmonic Distortion (SPL) Distortion (SPR) 20 20 20 0 0 0 EXTO : LINEARITY (dBV) HPR : LINEARITY (dBV) SPL : LINEARITY (dBV) -20 -20 -20 -40 -40 -40 -60 -60 -60 -80 -80 -80 -100 -100 -100 -80 -40 0 -100 -60 0 -100 -80 -60 -40 -20 0 -100 -60 -20 -80 -40 -20

INPUT LEVEL : VIN (dBV) Fig.10 Linearity (HPR) INPUT LEVEL : VIN (dBV)


Fig.11 Linearity (EXTO)

INPUT LEVEL : VIN (dBV)

Fig.12 Linearity (SPL)

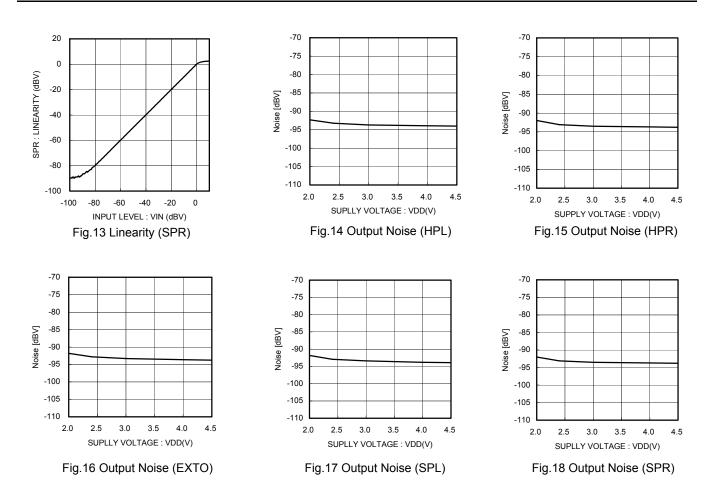

Block Diagram, Recommended application circuit, Pin assign

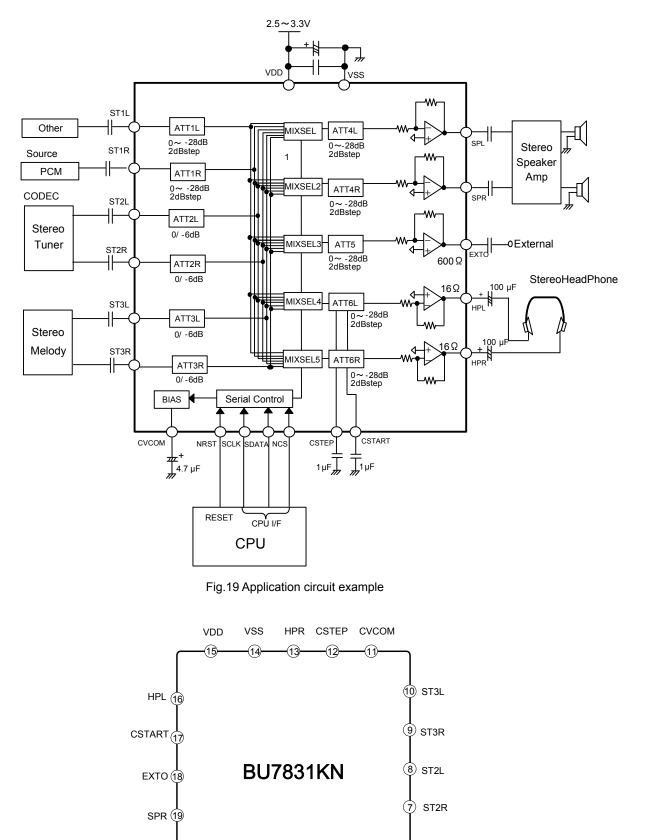



(3)

NCS

4

NRST

5

ST1R

6 ST1L

SPL 20


(1)

SCLK

(2

SDATA

Input terminal equivalent circuit diagram

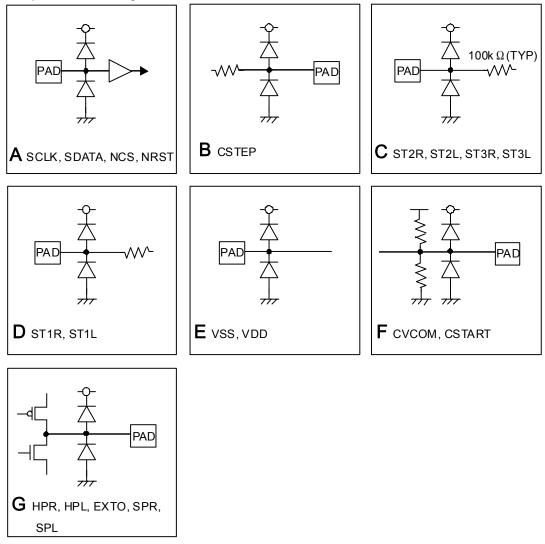

About Digital input (Type A): When you will have possibility to give Hi-z for input pin, You must select from the under heads for protect the pin floated.

a) Pull down with less than 10kohm

b) Pull upc) Give "L" signal just before Hi-Z.

Fig.21 Equivalent circuit diagram

No.	Name	Function	No.	Name	Function
1	SCLK	Serial clock input of CPU I/F	11	CVCOM	Reference voltage
2	SDATA	Serial data input of CPU I/F	12	CSTEP	Connect capacitor for blocking pop-noise
3	NCS	Chip select input of CPU I/F	13	HPR	Headphone R channel output
4	NRST	Reset input L=Reset	14	VSS	Ground
5	ST1R	Stereo 1 input for R channel	15	VDD	Power supply
6	ST1L	Stereo 1 input for L channel	16	HPL	Headphone L channel output
7	ST2R	Stereo 2 input for R channel	17	CSTART	Connect capacitor for blocking start up pop-noise
8	ST2L	Stereo 2 input for L channel	18	EXTO	600Ω driver output
9	ST3R	Stereo 3 input for R channel	19	SPR	Speaker R channel output
10	ST3L	Stereo 3 input for L channel	20	SPL	Speaker L channel output

Detail explanation of each function blocks


Reference Voltage (Bias part)

The reference voltage occurrence part that decides the operating point of a group of internal amplifiers is the following. CVCOM_OUT, CSTART_OUT, all is about 1/2VDD[V], and therefore the level of internal signal becomes about 1/2VDD[V], too. CVCOM has a pre-charge function, and it is possible to shorten of rising time of the bias in ON.

(As for the CVCOM, ON/OFF of the pre-charge function is possible with a register bit.)

CSTART terminal is used as a reference voltage of the output amplifier of the headphone, and it included pop sound low stage function in headphone path ON/ OFF, too.

Capacitor value with the outside in the figure is recommended to make the PSRR character of both standard voltages the same. Choose the thing whose character is good in Capacitor with the outside because it becomes the reference voltage of the internal circuit.

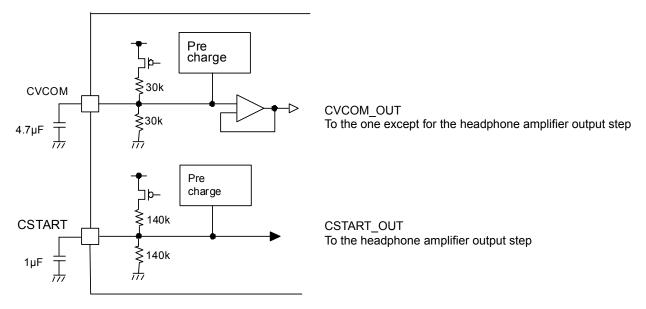



Analog input part

The following is about each analog. Input. Please use the coupling capacitor with the outside in consideration of frequency characteristic of input. Input DC level is about 1/2VDD[V]. Input impedance on off (input non-choice) becomes Hi-z. When an input terminal isn't used (when an input path isn't set up) is open, and there is no problem. But, be careful that noise from the outside and so on doesn't turn because it becomes Hi-z. When it is anxious, pull-down in about 100k Ω . ST1L and ST1R inputs change input impedance by setting of ATT1L and ATT1R respectively.

ST1L(R) input impedance	ATT1 L (R) setting
200kΩ(TYP)	0dB setting
400kΩ(TYP)	Mute setting

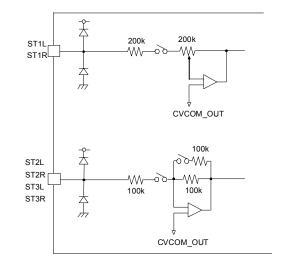


Fig.23 Input pins equivalent circui

Analog output part

The following is about Analog output part (EXTO, SPL, SPR, HPL, HPR). Each output amplifier is linked path select (MIXER1~5).

Because stereo output is presumed, HPL and HPR are turned ON/OFF at the same time, and with pop sound decrease function. MIXER1 At the time of path choice SPL output amplifier ON

MIXER1	At the time of path choice
MIXER2	At the time of path choice
MIXER3	At the time of path choice
MIXER4 or MIXER5	At the time of path choice

SPL output amplifier ON SPR output amplifier ON EXTO output amplifier ON HPL, HPR output amplifier ON


Be careful that noise from the outside and so on doesn't turn because it becomes Hi-z though the output that isn't used is open and there is no problem. When it is anxious, pull-down in about $100k\Omega$.

Output Port	Output impedance (DC) At ON	Output impedance (DC) At OFF
EXTO	1.4Ω	Hi-z
SPL SPR	2.2 Ω	Hi-z
HPL	1.5Ω	GND short
HPR	0.6Ω	Short Short

Attenuator

Each attenuator has 16 steps (4bit), which contains mute. ATT6L and ATT6R that is attenuator of the headphone output has soft mute that decreases pop sound in switching. (ATT1 - 5 don't have this function.)

The amount of software depends on a capacitor to connect to the CSTEP terminal. Decide the value of a capacitor to connect to the CSTEP terminal after you take pop volume and delay time into consideration because a fixed number becomes the bottom mostly at the time of that switching.

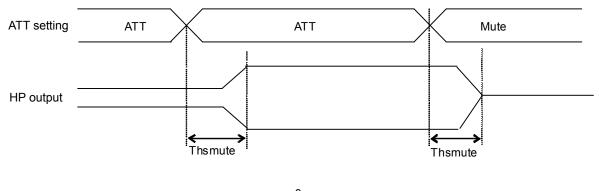

Thsmute=200×10³×CSTEP [S]


Fig.24

Analog path part

About the internal pass circuit, the circuit that it has a path setting by the register turns it on. For example, when MIXSEL*_0 is chosen with either ATT, ST1R input is chosen, and a group of input amplifiers of ST1R turns it on. And a connected output amplifier is turned on when either input is chosen with MIXSEL* in the same way to the output circuit.

· Pop sound decrease circuit at the time of head phone output ON/ OFF

It has the function that decreases pop sound that occurs at the time of ON/ OFF of the headphone output (HPL and HPR). When headphone output is chosen/non-chosen, it is the function that the DC output of the headphone output goes down smoothly on falling/rising. Rising time is decided by the capacitor value that it is connected to the CSTART terminal. Falling time is decided by the CSTART terminal and the coupling capacitor. Pop sound decreases as much as to be here if rising/falling is smooth. Decide the value of a capacitor to connect to the CSTART terminal after you take pop sound, rising/falling time into consideration because a fixed number becomes the bottom mostly at the time of that switching. And do settlement of timing in consideration of this time when you make it turn ON/OFF by the continuance. Pop sound is made when it switches in the middle of the descent of rising/falling.

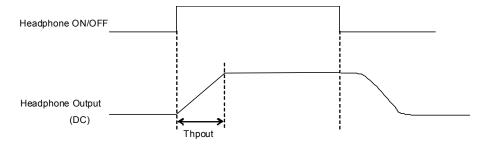

Thpout= $80.6 \times 10^3 \times CSTART[S]$



Digital part

Input such as clock, data is to input "H" or "L" properly about each digital input terminal to contain at the time of standing by as well. If you turn off the power (When Hi-z is input), a control side is to avoid an input terminal's becoming open in either following method It has the possibility that penetration electric current occurs because it becomes the input which isn't fixed as BU7831KN when it isn't avoided.

- a) Terminal, in less than $10k\Omega$, pull-down
- b) Terminal, pull-up
- c) When it becomes input Hi-z, "L" is given to it.

CPU interface

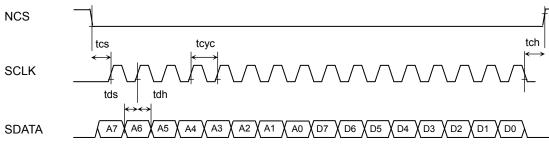


Fig.26

SDATA will be confirmed by 16th clock that is inputted after NCS falling edge, and then serial data reflect to internal register by NCS falling edge. The data format is 16bit rear.

CPU I/F is 1Byte=16bit. Because it doesn't cope with continuous data transmission, you must surely insert the section of NCS= "H" between 1st Byte and 2nd Byte. The following the is to secure time beyond the SCLK 1 clock. (th≧tcyc)


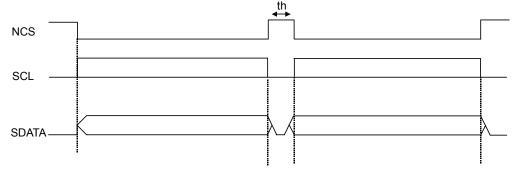



Fig.27

Using in the BU7831KN dedicated line is recommended with a CPU I/F. Control it by a sequence like the bottom when you don't do special control.





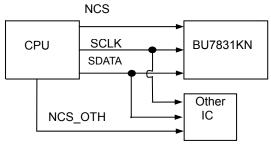

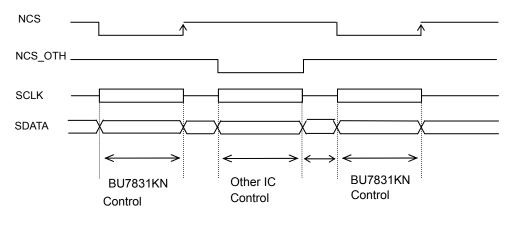



Please NCS of BU7831KN is set "H" when you control the other IC. When NCS is "H", the register of BU7831KN can't write it.


note) NCS_OTH is based on the specifications of other IC's.

Recommended operation sequence

VDD ON


NRST=L start. Rise up VDD first.

After the mode setting, input the audio signal.

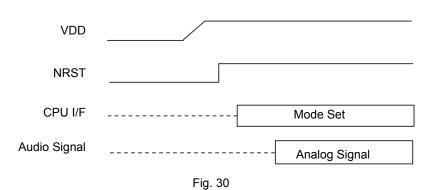


VDD OFF

HPRST=0(82h=00h) is taken at the time of use of HPAMP first. VDD OFF, after the mute on setting(88h=FFh), NRST=L at using HPAMP. VDD OFF, after NRST=L at not using HPAMP.

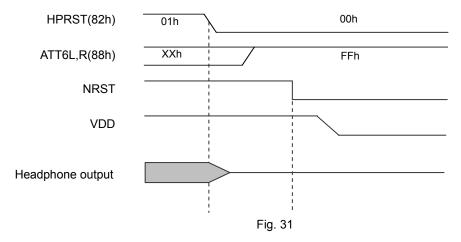

HPAMP ON

Mute OFF (HPRST 82h bit0), after the mode setting.

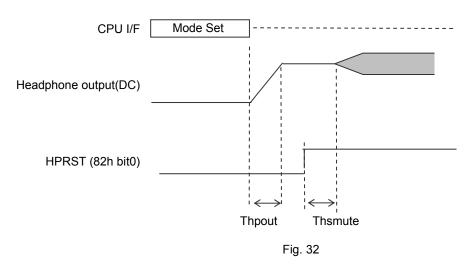


• HPAMP OUTPUT rise time setting up expression Thpout = $80.6 \times 10^3 \times \text{CSTART [s]}$ (typ)

[•] HSMUTE delay time setting up expression Thsmute = $200 \times 10^3 \times \text{CSTEP}[s]$ (typ)


HPAMP OFF

HPRST=0(82h bit0) is set up first. Other setups are canceled after ATT6L, R is set up in the mute(88h=ffh).

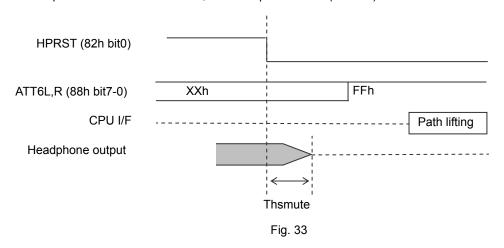


HPAMP Volume Control

As the mute time is set by capacitor connected CSTEP pin,Volume control it is set after enough time. The delay time is as same as Thsmute.

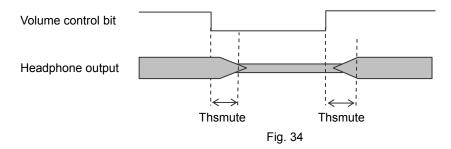

Mode Setting Flow

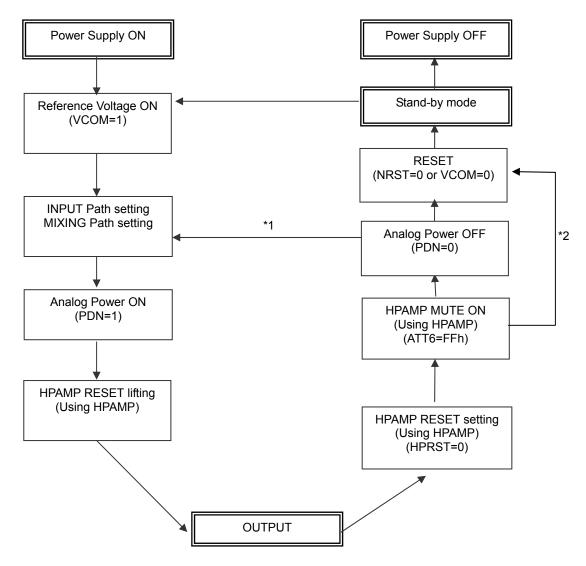

*1 : When the analog path setting is not changed. (Repeat output)*2 : When the Power supply OFF, after output.

Fig. 35

Notes for use

1) Absolute maximum ratings

An excess in the absolute maximum ratings, such as supply voltage, temperature range of operating conditions, etc., can break down the devices, thus making impossible to identify breaking mode, such as a short circuit or an open circuit. If any over rated values will expect to exceed the absolute maximum ratings, consider adding circuit protection devices, such as fuses.

- 2) Operating conditions Characteristics are guaranteed under the conditions of each specified parameter.
- Reverse polarity connection of the power supply Connecting of the power supply in reverse polarity can damage IC. Take precautions when connecting the power supply lines. An external direction diode can be added.
- 4) Power supply line

Design PCB layout pattern to provide low impedance GND and supply lines. To obtain a low noise ground and supply line, separate the ground section and supply lines of the digital and analog blocks.

Furthermore, for all power supply terminals to ICs, connect a capacitor between the power supply and the GND terminal. When applying electrolytic capacitors in the circuit, note that capacitance characteristic values are reduced at low temperatures.

5) GND voltage

GND potential should maintain at the minimum ground voltage level. Furthermore, no terminals should be lower than the GND potential voltage including electric transients.

- 6) Short circuit between terminals and GND or other devices Pay attention to the assembly direction of the ICs. Wrong mounting direction or shorts between terminals to GND, or other components on the circuits, can damage the IC.
- Operation in a strong electromagnetic field Using the ICs in a strong electromagnetic field can cause operation malfunction.
- 8) Inspection with set PCB

During testing, turn on or off the power before mounting or dismounting the board from the test board. Do not power up the board without waiting for the output capacitors to discharge. The capacitors in the low output impedance terminal can stress the device. Pay attention to the electro static voltages during IC handling, transportation, and storage.

9) Input terminals

In terms of the construction of IC, parasitic elements are inevitably formed in relation to potential. The operation of the parasitic element can cause interference with circuit operation, thus resulting in a malfunction and breakdown of the input terminal. Therefore, pay thorough attention not to apply a voltage lower than the GND to the input terminals. Furthermore, do not apply a voltage to the input terminals when no power supply voltage is applied to the IC. In addition, even if the power supply voltage is applied, apply a voltage lower than the power supply voltage to the input terminals, or a voltage within the guaranteed value of electrical characteristics.


10) Ground wiring patterns

The power supply and ground lines must be as short and thick as possible to reduce line impedance. Fluctuating voltage on the power ground line may damage the device.

11) External capacitor

When using external ceramic capacitors, consider degradation in the nominal capacitance value due to DC bias and changes in the capacitance with temperature.

Power Dissipation

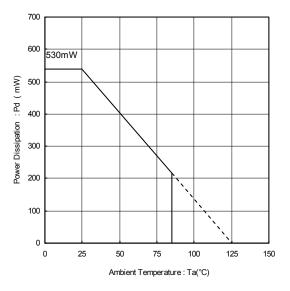


This value is the measurement value that was mounted on the PCB by ROHM Material : Grass epoxy Size : 70mm × 70mm × 1.6mm


Fig.36

BU7831KN

Ordering part number

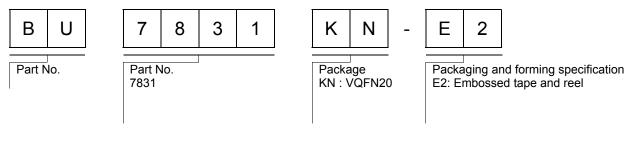

VQFN20

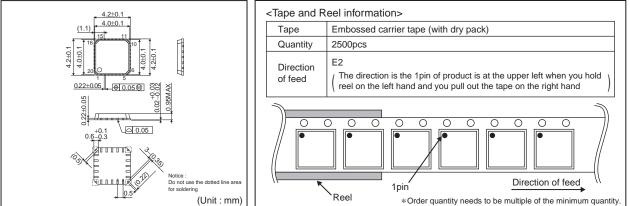

NI -	continue of the destinant is such as in the large sector of the sector of
	copying or reproduction of this document, in part or in whole, is permitted without the sent of ROHM Co.,Ltd.
The	content specified herein is subject to change for improvement without notice.
"Prc	content specified herein is for the purpose of introducing ROHM's products (hereinafte oducts"). If you wish to use any such Product, please be sure to refer to the specifications ch can be obtained from ROHM upon request.
illus	mples of application circuits, circuit constants and any other information contained herein trate the standard usage and operations of the Products. The peripheral conditions mus aken into account when designing circuits for mass production.
How	at care was taken in ensuring the accuracy of the information specified in this document vever, should you incur any damage arising from any inaccuracy or misprint of sucl rmation, ROHM shall bear no responsibility for such damage.
exar impl othe	technical information specified herein is intended only to show the typical functions of and mples of application circuits for the Products. ROHM does not grant you, explicitly o licitly, any license to use or exercise intellectual property or other rights held by ROHM and er parties. ROHM shall bear no responsibility whatsoever for any dispute arising from the of such technical information.
equi	Products specified in this document are intended to be used with general-use electronic ipment or devices (such as audio visual equipment, office-automation equipment, commution devices, electronic appliances and amusement devices).
The	Products specified in this document are not designed to be radiation tolerant.
	le ROHM always makes efforts to enhance the quality and reliability of its Products, a duct may fail or malfunction for a variety of reasons.
agai failu shal	use be sure to implement in your equipment using the Products safety measures to guard inst the possibility of physical injury, fire or any other damage caused in the event of the re of any Product, such as derating, redundancy, fire control and fail-safe designs. ROHM I bear no responsibility whatsoever for your use of any Product outside of the prescribed op or not in accordance with the instruction manual.
syst may instr cont of th	Products are not designed or manufactured to be used with any equipment, device o em which requires an extremely high level of reliability the failure or malfunction of which result in a direct threat to human life or create a risk of human injury (such as a medica rument, transportation equipment, aerospace machinery, nuclear-reactor controller, fuel- troller or other safety device). ROHM shall bear no responsibility in any way for use of any ne Products for the above special purposes. If a Product is intended to be used for any n special purpose, please contact a ROHM sales representative before purchasing.
be c	bu intend to export or ship overseas any Product or technology specified herein that may controlled under the Foreign Exchange and the Foreign Trade Law, you will be required to ain a license or permit under the Law.



Thank you for your accessing to ROHM product informations. More detail product informations and catalogs are available, please contact us.

ROHM Customer Support System

http://www.rohm.com/contact/