



ENOCEAN 3 CLICK

PID: MIKROE-3653
Weight: 20 g

EnOcean 3 Click carries an ultra-low power TCM515 transceiver gateway module which operates at 868MHz radio band, perfectly suited for the realization of transceiver gateways, actuators and controllers for systems communicating based on the EnOcean radio standard. For communication to other devices we have implemented PCB antenna on the board making this click ready to use device which can filter, decrypt and authenticate traffic before forwarding it to the processor or PC over UART.


EnOcean 3 click is supported by a mikroSDK compliant library, which includes functions that simplify software development. This Click board™ comes as a fully tested product, ready to be used on a system equipped with the mikroBUS™ socket.

Note: EnOcean 3 click is intended and certified to be used in Europe region.

EnOcean 3 click features TCM515 module, a low-powered wireless module which is intended for use together with EnOcean's range of energy harvesting modules. This module is also optimized for application requiring the smallest possible size and integrated security handling such as line-powered actuators or controllers.

HOW DOES IT WORK?

The EnOcean 3 click uses TCM515 module from the company EnOcean, which operates on 868MHz ASK EnOcean Radio Protocol. It's fully integrated radio capability enables communications with other devices by using onboard PCB antenna, so no additional antennas are needed for testing this device.

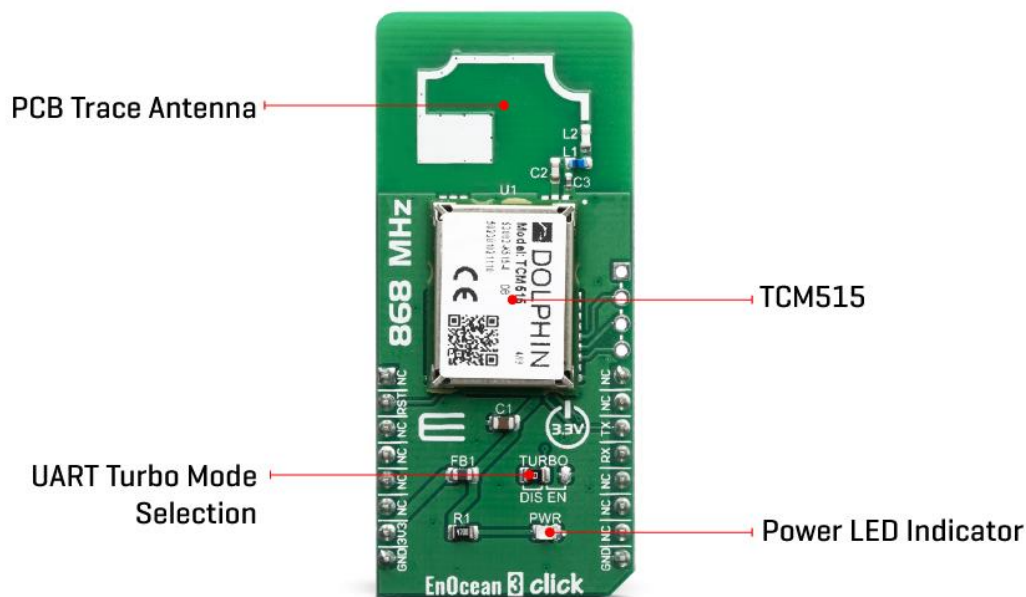

The TCM 515 can work in three functional modes: Telegram Reception, Telegram Transmission, Low Power Sleep.

- In receive mode, TCM 515 processes received radio telegrams and verify correct frame structure and checksum.
- In transmit mode, TCM 515 receives radio-telegrams for transmission from the external host via its ESP3 interface.
- TCM 515 can be set into a low power sleep mode for a defined period of time, after the expiry of the requested sleep period, TCM 515 will automatically wake-up and transition back to receive mode.

Each TMC515 module contains its own EnOcean Unique Radio ID (EURID) which can be used during transmission for data authentication. Besides this feature, it's also possible setting for each module Base ID or Broadcast ID depending on the application that you are designing.

Another important feature is SLF (**Security Level Format**) which specifies the parameters of the encryption, authentication and rolling code algorithms used for communication with a specific device, which enables TCM515 to encrypt and decrypt telegrams using AES128 based on a 16-byte security key.

The TCM 515 provides a transparent radio link between EnOcean radio devices and an external host connected via UART interface using the standardized EnOcean Serial Protocol V3 (ESP3) communication protocol. The default interface speed for this module of the ESP3 (UART) interface is 57600. Additionally, it is possible to change the default ESP3 interface speed at power up from 57600 Bit per second to 460800 Bit per second by moving **TURBO** jumper to EN position.

This Click Board™ is designed to be operated only with 3.3V logic level. A proper logic voltage level conversion should be performed before the Click board™ is used with MCUs with logic levels of 5V. It is ready to be used as soon as it is inserted into a mikroBUS™ socket of the development system.

ENOCEAN SERIAL PROTOCOL 3.0 (ESP3)

EnOcean technology is based on the energetically efficient exploitation of slight mechanical motion and other potentials from the environment, such as indoor light and temperature differences, using the principles of energy harvesting. EnOcean-based products (such as sensors and light switches) perform without batteries and are engineered to operate maintenance-free. The radio signals from these sensors and switches can be transmitted wirelessly over a distance of up to 300 meters in the open and up to 30 meters inside buildings.

The ESP3 is a Point-to-Point protocol with a packet data structure. The maximum size of transferred data is 65535 bytes, with the packet being only 14 bytes long and are transmitted at 125 kbit/s. Compared with ESP2.0, that has a maximum of 25 bytes, it's a considerable improvement.

For detailed information, please refer to the ESP3 specification.


SPECIFICATIONS

Type	Sub-1 GHz Transceivers
Applications	Perfectly suited for the realization of transceiver gateways, actuators and controllers for systems communicating based on the EnOcean radio standard.

On-board modules	TCM515 module from the company EnOcean, which operates on 868MHz ASK EnOcean Radio Protocol.
Radio Region	Europe
Key Features	Low power consumption, small size, higher processor performance, integrated security processing, PCB antenna
Interface	UART
Input Voltage	3.3V
Click board size	L (57.15 x 25.4 mm)

PINOUT DIAGRAM

This table shows how the pinout on EnOcean 3 click corresponds to the pinout on the mikroBUS™ socket (the latter shown in the two middle columns).

Notes	Pin					Pin	Notes
	NC	1	AN	PWM	16	NC	
Reset	RST	2	RST	INT	15	NC	
	NC	3	CS	RX	14	TX	UART Transmit
	NC	4	SCK	TX	13	RX	UART Receive
	NC	5	MISO	SCL	12	NC	
	NC	6	MOSI	SDA	11	NC	

Power Supply	3.3V	7	3.3V	5V	10	NC	
Ground	GND	8	GND	GND	9	GND	Ground

ONBOARD SETTINGS AND INDICATORS

Label	Name	Default	Description
LD1	PWR	-	Power LED Indicator
JP1	TURBO	Left	Left position TURBO mode disabled; Right position TURBO mode enabled

ENOCLEAN 3 CLICK ELECTRICAL SPECIFICATIONS

Description	Min	Typ	Max	Unit
Operation freq band	-	868.3	-	MHz
Data Rate	-	125	-	kbps
UART Baud rate	57600	-	460800	kHz
Supply Voltage	2	3.3	3.6	V

SOFTWARE SUPPORT

We provide a library for the EnOcean 3 click on our LibStock page, as well as a demo application (example), developed using MikroElektronika compilers. The demo can run on all the main MikroElektronika development boards.

Library Description

The library initializes and defines the I2C bus driver and drivers that offer a choice for reading data from the register. The library includes a function for reading Temperature data and function for reading and set temperature hysteresis and limit. The user also has the function for configuration chip and read Interrupt (INT pin) state.

Key functions:

- `void enocean3_response_handler_set(void (*handler)(T_enocean3_packet*, uint16_t*))` - The function sets the handler on the function that should be performed.
- `void enocean3_uart_isr(void)` - The function reads every single byte from the device, performs a crc8 check for header and data packet and makes a received response.
- `uint8_t enocean3_sendPacket(T_enocean3_packet *packet)` - The function sends a packet data to the device by using a UART interface.

Examples description

The application is composed of three sections :

- System Initialization - Initializes peripherals and pins.
- Application Initialization - Initializes UART interface and interrupt.
- Application Task - (code snippet) - Always checks do response packet ready, and if is ready calls a function to get response packet and makes a decision what will be performed, depending on the received response.

```
void applicationTask()
{
    checkResponse();
}
```

Additional Functions :

- `makeResponse` - Gets a response packet from the driver.
- `logResponse` - Shows a data packet to the UART terminal.
- `logExample` - Shows which button is pressed to the UART terminal.
- `checkResponse` - Checks does response ready or not.
- `interrupt` - To get a response from the device.

The full application code, and ready to use projects can be found on our LibStock page. Other mikroE Libraries used in the example:

- Conversions
- UART

Additional notes and informations

Depending on the development board you are using, you may need USB UART click, USB UART 2 click or RS232 click to connect to your PC, for development systems with no UART to USB interface available on the board. The terminal available in all MikroElektronika compilers, or any other terminal application of your choice, can be used to read the message.

MIKROSDK

This Click board™ is supported with mikroSDK - MikroElektronika Software Development Kit. To ensure proper operation of mikroSDK compliant Click board™ demo applications, mikroSDK should be downloaded from the LibStock and installed for the compiler you are using.

For more information about mikroSDK, visit the official page.

DOWNLOADS

mikroBUS™ Standard specification

LibStock: mikroSDK

Click board catalog

EnOcean 3 click example on Libstock

TCM 515 User Manual

EnOcean 3 click 2D and 3D files

EnOcean 3 click schematic



<https://www.mikroe.com/enOcean-3-click/7-16-19>