# QUINT-PS/24DC/24DC/20/CO

DC/DC converter with SFB technology, dip-coated, primary-switched, input: 24 V DC, output: 24 V DC, output current: 20 A

Data sheet 105539 en 01

© PHOENIX CONTACT 2014-02-13



# 1 Description

QUINT DC/DC converter – superior system availability from SFB technology

Compact DC/DC converters from the new QUINT POWER generation maximize your system availability. With SFB technology (Selective Fuse Breaking Technology), 6-fold nominal current for 12 ms, it is possible to trigger even standard circuit breakers reliably and quickly. Faulty current paths are switched off selectively, the fault is located, and important system parts remain in operation. Comprehensive diagnostics are provided through constant monitoring of the input voltage, output voltage and output current. Preventive function monitoring visualizes critical operating states and indicates them to the controller before errors can occur.

The application fields for DC/DC converters are numerous

- Changing the voltage level
- Refreshing the output voltage for constant voltage at the end of long cables
- Setup of independent supply systems by electrical isolation

#### **Features**

- Wide-range voltage input
- Galvanic isolation
- Reverse polarity protection
- Preventive function monitoring
- Reliable starting of difficult loads with POWER BOOST static power reserve
- Fast tripping of standard circuit breakers with dynamic SFB technology power reserve
- High MTBF > 554,000 h (40°C)

#### Flexible use

- Dip coating enables use in oxidizing and sulfidizing atmospheres with humidities of up to 100 %
- Adjustable output voltage
- Can be used in Class I, Division 2, Groups A, B, C, D (Hazardous Location) ANSI-ISA 12.12



Make sure you always use the latest documentation. It can be downloaded from the product at <a href="mailto:phoenixcontact.net/products.">phoenixcontact.net/products.</a>



<b>2</b> 1	Table of contents Description	1
2	Table of contents	2
3	Ordering data	3
4	Technical data	4
5	Safety regulations and installation notes	8
6	Basic circuit diagram	g
7	Structure	9
8	Installation	
9	Dimensions and mounting positions	10
10	Mounting on DIN rails	
. •	10.1 Normal mounting position	
	10.2 Rotated mounting position (270° Y-axis)	11
11	Input	
	11.1 Protection of the primary side	
12	Output	
13	12.1 Protecting the secondary side  Output characteristic curve	
14	SFB technology	
	14.1 Circuit breaker tripping characteristics	
	14.3 Deactivating SFB technology	
	14.4 SFB configuration	14
15	Signaling	
	15.1 Active switching output "DC OK"	
	15.2 Active switching output "I < IN"	
	15.3 Active switching output "UIN > 19.2 V"	
10	• •	
16	Derating	
	16.2 Voltage-dependent derating	
	16.3 Position-dependent derating	
17	Operating modes	20
	17.1 Series operation	
	17.2 Parallel operation	
	17.3 Redundant operation	
	17.4 Increasing power	21

# 3 Ordering data

Description	Туре	Order No.	Pcs. / Pkt.
Primary-switched QUINT DC/DC converter for DIN rail mounting, input: 24 V DC, output: 24 V DC/20 A, dip-coated PCB, with integrated SFB (selective fuse breaking) technology, including mounted universal DIN rail adapter UTA 107	QUINT-PS/24DC/24DC/20/CO	2320568	1
Accessories	Туре	Order No.	Pcs. / Pkt.
Primary-switched QUINT power supply for DIN rail mounting, input: 1-phase, output: 24 V DC/40 A, with integrated SFB (selective fuse breaking) technology, including mounted universal DIN rail adapter UTA 107	QUINT-PS/ 1AC/24DC/40	2866789	1
Primary-switched QUINT power supply for DIN rail mounting, input: 3-phase, output: 24 V DC/40 A, with integrated SFB (selective fuse breaking) technology, including mounted universal DIN rail adapter UTA 107	QUINT-PS/ 3AC/24DC/40	2866802	1
Active QUINT redundancy module for DIN rail mounting with integrated SFB (selective fuse breaking) technology and monitoring functions, input: 24 V DC, output: 24 V DC/2 x 20 A or 1 x 40 A, including mounted universal DIN rail adapter UTA 107/30	QUINT-ORING/24DC/2X20/1X40	2320186	1
Universal DIN rail adapter	UTA 107	2853983	5
Universal wall adapter	UWA 182/52	2938235	1
Assembly adapter for QUINT POWER 10A on S7-300 rail	QUINT-PS-ADAPTERS7/2	2938206	1
Thermomagnetic device circuit breaker, 1-pos., tripping characteristic SFB, 1 PDT contact, plug for base element.	CB TM1 1A SFB P	2800836	1
Thermomagnetic device circuit breaker, 1-pos., tripping characteristic SFB, 1 PDT contact, plug for base element.	CB TM1 2A SFB P	2800837	1
Thermomagnetic device circuit breaker, 1-pos., tripping characteristic SFB, 1 PDT contact, plug for base element.	CB TM1 3A SFB P	2800838	1
Thermomagnetic device circuit breaker, 1-pos., tripping characteristic SFB, 1 PDT contact, plug for base element.	CB TM1 4A SFB P	2800839	1
Thermomagnetic device circuit breaker, 1-pos., tripping characteristic SFB, 1 PDT contact, plug for base element.	CB TM1 5A SFB P	2800840	1
Thermomagnetic device circuit breaker, 1-pos., tripping characteristic SFB, 1 PDT contact, plug for base element.	CB TM1 6A SFB P	2800841	1
Thermomagnetic device circuit breaker, 1-pos., tripping characteristic SFB, 1 PDT contact, plug for base element.	CB TM1 8A SFB P	2800842	1
Thermomagnetic device circuit breaker, 1-pos., tripping characteristic SFB, 1 PDT contact, plug for base element.	CB TM1 10A SFB P	2800843	1
Thermomagnetic device circuit breaker, 1-pos., tripping characteristic SFB, 1 PDT contact, plug for base element.	CB TM1 12A SFB P	2800844	1
Thermomagnetic device circuit breaker, 1-pos., tripping characteristic SFB, 1 PDT contact, plug for base element.	CB TM1 16A SFB P	2800845	1



Our range of accessories is being continually extended, our current range can be found in the download area.

# 4 Technical data

Input data	
Nominal input voltage	24 V DC
Input voltage range	18 V DC 32 V DC
Extended input voltage range in operation	14 V DC 18 V DC (Derating)
Current consumption	28 A (24 V, I <sub>BOOST</sub> )
Inrush current limitation	< 26 A (typical)
1 <sup>2</sup> t	$< 11 \text{ A}^2\text{s}$
Power failure bypass	> 10 ms (24 V DC)
Protective circuit	Transient surge protection Varistor
Protection against polarity reversal	Yes , ≤ 30 V DC
Output data	
Nominal output voltage	24 V DC ±1%
Setting range of the output voltage	18 V DC 29.5 V DC (> 24 V constant capacity)
Output current	20 A (-25 °C 60 °C) 25 A (with POWER BOOST, -25 °C 40 °C permanently, U <sub>OUT</sub> = 24 V DC) 120 A (SFB technology, 12 ms)
Magnetic fuse tripping	B2 / B4 / B6 / B10 / B16 / C2 / C4 / C6
Current limitation	Approximately 29 A
Max. capacitive load	Unlimited
Control deviation	< 1 % (change in load, static 10 % 90 %) < 2 % (change in load, dynamic 10 % 90 %) < 0.1 % (change in input voltage ±10 %)
Efficiency	> 93 %
Ascent time	< 2 ms (U <sub>OUT</sub> (10 % 90 %))
Residual ripple	< 20 mV <sub>PP</sub>
Peak switching voltages	< 10 mV <sub>PP</sub> (20 MHz)
Connection in parallel	Yes, for redundancy and increased capacity
Connection in series	Yes
Protection against surge voltage on the output	< 35 V DC
Resistance to reverse feed	35 V DC
Power consumption	
Maximum power dissipation NO-Load	2.2 W
Power loss nominal load max.	39 W
Status and diagnostic indicator DC OK active	
Active switching output	U <sub>OUT</sub> > 0.9 x U <sub>N</sub> : High signal
Voltage	18 V DC 24 V DC
Current	< 20 mA (short-circuit resistant)
Status display	"DC OK" LED green / $U_{OUT}$ < 0.9 x $U_{N}$ : LED flashing
Status and diagnostic indicator POWER BOOST, ac	tive
Active switching output	$I_{OUT} < I_N$ : High signal
Voltage	18 V DC 24 V DC
Current	< 20 mA (short-circuit resistant)
Status display	"BOOST" LED yellow/I <sub>OUT</sub> > I <sub>N</sub> : LED on

Status and diagnostic indicator U <sub>IN</sub> OK, active	
Active switching output	U <sub>IN</sub> > 19.2 V: High signal
Voltage	18 V DC 24 V DC
Current	≤ 20 mA (short-circuit resistant)
Status display	LED "U <sub>IN</sub> < 19.2 V" yellow/U <sub>IN</sub> < 19.2 V DC: LED on
Status and diagnostic indicator DC OK floating	
Active switching output	Relay
Voltage	≤ 30 V AC/DC
Current	≤ 100 mA
Status display	U <sub>OUT</sub> > 0.9 x U <sub>N</sub> : Contact closed
General data	
Insulation voltage input/output	1.5 kV (type test) 1 kV (routine test)
MTBF	> 554000 h (According to EN 29500)
Normal mounting position	horizontal DIN rail NS 35, EN 60715
Dimensions W/H/D (normal mounting position/delivered condition)	82 mm / 130 mm / 125 mm
Dimensions W / H / D (X-axis rotated 270°)	122 mm / 130 mm / 85 mm
Weight	1.7 kg
Housing	
Degree of protection	IP20
Type of housing	Aluminum (AIMg3)
Hood version	Galvanized sheet steel, free from chrome (VI)
Input connection data	
Connection method	Screw connection
Conductor cross section, solid	0.5 mm <sup>2</sup> 16 mm <sup>2</sup>
Conductor cross section, stranded	0.5 mm <sup>2</sup> 16 mm <sup>2</sup>
Conductor cross section AWG/kcmil	8 6
Stripping length	10 mm
Screw thread	M3
Tightening torque	1.2 Nm 1.5 Nm
Connection data, output/signals	
Connection method	Screw connection
Conductor cross section, solid	0.2 mm <sup>2</sup> 6 mm <sup>2</sup>
Conductor cross section, stranded	0.2 mm <sup>2</sup> 4 mm <sup>2</sup>
Conductor cross section AWG/kcmil	12 10
Stripping length	8 mm
Screw thread	M3

105539\_en\_01 PHOENIX CONTACT 5

0.5 Nm ... 0.6 Nm

Tightening torque

Ambient conditions	
Protection class	III
Ambient temperature (operation)	-25 °C 70 °C (> 60 °C derating)
Ambient temperature (start-up type tested)	-40 °C
Ambient temperature (storage/transport)	-40 °C 85 °C
Max. permissible relative humidity (operation)	100 % (at 25 °C, non-condensing)
Vibration (operation)	< 15 Hz, amplitude ±2.5 mm (according to IEC 60068-2-6) 15 Hz 150 Hz, 2.3g, 90 min.
Shock	30 g in each direction, according to IEC 60068-2-27
Pollution degree in acc. with EN 50178	2
Climatic class	3K3 (in acc. with EN 60721)
Standards	
Electrical Equipment for Machinery	EN 60204
Electrical safety (of information technology equipment - Safety - Part 1)	EN 60950-1/VDE 0805 (SELV)
Electronic equipment for use in electrical power installations	EN 50178/VDE 0160 (PELV)
SELV	EN 60950-1 (SELV) EN 60204 (PELV)
Safe isolation / protection against electric shock	DIN VDE 0100-410
Approvals	
ATEX	II 3 G Ex nA nC IIC T4 Gc
IECEx	Ex nA nC IIC T4 Gc
UL approvals	UL applied for
Shipbuilding	Germanischer Lloyd (EMC 1)

Noise immunity according to EN 61000-6-2			
		EN 61000-6-2 requirement	Tested
Electrostatic discharge EN 61000-4-2			
Housing contact discl	harge	4 kV (Test intensity 2)	8 kV (Test intensity 4)
Housing air discl	harge	8 kV (Test intensity 3)	15 kV (Test intensity 4)
Comr	ments	Criterion B	Criterion A
Electromagnetic HF field EN 61000-4-3			
Frequency r	range	80 MHz 1 GHz	80 MHz 1 GHz
Test field stro	rength	10 V/m	10 V/m
Frequency r	range	1.4 GHz 2 GHz	1 GHz 2 GHz
Test field stre	rength	3 V/m	10 V/m
Frequency r	range	2 GHz 2.7 GHz	2 GHz 3 GHz
Test field str	rength	1 V/m	10 V/m
Comr	ments	Criterion A	Criterion A
Fast transients (burst) EN 61000-4-4			
	Input	2 kV (Test intensity 3 - asymmetrical)	2 kV (Test intensity 3 - asymmetrica
C	Output	2 kV (Test intensity 3 - asymmetrical)	2 kV (Test intensity 3 - asymmetrica
\$	Signal	1 kV (Test intensity 3 - asymmetrical)	2 kV (Test intensity 4 - asymmetrica
Comr	ments	Criterion B	Criterion A
Surge current loads (surge) EN 61000-4-5			
		0.5 kV (Test intensity 1 - symmetrical) 0.5 kV (Test intensity 1 - asymmetrical)	1 kV (Test intensity 2 - symmetrical) 2 kV (Test intensity 3 - asymmetrical
O		0.5 kV (Test intensity 1 - symmetrical) 0.5 kV (Test intensity 1 - asymmetrical)	1 kV (Test intensity 2 - symmetrical) 2 kV (Test intensity 3 - asymmetrica
S	Signal	1 kV (Test intensity 2 - asymmetrical)	1 kV (Test intensity 2 - asymmetrica
Comr	ments	Criterion B	Criterion A
Conducted interference EN 61000-4-6			
Input/Output/S	Signal	asymmetrical	asymmetrical
Frequency r	range	0.15 MHz 80 MHz	0.15 MHz 80 MHz
Vo	oltage	10 V (Test intensity 3)	10 V (Test intensity 3)
Comr	ments	Criterion A	Criterion A
Emitted interference in acc. with EN 61000-6-3			
Radio interference voltage in acc. with EN 55011		EN 55011 (EN 55022) Class B, area of a	application: Industry and residential
Emitted radio interference in acc. with EN 55011		EN 55011 (EN 55022) Class B, area of a	application: Industry and residential



Current approvals/permissions for the product can be found in the download area under phoenixcontact.net/products.

# 5 Safety regulations and installation notes



Before startup please ensure:

- Only qualified specialist personnel may install, start up, and operate the device.
- Observe the national safety and accident prevention regulations.



#### **NOTE: Danger if used improperly**

- The device is a built-in device.
- The IP20 degree of protection (IEC 60529/EN 60529) of the device is intended for use in a clean and dry environment. Do not subject the device to any load that exceeds the described limits.
- Do not subject the device to mechanical and/or thermal loads that exceed the specified limits.
- Installation and startup may only be carried out by qualified personnel. The relevant country-specific regulations must be observed.
- It is not permissible to open or modify the device. Do not repair the device yourself but replace it with an equivalent device.
   Repairs may only be carried out by the manufacturer. The manufacturer is not liable for damage resulting from violation.



#### **CAUTION:**

Before startup please ensure:

- Connection must be performed by specialist personnel and protection against electric shock ensured.
- It must be possible to switch off the device outside the power supply according to the regulations in EN 60950-1 (e.g., by line protection on the primary side).
- All feed lines are sufficiently protected and dimensioned!
- All output lines are dimensioned according to the maximum output current of the device or separately protected!
- Sufficient convection is guaranteed!



#### **EXPLOSION HAZARD!**

Only remove equipment when it is disconnected and not in the potentially explosive area.

#### **DANGER**

Never carry out work on live parts! The housing can become very hot, depending on the ambient temperature and load!

# 6 Basic circuit diagram

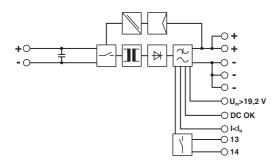


Figure 1 Basic circuit diagram

# 7 Structure

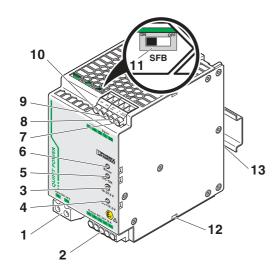


Figure 2 Function elements

- 1 DC input
- 2 DC output
- 3 Potentiometer 18 ... 29.5 V DC
- 4 LED " $U_{IN}$  < 19.2 V", yellow
- 5 "DC OK" LED, green
- 6 LED "BOOST", yellow
- 7  $U_{IN} > 19.2 V$ , active switching output
- 8  $I < I_{IN}$ , active switching output
- **9** DC OK, active switching output
- 10 DC OK relay contact 13/14
- 11 SFB switch (left: SFB activated, right: SFB deactivated)
- 12 Strain relief for connecting cables
- 13 DIN rail adapter

## 8 Installation

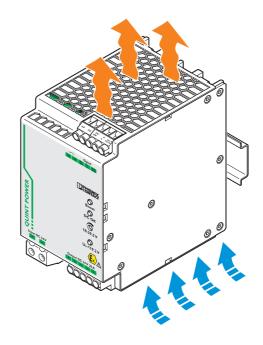


Figure 3 Convection



- To enable sufficient convection, we recommend a minimum vertical spacing of 50 mm from other devices. Lateral spacing of 5 mm, or 15 mm for active components, must be observed in order to ensure correct device function of the DC/DC converter.
- The housing can become very hot depending on the ambient temperature and load of the DC/DC converter.



The DC/DC converter can be snapped onto all DIN rails according to EN 60715 and should be mounted in the normal mounting position (connection terminal blocks on top and bottom).

# 9 Dimensions and mounting positions

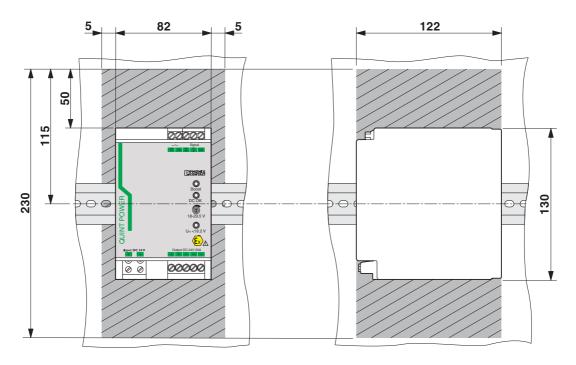


Figure 4 Dimensions

# Possible mounting positions:

Normal mounting position, installation depth 125 mm (+ DIN rail) (delivery state)


Rotated mounting position, 270° Y-axis, installation depth: 85 mm (+ DIN rail)


# 10 Mounting on DIN rails

#### 10.1 Normal mounting position

## Assembly:


Position the DC/DC converter with the DIN rail guide on the top edge of the DIN rail and snap it in by pushing downward.

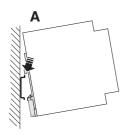


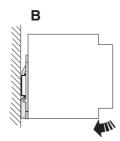

#### Removing:

Pull back the snap-on catch using a screwdriver and detach the DC/DC converter from the bottom edge of the DIN rail.

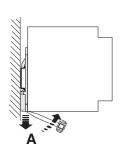

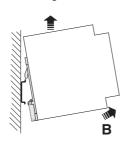

#### 10.2 Rotated mounting position (270° Y-axis)

A rotated mounting position can be achieved for the DC/DC converter by mounting the device on the DIN rail at a 270° angle. Mount the DIN rail adapter (UTA 107) as shown in the figure. No additional mounting material is required. Mounting screws: Torx® T10 (0.8 Nm ... 0.9 Nm tightening torque).




Figure 5 Rotated mounting position (270° Y-axis)



Other mounting positions are also possible. Always observe position-dependent derating.

# 11 Input

Connection to the input voltage is established via the screw connectors on the DC input screw connection.

The DC/DC converter converts a DC voltage of 18 ... 32 V into adjustable, regulated, and electrically isolated output voltage.

The DC/DC converter requires an input voltage of 18 V. During operation, this can drop down to 14 V, then observe the voltage-dependent derating.

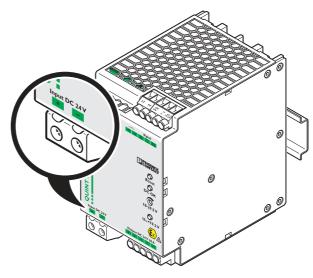


Figure 6 Input

#### 11.1 Protection of the primary side

Installation of the DC/DC converter must correspond to EN 60950 regulations.

**No** internal fuse is provided for device protection. Additional device protection is therefore required.

The connecting cables on the primary side should have large cross sections to keep the voltage drops in the cables as low as possible.

# 12 Output

Connection of the output voltage is established via the screw connectors on the DC output screw connection.

The output voltage can be set on the potentiometer.

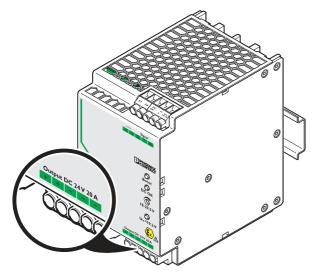


Figure 7 Output

# 12.1 Protecting the secondary side

The DC/DC converter is electronically short-circuit-proof and idling-proof. In the event of an error, the output voltage is limited. It must be ensured that all output cables are dimensioned accordingly for the maximum output current or have separate protection.

The connecting cables on the secondary side should have large cross sections to keep the voltage drops in the cables as low as possible.

# 13 Output characteristic curve

The DC/DC converter works with the POWER BOOST power reserve as shown in the U/I characteristic curve in the figure. At ambient temperatures <  $40^{\circ}\text{C}$ ,  $I_{BOOST}$  is permanently available. It is also available at higher temperatures for a few minutes.

In the event of a secondary-side short circuit or overload, the output current is limited to  $I_{\rm BOOST}.$  In this case, the DC/DC converter does not switch off but supplies output current continuously. The secondary voltage is then reduced until the short circuit is eliminated. The U/I characteristic curve with the POWER BOOST power reserve ensures that high inrush currents of capacitive loads in the primary circuit can be supplied reliably.

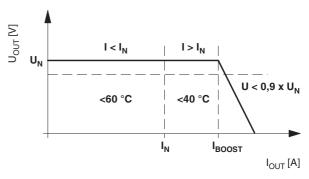


Figure 8 Output characteristic curve

- $U_N = 24 V$
- I<sub>N</sub> = 20 A
- $I_{BOOST} = 25 A$
- SFB technology = 120 A (for 12 ms)
- $P_N = 480 W$
- P<sub>BOOST</sub> = 600 W

# 14 SFB technology

SFB (Selective Fuse Breaking) technology reliably switches off faulty current paths in the event of a short circuit. In this case, it supplies up to six times the nominal current for 12 ms. SFB technology therefore reliably triggers standard circuit breakers. Faults are located reliably and important system parts remain in operation.

## 14.1 Circuit breaker tripping characteristics

Typically, a circuit breaker trips within 3 ... 5 ms. Fast enough to avoid voltage drops of parallel connected loads.

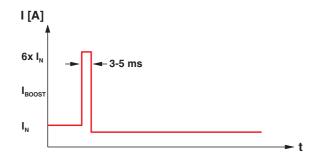


Figure 9 Quick tripping of circuit breakers with SFB technology

#### 14.2 Installation notes

To use the SFB technology of the QUINT DC/DC converter, you must observe the following requirements:

When designing the secondary side, consider the configuration matrix that describes the maximum cable lengths depending on the performance class of the DC/DC converters, the conductor cross section, and the circuit breaker.



The current configuration matrix can be found in the product download area.

- Make sure that the source to be supplied is able to deliver a corresponding current impulse to supply the DC/DC converter. For example, this can be achieved by upstream connection of a QUINT SFB power supply (e. g., QUINT-PS 1AC/24DC/10 combined with a QUINT-PS/24DC/24DC/5) or a suitable battery capacity.
- Ensure the lowest possible cable impedance at the input of the DC/DC converter by using short cable lengths and large cable cross sections.



Observe the maximum distance between the source to be supplied and the DC/DC converter.

(see also SFB configuration)



If conditions cannot be observed, SFB technology can be deactivated.

#### 14.3 Deactivating SFB technology

The DC/DC converter is equipped with an additional SFB switch which can be used to deactivate SFB technology.

The SFB switch is located on the top side of the housing and is accessible for suitable tools, such as a small screwdriver through the vents.

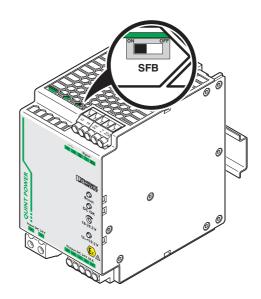


Figure 10 Position of the SFB switch

Switch position	SFB technology status		
left	ON (default setting)		
right	OFF		



Activating/deactivating SFB technology must only be performed when the DC/DC converter is switched off.

#### 14.4 SFB configuration




Figure 11 Cable lengths

Maximum distance from the source to be supplied and the DC/DC converter  $(I_1)$ 

Source to be supplied: QUINT-PS/xA0	C/24DC/40			
Cross section [2mm]	1.5	2.5	4	6
Distance I <sub>1</sub> [m]	2.2	3.6	5.8	8.7
Source to be supplied: battery, 24 V;	7.2 Ah			•
Cross section [2mm]	1.5	2.5	4	6
Distance I <sub>1</sub> [m]	1.1	1.8	2.9	4.3
Source to be supplied: battery, 24 V;	12 Ah			
Cross section [2mm]	1.5	2.5	4	6
Distance I <sub>1</sub> [m]	1.1	1.8	2.9	4.3
Source to be supplied: battery, 24 V;	38 Ah			•
Cross section [2mm]	1.5	2.5	4	6
Distance I <sub>1</sub> [m]	2.2	3.6	5.8	8.7

#### Maximum distance from the source to be supplied and the load (I<sub>2</sub>)

Cross section [2mm]	0.75	1.0	1.5	2.5	4.0	6.0
Distance I <sub>2</sub> with C2 circuit breaker [m]	14	19	29	49	79	< 100
Distance I <sub>2</sub> with C4 circuit breaker [m]	8	11	17	29	47	70
Distance I <sub>2</sub> with C6 circuit breaker [m]	4	5	8	14	22	33
Distance I <sub>2</sub> with B6 circuit breaker [m]	12	17	25	42	68	< 100
Distance I <sub>2</sub> with B10 circuit breaker [m]		9	13	23	37	55
Distance I <sub>2</sub> with B16 circuit breaker [m]			5	9	15	22

The following parameters are the basis for calculation:

- Circuit breaker from Siemens, B and C characteristics (e. g., B6: 5SY6106-6)
- B characteristic: electromagnetic tripping of the circuit breaker at the latest at (5-fold rated current) x (correction factor 1.2 at 0 Hz) = 6-fold rated current
- C characteristic: electromagnetic tripping of the circuit breaker at the latest at (10-fold rated current) x (correction factor 1.2 at 0 Hz) = 12-fold rated current
- Ambient temperature: +20 °C
- The internal resistances of the circuit breakers are considered.
- In addition to short circuit current, the relevant power supply unit supplies half of the nominal current for paths connected in parallel.

# 15 Signaling

The active DC OK signal output, the active POWER BOOST signal output, and the active  $U_{IN}$  OK signal output are available for function monitoring. In addition, the DC OK LED, BOOST LED, and  $U_{IN} < 19.2 \ V$  LED enable function evaluation of the DC/DC converter directly at the installation location.

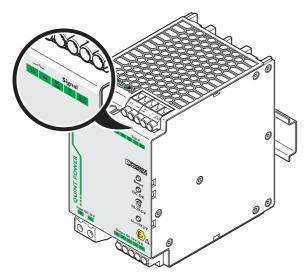


Figure 12 Signal outputs

Meaning

Due to permanent monitoring of input voltage, output voltage and output current, critical operating states are reported before errors occur.

	I < I <sub>N</sub>	I > I <sub>N</sub>		U < 0.9 x U <sub>N</sub>
DC OK LED, green	Lit Lit			Flashing
Boost LED, yellow	OFF	Lit		Lit
"DC OK" active switching output	high	high		low
"I < I <sub>N</sub> " active switching output	high	low		low
DC OK 13/14 relay contact	closed	closed		opened
Meaning	Normal operation	Power Boost active		Overload
	U <sub>IN</sub> > 19.2 V DC		U <sub>IN</sub> < 19.2 V DC	
"U <sub>IN</sub> < 19.2 V" LED, yellow	OFF		Lit	
Active switching output "U <sub>IN</sub> > 19.2 V"	high	low		


U<sub>IN</sub> OK

U<sub>IN</sub> low

#### 15.1 Active switching output "DC OK"


During normal operation of the DC/DC converter, the DC OK output signal ( $U_{OUT} > 0.9 \times U_{N}$ ) is between connection terminal blocks "DC OK" and "-" and can carry a maximum of 20 mA. The DC OK signal output indicates an output voltage underrange of more than 10 % by switching from "active high" to "low".

The DC OK signal is decoupled from the power output. This makes it impossible for devices connected in parallel to act as an external power supply.

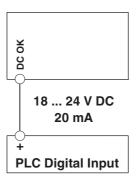


#### 15.2 Active switching output " $I < I_N$ "

During normal operation of the DC/DC converter, the boost output signal (I < I $_{\rm N}$ ) is between connection terminal blocks "I < I $_{\rm N}$ " and "-" and can carry a maximum of 20 mA. The boost signal output indicates that the nominal current has been exceeded and that boost mode has been entered by switching from "active high" to "low".

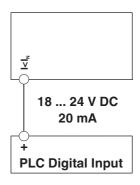

#### 15.3 Active switching output "U<sub>IN</sub> > 19.2 V"


During normal operation of the DC/DC converter, the  $U_{IN} > 19.2$  V output signal is between connection terminal blocks " $U_{IN} > 19.2$  V" and "-" and can carry a maximum of 20 mA. The  $U_{IN} > 19.2$  V signal output indicates a low input voltage by switching from "active high" to "low".

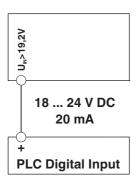

#### 15.4 Floating relay contact "DC OK" 13/14

The floating relay contact is located between connection terminal blocks 13 and 14 and can be loaded with max. 100 mA at max. 30 V AC/DC. The relay contact signalizes a drop of output voltage of more than 10% by opening the N/O contact.


The relay contact is decoupled from the power output. This makes it impossible for devices connected in parallel to act as an external power supply.

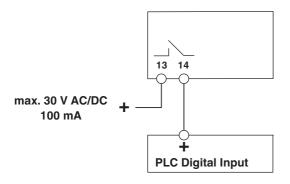

# 16 Derating


## 16.1 Temperature-dependent derating

With an ambient temperature of up to +40°C, the device supplies the continuous output current of  $I_{BOOST}.$  The device can supply a nominal output current of  $I_{N}$  with ambient temperatures of up to +60°C. In the case of ambient temperatures above +60°C, the output current must be reduced by 2.5% per Kelvin increase in temperature. The device does not switch off at ambient temperatures of +70°C or thermal overload. The output capacity is reduced as far as necessary to provide device protection. After it has cooled down, the output capacity is increased again.

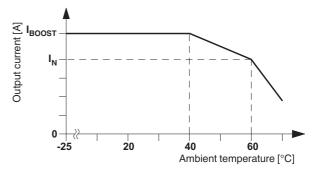

#### 16.2 Voltage-dependent derating

The nominal input voltage of 24 V DC is divided into the areas of starting and operation. The DC/DC converter requires at least 18 V DC for cold starting, whereby the input voltage can sink to 14 V DC during operation. The device only switches off under this limit. The upper voltage limit is 32 V DC for both starting and operation.

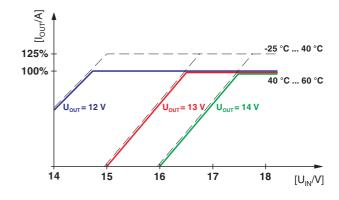


# 16.3 Position-dependent derating


The DC/DC converters can be snapped onto all DIN rails according to EN 50022-35. They should be mounted horizontally (input terminal blocks on bottom). When installing in a different mounting position, derating should be observed.

The characteristic curve can be used to determine the maximal output power to be drawn for each ambient temperature for different mounting positions.


# **Normal mounting position**

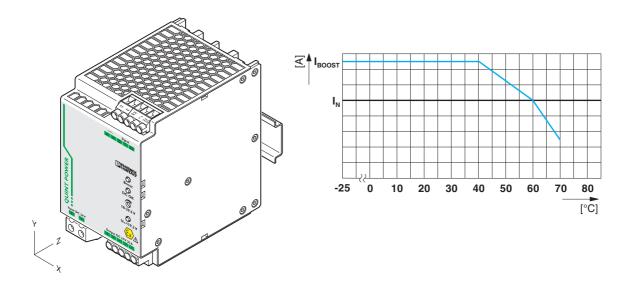


# Rotated mounting position 90° X-axis

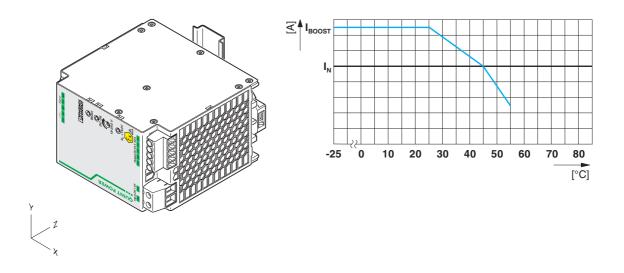


# Rotated mounting position 180° X-axis

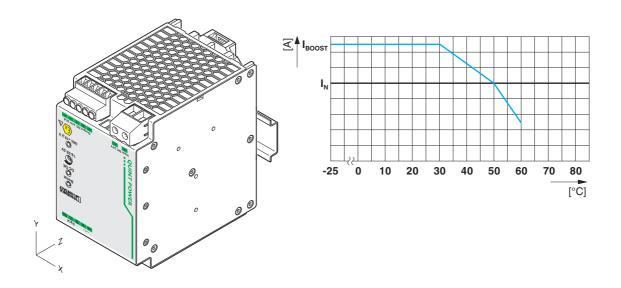


# Rotated mounting position 270° X-axis

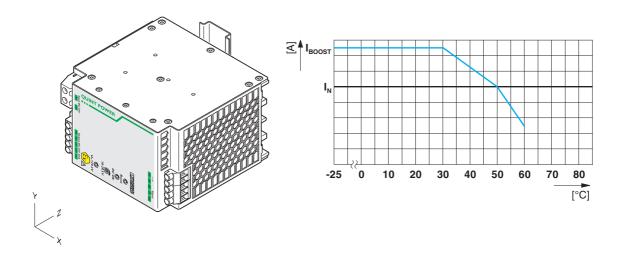



# Rotated mounting position 90° Z-axis

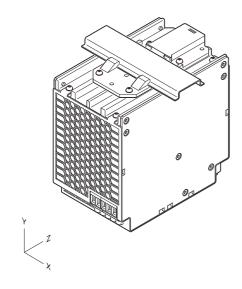

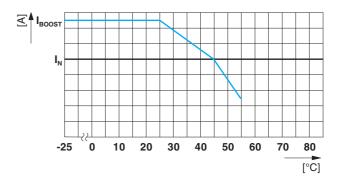

# Rotated mounting position 270° Z-axis

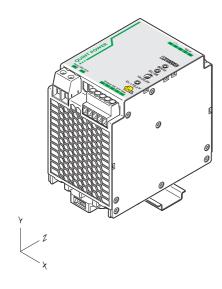

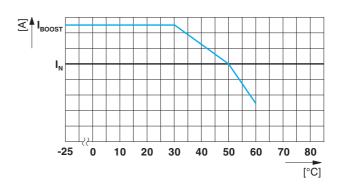

# 17 Operating modes

#### 17.1 Series operation

Two DC/DC converters can be connected in series to double the voltage. Only devices of the same performance class should be connected in series. Series connection should always be used if the output voltage of the module is not sufficient. For example, DC/DC converters with 24 V DC nominal output voltage each supply 48 V DC in series.

Depending on the specification of the PE connection, output voltages of +48 V or -48 V as well as  $\pm 24$  V DC can also be made available.

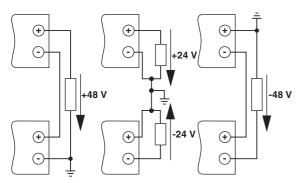



Figure 13 Series operation

# 17.2 Parallel operation

DC/DC converters of the same type can be connected in parallel to increase both redundancy and power. No further adjustments to the default setting are necessary.

To ensure symmetrical load distribution, it is recommended that all cable connections from the DC/DC converters to the busbar are the same length and have the same conductor cross section.

Depending on the system, a protective circuit should be installed at each individual device output (e.g. decoupling diode or DC fuse) for parallel connection of more than two DC/DC converters. This prevents high return currents in the event of a secondary device fault.

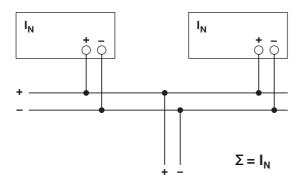


#### 17.3 Redundant operation


Redundant circuits are suitable for supplying systems, which place particularly high demands on operational safety. If a fault occurs in the primary circuit of the first power supply unit, the second device automatically takes over the complete power supply without interruption, and vice versa. For this purpose, the power supply units to be connected in parallel must be large enough to ensure that the total current requirements of all loads can be fully met by one power supply unit. External decoupling diodes are required for 100% redundancy!

Optimization of redundancy can be achieved by decoupling and monitoring. Phoenix Contact offers a comprehensive product range for this purpose (e. g., QUINT-DIODE or QUINT-ORING).

#### **Example: diode module**

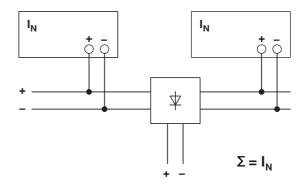

#### **Example: QUINT ORING**

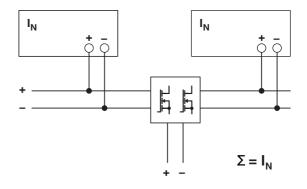

# 17.4 Increasing power

The output current can be increased to n x  $I_N$  in the case of n parallel connected DC/DC converters. Parallel connection for increasing power is used when extending existing systems. Parallel connection is recommended if the DC/DC converter does not cover the current consumption of the most powerful load. Otherwise, the loads should be distributed between individual devices that are independent of one another.

