

Evaluation Board User Guide UG-230

One Technology Way • P.O. Box 9106 • Norwood, MA 02062-9106, U.S.A. • Tel: 781.329.4700 • Fax: 781.461.3113 • www.analog.com

ADP198 Evaluation Board User Guide

FEATURES

Ultrasmall 1 mm \times 1 mm, 4-ball, 0.5 mm pitch WLCSP Tiny 8-lead, 2 mm \times 2 mm LFCSP Low RDS_{ON} of 50 m Ω at 3.3 V (WLCSP) Low input voltage range of 1.65 V to 6.5 V 1 A continuous operating current Operating temperature range: $T_J = -40^{\circ}\text{C}$ to $+85^{\circ}\text{C}$

GENERAL DESCRIPTION

The ADP198 evaluation boards are used to demonstrate the functionality of the ADP198 power switch.

Simple device measurements such as VIN to VOUT resistance (RDS $_{
m ON}$), ground current, and off state current can be demonstrated with just a single voltage source, a voltmeter, an ammeter, and load resistors.

Full details about the ADP198 power switch are available in the ADP198 data sheet, which should be consulted when using the ADP198 evaluation boards.

EVALUATION BOARDS

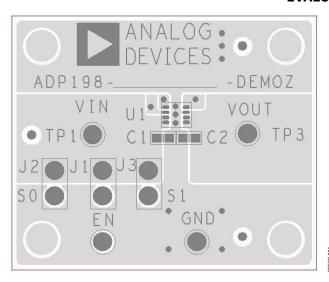


Figure 1. ADP198 LFCSP Evaluation Board

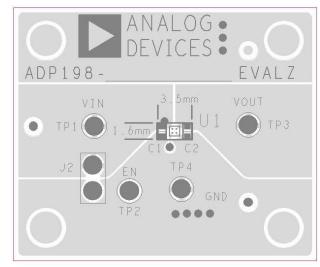


Figure 2. ADP198 WLCSP Evaluation Board

0.6869.0

UG-230

Evaluation Board User Guide

TABLE OF CONTENTS

Features	٠.
General Description	. 1
Evaluation Boards	.]
Revision History	. 2
Evaluation Board Schematic and Hardware	. 3
VIN to VOUT Resistance (RDSon)	_

Ground Current Measurement	
Ground Current Consumption	6
Shutdown Current Measurement	
Ordering Information	10
Rill of Matarials	

REVISION HISTORY

10/11—Revision 0: Initial Version

EVALUATION BOARD SCHEMATIC AND HARDWARE

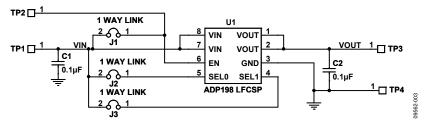


Figure 3. LFCSP Evaluation Board Schematic

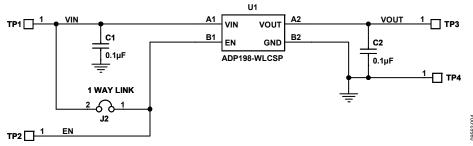


Figure 4. WLCSP Evaluation Board Schematic

Table 1. Evaluation Board Hardware Components

Component	Function	Description
U1	Power switch	ADP198 high-side power switch.
C1	Input capacitor	0.1 µF input bypass capacitor. Required for stability and transient performance. Connect C1 from VIN to GND.
C2	Output capacitor	0.1 μF output capacitor. Required for stability and transient performance. Connect C2 from VOUT to GND.
J1	Jumper	Jumper. Connects EN to VIN for automatic startup.
J2, J3	Start-up time selector	Jumper. Selects different start-up time options, LFCSP only.

VIN TO VOUT RESISTANCE (RDS_{ON})

 $RDS_{\rm ON}$ can be measured using the configuration shown in Figure 6 and Figure 7. $RDS_{\rm ON}$ is defined as the input-to-output voltage differential divided by load current.

The voltmeter reading divided by the load current value gives the equivalent RDS $_{
m ON}$ value. For more accurate measurements, a second voltmeter can be used to monitor the input voltage across the input capacitor. The input supply voltage may need to be adjusted to account for IR drops, especially if large load currents are used. Figure 5 shows a typical curve of RDS $_{
m ON}$ measurements with different load currents.

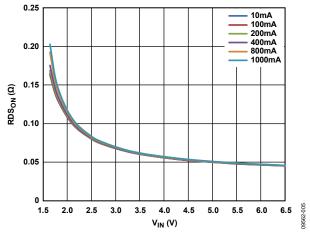


Figure 5. RDS_{ON} vs. Input Voltage, WLCSP

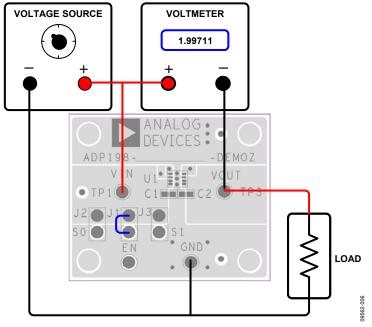


Figure 6. LFCSP RDS_{ON} Measurement

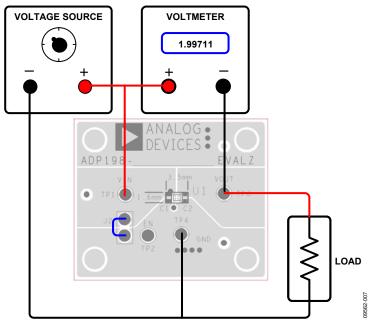


Figure 7. WLCSP RDS_{ON} Measurement

GROUND CURRENT MEASUREMENT

Figure 9 and Figure 10 show how the evaluation board can be connected to a voltage source and an ammeter for ground current measurements. A resistor can be used as the load for the regulator. Ensure that the resistor has a power rating adequate to handle the power expected to be dissipated across it. An electronic load can be used as an alternative. Ensure that the voltage source used can supply enough current for the expected load levels. If voltmeters are connected at the input or output terminals, subtract the current resulting from the shunt resistance of the voltmeter for accurate ground current measurement.

Follow these steps to connect to a voltage source and ammeter:

- 1. Connect the positive terminal (+) of the voltage source to the VIN pad on the evaluation board.
- 2. Connect the positive terminal (+) of the ammeter to one of the GND pads of the evaluation board.
- 3. Connect the negative terminal (–) of the ammeter to the negative (–) terminal of the voltage source.
- 4. Connect a load between the VOUT pad of the evaluation board and the negative (–) terminal of the voltage source.

The voltage source can now be turned on. If J1 is inserted (connecting EN to VIN for automatic startup), the regulator powers up.

GROUND CURRENT CONSUMPTION

Ground current measurement is a way of determining how much current the internal circuits of the regulator are consuming, while performing the power switch function. To be efficient, the power switch needs to consume as little current as possible. Figure 8 shows the typical ground current consumption for various load levels.

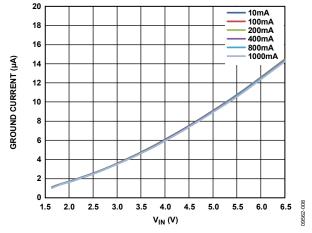


Figure 8. Ground Current vs. Input Voltage

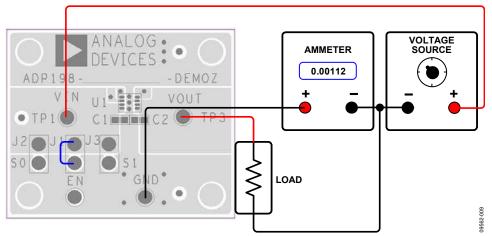


Figure 9. LFCSP Ground Current Measurement

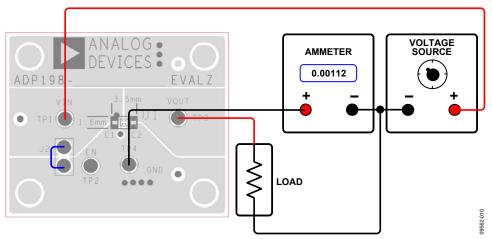


Figure 10. WLCSP Ground Current Measurement

SHUTDOWN CURRENT MEASUREMENT

Figure 12 and Figure 13 show how the evaluation board can be connected to a voltage source and an ammeter for shutdown current measurements. The ammeter can also be connected to the GND terminal to measure the ground current, which is equal to the shutdown current when EN is tied to ground. Figure 11 shows the typical shutdown current consumption for various input voltages.

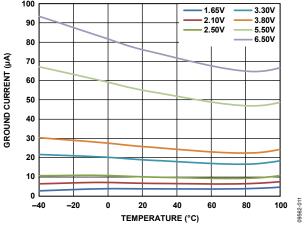


Figure 11. Shutdown Current vs. Temperature and Input Voltage

Follow these steps to connect to a voltage source and ammeter:

- 1. Connect the positive terminal (+) of the voltage source to the (+) of the ammeter.
- 2. Connect the negative (–) terminal of the voltage source to GND pad on the evaluation board.
- 3. Connect the negative terminal (–) of the ammeter to the VIN pad on the evaluation board.
- 4. Connect the EN pin to ground.

The voltage source can now be turned on.

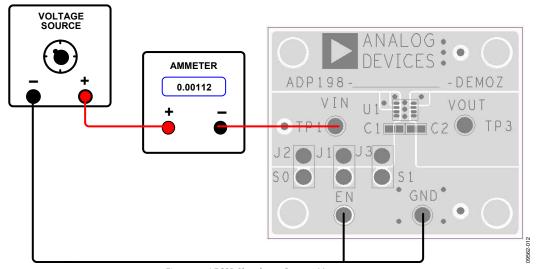


Figure 12. LFCSP Shutdown Current Measurement

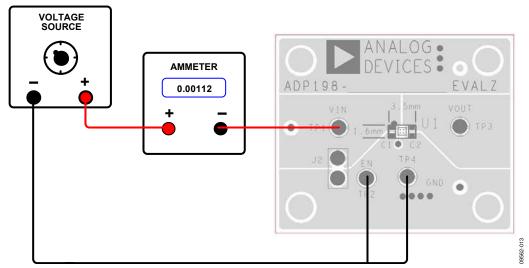


Figure 13. WLCSP Shutdown Current Measurement

ORDERING INFORMATION

BILL OF MATERIALS

Table 2.

Qty	Reference Designator	Description	Manufacturer/Vendor	Vendor Part No.
2	C1, C2	Capacitor, MLCC, 0.1 μF, 10 V, 0402, X5R	Murata or equivalent	GRM155R61A104KA01D
1	J1	Header, single, STR, 2 pins	Digi-Key Corp.	S1012E-36-ND
1	U1	IC, power switch	Analog Devices, Inc.	ADP198



ESD Caution

ESD (electrostatic discharge) sensitive device. Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

Legal Terms and Conditions

By using the evaluation board discussed herein (together with any tools, components documentation or support materials, the "Evaluation Board"), you are agreeing to be bound by the terms and conditions set forth below ("Agreement") unless you have purchased the Evaluation Board, in which case the Analog Devices Standard Terms and Conditions of Sale shall govern. Do not use the Evaluation Board until you have read and agreed to the Agreement. Your use of the Evaluation Board shall signify your acceptance of the Agreement. This Agreement is made by and between you ("Customer") and Analog Devices, Inc. "("ADI"), with its principal place of business at One Technology Way, Norwood, MA 02062, USA. Subject to the terms and conditions of the Agreement, ADI hereby grants to Customer a free, limited, personal, temporary, non-exclusive, non-sublicensable, non-transferable license to use the Evaluation Board FOR EVALUATION PURPOSES ONLY. Customer understands and agrees that the Evaluation Board is provided for the sole and exclusive purpose referenced above, and agrees not to use the Evaluation Board for any other purpose. Furthermore, the license granted is expressly made subject to the following additional limitations: Customer shall not (i) rent, lease, display, sell, transfer, assign, sublicense, or distribute the Evaluation Board; and (ii) permit any Third Party to access the Evaluation Board. As used herein, the term "Third Party" includes any entity other than ADI, Customer, their employees, affiliates and in-house consultants. The Evaluation Board is NOT sold to Customer, all rights not expressly granted herein, including ownership of the Evaluation Board, are reserved by ADI. CONFIDENTIALITY. This Agreement and the Evaluation Board shall all be considered the confidential and proprietary information of ADI. Customer may not disclose or transfer any portion of the Evaluation Board to any other party for any reason. Upon discontinuation of use of the Evaluation Board or termination of this Agreement, Customer agrees to promptly return the Evaluation Board to ADI. ADDITIONAL RESTRICTIONS. Customer may not disassemble, decompile or reverse engineer chips on the Evaluation Board. Customer shall inform ADI of any occurred damages or any modifications or alterations it makes to the Evaluation Board, including but not limited to soldering or any other activity that affects the material content of the Evaluation Board. Modifications to the Evaluation Board must comply with applicable law, including but not limited to the ROHS Directive. TERMINATION. ADI may terminate this Agreement at any time upon giving written notice to Customer, Customer agrees to return to ADI the Evaluation Board at that time, LIMITATION OF LIABILITY, THE EVALUATION BOARD PROVIDED HEREUNDER IS PROVIDED "AS IS" AND ADI MAKES NO WARRANTIES OR REPRESENTATIONS OF ANY KIND WITH RESPECT TO IT. ADI SPECIFICALLY DISCLAIMS ANY REPRESENTATIONS, ENDORSEMENTS, GUARANTEES, OR WARRANTIES, EXPRESS OR IMPLIED, RELATED TO THE EVALUATION BOARD INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, TITLE, FITNESS FOR A PARTICULAR PURPOSE OR NONINFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS. IN NO EVENT WILL ADI AND ITS LICENSORS BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES RESULTING FROM CUSTOMER'S POSSESSION OR USE OF THE EVALUATION BOARD, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DELAY COSTS, LABOR COSTS OR LOSS OF GOODWILL. ADI'S TOTAL LIABILITY FROM ANY AND ALL CAUSES SHALL BE LIMITED TO THE AMOUNT OF ONE HUNDRED US DOLLARS (\$100.00). EXPORT. Customer agrees that it will not directly or indirectly export the Evaluation Board to another country, and that it will comply with all applicable United States federal laws and regulations relating to exports. GOVERNING LAW. This Agreement shall be governed by and construed in accordance with the substantive laws of the Commonwealth of Massachusetts (excluding conflict of law rules). Any legal action regarding this Agreement will be heard in the state or federal courts having jurisdiction in Suffolk County, Massachusetts, and Customer hereby submits to the personal jurisdiction and venue of such courts. The United Nations Convention on Contracts for the International Sale of Goods shall not apply to this Agreement and is expressly disclaimed.

©2011 Analog Devices, Inc. All rights reserved. Trademarks and registered trademarks are the property of their respective owners. UG09562-0-10/11(0)



www.analog.com