

# High Efficiency Single Inductor Buck-Boost Converter

## Purpose

The startup voltage of the RT6154B is around 1.8V to 5.5V. When Input voltage is greater than 1.8V in light Load and heavy Load, the RT6154B feedback loop is internally compensated for both Buck and Boost operation and it provides seamless transition between Buck and Boost modes and optimal transient response.

## Table of Contents

Purpose.....	1
Introduction.....	2
Applications .....	2
Key Performance Summary Table .....	2
Bench Test Setup Conditions .....	3
Schematic, Bill of Materials & Board Layout .....	5
More Information.....	8
Important Notice for Richtek Evaluation Board .....	8

## Introduction

### General Product Information

RT6154B is a high efficiency single inductor Buck-Boost Converter which can operate with wide input voltage such as battery which is higher or lower than the output voltage and it can supply the load current up to 4A. The maximum average current in the switches is limited to a typical value of 5A.

The RT6154B feedback loop is internally compensated for both Buck and Boost operation and it provides seamless transition between Buck and Boost modes and optimal transient response. The RT6154B operates at 2.4MHz typical switching frequency in full synchronous operation.

The RT6154B operates in Pulse Skipped Modulation (PSM) mode for increasing efficiency during low power RF transmission modes. The Power Save Mode can be disabled, forcing the RT6154B to operate at a fixed switching frequency. The RT6154B output voltage is fixed internally to 3.3V.

### Product Feature

- Operates from a Single Li-ion Cell : 1.8V to 5.5V
- Fixed Output Voltage 3.3V
- PSM Operation
- 3A Maximum Load Capability for  $V_{IN} > 3.6V$ ,  $V_{OUT} = 3.3V$
- 2.4MHz (typ.) Switching Frequency
- Up to 96% Efficiency
- Input Over Current Limit
- Internal Compensation

### Applications


- Cellular Phones
- Portable Hard Disk Drives
- PDA

### Key Performance Summary Table

Key Features		Evaluation Board Number : PCB054_V1
<b>Input Voltage Range</b>	1.8V to 5.5V	
<b>Switching Frequency</b>	2.4MHz	
<b>Max Output Current</b>	4A	
<b>Output Voltage</b>	Fixed 3.3V	
<b>Default Marking &amp; Package Type</b>	RT6154BGQW, WDFN-14AL 4x3	

## Bench Test Setup Conditions

### Headers Description and Placement

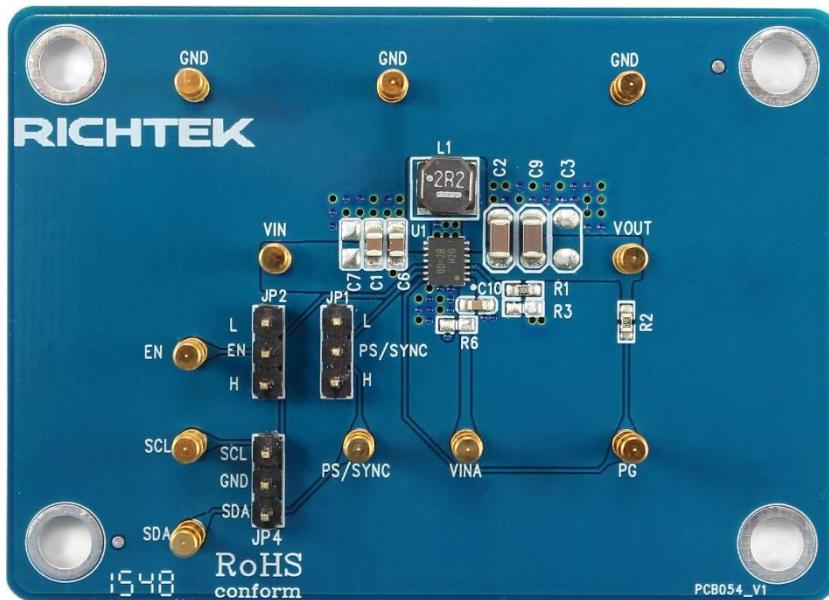

Please carefully inspect the EVB IC and external components, comparing them to the following Bill of Materials, to ensure that all components are installed and undamaged. If any components are missing or damaged during transportation, please contact the distributor or send e-mail to [evb\\_service@richtek.com](mailto:evb_service@richtek.com)

### Test Points


The EVB is provided with the test points and pin names listed in the table below.

Test point/ Pin name	Signal	Comment (expected waveforms or voltage levels on test points)
VINA	Internal Driver voltage	Analog VIN
GND	Analog Ground	Analog Ground.
FB	Reference voltage	Voltage feedback of adjustable versions, must be connected to VOUT on fixed output voltage versions.
EN	Enable Control	BUCK-boost converter output.
LX1	Switch Frequency	First switching node
LX2	Switch Frequency	Second switching node
VIN	Input voltage	Power VIN
EN	Enable Control	Enable input (1 enabled, 0 disabled), must not be left open.
PS/SYNC	Enable/Disable Control Input	Enable/disable power save mode (1 disabled, 0 enabled, clock signal for synchronization), must not be left open.
PG	Power Good Indicator Output.	Output power good (1 good, 0 failure; open drain)
PGND	Power Ground	PGND

### Power-up & Measurement Procedure

1. Connect input power ( $1.8V < V_{IN} < 5.5V$ ) to VIN test pin.
2. EN short to VIN, PS/SYNC is Low or High, see SW switch is working.
3. Observe the output voltage is correct.

### Operating Guideline

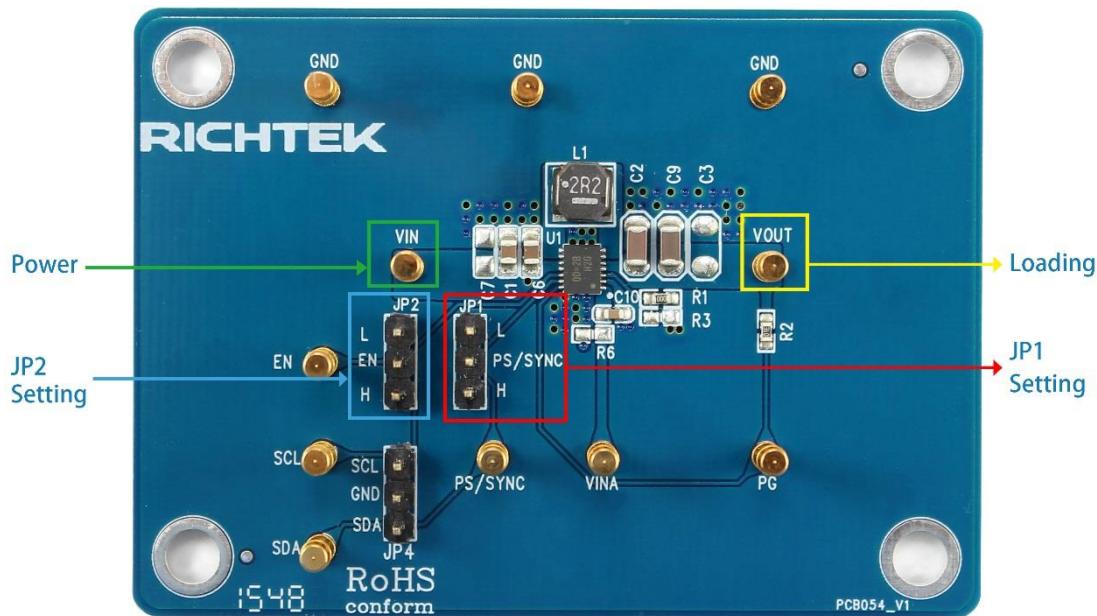

#### JP1 Setting

PS/SYNC Pin	Operate Mode
VIN	PWM
GND	PSM

#### JP2 Setting


Enable Pin (EN)	Function
VIN	Turn on
GND	Turn off

#### VOUT Setting

$V_{OUT} = 3.3V$

## Schematic, Bill of Materials & Board Layout

### EVB Schematic Diagram

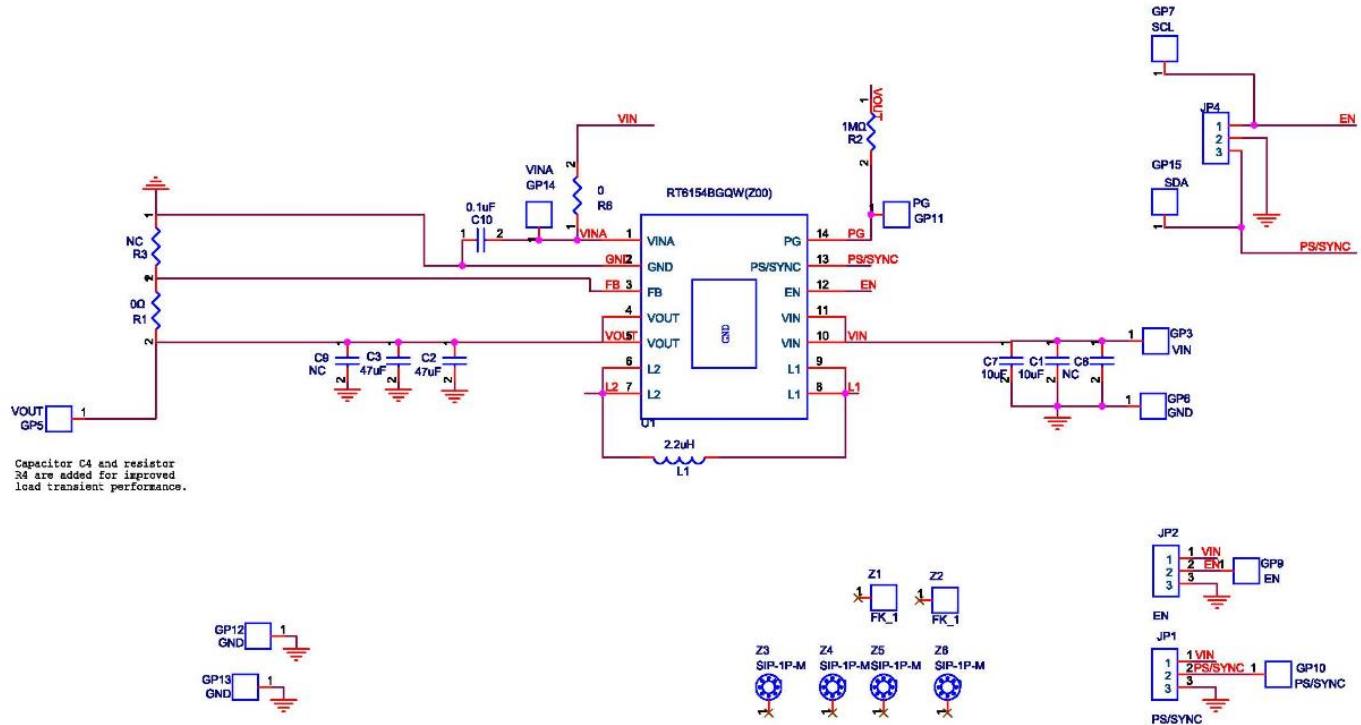


### Bill of Materials


Reference	Qty	Part Number	Description	Package	Manufacturer
C1	1	C2012X5R1C106KTHN	10µF	0805	TDK
C2	1	C3216X5R0J476MT000N	47µF	1206	TDK
C3	1	C3216X5R0J476MT000N	47µF	1206	TDK
C6	1		NC		
C7	1	C2012X5R1C106KTHN	10µF	0805	TDK
C9	1		NC		
C10	1	C1608X7R1E104KT000N	0.1µF	0603	TDK
GP3	1		VIN		
GP5	1		VOUT		
GP6, GP12, GP13	3		GND		
GP7	1		SCL		
GP9	1		EN		
GP10	1		PS/SYNC		
GP11	1		PG		
GP14	1		VINA		
GP15	1		SDA		

Reference	Qty	Part Number	Description	Package	Manufacture
JP1	1		PS/SYNC		
JP2	1		EN		
JP4	1		SIP-3P		
L1	1	NRS5040T2R2NMGJ	2.2μH	5040	TAIYO YUDEN
R1	1	0603 1M00 1%	0Ω	0603	Walsin
R2	1	0603 1M00 1%	1MΩ	0603	Walsin
R3	1		NC		
R6	1		NC		
U1	1	RT6154BGQW	Buck-Boost Converter	WDFN-14AL 4x3	RICHTEK
Z1, Z2	2		FK_1		
Z3, Z4, Z5, Z6	4		SIP-1P-M		

**PCB Layout**

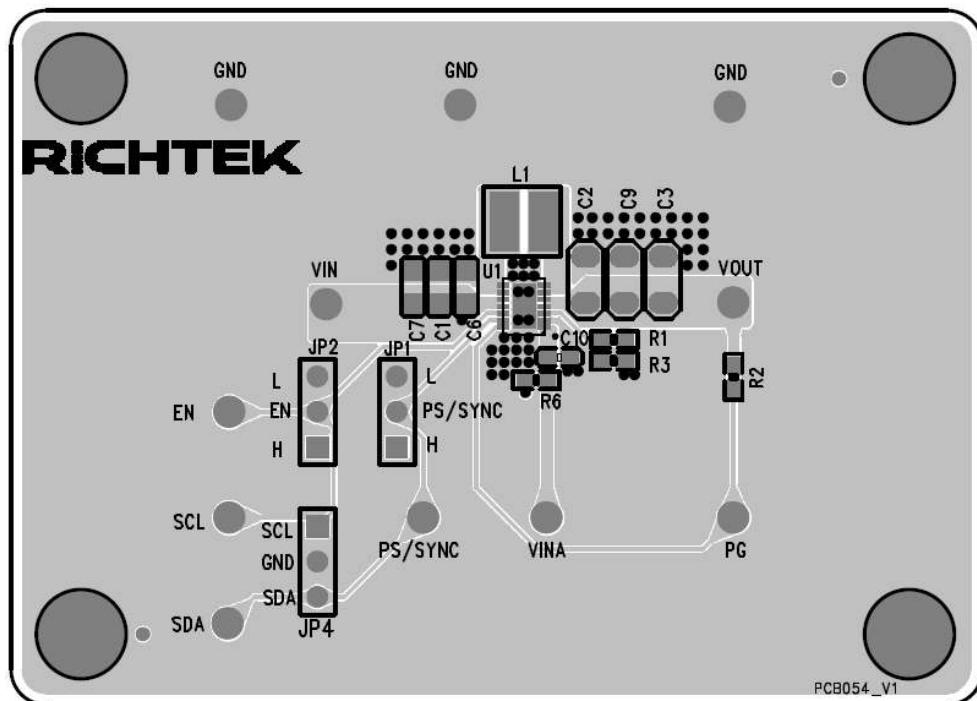

Top View

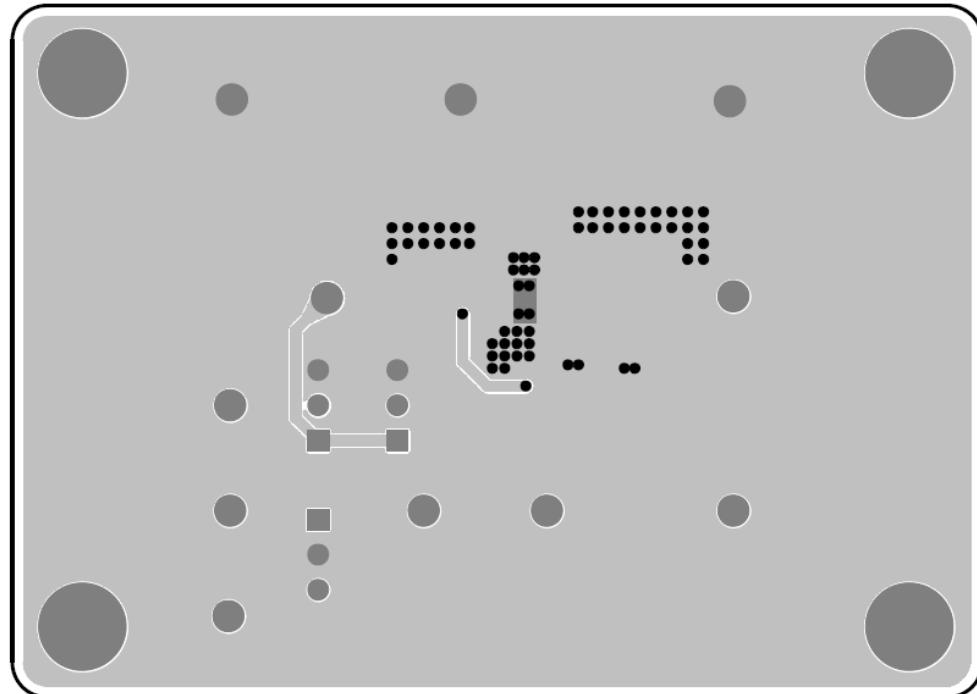

Bottom View

### **More Information**

For more information, please find the related datasheet or application notes from Richtek website <http://www.richtek.com>.

### ***Important Notice for Richtek Evaluation Board***

THIS DOCUMENT IS FOR REFERENCE ONLY, NOTHING CONTAINED IN THIS DOCUMENT SHALL BE CONSTRUED AS RICHTEK'S WARRANTY, EXPRESS OR IMPLIED, UNDER CONTRACT, TORT OR STATUTORY, WITH RESPECT TO THE PRESENTATION HEREIN. IN NO EVENT SHALL RICHTEK BE LIABLE TO BUYER OR USER FOR ANY AND ALL DAMAGES INCLUDING WITHOUT LIMITATION TO DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES.