General

T-200 series is the world's smallest CO2 sensor module. Its Persistent Stability and Temperature Effect Resistance besides easy management are much favored by customers in stocks raising, greenhouse, scientific projects, etc. Ver 1.2

ELT Sensor Data Sheet for T-200



Features

- Non-Dispersive Infrared (NDIR) technology used to measure CO₂ levels.
- The world's smallest size
- Pre-calibrated
- Available output : TTL-UART, I2C

(PWM/Analog Voltage option)

- Gold-plated sensor provides long-term calibration stability.
- Installed Calibration function

•ACDL (Periodical Automatic Calibration) and MCDL (Non-Periodical Manual Calibration)are available..

- Size : 19.4mmx30mmx10.3mm
- Weight: 5 grams

T-200 Specifications

General Performance

Operating Temperature : $-20 \degree C \sim 60 \degree C$ Operating Humidity : $0 \sim 95\%$ RH (Non-condensing) Operating Environment : Residential, Commercial spaces Storage Temperature : $-30 \degree C \sim 70 \degree C$

CO₂ Measurement

Sensing Method : NDIR (Non-dispersive Infrared)
Measurement Range : 400 ~ 2,000 (3,000/5,000/10,000ppm, 2%/3%/5%/10% models are available)
Accuracy : ± 50ppm ± 3% of reading ⁽¹⁾ (±300ppm ±3% of reading - 2%/3%/5%/10% models)
Response Time(1/e) : 40 seconds (c.f. T90 : 65 seconds)
Signal Update : 3 seconds
Warming-up Time : < 6 seconds (for Operation), 5 minutes (for Accuracy)</p>

Electrical Data

Power Input : 5.0VDC ± 5%⁽²⁾ **Current Consumption:** Normal mode : 22mA, Peak : 250 mA

Product Derivatives with Functions

Products	Option List				
T-200	UART, I2C, AVO/PWM option, 10'MCDL, ACDL				
T-200L	Sleep mode is added which consume < 0.5mA				
T-200 G (99% Humidity)	Resistance up to 99% Humidity is added for Application of bathroom				
T-200 A	Operate as ACDL always as software unless 10' MCDL is on,				

Pin Map of J1 Side hole.

Pin No.	T-200	T-200 (AVO or PWM Option)

⁽¹⁾ IAQ application, accuracy is defined after minimum 3 times calibration for 3 weeks.

⁽²⁾ DC Supply should be regulated, low noise power source for best accuracy.,

1	VDD (+5V VCC)							
2	(GND						
3	$TTL-RXD(\leftarrowCF$	TTL-RXD(\leftarrow CPU of Master Board)						
4	Reserved	PWM (Pulse Width Modulation) (Option)						
5	TTL-TXD(→ CI	TTL-TXD(\rightarrow CPU of Master Board)						
6	ACDL(Auton	ACDL(Automatic Calibration)						
7	Reserved	Analog Voltage Output (Option)						
8	12	I2C SCL						
9	120	I2C SDA						
10	MCDL(10 min.	MCDL(10 min. Manual Calibration)						

X J1 Side Hole : 1.27mm pitch

UART

38,400BPS, 8bit, No parity, 1 stop bit, TTL Level Voltage

I2C

Slave mode only, 10k Ω pull up resister TTL Level Voltage : 0 \leq V_{IL} \leq 0.8, 2 \leq V_{IH} \leq V_{DD}, 0 \leq V_{OL} \leq 0.4, 2.4 \leq V_{OH} \leq V_{DD}(Volt)

Analog Voltage (0.5~4.5V) : Option

CO2 Measurement_{(ppm) =} Output _{Voltage}- 0.5/ (3.0- 0.5)_{Voltage} x F.S. _{ppm},

Digital to Analog Conversion Error :< 0.5%

PWM Outpuyt : Option.

 $t_{\text{H}} = 2 \text{ msec(Start)} + 1,000 \text{ msec } x \text{ (Measurement_{(ppm)}/ Range_{(ppm)})},$

 $t_{\text{L}}\text{=}$ 2,000 ppm - t_{H} , (Period : 2,000 ppm)

Pin Map of J2 Board to Board Connector.


Pin No.	T-200
1/16	VDD (+5V VCC)
2/8/9/12	GND
3	Reset (Active High)
4	Reserved
5	I2C SCL
6	ACDL
7	PWM : Option
10	A-OUT : Option
11	MCDL(10 min. Manual Calibration)
13	$TTL-RXD(\leftarrowCPU\text{ of Master Board })$
14	TTL-TXD(\rightarrow CPU of Master Board)
15	I2C SDA

X B-to-B Connector mating should be enhanced with additional Locking method.


(T-200 has two of screw type-locking hole - 2Ø U-type hole)

X T-200 has B-TO-B connecting PLUG (Molex: 55560-0168) on PCB. And mating B-TO-B Receptacle **(Molex: 54722-0164)** should be on Main PCB. Mating Receptacle with PLUG should be done very carefully. Only the gripping of side plane of T-200 is allowed while as pressing on Top plane or Bottom of T-200 is strictly restricted.


Cavity Dimensions (unit : mm)

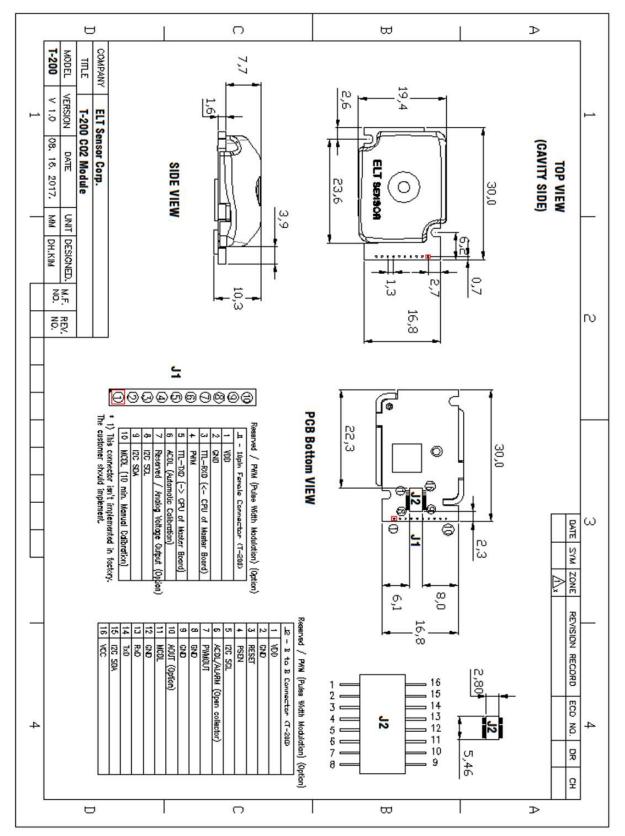


1.27mm pitch socket is recommended for T-200 for convenience of connection.

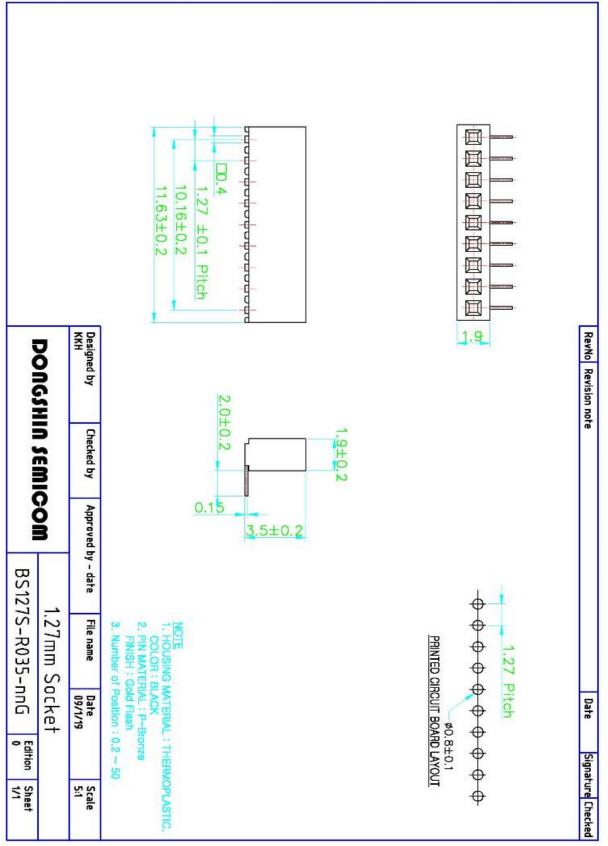


And 1.27mm center pin header recommended for mating with Socket of T-200.

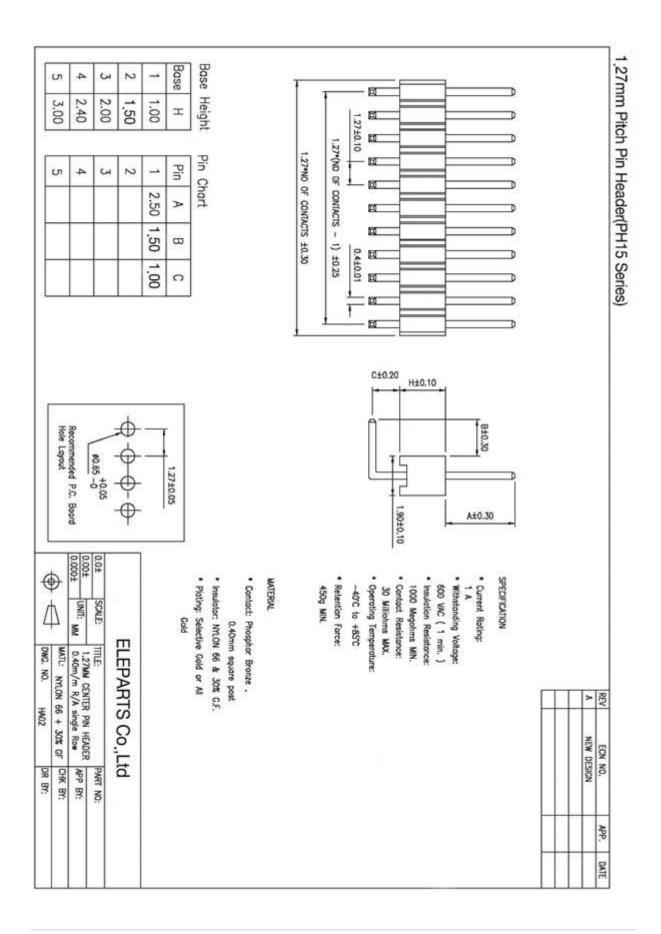

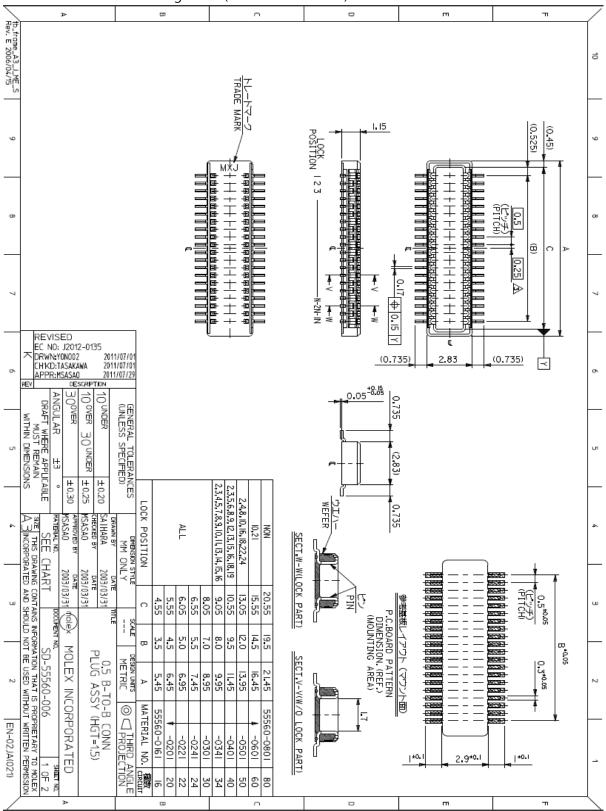


T-200 has B-TO-B connecting PLUG (Molex: 55560-0168) on PCB.

8 | Page

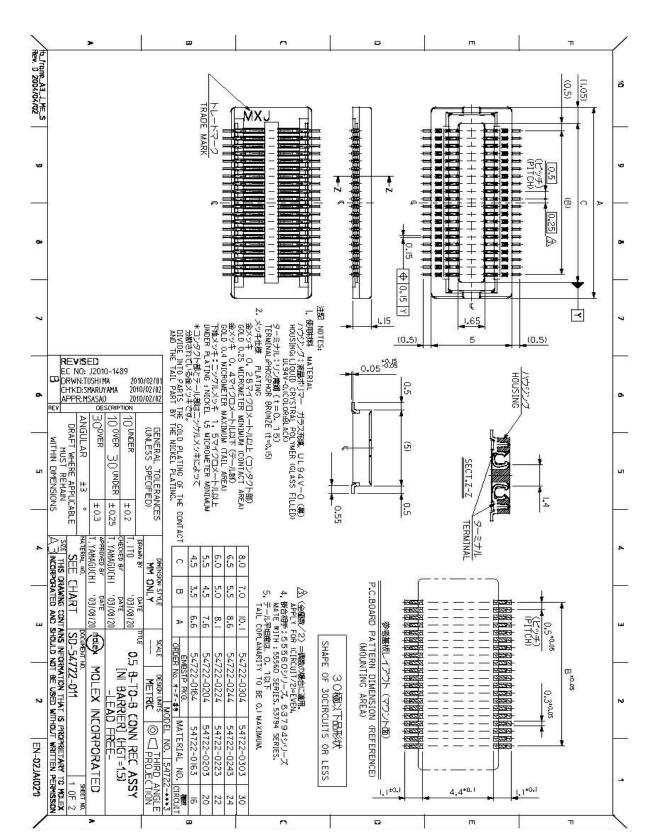

Calibration Mode (ACDL/MCDL)

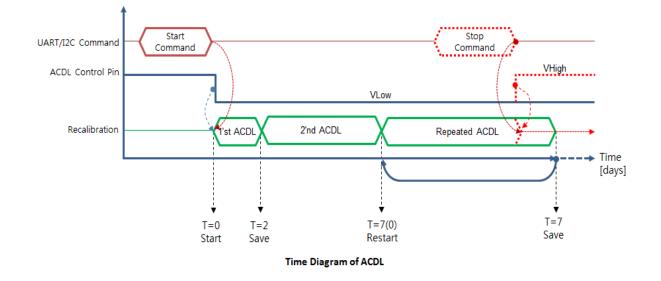

ACDL function(Automatic Calibration Function in Dimming light with period)

Method 1.UART Command Set; J1-3pin (UART-RX) and J1-5pin (UART-TX) to Main-Board. (J2-13pin and J2-14pin are available for B to B connector User as well)


Method 2.I2C Command Set; J1-8pin (SCL) and J1-9pin (SDA) to Main-Board.

Method 3.Execute Hardware based ACDL.

- ※ 1. To activate ACDL function, the user's application must be designed to give Low-Active Signal toJ1-6pin with High De-Active Signal to J1-10pin continuously. (J2-6pin and J2-11pin are available for BtoB connector User as well)
 - 2. T-200A has ACDL software in sensor, which make sensor always operate as ACDL unless MCDL is activated.
- Method 4.Let Sensor install on Jig Board TRB-100ST (Test and Recalibration Board) with ambient air-flow condition and execute by moving jumper with Manual on the website.
- Method 5.EK-100TL (Emulation kit, with Emulation program 'ELTWSD') is available, which display and save data on PC through USB connection.

10' MCDL function(10 minute Manual Calibration Function in Dimming light)

MCDL enable customer to calibrate as needed, MCDL keep at least 10 minute once it start and should be stopped before 18minute to avoid MCDL fetch repetition.

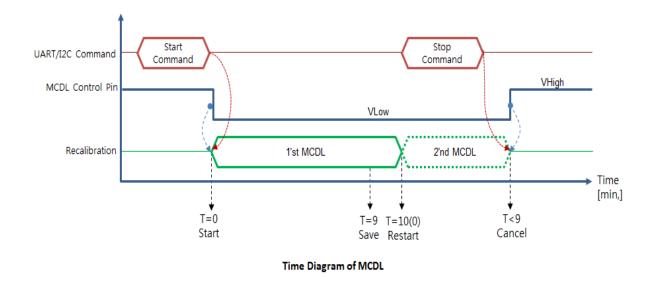

Method 1. UART Command Set; pin-3 (UART-RX) and pin-5 (UART-TX) to Main-Board. (J2-13pin and J2-14pin are available for BtoB connector User as well)

Method 2. I2C Command Set; pin-8 (SCL) and pin-9 (SDA) to Main-Board.

Method 3.Execute Hardware based MCDL.

- To activate ACDL function, the user's application must be designed to give Low-Active Signal topin-10 with High De-Active Signal to pin-6 for 10 minutes. Be careful to make it sure to quit MCDL fetch loop before 18minute. (J2-6pin and J2-11pin are available for BtoB connector User as well)
- 2. T-200A has ACDL software in sensor, which make sensor always operate as ACDL unless MCDL is activated.
- 3. Be careful to make it sure to quit MCDL fetch loop before 18minute.
- Method 4.Let Sensor install on Jig Board TRB-100ST (Test and Recalibration Board) with ambient air-flow condition and execute by moving jumper with Manual on the website.
- Method 5.EK-100TL (Emulation kit, with Emulation program 'ELTWSD') is available, which display and save data on PC through USB connection.

Set present CO2 value with Target PPM function

1. Deviated CO2 sensors can be adjusted with target PPM function via I2C or UART interface.

(Refer to 'I2C Programming guide' or 'UART Command guide')

2. EK-100SL (Evaluation kit, with Emulation program 'ELTWSD') is available for Target PPM function. (Refer to 'EK-100TL manual')

Output Descriptions

UART Descriptions

Data Format

D6	D5	D4	D3	D2	D1	SP	'p'	'p'	'm'	CR	LF
 D6 ~ D1						6 byte CO2 density string					
 SP						Space: 0x20					
 'ppm'						'ppm' string					
 CR						Carriage return : 0x0D					D
 LF						Line feed : 0x0A					

Above 12byte consist by 6 byte hexadecimal digits,<SP>,0x70 0x70 0x6D, <CR><LF> , where decimal '0' (corresponds to hexadecimal digit '0x30') is replaced by space (corresponds to hexadecimal digit '0x20'),

EX) 1,255 ppm, results '0x20 0x20 0x31 0x32 0x35 0x35 0x20 0x70 0x70 0x6D 0x0D 0x0A', which displays '__1255_ppm <CR > <LF > 'on screen.

In need of detail command set, 'U-ART String Command Guide ' could be provided by contacting Sales Rep.

I2C Communication (Only Slave Mode Operation)

Internal pull up resister


Slave Address: 0x31, Slave Address Byte: Slave Address(0x31) 7 Bit + R/W 1 Bit

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0	1	1	0	0	0	1	R/W Bit

R/W Bit : Read = 1/Write = 0

When reading the data, Slave Address Byte is 0x63, When writing the data, Slave Address Byte is0x62.

Block Diagram

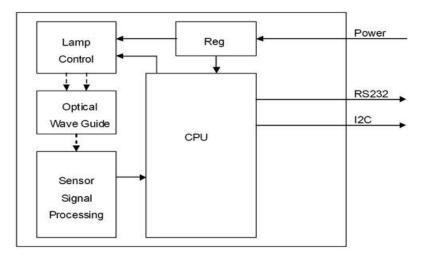

Transmission Sequence in Master

- 1) I2C Start Condition
- 2) Write Command(Slave Address + R/W Bit(0) = 0x62) Transmission and Check Acknowledge
- 3) Write Command(ASCII 'R' : 0x52) Transmission and Check Acknowledge
- 4) I2C Stop Command
- 5) I2C Start Command
- 6) Read Command(Slave Address + R/W Bit(1) = 0x63) Transmission and Check Acknowledge
- 7) Read 7 Byte Receiving Data from Module and Send Acknowledge (Delay at least 1ms for reading each byte)

Configuration	CO2	reserved	reserved	reserved	reserved				
1 Byte 2 Byte		0x00	0x00	0x00	0x00				

In need of detail protocol specification and time sequence, 'I2C programming guide' could be provided by contacting Sales Rep.

Analog Voltage Output Descriptions (Option)


Measured Voltage 0.5V~4.5V match proportionally to 0~ 2,000 each for 2,000 ppm scale sensor and any of 0~3,000 or 5,000 or 10,000 ppm scale sensor could be set by designating on sale. There-fore 3.0V will match 2,000 or 3,000 or 4,000 or 10,000 ppm or 2% or 3% or 5% or 10% each.

```
* CO2 Measurement<sub>(ppm) =</sub> ((Output <sub>Voltage</sub>- 0.5)/ (4.5- 0.5)<sub>Voltage</sub>)x F.S. <sub>ppm /</sub> cf.F.S. <sub>(ppm)</sub> : 2,000/3,000/5,000/10,000 ppm (20,000/30,000/50,000/100,000 is optional.)
```

EX) if the Output _{Voltage} is 2.5V in 2,000 ppm (F.S. of Reading range) CO2 Measurement _{ppm} = (2.5 - 0.5) V ÷ (4.5 - 0.5)V x 2,000. _{ppm} = $2 \div 4$ x 2,000 _{ppm} = 1,000 _{ppm}

PWM Descriptions (Option)

- * Measurement_{(ppm) =} (t_H -2msec)/1000msec x Range_(ppm) (t_H : High Pulse Width)
- * Range_(ppm) : 2,000/3,000/5,000/10,000 ppm (20,000/30,000/50,000/100,000 is optional.)

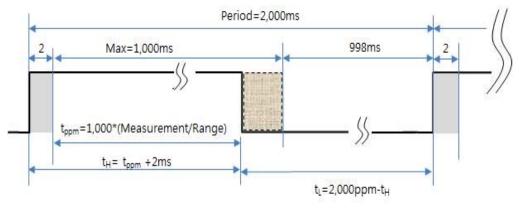

EX) t_H (High Pulse Width) calculation for 400ppm in 2,000 ppm Range. *Measurement_(ppm) = 400 ppm = (t_H -2ms)/2,000msec x Range_(ppm) , * t_H = 1,000 msec * (400 ppm / 2,000ppm) + 2msec = 202msec (cf: T_L = Period - t_H = 2,000ppm - 202 msec = 1,798 msec.)

X Caution

- 1. Please hold only 'PCB' of sensor without holding Cavity directly to avoid the physical shock on sensor. Rough handling or Transportation could result in inaccurate reading.
- Proper ESD protection during handling is important to avoid electrostatic defect occurrence.
 The storage of sensor should be insulated as well

ELT SENSOR ChunuiTechnopark 101-909)36, Bucheon-ro 198beon-gil, 2015 Wonmi-gu, Bucheon-si, Gyeonggi-do, 420-857, Korea Phone. +82-32-719-8055, http://www.eltsensor.co.kr

Subject to change without notice. Printed in KOREA ELT Sensor All rights reserved. 2017. Feb