# MAX774 Evaluation Kit

♦ -5.0V or Adjustable Output Voltage

Up to 1A Output Current

5µA Max Shutdown Current

100µA Max Supply Current

300kHz Switching Frequency

8-Pin DIP and SO Packages

Surface-Mount Construction

Fully Assembled and Tested

# **General Description**

The MAX774 evaluation kit (EV kit) is a fully assembled and tested surface-mount printed circuit board that provides a regulated -5.0V output voltage from a +5.0V input source. It drives loads up to 1A with conversion efficiency greater than 80%.

Additional pads are provided on the board's solder side to accommodate external feedback resistors for setting different output voltages.

The MAX774 EV kit can also be used to evaluate the MAX775 (-12V output) or MAX776 (-15V output).

DESIGNATION	QTY	DESCRIPTION
C1	1	150µF, 10V low-ESR tantalum capacitor Sprague 595D157X0010D7
C3	1	330µF, 10V low-ESR tantalum capacitor Sprague 595D337X0010R7
C2, C4	2	0.1µF, 50V ceramic capacitors
R1	1	$0.075\Omega$ resistor (low inductance) IRC LR2010-01-R075-F
R2, R3	0	Open
L1	1	22µH, 2.3A power inductor Sumida CDR125-220
D1	1	3A Schottky diode 1N5820 or Nihon NSQ03A03
Q1	1	P-channel FET (BV <sub>DS</sub> = 30V, $r_{DS(ON)}$ = 130m $\Omega$ at 4.5V <sub>GS</sub> ), Siliconix Si9435
U1	1	MAX774CSA (8-pin SO)
JU1	1	3-pin header
None	1	Shunt
None	1	PC board
None	1	MAX774 data sheet

## Component List

## **Component Suppliers**

SUPPLIER	PHONE	FAX
AVX	(800) 282-4975	(207) 283-1941
Coilcraft	(708) 639-6400	(708) 639-1469
Coiltronics	(407) 241-7876	(407) 241-9339
Harris	(407) 724-3739	(407) 724-3937
IRC	(704) 264-8861	(704) 264-8866
Matsuo	(714) 969-2491	(714) 960-6492
Motorola	(800) 521-6274	(602) 244-4015
Nihon	(805) 867-2555	(805) 867-2556
Siliconix	(408) 988-8000	(408) 970-3950
Sprague	(603) 224-1961	(603) 224-1430
Sumida	(708) 956-0666	(708) 956-0702

# 


Maxim Integrated Products 1

Features MAX774 EV Kit

## **Ordering Information**

PART	TEMP. RANGE	BOARD TYPE
MAX774EVKIT-SO	0°C to +70°C	Surface Mount

EV Kit

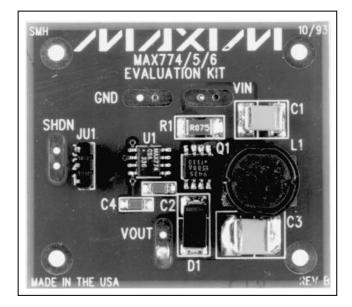

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim's website at www.maxim-ic.com.

# **MAX774 Evaluation Kit**

## **Quick Reference**

The MAX774 EV kit is a fully assembled and tested surface-mount board. Follow the steps below to verify board operation.

# Do not turn on the power supply until all connections are completed.

- 1. Connect a +5.0V supply to the pad marked VIN. Ground connects to the GND pad.
- 2. Connect a voltmeter and load (if any) to the VOUT pad.
- 3. Place the shunt on JU1 across pins 1 and 2 for normal operation.
- 4. Turn on the power and verify the output voltage is -5.0V.
- 5. Refer to the sections *Evaluating the MAX775 and MAX776* and *Other Output Voltages* to modify the board for different output voltages.

# **Detailed Description**

### **Jumper Selections**

The 3-pin header JU1 selects shutdown mode. Table 1 lists the selectable jumper options.

#### **Inductor Selection**

The 22µH Sumida CDR125-220 inductor mounted on the EV kit is a low-resistance, shielded, medium-current inductor. It provides excellent performance over the line and load ranges of the MAX774/MAX775/MAX776. See the *Choosing an Inductor* section of the MAX774/MAX775/MAX776 data sheet for more inductor selection information.

## Table 1. Jumper JU1 Functions

SHUNT LOCATION	SHDN PIN	MAX774 OUTPUT
2&3	Connected to VIN	Shutdown mode, VOUT = 0V
1 & 2	Connected to GND	MAX774 enabled, VOUT = -5.0V

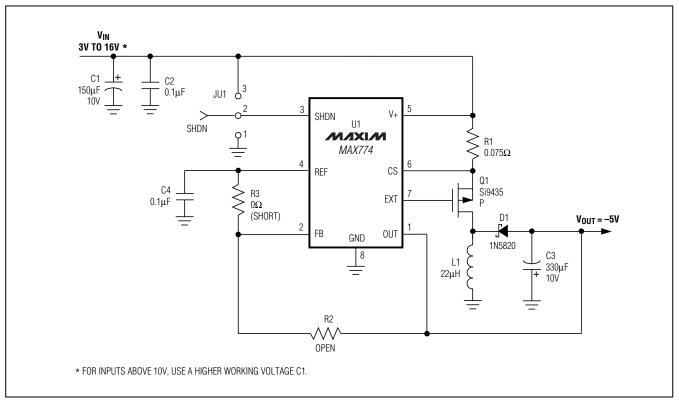


Figure 1. MAX774 EV Kit Schematic Diagram

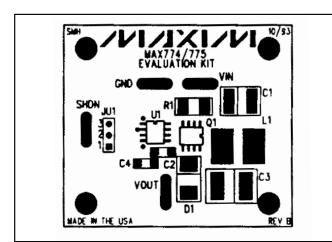


Figure 2. Component Placement Guide (Component Side)

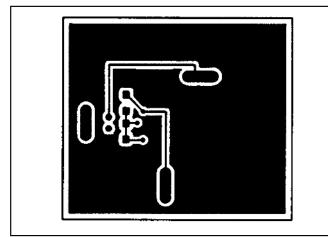


Figure 4. PC Layout (Solder Side)

## **Evaluating the MAX775 and MAX776**

The MAX775 can replace the MAX774 to generate a -12.0V output voltage with output currents up to 0.5A. The only other modification required is to use a low-ESR output capacitor with a voltage rating of 20V or higher.

The MAX776 can also replace the MAX774 to generate a -15.0V output voltage with output currents up to 0.4A. The only other modification required is to use a low-ESR output capacitor with a voltage rating of 25V or greater. Refer to the *Capacitors* section of the MAX774/MAX775/MAX776 data sheet for more capacitor selection information.

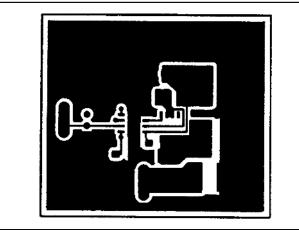


Figure 3. PC Layout (Component Side)

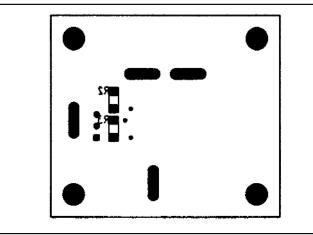


Figure 5. Component Placement Guide (Solder Side)

## **Other Output Voltages**

\_ 3

The MAX774/MAX775/MAX776 are preset for -5V, -12V, and -15V output voltages, respectively. However, they may be adjusted to other values through an external voltage divider formed by R2 and R3 (located on the board's solder side). For input or output voltages greater than 10V, capacitors C1 and C3 must be replaced by capacitors with a higher working voltage. The only other modification required is to cut the trace across R3. The *Output Voltage Selection* section of the MAX774/MAX775/MAX776 data sheet gives instructions for calculating R2 and R3 values.

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

#### Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 (408) 737-7600

© 1994 Maxim Integrated Products

Maxim is a registered trademark of Maxim Integrated Products.

MAX774 EV Kit