


# L9659

## Octal squib driver ASIC for safety application

## Features

- 8 deployment drivers with SPI selectable firing current and times
- Capability to deploy the squib with 1.2 A (min)/2 ms, 1.75 A (min)/1.0 ms and 1.75 A (min)/0.65 ms between VRES of 7 V to 37 V
- Capability to deploy the squib with 1.5 A (min)/2 ms between VRES of 7 V to 25 V
- Firing capability to deploy all channels simultaneously
- Independently controlled high-side and lowside MOS for diagnosis
- Analog output available for resistance measurement
- Squib short to ground, short to battery and MOS diagnostic available on SPI register
- Capability to deploy the squib the low side MOS is shorted to ground
- 4 fire enable inputs
- 5.5 MHz SPI interface
- Low voltage internal reset
- 2 kV ESD capability on all pins
- Package: LQFP64

#### Table 1.Device summary

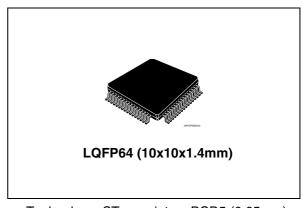

- Technology: ST proprietary BCD5 (0.65 µm)
- RoHS compliant

## Description

The L9659 is intended to deploy up to 8 squibs. Squib drivers are sized to deploy 1.2 A minimum for 2 ms, 1.75 A minimum for 1 ms and 1.75 A minimum for 0.65 ms during load dump along with 1.5 A minimum for 2 ms for VRES voltages less than 25 V.

Full diagnostic capabilities of the squib interface are provided.

Order code	Amb. temp range, °C	Package	Packing
L9659	-40 to +95	LQFP64	Tray
L9659TR	-40 to +95	LQFP64	Tape and reel

## Contents

1	Bloc	k diagr	am and pin description	5
	1.1	Block	diagram	5
	1.2	Pin de	scription	5
	1.3	Applic	ation schematic	8
2	Elec	trical s	pecifications	9
	2.1	Absolu	ute maximum ratings	9
	2.2	Absolu	ute maximum degraded operating ratings	10
	2.3	Opera	ting ratings	10
	2.4	Electri	cal characteristics	11
		2.4.1	General	
		2.4.2	Electrical characteristics - Squib deployment drivers and diag	gnostics 12
		2.4.3	SPI timing	
3	Fune	ctional	description	19
	3.1	Overv	iew	19
	3.2	Gener	al functions	19
		3.2.1	Power on reset (POR)	19
		3.2.2	RESETB	19
		3.2.3	Reference resistor	20
		3.2.4	Loss of ground	20
		3.2.5	VRESx capacitance	20
		3.2.6	Supply voltages	20
		3.2.7	Ground connections	20
	3.3	Serial	peripheral interface (SPI)	21
		3.3.1	SPI pin descriptions	21
	3.4	Squib	drivers	22
		3.4.1	Firing	
		3.4.2	Firing current measurement	25
		3.4.3	Fire enable (FEN) function description	26
		3.4.4	Squib diagnostics	27
		3.4.5	SPI register definition for squib functions	31
4	Pack	age inf	ormation	49
5	Revi	sion his	story	50
2/51			Doc ID 022048 Rev 2	

## List of tables

Device summary	1
Pin description	5
Absolute maximum ratings	9
Absolute maximum degraded operating ratings	10
Operating ratings	
Squib deployment drivers and diagnostics - DC electrical characteristics	12
SPI timing - DC electrical characteristics	
Features that are accessed/controlled for the SPI	21
SPI MOSI/MISO response	
How faults shall be interpreted	
Diagnostic Mode HSS selection	
Diagnostic mode 3 VRESx selection	30
MISO responses to various events	
Command description summary	32
Configuration mode 1	
Configuration mode 2	
Deployment mode 2 bit definition	36
Diagnostic selection	
Diagnostic mode LS FET selection.	40
Diagnostic mode HS FET selection	
Diagnostic mode VRESx selection	41
Channel selection	
DEPLOY_STATUSx flag and the DEPLOY_SUCCESSx flag conditions	44
MOSI monitor mode 2 Bit definition	45
Current measurement channel selections	
MOSI monitor mode 4 bit definition	
Document revision history	50
	Pin description         Absolute maximum ratings         Absolute maximum degraded operating ratings         Operating ratings         General - DC electrical characteristics         Squib deployment drivers and diagnostics - DC electrical characteristics         SPI timing - DC electrical characteristics         Features that are accessed/controlled for the SPI         SPI MOSI/MISO response         How faults shall be interpreted         Diagnostic Mode HSS selection         Diagnostic mode 3 VRESx selection         MISO responses to various events.         Command description summary.         Configuration mode 1         Configuration mode 2         Deployment mode 1 bit definition         Deployment mode 2 bit definition         Diagnostic selection         Diagnostic mode LS FET selection         Diagnostic mode HS FET selection         Diagnostic mode HS FET selection         Diagnostic mode HS selection         Diagnostic mode HS selection         Diagnostic mode LS FET selection         Diagnostic mode LS FET selection         Diagnostic mode LS FET selection         Diagnostic mode VRESx selection         Channel selection         MOSI diagnostic mode 1 bit definition         DEPLOY_STATUSx flag and the DEP



# List of figures


Figure 1.	Block diagram	5
Figure 2.	Application schematic	3
Figure 3.	MOS settling time and turn-on time 2 16	3
Figure 4.	SPI timing diagram	3
Figure 5.	MISO loading for disable time measurement	3
Figure 6.	POR timing	)
Figure 7.	Deployment drivers diagram	3
Figure 8.	Driver activation timing diagram	ł
Figure 9.	Squib diagnostics block diagram	7
Figure 10.	LQFP64 mechanical data and package dimensions	)



## 1 Block diagram and pin description

## 1.1 Block diagram

## Figure 1. Block diagram

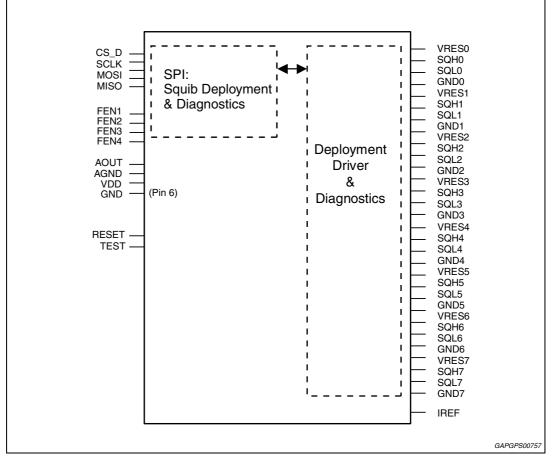

## 1.2 Pin description

## Table 2.Pin description

Pin #	Pin name	Description I/O type		Reset state	
1	MISO	SPI data out	Output	Hi-Z	
2	NC	No connect	-	-	
3	FEN1	Fire enable for channels 0 and 1	Input	Pulldown	
4	FEN2	Fire enable for channels 2 and 3	Input	Pulldown	
5	RESETB	Reset pin	Input	Pullup	
6	GND	Ground (analog & digital)	-	-	
7	VDD	VDD supply voltage	Input	-	



Pin #	Pin name	Description	I/O type	Reset state
8	FEN3	Fire enable for channels 4 and 5	Input	Pulldown
9	FEN4	Fire enable for channels 6 and 7	Input	Pulldown
10	NC	No connect	-	-
11	NC	No connect	-	-
12	CS_D	SPI chip select for deployment driver	Input	Pullup
13	MOSI	SPI data in	Input	Hi-Z
14	NC	No connect	-	-
15	NC	No connect	-	-
16	SCLK	SPI clock	Input	Hi-Z
17	GND4	Power ground for loop channel 4	-	-
18	SQL4	Low side driver output for channel 4	Output	Pulldown
19	SQH4	High side driver output for channel 4	Output	Hi-Z
20	VRES4	Reserve voltage for loop channel 4	Input	-
21	VRES5	Reserve voltage for loop channel 5	Input	-
22	SQH5	High side driver output for channel 5	Output	Hi-Z
23	SQL5	Low side driver output for channel 5	Output	Pulldown
24	GND5	Power ground for loop channel 5	-	-
25	GND6	Power ground for loop channel 6	-	-
26	SQL6	Low side driver output for channel 6	Output	Pulldown
27	SQH6	High side driver output for channel 6	Output	Hi-Z
28	VRES6	Reserve voltage for loop channel 6	Input	-
29	VRES7	Reserve voltage for loop channel 7	Input	-
30	SQH7	High side driver output for channel 7	Output	Hi-Z
31	SQL7	Low side driver output for channel 7	Output	Pulldown
32	GND7	Power ground for loop channel 7	-	-
33	TEST	Test pin	Input	Pulldown
34	VSDIAG	Supply for deployment driver diagnostics	Input	-
35	NC	No connect	-	-
36	Reserved	Factory testmode output	-	-
37	Reserved	Factory testmode output	-	-
38	NC	No connect	-	-
39	NC	No connect	-	-
40	NC	No connect	-	-
41	NC	No connect	-	-
42	NC	No connect	-	-

 Table 2.
 Pin description (continued)

6/51




Pin #	Pin name	Description	I/O type	Reset state	
43	NC	No connect	-	-	
44	NC	No connect	-	-	
45	NC	No connect	-	-	
46	IREF	External current reference resistor	Output	-	
47	AGND	Ground reference for AOUT	-	-	
48	AOUT	Analog output for loop diagnostics	Output	Hi-Z	
49	GND3	Power ground for loop channel 3	-	-	
50	SQL3	Low side driver output for channel 3	Output	Pulldown	
51	SQH3	High side driver output for channel 3	Output	Hi-Z	
52	VRES3	Reserve voltage for loop channel 3	Input	-	
53	VRES2	Reserve voltage for loop channel 2	Input	-	
54	SQH2	High side driver output for channel 2	Output	Hi-Z	
55	SQL2	Low side driver output for channel 2	Output	Pulldown	
56	GND2	Power ground for loop channel 2	-	-	
57	GND1	Power ground for loop channel 1	-	-	
58	SQL1	Low side driver output for channel 1	Output	Pulldown	
59	SQH1	High side driver output for channel 1	Output	Hi-Z	
60	VRES1	Reserve voltage for loop channel 1	Input	-	
61	VRES0	Reserve voltage for loop channel 0	Input	-	
62	SQH0	High side driver output for channel 0	Output	Hi-Z	
63	SQL0	Low side driver output for channel 0	Output	Pulldown	
64	GND0	Power ground for loop channel 0	-	-	

Table 2.Pin description (continued)



## 1.3 Application schematic



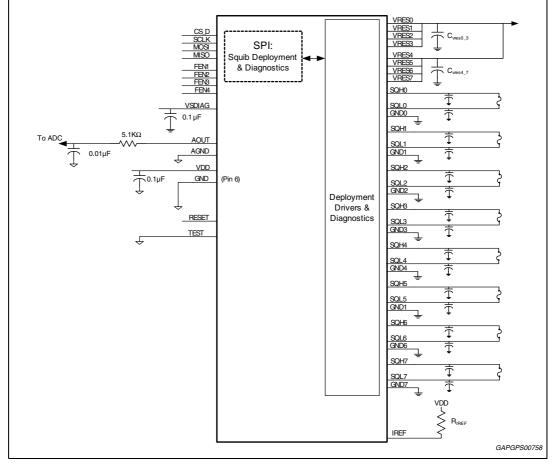



## 2 Electrical specifications

## 2.1 Absolute maximum ratings

The following maximum ratings are continuous absolute ratings; exceeding any one of these values may cause permanent damage to the integrated circuit.

Table 3.Absolute maximum ratings

Symbol	Parameter	Value	Unit
V <sub>DD</sub> <sup>(1)</sup>	Supply voltage	- 0.3 to 5.5	V
V <sub>SDIAG</sub>	Supply voltage for squib diagnostics	- 0.3 to 40	V
VRESx	VRES voltage (VRES0, VRES1, VRES2, VRES3, VRES4, VRES5, VRES6, VRES7)	- 0.3 to 40	V
SQHx	Squib high side drivers (SQH0, SQH1, SQH2, SQH3, SQH4, SQH5, SQH6, SQH7)	- 0.6 to 40	V
SQLx	Squib low side drivers (SQL0, SQL1, SQL2, SQL3, SQL4, SQL5, SQL6, SQL7)	- 0.3 to 40	V
TEST	Test pin	-0.3 to 40	V
VI	Discrete input voltage (RESETB, CS_D, SCLK, MOSI, FEN1, FEN2, FEN3, FEN4, IREF)	- 0.3 to 5.5	V
Vo	Discrete output voltage (MISO, AOUT)	- 0.3 to 5.5	V
AGND	Analog output reference	-0.3 to 5.5	V
GNDx	Ground (GND0, GND1, GND2, GND3, GND4, GND5, GND6, GND7)	-0.3 to 5.5	V
T <sub>j</sub> <sup>(2)</sup>	Maximum steady-state junction temperature	150	°C
T <sub>amb</sub>	Ambient temperature	-40 to 95	°C
T <sub>stg</sub>	Storage temperature	-65 to 150	°C
R <sub>th j amb</sub>	Thermal resistance junction to ambient (on FR-4 board)	46	°C/W
	naximum ratings are up to 48 hours; exceeding any one of these v cause permanent damage to the integrated circuit.	alues for longer than	a total time of
V <sub>DD</sub>	Supply voltage	- 0.3 to 6.0	V
VI	Discrete input voltage (RESETB, CS_D, SCLK, MOSI, FEN1, FEN2, FEN3, FEN4, IREF)	- 0.3 to 6.0	V
V <sub>O</sub>	Discrete output voltage (MISO, AOUT)	- 0.3 to 6.0	V
AGND	Analog output reference	-0.3 to 6.0	V
GNDx	Ground (GND0, GND1, GND2, GND3, GND4, GND5, GND6, GND7)	-0.3 to 6.0	V
T <sub>j</sub> <sup>(2)</sup>	Maximum steady-state junction temperature	150	°C
T <sup>amb</sup>	Ambient temperature	-40 to 95	°C
T <sub>stg</sub>	Storage temperature	-65 to 150	°C
R <sub>th j amb</sub>	Thermal resistance junction to ambient (on FR-4 board)	46	°C/W

1. Exceeding a  $V_{\text{DD}}$  of 5.1V during a deployment may cause damage

2. To allow for deployment the maximum steady state junction temperature cannot exceed 130°C. Under the operating ratings defined in section 2.3 the steady state junction temperature will not exceed 130°C.



## 2.2 Absolute maximum degraded operating ratings

Under the following deviations to the ratings indicated in *Section 2.3* the L9659 performance will be degraded and not meet the electrical characteristics outlined in *Section 2.4*. At minimum the SPI and diagnostics will function but not meet specified electrical parameters.

Symbol	Parameter	Value	Unit
$V_{DD}$	Supply voltage	4.5 to 5.5	
V <sub>SDIAG</sub>	Supply voltage for squib diagnostics	7 to 40	V
V <sub>RES</sub>	VRES voltage (VRES0, VRES1, VRES2, VRES3, VRES4, VRES5, VRES6, VRES7)	7 to 40	V
VI	Discrete input voltage (RESETB, DEPEN, CS_D, SCLK, MOSI, FEN1, FEN2, FEN3, FEN4, IREF)	- 0.3 to (VDD +0.3)	V
V <sub>O</sub>	Discrete output voltage (MISO, AOUT)	-0.3 to (VDD + 0.3)	V
Тj	Junction temperature	-40 to 150	°C

Table 4.	Absolute maximum degraded operating ratings
	Absolute maximum degraded operating ratings

Note: The above is provided for informational purposes only and will result in degraded operation. Under the above conditions the SPI will be functional as well as diagnostics, though the electrical performance may not conform to the parameters outlined in Section 2.4. Firing requirements as indicated in Section 2.4 may not be met with the conditions above.

## 2.3 Operating ratings

#### Table 5.Operating ratings

Symbol	Parameter	Value	Unit
V <sub>DD</sub>	Supply voltage	4.9 to 5.1	V
V <sub>SDIAG</sub>	Supply voltage for squib diagnostics	7 to 37	V
V <sub>RESx</sub>	VRES voltage (VRES0, VRES1, VRES2, VRES3, VRES4, VRES5, VRES6, VRES7)	7 to 37	V
VI	Discrete input voltage (RESETB, CS_D, SCLK, MOSI, FEN1, FEN2, FEN3, FEN4, IREF)	- 0.3 to (V <sub>DD</sub> +0.3)	V
Vo	Discrete output voltage (MISO, AOUT)	-0.3 to (VDD + 0.3)	V
T <sub>amb</sub>	Ambient temperature	-40 to 95	°C
R <sub>Th j-amb</sub>	Thermal resistance junction to ambient (on FR-4 board)	46	°C/W

### **Comments:**

VSDIAG supply will provide power for squib resistance and HSS diagnostics

VDD will be used for all internal functions as well as short to battery/ground and high squib resistance diagnostics.

57

## 2.4 Electrical characteristics

## 2.4.1 General

 $\begin{array}{l} 4.9 \ V \leq V_{DD} \leq 5.1 \ V; \ 7 \ V \leq V_{RESX} \leq 37 \ V; \ 7 \ V \leq V_{SDIAG} \leq 37 \ V; \ FEN1 = FEN2 = FEN3 = \\ FEN4 = V_{DD}; \ R\_REF = 10 \ k\Omega, \ \pm 1 \ \%, \ 100 \ PPM; \ -40 \ ^\circ C \leq T_A \leq +95 \ ^\circ C; \ unless \ other \ specified. \end{array}$ 

 Table 6.
 General - DC electrical characteristics

Symbol	Parameter	Test condition	Min.	Тур.	Max.	Unit
Osc	Internal oscillator frequency	Tested with 10K , 1%, 100ppm Iref resistor	4.75	-	5.25	MHz
V <sub>RST1</sub>	Internal voltage reset VDD after de-glitch time (tpor) See Figure 7	VDD level for L9659 to report reset condition -deployment drivers are disabled	4.0	-	4.5	v
V <sub>RST2</sub>	Internal voltage reset VDD with no de-glitch time See	Guaranteed by design	2.1	-	3.0	
t <sub>POR</sub>	POR De-glitch timer	Timer for VRST1	5	-	25	μs
		No squib diagnostics. No deployment.	-	-	15	
I <sub>DD</sub>	Input current VDD	Resistance measurement diagnostics with no fault condition present.	-	-	17	mA
		Short to -0.3V on SQL; VRCM active	-	-	35	
		During deployment	-	-	15	
R <sub>IREF_H</sub>	Resistance threshold IREF	-	-	-	60.0	kΩ
R <sub>IREF_L</sub>		-	2.0	-	-	kΩ
$V_{IH\_RESETB}$		-	-	-	2.0	V
$V_{IL\_RESETB}$	Input voltage threshold RESETB	-	0.8	-	-	V
V <sub>HYS_RST</sub>		-	100	-	300	mV
V <sub>IH_TEST</sub>	Input voltage threshold TEST	Guaranteed by design	-	3.2	-	v
ITESTPD	Input pull-down current TEST		1.0	-	2.5	mA
I <sub>AOUT_SHRT</sub>	AOUT pin current limit	AOUT short to ground during squib resistance diagnostics	-	-	20	mA
IRESETPU	Input pull-up current RESETB	RESETB = VIH to GND	-10	-	-50	μA
I <sub>RESx</sub>	Quiescent current for VRESx during HSS test	Current per pin during HSS test excluding selected channel	-	-	10	μA
V <sub>IH</sub>	Input voltage threshold	Input Logic = 1	-	-	2.0	V
V <sub>IL</sub>	(MOSI, SCLK, CS_D)	Input Logic = 0	0.8	-	-	V
V <sub>HYST</sub>	Input hysteresis (MOSI, SCLK, CS_D)		100	-	300	mV
1	Input leakage current	VIN = VDD	-	-	1	μA
I <sub>LKGD</sub>	MOSI, SCLK	VIN = 0 to VIH	-1	-	-	μA



Symbol	Parameter	Test condition	Min.	Тур.	Max.	Unit
I <sub>PU_CS</sub>	Input pull-up current CS_D	VIN = VIH to GND	-10	-	-50	μA
V <sub>OH</sub>	Output voltage MISO	IOH = -800μA	VDD 0.8	-	-	V
V <sub>OL</sub>		IOL = 1.6mA	-	-	0.4	V
1	Tri-state current MISO	MISO = VDD	-	-	1	μA
I <sub>HI_Z</sub>		MISO = 0V	-1	-	-	μA

Table 6. General - DC electrical characteristics (continued)

## 2.4.2 Electrical characteristics - Squib deployment drivers and diagnostics

 $\begin{array}{l} 4.9 \; V \leq V_{DD} \leq 5. \; 1V; \; 7 \; V \leq V_{RESX} \leq 37 \; V; \; 7 \; V \leq V_{SDIAG} \leq 37 \; V; \; FEN1 = FEN2 = FEN3 = FEN4 \\ = V_{DD}; \; R\_REF = 10 \; k\Omega, \; \pm 1\%, \; 100 \; PPM; \; -40 \; ^{\circ}C \leq T_A \leq +95 \; ^{\circ}C; \; C\_VRES0\_1 \geq 68nF; \\ C\_VRES2\_3 \geq 68nFC\_VRES4\_5 \geq 68nF; \; C\_VRES6\_7 \geq 68nF; \; unless \; other \; specified. \end{array}$ 

Table 7.	Sq	uib deployment drivers	and diagnostics - DC elec	trical ch	aracteris	tics

Symbol	Parameter	Test condition	Min.	Тур.	Max.	Unit
General			Į.	l	•	
ILKGSQH	Leakage current SQH	VSDIAG = VDD = 0, VRES = 37V, VSQH = 0V	-	-	50	μA
I <sub>LKGVRES</sub>	Bias current VRESX	VSDIAG = 18V; VDD = 5V; VRES = 37V; SQH shorted to SQL	-	-	10	μA
I <sub>LKGSQL</sub>	Leakage current SQL	VSDIAG = VDD = 0, VSQL = 18V	-10	-	10	μA
I <sub>PD</sub>	Pulldown current SQL	VSQL = 1.5V to 20V	3.3	-	4.1	mA
V <sub>BIAS</sub>	Diagnostics Bias voltage	Nominal 3.6V	-5%	VDD* 0.72	+5%	V
Short to bat	tery/ground diagnostics - Rso	qb from 0 $\Omega$ to Open				
ISVRCM	Maximum diagnostics bias current limit	Short to battery or ground test active VSQH = 0V	5	-	20	mA
		Vbatt = 6.5V	1.92	-	3.42	KΩ
R <sub>STB</sub>	Short to battery resistance threshold	Vbatt = 16V	8.61	-	13.98	KΩ
		Vbatt = 20V	11.42	-	18.42	KΩ
I <sub>STB</sub>	Short to battery current threshold	-	0.9	-	1.42	mA
R <sub>STG</sub>	Short to ground threshold	-	1.07	-	2.1	KΩ
I <sub>STG</sub>	Short to ground current threshold	-	1.8	-	3.2	mA

57

L9659

Symbol	Parameter	Test condition	Min.	Тур.	Max.	Unit
<sup>†</sup> DIAGTIMEOUT	Diagnostic delay time	From/CS $\uparrow$ until Test Results are Valid, Output voltage change 0V to VDD * 0.72 C <sub>SQHx</sub> = 0.12µF C <sub>SQLx</sub> = 0.12µF	-	-	300	μs
High side saf	ing diagnostics					
I <sub>SRC_HSS</sub>	Diagnostic current into selected VRESx pin during test	Normal conditions	710	-	950	μA
I <sub>HSS_8</sub>	Current during diagnostic	All 8 VRESx pins tied together	710	-	1020	μA
$R_{HSSNORM_{th}}$	Normal resistance range when running high side safing diagnostics	All 8 VRESx pins tied together	1.4	-	2.5	KΩ
V <sub>HSSNORM_</sub> r ange	Normal voltage range between VSDIAG and VRESx pin) when running high side safing diagnostics	All 8 VRESx pins tied together	1.0	-	2.5	V
V <sub>HSSSHORT_th</sub>	Short voltage threshold between VSDIAG and VRESx pin)	All 8 VRESx pins tied together	0.5	-	1.0	V
V <sub>HSSOPEN_th</sub>	Open voltage threshold between VSDIAG and VRESx pin)	All 8 VRESx pins tied together	2.5	-	4.0	V
<sup>†</sup> DIAGTIMEOUT	Diagnostic delay time	From/CS ↑ until test results are valid, C <sub>SQHx</sub> = 0.12µF C <sub>SQLx</sub> = 0.12µF	-	-	500	μs
Voltage meas	surement diagnostics (VRES	x)				
I <sub>RESx</sub>	Max diagnostic current into V <sub>RESx</sub> pin	Normal Conditions	-	-	50	μA
V <sub>VRESXLO_th</sub>	Low voltage threshold for VRESx pin	-	5.0	-	7	V
V <sub>VRESXHI_th</sub>	High voltage threshold for VRESx pin	-	13.7	-	18.0	V
t <sub>DIAGTIMEOUT</sub>	Diagnostic delay time	From/CS ↑ until test results are valid.	-	-	100	μs

Table 7.	Squib deployment drivers and diagnostics - DC electrical characteristics (continued)



57

Symbol	Parameter	Test condition	Min.	Тур.	Max.	Unit
MOS diagnos	stics	•				
I_ <sub>MOS</sub>	MOS test max current	Normal conditions	-	-	I <sub>SVRCM</sub>	mA
t <sub>SHUTOFF</sub>	LS/HS MOS turn off under fault condition	Time is measured from the valid LS/ HS MOS current > 100mA to the LS/HS turn off	-	-	4	μs
t <sub>FETtimeout</sub>	FET timeout	Normal Conditions	-	-	100	μs
High squib re	esistance diagnostics					
R <sub>SQHIZ</sub>	High load resistance threshold	-	1.07	-	2.1	kΩ
I <sub>HR</sub>	High resistance current threshold	-		I <sub>STG</sub>	•	mA
t <sub>DIAGTIMEOUT</sub>	MOS diagnostic delay time	From/CS ↑ until test results are valid, Csoнx= 0.12µF CsoLx= 0.12µF	-	-	300	μs
Squib resista	ince diagnostics					
V <sub>OH</sub>		High saturation voltage; I <sub>AOUT</sub> = -500µA	VDD- 0.2	-	-	V
V <sub>OL</sub>	Output voltage AOUT	Low Saturation Voltage; I <sub>AOUT</sub> = +500µA	-	-	0.2	V
Ι <sub>Ζ</sub>	Tri-State Current AOUT	AOUT = VDD	-	-	1	μA
'Z		AOUT = 0V	-1	-		μA
R <sub>SQB RANGE</sub>	Load resistance range	-	0	-	10.0	Ω
	Resistance measurement analog output tolerance	$0\Omega \le R_{SQB} < 3.5\Omega$	V <sub>AOUT</sub> 0.095V	-	V <sub>AOUT</sub> + 0.095V	V
V <sub>AOUT</sub>	$V_{AOUT} = VDD \cdot \left[\frac{1}{9.75} + \left(0.08 \cdot \frac{R_{SQB}}{\Omega}\right)\right]$	$3.5\Omega \leq R_{SQB} \leq 10\Omega$	V <sub>AOUT</sub> . 0.95V	-	V <sub>AOUT</sub> . 1.05V	V
I <sub>SRC</sub>	Resistance measurement current source	$V_{DD} = 5.0V; V_{SDIAG} = 7.0V$ to 37V	38	-	42	mA
I <sub>SINK</sub>	Resistance measurement current sink	IPD OFF, VSQLx = 4 V	45	-	57	mA
I <sub>SLEW</sub>	Rmeas current di/dt	30% - 70% of ISRC	2	-	11	mA/µs
V <sub>cmpr</sub>	Voltage threshold on squib pin to shutdown ISRC	-	2.65	-	3.25	V
t <sub>isrcshtdwn</sub>	Shutdown time	Guaranteed by design	-	-	30	μs
VLSDrsqb	LSD (V_SQL) voltage during resistance measure	-	0.8	-	2.2	V

## Table 7. Squib deployment drivers and diagnostics - DC electrical characteristics (continued)



Symbol	Parameter	Test condition	Min.	Тур.	Max.	Unit
<sup>t</sup> R_WAIT	Rmeas wait time	Wait time before AOUT voltage is stable for ADC reading R AOUT= $5.1k\Omega$ ; C <sub>AOUT</sub> =10nF	-	-	300	μs
FENx input p	ins					
t <sub>FENfilter</sub>	Minimum pulse width	-	12	-	16	μs
I <sub>FENPD</sub>	Internal pull-down current	VIN = VIL to VDD	20	-	50	μA
V <sub>FENLO</sub>	Input low voltage threshold	-	0.8	-	-	V
V <sub>FENHI</sub>	Input high voltage threshold	-	-	-	2.0	V
T <sub>FENLATCH</sub>	FEN Latch timer	-	0	-	512	ms
t <sub>FLACC</sub>	FEN latch timer accuracy	-	- 20%	-	20	%
Deployment	drivers					
TRESOLUTION	Diagnostic timing / resolution	I <sub>HS</sub> ≥ I <sub>MEAS</sub> ,	22.5	25	27.5	μs
TACCURACY	Diagnostic time acurracy	$0s \leq T_{MEASURE_TIME} \leq 3.7ms$ $C_{SQUIB_HI} = 0.12\mu F$ $C_{SQUIB_LO} = 0.12\mu F$	-	-	2	LSB
I <sub>MEAS</sub>	High side driver current limit detect threshold	Guaranteed by design	I <sub>HSX</sub> x 0.90	-	I <sub>HSX</sub> x 0.99	А
R <sub>DSonTOTAL</sub>	Total high and low side MOS on resistance	High side MOS + low side MOS D9:D8="11"; V <sub>RES</sub> = 7V; I = 1.6A @95°C	-	-	2.0	Ω
R <sub>DSonHS</sub>	High side MOS on resistance	D9:D8="11"; VRES = 7V;	-	0.3	0.8	Ω
R <sub>DSonLS</sub>	Low side MOS on resistance	Tamb = 95°C; IVRES = 1.6A;	-	0.6	1.2	Ω
I <sub>HS_12A</sub>		Configuration mode 1 bits D9:D8="00" SQHx shorted to ground; V <sub>BES</sub> = 7 to 37V	1.21	-	1.47	A
I <sub>HS_15A</sub>	High side deployment current limit	Configuration Mode 1 bits D9:D8="01" SQHx shorted to ground; V <sub>RES</sub> = 7 to 25V	1.51	-	1.85	A
I <sub>HS_175A</sub>		Configuration Mode 1 bits D9:D8="11" SQHx shorted to ground; V <sub>RES</sub> = 7 to 37V	1.76	-	2.14	A
t <sub>ILIM</sub>	Low side MOS shutdown under short to battery	V <sub>sqblo</sub> =18V	90	-	110	μs
I <sub>LS</sub>	Low side MOS current limit		2.2	-	4.0	А


## Table 7. Squib deployment drivers and diagnostics - DC electrical characteristics (continued)



Symbol	Parameter	Test condition	Min.	Тур.	Max.	Unit
t <sub>settle</sub>	Firing current settling time	Time from fire command CS_D rising edge to where firing current remains within specified limits	-	-	150	μs
		$C_{SQUIB _HI} = 0 \text{ to } 0.12 \mu F$ $C_{SQUIB _LO} = 0 \text{ to } 0.12 \mu F$				
<sup>t</sup> DEPLOY-2ms		$\label{eq:VRES} \begin{array}{l} VRES = 7Vto \; 37@ \; I_{HS\_12A} \\ VRES = 7Vto \; 25@ \; I_{HS\_15A} \\ For \; I_{HS\_12A} \; and \; I_{HS\_15A} \\ Firing \; current \; measured \\ from \; CS\_D \; rising \; edge \end{array}$	2.15	-	2.5	ms
t <sub>DEPLOY-1ms</sub>	Deployment time	V <sub>RES</sub> = 7Vto 37V For I <sub>HS_175A</sub> Firing current measured from CS_D rising edge	1.15	-	1.40	ms
t <sub>DEPLOY-0.65ms</sub>		V <sub>RES</sub> = 7Vto 37V For I <sub>HS_175A</sub> Firing current measured from CS_D rising edge	0.65	-	0.85	ms

## Table 7. Squib deployment drivers and diagnostics - DC electrical characteristics (continued)

Figure 3. MOS settling time and turn-on time 2

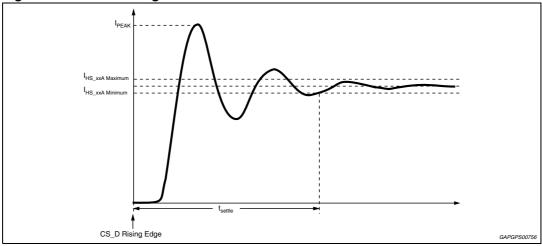



#### L9659

## 2.4.3 SPI timing

All SPI timing is performed with a 150 pF load on MISO unless otherwise noted


 $\begin{array}{l} 4.9V \leq V_{DD} \leq 5.1V; \ 7V \leq V_{RESX} \leq 37V; \ 7V \leq V_{SDIAG} \leq 37V; \ FEN1 = FEN2 = FEN3 = FEN4 = V_{DD}; \ R\_REF = 10K\Omega, \pm 1\%, \ 100PPM; \ -40^{\circ}C \leq T_A \leq +95^{\circ}C; \ C\_VRES0\_1 \geq 68nF; \\ C\_VRES2\_3 \geq 68nF; \ C\_VRES4\_5 \geq 68nF; \ C\_VRES6\_7 \geq 68nF; \ unless \ other \ specified. \end{array}$ 

Table 8.         SPI timing - DC electrical characteristics	
---	--

No.	Symbol	Parameter	Min.	Тур.	Max.	Unit
-	fop	Transfer frequency	dc	-	5.50	MHz
1	tsck	SCLK Period	181	-	-	ns
2	tlead	Enable Lead Time	65	-	-	ns
3	tlag	Enable Lag Time	50	-	-	ns
4	tSCLKHS	SCLK, High Time	65	-	-	ns
5	<b>t</b> SCLKLS	SCLK, Low Time	65	-	-	ns
6	tsus	MOSI, Input Setup Time	20	-	-	ns
7	tHS	MOSI, Input Hold Time	20	-	-	ns
8	tA	MISO, Access Time	-	-	60	ns
9	tDIS <sup>(1)</sup>	MISO, Disable Time	-	-	100	ns
10	tvs	MISO, Output Valid Time	-	-	60	ns
11	tно <sup>(1)</sup>	MISO, Output Hold Time	0	-	-	ns
12	tro	Rise Time (Design Information)	-	-	30	ns
13	tFO	Fall Time (Design Information)	-	-	30	ns
14	tCSN	CS_D, Negated Time	640	-	-	ns
15	<b>t</b> CLKN	Time between CS rising edge and first transition of SCLK must be higher than tCLKN. It happens when multiple devices are connected to the same SCLK and MOSI but with different chip select.	500	-	-	ns


 Parameters t<sub>DIS</sub> and t<sub>HO</sub> shall be measured with no additional capacitive load beyond the normal test fixture capacitance on the MISO pin. Additional capacitance during the disable time test erroneously extends the measured output disable time, and minimum capacitance on MISO is the worst case for output hold time.



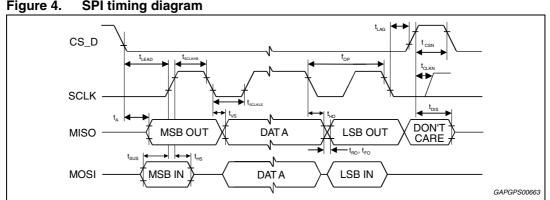

#### Figure 4. SPI timing diagram



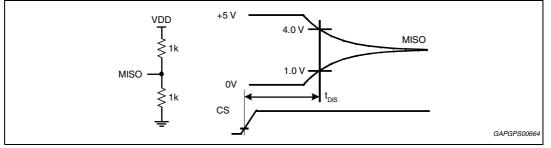

## **3** Functional description

## 3.1 Overview


The L9659 is an integrated circuit to be used in air bag systems. Its main functions include deployment of air bags. The L9659 supports 8 deployment loops.

## 3.2 General functions

## 3.2.1 Power on reset (POR)

The ASIC has a power on reset (POR) circuit, which monitors VDD voltage. When VDD voltage falls below  $V_{RST1}$  for longer than or equal to  $t_{POR}$ , all outputs are disabled and all internal registers are reset to their default condition. A second reset level,  $V_{RST2}$ , also monitors VDD but uses no filter time and will disable all outputs and all internal registers are reset to their default condition when VDD falls below the reset threshold.



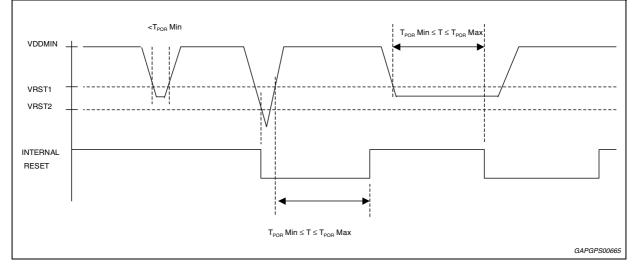

## 3.2.2 RESETB

The RESETB pin is active low. The effects of RESETB are similar to those of a POR event, except during a deployment. When a deployment is in-progress, the L9659 will ignore the RESETB signal.

However, it will shut itself down as soon as it detects a POR condition. When the deployment is completed and RESETB signal is asserted, the L9659 disables its outputs and reset its internal registers to their default states.

A de-glitch timer is provided for the RESETB pin. The timer protects this pin against spurious glitches. The L9659 neglects RESETB signal if it is asserted for shorter than tGLITCH. RESETB has an internal pull-up in case of an open circuit.



## 3.2.3 Reference resistor

IREF pin shall be connected to VDD supply through a resistor, RIREF. When the L9659 detects the resistor on IREF pin is larger than RIREF\_H or smaller than RIREF\_L, it goes into a reset condition. All outputs are disabled and all internal registers are reset to their default conditions.

## 3.2.4 Loss of ground

### GND

When the GND pin is disconnected from PC-board ground, the L9659 goes in reset condition. All outputs are disabled and all internal registers are reset to their default conditions.

### GND0-GND7

A loss of power-ground (GND0 – GND7) pin/s disables the respective low side driver/s on SQLx. However, the high side driver of the respective channel will still be able to be turned on. Thus under the scenario where the low side is shorted to ground the L9659 will be able to provide the programmed firing current for the specified time.

An open GNDx connection on any channel has no affect on the other channels. An open GNDx condition will be detected using the low side MOS diagnostics.

### AGND

The AGND pin is a reference for AOUT pin. When AGND loses its connection, the voltage on AOUT pin is pulledup to VDD voltage and L9659 goes in reset condition. All outputs are disabled and all internal register are reset to their default conditions.

## 3.2.5 VRESx capacitance

To ensure all diagnostics function properly a typical capacitor of equal to or greater than 68nF is required close to the firing supply pins. Thus minimum of 4 capacitors are required with one placed close to the VRES0 and VRES1 pins and a second capacitor will be close to the VRES2 and VRES3 pins and a third capacitor will be close to the VRES4 and VRES5 pins and a forth capacitor will be close to the VRES6 and VRES7 pins.

## 3.2.6 Supply voltages

The primary current sources for the different functions of the ASIC are as follows:

- VRESx Firing currents along with HSS and HS FET diagnostic currents
- VSDIAG Squib resistance and HSS diagnostics
- VDD will be used for all internal functions as well as short to battery/ground and high squib resistance diagnostics.

### 3.2.7 Ground connections

GND pin (6) is not connected internally to other ground pins (AGND or power ground GNDx). A ground plane is needed to directly connect the GND pin. This ground plane needs to be isolated from the high current ground for the squib drivers to prevent voltage shifts.

AGND pin should be connected to ground plane too to minimize drop versus ground reference of ADC that capture AOUT voltage.



## 3.3 Serial peripheral interface (SPI)

The L9659 contains one serial peripheral interfaces for control of the squib functions. The following table shows features that are accessed/controlled by the SPI.

Function	Pin names	Features accessed
Squib diagnostic and deployment SPI	SCLK MISO MOSI CS_D	All Squib Diagnostics; Squib related status information; Squib Arming and Firing; Software Reset; Component ID & Revision

 Table 9.
 Features that are accessed/controlled for the SPI

The software reset accessed over SPI will reset squib functions. The L9659 has a counter to verify the number of clocks in SCLK. If the number of clocks in SCLK is not equal to 16 clocks while CS\_D is asserted, it ignores the SPI message and sends a SPI fault response. L9659 computes SPI error length flag through counting the number of SCLK rising edges occurring when CS\_D is active. If the first SCLK rising edge occurs when CS\_D is inactive and the falling edge occurs when CS\_D is low, it is considered as valid edge.

MOSI commands contain several bits not used, all those bits must be 0. Commands are not recognized valid if one or more not used bits are not 0.

## 3.3.1 SPI pin descriptions

### Chip select (CS\_D)

Chip-select inputs select the L9659 for serial transfers. CS\_D can be asserted at any given time and are active low. When chip-select is asserted, the respective MISO pin is released from tri-state mode, and all status information is latched into the SPI shift register. While chip-select is asserted, register data is shifted into MOSI pin and shifted out of MISO pin on each subsequent SCLK. When chip-select is negated, MISO pin is tri-stated. To allow sufficient time to reload the registers; chip-select pin shall remain negated for at least tCSN. The chip-select inputs have current sinks which pull these pins to the negated state when there is an open circuit condition. These pins have TTL level compatible input voltages allowing proper operation with microprocessors using a 3.3 to 5.0 volt supply.

### Serial clock (SCLK)

SCLK input is the clock signal input for synchronization of serial data transfer. This pin has TTL level compatible input voltages allowing proper operation with microprocessors using a 3.3 to 5.0 volt supply. When chip select is asserted, both the SPI master and L9659 will latch input data on the rising edge of SCLK. The L9659 shifts data out on the falling edge of SCLK.

### Serial data output (MISO)

MISO output pins shall be in one tri-state condition when chip select is negated. When chip select is asserted, the MSB is the first bit of the word/byte transmitted on MISO and the LSB is the last bit of the word/byte transmitted. This pin supplies a rail to rail output, so if interfaced to a microprocessor that is using a lower VDD supply, the appropriate microprocessor input pin shall not sink more than IOH(min) and shall not clamp the MISO output voltage to less than VOH(min) while MISO pin is in a logic "1" state. When connecting to a micro using a lower supply, such as 3.3V, a resistor divider shall be used with high enough impedance to prevent excess current flow.



#### Serial data input (MOSI)

MOSI inputs take data from the master processor while chip select is asserted. The MSB shall be the first bit of each word/byte received on MOSI and the LSB shall be the last bit of each word/byte received.

This pin has TTL level compatible input voltages allowing proper operation with microprocessors using a 3.3 to 5.0 volt supply.

## 3.4 Squib drivers

## 3.4.1 Firing

The on-chip deployment drivers are designed to deliver 1.2A (min) for 2ms (min) and 1.75A (min) for 1ms (min)and 1.75A (min) for 0.65ms (min) with VRESx voltages between 7V and 37V. In addition the L9659 can provide 1.5A minimum for 2ms for VRESx voltages between 7V and 25V. The firing condition is selectable via the SPI. At the end of a deployment, a deploy success flag is asserted and can be read using the appropriate SPI command. Each VRESx and GNDx connection is used to accommodate 8 loops that can be deployed simultaneously.

Upon receiving a valid deployment condition, the respective SQHx and SQLx drivers are turned on. The only other activation of the SQHx and SQLx drivers is momentarily during a MOS diagnostic. Otherwise, SQHx and SQLx are inactive under any normal, fault, or transient conditions. Upon a successful deployment of the respective SQHx and SQLx drivers, a deploy command success flag is asserted via SPI. Refer to *Figure 8.* for the valid conditions and the deploy success flag timing.

The L9659 is protected against inadvertent turn on of the firing drivers unless the appropriate conditions are present. Non-typical conditions will not cause driver activation. This includes the case where VRESx and/or VSDIAG pins are connected to a supply up to 40V and VDD is between 0V and VDD min. Under these conditions the L9659 will ensure that driver activation will not occur. No flow of current shall be allowed through the SQHx and SQLx pins.





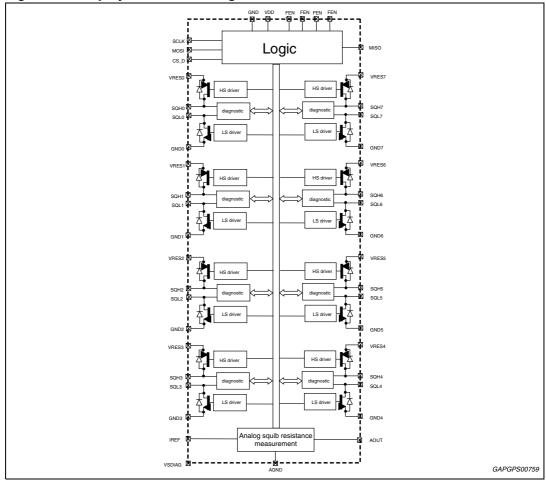


Figure 7. Deployment drivers diagram

### **Driver activation**

The firing of a squib driver requires the appropriate FEN function to be active and two separate sixteen bit writes be made over the SPI. The FEN function is defined as the result of the FENx pin OR'd with the internal FENx latch. The FENx pin going high initiates the FEN function. With the FEN 1 function being active and the appropriate Arm and Fire commands sent then Squib\_0 & 1 drivers would be activated. With the FEN 2 function being active and the appropriate Arm and Fire commands sent then Squib\_4 & 5 drivers would be activated. With the FEN 4 function being active and the appropriate Arm and Fire commands sent then Squib\_4 & 5 drivers would be activated. With the FEN 4 function being active and the appropriate Arm and Fire commands sent then Squib\_6 & 7 drivers would be activated.

The first write is to ARM the drivers in preparation of receiving the fire command. The Arm command will stop on all channels any diagnostics that are active. Any combination of squibs can be armed. The second write is a FIRE command that must directly follow the Arm command and will activate the desired driver pairs assuming the FEN function is valid. If there is a parity mismatch the data bits will be ignored and the squib drivers will not have their status changed, and the two write sequence must then be started again. If there is a mismatch in channels selected then only those channels selected in both the Arm and Fire commands will be activated.

During the first write, when the drivers are armed, all diagnostic functions are cleared. The FIRE command must follow the ARM command along with the FEN function active for driver activation. If a command is between the ARM and FIRE command then the sequence must be restarted. An error response will be received for the Fire command if the ARM/FIRE sequence is not followed.

The ARM/FIRE commands and FEN function are independent from each other. The L9659 will begin the t<sub>DEPLOY</sub> timer once a valid ARM/FIRE sequence has been received. If a valid ARM/FIRE command has been sent and the FEN function is inactive then the drivers will not be activated but the t<sub>DEPLOY</sub> timer will start. If the FEN function becomes active before t<sub>DEPLOY</sub> has expired then the drivers will become active for the full t<sub>DEPLOY</sub> time. If the FEN does not become active before t<sub>DEPLOY</sub> has expired then the sequence would need to be restarted. A diagram illustrating this is shown in Figure 8.

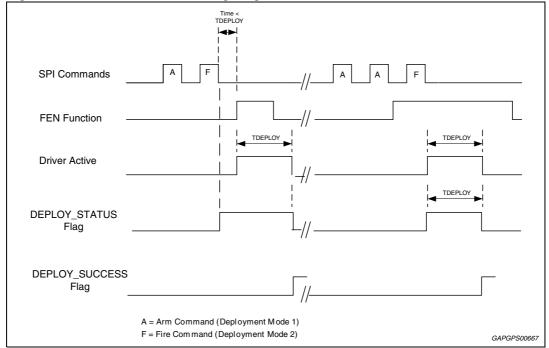


Figure 8. Driver activation timing diagram

Only the channels selected in the ARM and, directly following, the FIRE command will be able to be activated.

By reading the appropriate registers a status of the deployment is provided. If a valid Arm/Fire sequence has been provided the status flag will become active. This flag will remain active for as long as the T<sub>DEPLOY</sub> timer is counting. Depending on the state of the FEN function the DEPLOY\_STATUS flag will be active a minimum of T<sub>DEPLOY</sub> and a maximum of 2 x T<sub>DEPLOY</sub>. If driver activation did occur (both a valid Arm/Fire sequence and the appropriate FEN function active within the appropriate time) then the DEPLOY SUCCESS flag will be active following the completion of the driver activation period. This flag will be active until cleared by software. If a valid Arm/Fire sequence did occur but the FEN function was never activated within the T<sub>DEPLOY</sub> time then the DEPLOY\_SUCCESS flag will remain '0'.

Once the Deploy Success Flag is set, it will inhibit the subsequent deployment command until a SPI command to clear this deployment success flag is received. Bits D7 through bit D0 are used to clear/keep the deploy success flag. When these bits are set to '1,' the flag



can be cleared. Otherwise, the state of these flags is not affected. The Success flag must be cleared to allow re-activation of the drivers.

During driver activation the respective high side (SQHx) and low side (SQLx) drivers will turn on for  $t_{\text{DEPLOY}}$ .

L9659 driver activation will not occur or, if firing is in process, will terminate under the following conditions:

- Power On Reset (POR)
- IREF resistance is larger than RIREF\_H or smaller than RIREF\_L
- Loss of ground condition on GND pin

The following conditions are ignored when driver activation is in-progress:

- RESETB
- Valid soft reset sequences
- SPI commands except as noted below. Response for ignored commands will be 0xD009
- FEN function

The following table shows the response when sending SPI commands during deployment.

SPI MOSI SPI MISO		Response		
Configuration Commands SPI fault response		MOSI register mode messages will be ignored		
Deployment Commands	Command mode	Execute for channels not in deployment; no effect to deploying channel		
Diagnostic Commands	SPI fault response	MOSI diagnostic mode messages will be ignored		
Monitor Commands	Status response	Execute for all channels		

#### Table 10. SPI MOSI/MISO response

Note 1: SPI MISO sent in the next SPI transmission.

The L9659 can only deploy a channel when the FEN function is active. Once the drivers are active the L9659 will keep the drivers on for the required duration regardless of the FEN state. Once complete a status bit will be set to indicate firing is complete.

## 3.4.2 Firing current measurement

All channels have a 7 bit current measurement register that is used to measure the amount of time the current is above I<sub>MEAS</sub> during firing. The maximum measurement for each channel is 3.175ms nominal based on a bit weight of 25µs. The current measurement register will not increment outside the deployment time. The current measurement will begin incrementing once the current has exceeded 95% of the nominal target value. The count will continue to increment from the stored value until either a clear command has been issued for that channel or all '1's are present in the corresponding channel measurement register. If all '1's are present for a channel's measurement register and another firing sequence has been issued the register will remain all '1's. Only if a clear command has been issued will that particular register be reset to all '0's. All other channels shall keep the stored measurement count. During firing the current measurement register cannot be cleared. After a clear command has been issued for a channel is ready to count if



the current exceeds the specified level. After a POR or software reset the L9659 will reset all 8 measurement registers to all '0's.

A "real-time" current measurement status of all the channels is available. If a current limit status request is sent then the L9659 will report in the next SPI transfer whether the current is above or below IMEAS for each of the channels. The current status results can be read at any time and will correctly report whether current is flowing. The content of the internal current status register is captured on the falling edge of chip select during the SPI response. The internal status register is updated at a nominal sample time of 25µs and is independent of SPI transfers.

For this circuit there is continuously being performed compensation of the comparator to remove offset errors, which is independent from SPI commands. The compensation is being performed every 12.8µs based on the internal clock.

### 3.4.3 Fire enable (FEN) function description

The Fire Enable (FEN) function is the result of the FENx input OR'd with the internal FEN latch. If the FEN latch is not enabled and the FENx pin is low then activation of the FET drivers are disabled except as indicated during the MOS test. All internal diagnostic functions, and results, will be available through the serial interface. This pin must be pulled high to initiate the FEN latch function (if programmed) and enable firing of the FET drivers.

There are four FEN function blocks

- FEN Function 1 is FEN1 input OR'd with FEN1 latch timer and used for enabling channels 0 & 1
- FEN Function 2 is FEN1 input OR'd with FEN2 latch timer and used for enabling channels 2 & 3
- FEN Function 3 is FEN1 input OR'd with FEN3 latch timer and used for enabling channels 4 & 5
- FEN Function 4 is FEN1 input OR'd with FEN4 latch timer and used for enabling channels 6 & 7

The FEN function will be considered active when the pin is active ('1' or high) for more than 12 microseconds. Tolerance range for the filter used is 12 to 16 µsecs.

When the FENx input is active, '1', the FEN function will be active. When the FENx input state transitions from '1' to '0', the programmable latching function will hold the FEN function active until the timeout of the FEN timer. The programmable latch and hold function will be capable of delays of 0ms, 128 ms, 256 ms, and 512 ms. There are 4 independent timers with the timer for FEN1 associated with channels 0 & 1, timer for FEN2 associated with channels 2 & 3, timer for FEN3 associated with channels 4 & 5, timer for FEN4 associated with channels 6 & 7. The timer is reset to the programmed time when the FENx pin transitions from '0' to '1'. The programmable counter delay will be set through a SPI command.




## 3.4.4 Squib diagnostics


## Overview

The ASIC is able to perform the following diagnostics

- Short to battery and ground on both SQHx and SQLx pins with or without a squib
- Loop to loop diagnostics
- Squib resistance measurement
- Squib High resistance
- High side safing FET diagnostics
- VRESx voltage status
- High and low side FET diagnostics

Below is a block diagram showing the components involved in the squib diagnostics.



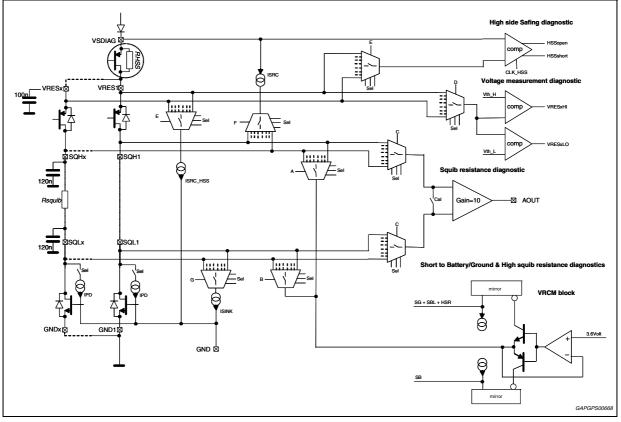

## Short to battery/ground and loop to loop diagnostics

The leakage diagnostic includes a short to battery, a short to ground and a short between loop tests. The test will be run for each SQHx and SQLx pin so that shorts can be detected regardless of the resistance between the squib pins.

## Normal short to battery/ground diagnostics.

For the test the internal VRCM is switched on and connected to the selected pin (SQHx or SQLx) pin. The IPD bit will be selected to be OFF which will deactivate the pulldown current



on the channel under test and all other channels. During the test with no leakage present the voltage on the selected SQHx or SQLx pin will be equal to VBIAS and no current is sunk or sourced by VRCM. If a leakage to ground, battery or to SQLy is present, the VRCM will sink or source a current less then I<sub>SVRCM</sub> trying to keep VBIAS. Two current comparators, ISTB and ISTG, will detect the abnormal current flow.

#### Loop to loop diagnostics

For this test the same procedure is followed except the pulldown current (IPD) is selected to be ON which will deactivate the pulldown current only on the channel under test with all other channel pulldown currents active. If a short to ground fault is active, assuming it was not active during normal short to battery/ground diagnostics, then that particular channel has a short to another squib loop. To detect loop to loop shorts between ASICs in the system the Stop diagnostics command with IPD enabled needs to be sent to the other ASICs before running the loop to loop diagnostics on the channel to be monitored. If the channel being monitored has a short to ground fault active, assuming it was not active during normal short to battery/ground diagnostics, then that particular channel has a short to another squib loop in the system.

The following table indicated how faults would be interpreted.

Fault condition for channel <sup>(1)</sup>	Channel leakage diagnostics results with I <sub>PD</sub> ON	Channel leakage diagnostics results with I <sub>PD</sub> OFF
No Shorts	No Fault	No Fault
Short to battery	STB Fault	STB Fault
Loop to loop short	STG Fault	No Fault
Short to ground	STG Fault	STG Fault

Table 11. How faults shall be interpreted

1. Condition where 4 open channels have the SQHx pins shorted will not be detected. If one squib is open and the other has a normal squib connection then the fault will be indicated on the channel that is open. Assumes both pins are tested

Once the command is issued the state of the comparators will be captured on the next falling edge of CS\_D. The results are valid after  $T_{SHORTDIAG}$  time, which is mainly dependent on the external capacitors on the squib lines.

#### Squib resistance measurement

During a resistance measurement, both ISRC and ISINK are switched on and connected to the selected SQHx and SQLx channel. A differential voltage is created between the SQHx and SQLx pin based in the ISRC current and resistance between the pins. The analog output pin, AOUT, will provide the resistance-measurement voltage based on the scaling factor indicated in the electrical parameters section. The tri-state output, AOUT, will be connected to an ADC input of a microprocessor. When not running squib resistance diagnostics the AOUT pin will be high impedance.

To increase accuracy of the squib resistance measurements the offset of the internal amplifier can be provided on the AOUT pin. This is done by setting the appropriate calibration bit, waiting the required time, and reading the converted AOUT voltage connected to the microprocessor ADC.

The normal measurement method for squib resistance is to take a single ended analog output measurement for a channel ( $V_{AOUT}$  with AMC bit=0) and use the tolerances and



equation shown in the parametric table. The L9659 is also capable of improving the tolerance at resistances below 3.5 Ohms by removing the offset of the differential comparator. This method works taking the single ended analog output results for a channel (V<sub>AOUT</sub> with AMC bit=0) and subtracting the internal comparator offset measurement of V<sub>AOUT\_CAL</sub> (V<sub>AOUT</sub> with AMC bit=1). The summary of the equation for this is as follows:

$$\begin{split} A_{OUT\_CAL} &= (V_{AOUT} - V_{AOUT\_CAL})/VDD \\ A_{OUT\_CAL} \text{ typical} &= 0.08 \text{ x } R_{SQUIB} \end{split}$$

#### High squib resistance diagnostics

During a high squib resistance diagnostic, VRCM and ISINK are switched ON and connected to SQHx and SQLx on the selected channel. Current flowing on SQHx will be measured and compared to IHR threshold to identify if resistance is above or below RSQHZ. The results will be reported in the next SPI message. Once the command is issued the state of the squib resistance will be valid after THSR captured on the next falling edge of CS\_D. The voltage source for this test will be VBIAS which is based on the VDD supply.

A way to reduce the time required until valid results are available is to perform a leakage diagnostics prior to this test. The leakage diagnostics will bias the voltage on the squibs to around 3.5V, which is the same bias voltage required for the high squib resistance diagnostic. By following running this sequence of diagnostics will reduce the test time to from 1.5ms to 200µs.

#### High and low side FET diagnostics

Prior to either the HS or LS FET diagnostics being run it is required to have the VRCM switched ON. Running the leakage diagnostics with the appropriate delay time prior to either the HS or LS FET diagnostics can do this. When the FET diagnostic command is issued the flags will initially be cleared. If the VRMC is not active or some leakage is present then the MOS will not be turned ON, the test will be aborted and Fault Present (FP) bit will be set. The FEN function must be inactive to run test. The test will not start if FEN function is active on channel under test and it will result in the Fault Present (FP) bit to set.

If no leakage is present and FEN function is inactive, the MOS (High side or Low Side) is turned ON. The L9659 will monitor the current sink or sourced by VRCM. If the MOS is working properly, this current will exceed ISTB (HS test) or ISTG (LS test) and the L9659 will turn off the driver under test within the specified time  $T_{SHUTOFF}$  If the current does not exceed ISTB or ISTG then the test will be terminated and the MOS will be switched off by the L9659 within  $T_{FETTIMEOUT}$ . During the  $T_{FETTIMEOUT}$  period the FET Timeout bit will be set (FT=1) and will be cleared at the expiration of the timer.

The results must be compared with the leakage diagnostic results to distinguish between a real leakage/short versus a FET fault. For high side FET diagnostics if no faults were indicated in the preceding leakage diagnostics then a normal result would be STB=1;STG=0 (with FT=0;FP=0). If the returned results for the high side FET test is not STB=1;STG=0 (with FT=0;FP=0) then either the FET is not functional, a short occurred during the test, or there is a missing VRESx connection for that channel. For low side FET diagnostics if no faults were indicated in the preceding leakage diagnostics then a normal result would be STB=0;STG=1 (with FT=0;FP=0). If the returned results for the low side FET test is not STB=0;STG=1 (with FT=0;FP=0) then either the FET is not functional, a short occurred during the test, or there is a missing GNDx connection for that channel. If the test is in progress then a bit (FT) is used in the response to indicate this status.

Once the command is issued, output of comparators will be latched.

On the next falling edge of CS\_D, comparator latched data are captured and reported to MISO response. The results will remain latch until the next test is initiated (diagnostic write command). If the test is in progress then a bit is used in the response to indicate the test completion. If the FET under test is working properly then the results will indicate a "Short to Ground" for LS test and "Short to Battery" for HS test. If a leakage is present prior to the test or FENx is asserted then both "Short to Ground" and Short to Battery" will be indicated in the response for either a LS or HS FET test.

For all conditions the current on SQHx/SQLx will never exceed  $I_{SVRCM}$ . On the squib lines there will be higher transient currents due to the presence of the filter capacitor.

### High side safing diagnostics

When the command is received the L9659 will activate IHSS on the selected VRESx. The diagnostics will measure the difference between VSDIAG and VRESx. The internal comparator will detect open, short or normal condition based on the differential voltage between VSDIAG and VRESx.

The results will be reported in the next SPI message using bits HSS1 and HSS0 as indicated in the following table. Once the command is issued the voltages will be captured on the next falling edge of CS\_D.

### Table 12. Diagnostic Mode HSS selection

Condition	HSS1	HSS0
(VSDIAG-VRESx) < V <sub>HSSSHORT_th</sub>	0	0
$V_{HSSSHORT_{th}} < (VSDIAG-VRESx) < V_{HSSOPEN_{th}}$	0	1
V <sub>HSSOPEN_th</sub> < (VSDIAG-VRESx)	1	1

## Voltage measurement diagnostics (VRESx)

When the command is received the L9659 will activate a comparator for the selected channel. A 2 bit indication of the state of the VRESx pins will be reported as indicated below. The results will be reported in the next SPI message. Once the command is issued the voltages will be captured on the next falling edge of CS\_D.

#### Table 13. Diagnostic mode 3 VRESx selection

Condition	VR1	VR0
V <sub>RESx</sub> < V <sub>VRESXLO_th</sub>	0	0
V <sub>VRESXLO_th</sub> < V <sub>RESx</sub> < V <sub>VRESXHI_th</sub>	0	1
V <sub>VRESXHI_th</sub> < V <sub>RESx</sub>	1	1

### Loss of power ground

When any of the power grounds (GND0 - 7) are lost, no deployment can occur on the respective deployment channels because the low side driver will be inactive. The high side driver for the respective channel can still be activated.

A loss of ground condition on one or several channels will not affect the operation of the remaining channels. When a loss of ground condition occurs, the source of the low side MOS will be floating. In this case, no current will flow through the low side driver.

L9659

This condition will be detected as a fault by a low side MOS diagnostic. No additional faults will be reported from any other diagnostic due to this condition.

## 3.4.5 SPI register definition for squib functions

The SPI provides access to read/write to the registers internal to the L9659. All commands and responses sent to/from the L9659 on SPI will use set D13 as required for odd parity on the 16 bit word. The responses to the commands are sent in the next valid CS\_D.

The table below summarizes the MISO register mode response of various events and MOSI messages. After POR event, RESETB negated, and loss of GND, the L9659 sends 0x0000 in MISO for the first SPI transmission.

The MISO response shown here is the one received in the next valid SPI transmission after each event or MOSI write.

Event/MOSI message	MISO response
MOSI Parity error or unrecognized command	0xD000
MOSI transmission - Incorrect number of clocks/bits	0xD003
Incorrect firing sequence received (Firing Command without a valid Arm Command)	0xD005
Error due to message not allowed during deployment	0xD009
POR	0x0000
RESETB	0x0000
LOSS OF gnd	0x0000
RIREF out of range	0x0000
MOSI Write Soft Reset: \$AA	0x1X02
MOSI Write Soft Reset: \$55 (after \$AA)	0x2003

Table 14. MISO responses to various events

Note: X in software reset response interpreted as follows: D11=1;D10=0;D9:D8=CL bits

The SPI fault responses (0xD000 or 0xD003) indicate a fault in the last MOSI transmission. The L9659 uses the parity bit to determine the integrity of the MOSI command transmission.



The following are the modes that are supported by the squib L9659 using SPI.

- Configuration mode
- Deployment mode
- Diagnostic mode
- Monitor mode

The table below is a summary of the modes and the functions that are achieved be sending the particular MOSI command. The following sections will provide a full description of bit settings for each mode. All commands and responses use D13 to achieve odd parity.

Table 15. Command description summary

Commond/meda	Description	Mode bits										
Command/mode	Description	D15	D14	D13	D12	D11	D10	D09	D08	D07 - D00		
Configuration com	mands											
Config. Mode 1	Current limit programming and software reset	0	0	Ρ	-	-	0	-	-	-		
Config. Mode 2	FEN latch time Programming	0	0	Р	-	-	1	-	-	-		
Deployment commands												
Deployment Mode 1	Arming Command	0	1	Р	1	1	0	0	1	-		
Deployment Mode 2	Firing Command	0	1	Р	0	0	0	0	0	-		
Diagnostic commar	nds	•	•	•	•		•	•				
Diagnostic Mode 1	Disable Diagnostic	1	0	Р	-	0	0	0	-	-		
Diagnostic Mode 2	Short to battery & ground diagnostics Short between loop diagnostics		0	Р	-	0	0	1	-	-		
Diagnostic Mode 3	VRESx voltage diagnostics	1	0	Р	-	0	1	0	-	-		
Diagnostic Mode 4	High Side Safing diagnostics	1	0	Р	-	0	1	1	-	-		
Diagnostic Mode 5	Squib Resistance Diagnostics	1	0	Р	-	1	0	0	-	-		
Diagnostic Mode 6	High Squib Resistance Diagnostics	1	0	Р	-	1	0	1	-	-		
Diagnostic Mode 7	LS driver diagnostics	1	0	Р	-	1	1	0	-	-		
Diagnostic Mode 8	HS driver diagnostics	1	0	Р	-	1	1	1	-	-		
Monitor commands												
Monitor Mode 1	Deployment status	1	1	Р	-	0	0	-	-	-		
Monitor Mode 2	Channel current limit measurement information	1	1	Р	-	0	1	-	-	-		
Monitor Mode 3	FENx function status and active current limit status	1	1	Р	-	1	0	-	-	-		
Monitor Mode 4	Revision and L9659 ID	1	1	Р	-	1	1	-	-	-		
P = Parity bit – all	commands and responses wil	l use	this	bit to	o ach	ieve	odd I	oarity	7			

The squib circuits can be reset over when sending the appropriate configuration commands via SPI.



#### L9659

### **Configuration commands**

### **Configuration mode 1**

Configuration mode 1 main functions are as follows:

- Set Deployment current for all channels. All channels will be either set to 1.2A/2ms, 1.5A/2ms (Maximum VRESx Voltage limited to 25V) 1.75A/1ms or 1.75A/0.65ms
- Perform a software reset

The SPI message definition for MOSI commands and MISO responses in this mode are defined below.

MSB															LSB
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI Command for configuration Mode 1															
0	0	0 P R/W SWR 0 CL Set bits Software Reset Sequence bits						s							
MISO Re	MISO Response for configuration Mode 1 (Except for Soft Reset/D11=1 and appropriate pattern)														
0	0	Р	R/W	SWR	0	CL Set bits		0	0	0	0	0	0	1	0

### Table 16.Configuration mode 1

Bit		MOSI command	MISO response				
DIL	State	Description					
D15	0	- Mode bits	See above				
D14	0		See above				
D13		Odd Parity – Includes all 16 bits	Odd Parity – Includes all 16 bits				
D12	0	Read (default) - When D12='0' bits D11 to D0 are ignored					
DI2	1	Write – Allows Soft reset and deployment programming	- R/W bit				
D11	0	Sets Deployment Condition for ALL channels - When D11='0' bits D7 to D0 are ignored	See above				
	1	Soft Reset Sequence – bits D8 and D9 are ignored	]				
D10	0		See above				
D9		Sets Deployment Conditions	Internal Stored Value CL bits				
D8		00 = 1.2A/2ms (Default) 01 = 1.5A/2ms 10 = 1.75A/0.65ms 11 = 1.75A/1ms	-				
D7 – D2			See above				
D1		Software Reset-sequence	see above				
D0			See above				

Bit [D9:D8] Bits used to set the firing current/time for all channels. The default state is '00' (1.2A/2ms min.)

Bits [D7:D0] The soft reset for the L9659, which includes deployment driver/diagnostics, is achieved by writing 0xAA and 0x55 within two



	subsequent 16-bit SPI transmissions. If the sequence is broken, the processor will be required to re-transmit the sequence. The L9659 will not reset if the sequence is not completed within two subsequent 16- bit SPI transmissions. When soft reset command is received, the L9659 reset its deployment driver's internal logic and timers, including all internal registers. The effects of a soft reset is the same as a of POR event, except MISO response.
Bit [D1]	First response after POR (or equivalent) the PU bit is set to '0'. All responses following the bit is set to '1'.
Bit [D0]	Bit D0 used to report the soft reset sequence status. If valid soft reset sequences are received, bit D0 is set to '1.' Otherwise, bit D0 is set to '0.' When L9659 receives valid soft reset sequences, it will send a MISO configuration mode response containing 0x2003 in the next SPI transmission.

### **Configuration mode 2**

Configuration mode 2 main function is as follows:

Set the latch time for FENx input •

The SPI message definition for MOSI commands and MISO responses in this mode are defined below.

MSB															LSB
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI Command for configuration mode 2															
0	0	Ρ	R/W	0	1	Latch	n bits	0	0	0	0	0	0	0	0
MISO	MISO Response for configuration mode 2														
0	0	Ρ	R/W	0	1	Latch bits		0	0	0	0	0	0	0	0

#### Table 17. **Configuration mode 2**

Bit		MOSI command	MISO response								
ы	State	Description									
D15	0	– Mode bits	See above								
D14	0		See above								
D13		Odd Parity – Includes all 16 bits	Odd Parity – Includes all 16 bits								
D12	0	Read (default) - When D12='0' bits D11 to D0 are ignored	R/W bit								
	1	Write – FEN latch programming	-								
D11	0	-	-								
D10	1	-	-								



### Table 17.Configuration mode 2

Bit		MOSI command	MISO response			
ы	State	Descripti	tion			
D9		FEN latch time				
D8	-	00 = 0ms (default) 01 = 128ms 10 = 256ms 11 = 512ms	Internal Stored Value FEN latch bits			
D7 – D0	0	-	See above			

Bits [D9:D8]

Bits are used to set the period of the FEN latch timer. The L9659 has 4 independent timers. A valid FENx input will start the pulse stretch timer. These bits will set the timer duration. These values default to '00' after a POR event.

### **Deployment commands**

The deployment mode is used to activate the drivers. Two consecutive commands are required to activate the drivers. Any combination of channels can be fired as long as the prerequisite conditions are met as indicated in the previous section.

The SPI message definition for MOSI commands and MISO responses in Deployment Mode are defined below.

MSB															LSB
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI Command for Deployment Mode 1															
0	1	Р	1	1	0	0	1	0	0	0	0	Armi	ng Cha	innel S	elect
MISO Response for Deployment Mode 1															
0	1	Р	1	1	0	0	1	0	0	0	0	Armed Channels			
MOSI C	omman	d for D	eployn	nent M	ode 2										
0	1	Р	0	0	0	0	0	0	0	0	0	Firir	ng Char	nnel Se	elect
MISO R	espons	e for D	eployn	nent Mo	ode 2										
0	1	Ρ	0	0	0	0	0	0	0	0	0		nnels a nels wa inp	iting fo	

Table 18. Deployment mode 1 bit definition

Bit	MOSI command		MISO response	
ы	State	Description		
D15	0	Mode Bits	See above	
D14	1		See above	
D13	-	Odd Parity – Includes all 16 bits	Odd Parity – Includes all 16 bits	
D12 – D8	-	Arm pattern	See above	



Table 18.	Deployment mode 1 bit definition (continued)			
Bit	MOSI command		MISO response	
	State	Description		
D7	0	Channel 7 Idle (default)	Internal Stored Value Arm bit	
	1	Arm Channel 7		
D6	0	Channel 6 Idle (default)	Internal Stored Value Arm bit	
	1	Arm Channel 6		
D5	0	Channel 5 Idle (default)	Internal Stored Value Arm bit	
	1	Arm Channel 7		
D4	0	Channel 4 Idle (default)	Internal Stored Value Arm bit	
	1	Arm Channel 4		
D3	0	Channel 3 Idle (default)	Internal Stored Value Arm bit	
	1	Arm Channel 3		
D2	0	Channel 2 Idle (default)	Internal Stored Value Arm bit	
	1	Arm Channel 2		
D1	0	Channel 1 Idle (default)	Internal Stored Value Arm bit	
	1	Arm Channel 1		
DO	0	Channel 0 Idle (default)	Internal Stored Value Arm bit	
	1	Arm Channel 0		

 Table 18.
 Deployment mode 1 bit definition (continued)

### Table 19. Deployment mode 2 bit definition

Dit	MOSI command		MISO response	
Bit	State	Description		
D15	0	Mode bits	See above	
D14	1	-	See above	
D13	-	Odd Parity – Includes all 16 bits	See above	
D12-D8	-	Fire pattern	See above	
D7	0	Channel 7 Idle (default)	Internal Deploy Status	
D7	1	Deploy Channel 7		
D6	0	Channel 6 Idle (default)	Internal Deploy Status	
	1	Deploy Channel 6		
D5	0	Channel 5 Idle (default)	Internal Deploy Status	
	1	Deploy Channel 5		
D4	0	Channel 4 Idle (default)	Internal Deploy Status	
	1	Deploy Channel 4		
D3	0	Channel 3 Idle (default)	Internal Deploy Status	
	1	Deploy Channel 3		



Dia		MOSI command	MISO response				
Bit	State	Description					
D2	0	Channel 2 Idle (default)	Internal Danloy Status				
02	1	Deploy Channel 2	Internal Deploy Status				
D1	0	Channel 1 Idle (default)	Internal Danloy Status				
	1	Deploy Channel 1	Internal Deploy Status				
DO	0	Channel 0 Idle (default)	Internal Deploy Status				
D0	1	Deploy Channel 0	Internal Deploy Status				

Table 19.	Deployment mode 2 bit definition
-----------	----------------------------------

The Deploy Status becomes '1' when there is a valid fire sequence. Once active it will become '0' when the time out has expired waiting FEN activation or when squib driver has turned off for fire completion. The same information is available when receiving a response from Monitor Mode 1.

For the drivers to be fire capable the command mode 1 (Arming) must be sent followed by command mode 2 (Firing). With this sequence valid and FEN active then firing will begin. A break in the sequence will require the process to be restarted. All other bit patterns for D12-D8 wil be ignored and the L9659 will respond with \$D005.

To begin a deployment 2 consecutive commands need to be sent along with the FEN active (external or internal latch). An example of a firing sequence for channel 0 would be as follows

FENx active or inactive

- TX 0x5901 ARM Channel 0
- RX Based on previous command
- TX 0x5901 ARM Channel 0

RX – 0x5901

TX – 0x5901 – ARM Channel 0

RX - 0x5901

- $\mathsf{TX}-\mathsf{0x6001}-\mathsf{Firing}$  on Channel 0 is started on if FEN is active
- RX 0x5901
- TX 0x6001 Command ignored sequence is not allowed
- RX 0x6001

TX – 0x6001 – Command ignored RX – 0xD005

Alternatively, if the sequence is broken the response will be as in the following example


FENx active TX – 0x5901 – ARM Channel 0

- RX Based on previous command
- TX 0x2000 Read of Register Mode 1

RX – 0x5901

TX - 0x6001 - Command ignored - sequence is not allowed

RX – contents of register





TX - 0x6001 - Command ignored - sequence is not allowed RX - 0xD005

If, for example, channel 0 and 1 bits are set in the Arm command and channel 0 and 7 bits are set in the fire command then the result will be the drivers on channel 0 will be activated (assuming FEN function is active) and there will be no effect on channel 7.

During a deployment, any commands directed to the channel that are in deployment are ignored and the response shall be 0xD009.

# **Diagnostic commands**

#### **Diagnostic Mode**

Diagnostic mode main functions are as follows:

- Squib short to battery/ground diagnostics
- Loop to loop diagnostics
- Normal Squib Resistance Diagnostics
- High Squib Resistance Diagnostics
- High side safing diagnostics
- VRESx measurement
- LS and HS FET Test

The SPI message definition for MOSI commands and MISO responses in Diagnostic Mode are defined below.





# Write commands definition

MSB															LSB
						1									
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI	Comma	and fo	r Diag	nostic	Mode I	Execut	ion								
1	0	Р	1	Diag.	Selectio	on bits	0	0	0	SQP	IPD_DIS	AMC	Cha	nnel se	election
MISO F	Respoi	nse foi	r Diagı	nostic	Mode,	Stop D	iagnost	ic Selec	ction	(MOS	l D11:D9=0	00) Dia	agnos	tic Mo	de 1
1	0	Р	1	0	0	0	0	0	0	0	IPD_DIS	0		000	
MISO I	Respor	nse foi	r Shor	t to Ba	ttery/G	round	Selectio	on (MOS	SI D1'	I:D9=0	001) Diagn	ostic N	/lode 2	2	
1	0	Р	1	0	0	1	STB	STG	0	SQP	IPD_DIS	0	Cha	nnel se	election
MISO I	Respoi	nse foi	r Diagr	nostic	Mode,	Vresx	Selectio	on (MOS	I D11	:D9=0	10) Diagno	ostic M	lode 3		
1	0	Р	1	0	1	0	VR1	VR0	0	0	IPD_DIS	0	Cha	nnel se	election
MISO I	Respor	nse foi	r Diagr	nostic	Mode,	High S	ide Safi	ng Sele	ction	(MOS	SI D11:D9=	011) D	iagnos	stic Mo	ode 4
1	0	Р	1	0	1	1	HSS1	HSS0	0	0	IPD_DIS	0	Cha	nnel se	election
MISO I	Respor	nse foi	r Diagr	nostic	Mode,	Squib	Resista	nce Sel	ectio	n (MO	SI D11:D9=	=100) 🛙	Diagno	stic M	lode 5
1	0	Р	1	1	0	0	0	0	0	0	IPD_DIS	AMC	Cha	nnel se	election
MISO F	Respoi	nse foi	r Diagr	nostic	Mode,	High S	quib Re	sistanc	e Sel	ectior	n (MOSI D1	1:D9= <sup>-</sup>	101) D	iag. M	ode 6
1	0	Р	1	1	0	1	HSR	0	0	0	IPD_DIS	0	Cha	nnel se	election
MISO F	Respoi	nse foi	r Diagı	nostic	Mode,	Low Si	ide FET	Test Se	lectio	on (MC	DSI D11:D9	9=110)	Diagn	ostic	Mode 7
1	0	Р	1	1	1	0	STB	STG	FP	FT	IPD_DIS	0	Cha	nnel se	election
MISO I	MISO Response for Diagnostic Mode, High Side FET Test Selection (MOSI D11:D9=111) Diagnostic Mode 8														
1	0	Р	1	1	1	1	STB	STG	FP	FT	IPD_DIS	0	Cha	nnel se	election

**Read commands definition** 

MSB															LSB
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI	Comm	and fo	r Diag	nostic	Mode	, REA	D comm	and							
1	0	Р	0	0	0	0	1	1	1	1	0	0		000	
MISO I	Respo	nse fo	r Diagi	nostic	Mode,	REA	D comm	and							
1	0	Р	0		. Selec ternal :		х	х	x	x	IPD_DIS	х	5	Chanr Select ernal	ion
Bits D13 Parity			bit. Cor	nmand	and r	espor	nse will use o	dd par	ity						

Bits D12

R/W

1 = Write (execute command)

0= Read

For bits D11:D09 the following table shall be used for diagnostic selection.



Diagnostic		Bits		Current source	Comparator or	
Diagnostic	D11 D10		D9	active	amplifier	
Stop Diagnostic	0	0	0	NO	NO	
Short to Battery/Ground and short between loops	0	0	1	Y (VMRC)	Y (Comp ISTB/ISTG)	
VRESx Diagnostic	0	1	0	Ν	Y (Comp VRESx)	
High Side Safing Diagnostics	0	1	1	Y (IHSS)	Y (Comp HSS)	
Squib Resistance Diagnostics	1	0	0	Y (ISRC/ISINK)	Y (Ampli )	
High Squib Resistance Diagnostics	1	0	1	Y (VMRC/ISINK)	Y (Comp IHR)	
LS FET test	1	1	0	Y (VMRC)	Y (Comp ISTB/ISTG)	
HS FET test	1	1	1	Y (VMRC)	Y (Comp ISTB/ISTG)	

#### Table 20. Diagnostic selection

Bits D8:D7

The definition of the response bits will change as follows based on diagnostic select

# STB/STG bit Definition with MOSI D11:D9=001 (Leakage Test)

STB bit	Bit used for indicating leakage to battery.
	0 = No leakage to battery
	1 = Short to battery / HS Driver test pass
STG bit	Bit used for indicating leakage to ground.
	0 = No leakage to battery
	1 = Short to ground / LS Driver test pass

# STB/STG bit Definition with MOSI D11:D9=110 (LS FET)

STB, STG bits see table below

### Table 21. Diagnostic mode LS FET selection

Condition	STB	STG
Test in Process (FT=1); Fault present prior to run test (FP=1); or LS FET/GNDx open fault (FP=0,FT=0). Only Valid if test is in process or inactive.	0	0
Short to battery occurred during test.	1	0
Test Pass if leakage diagnostics did not indicate a short to Gnd.	0	1



# STB/STG bit definition with MOSI D11:D9 =111 (HS FET)

STB, STG bits see table below

#### Table 22. Diagnostic mode HS FET selection

Condition	STB	STG
Test in Process (FT=1); Fault present prior to run test (FP=1); or HS FET/VRESx open fault (FP=0,FT=0). Only Valid if test is in process or inactive.	0	0
Test Pass if leakage diagnostics did not indicate a short to battery.	1	0
Short to ground occurred during test.	0	1

# HSS1:HSS0 bit definition with MOSI D11:D9=011 (High side safing)

HSS1:HSS0 bits see table below

# Table 23. Diagnostic mode HSS selection

Condition	HSS1	HSS0
(VSDIAG-VRESx) < V <sub>HSSSHORT_th</sub>	0	0
$V_{HSSSHORT_{th}} < (VSDIAG-VRESx) < V_{HSSOPEN_{th}}$	0	1
V <sub>HSSOPEN_th</sub> < (VSDIAG-VRESx)	1	1

# VR1:VR0 bit definition with MOSI D11:D9=010 (VRESx supply voltage)

VR1:VR0 bits see table below

# Table 24. Diagnostic mode VRESx selection

Condition	VR1	VR0
V <sub>RESx</sub> < V <sub>VRESXLO_th</sub>	0	0
V <sub>VRESXLO_th</sub> < V <sub>RESx</sub> < V <sub>VRESXHI_th</sub>	0	1
$V_{VRESXHI_th} < V_{RESx}$	1	1

### HSR Bit Definition with MOSI D11:D9=101 (High Squib Resistance)

HSR bit	Bit used for indicating a high squib resistance.	
	0 = Squib Resistance below R <sub>SQHIZ</sub>	
	1 = Squib Resistance above R <sub>SQHIZ</sub>	
Bits D6	<ul> <li>FP Fault present prior to running LS FET or HS FE (diagnostics aborted)</li> <li>0 = Normal</li> <li>1 = Test not run - Fault present (FEN in incorre to battery or ground)</li> </ul>	
Bits D5	Bit definition based on diagnostic selection. FT bit Read Only - Used for LS FET or HS FET and is the status of the FET timer 0 = FET timer not active 1 = FET timer active	<sup>-</sup> diagnostics



	SQP bit: Squib Pin to be tested during short to battery/ground diagnostics 0 = SQBLx pin test 1 = SQBHx pin test
Bits D4	Used to disable IPD on all channels
	0 = IPD active as indicated;
	<ul> <li>Active for all channels except the one under test when running Short to Battery/Ground and short between loops Diagnostics and LS/HS FET test</li> <li>Active for all channels when running Stop Diagnostic, Resistance Diagnostics, High Squib Resistance Diagnostics, HSS Diagnostic and VRESx Diagnostics</li> <li>1 = IPD disabled on all channels</li> </ul>
Bits D3	AMC Bit Bit used for resistance measurement amplifier calibration. Only valid when squib resistance diagnostics is selected, otherwise this it will be ignored and a 0 will be reported in the response
	<ul><li>0 = No calibration (Normal squib resistance measurements)</li><li>1 = Calibration</li></ul>
For bits D2:D0	The following table shall be used for channel selection.

### Table 25. Channel selection

Channel	Bit D2	Bit D1	Bit D0
0	0	0	0
1	0	0	1
2	0	1	0
3	0	1	1
4	1	0	0
5	1	0	1
6	1	1	0
7	1	1	1

All other combinations for MOSI bits D2:D0 will produce an error response of 0xD000.

Note: Except for short to battery /ground diagnostics and loop to loop test the state of IPD (D4) will not affect the test.



# Monitor commands

# Monitor Mode 1

Monitor mode main information:

• Deployment status

The SPI message definition for MOSI commands and MISO responses in Monitor Mode 1 are defined below.

MSB															LSB
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI	MOSI Command for Monitor Mode 1														
1	1	Р	0	0	0	0	DS		Chan	nel S	electio	on Stat	us Re	quest	t
MISO F	MISO Response for Monitor Mode 1														
1	1	Р	0	0	0	0	DS			С	hann	el Statu	JS		

# Table 26. MOSI diagnostic mode 1 bit definition

Dit		MOSI Command	MISO Response				
Bit	State	Des	scription				
D15	1		See above for state				
D14	1	Mode bits	See above for state				
D13		Odd Parity – Includes all 16 bits	Odd Parity – Includes all 16 bits				
D12	0	-	See above for state				
D11	0	Monitor Mode selection bits	See above for state				
D10	0	Monitor Mode selection bits	See above for state				
D9	0	-	See above for state				
D8	0	Report Deploy Success Flag (default)	Internal state of report setting				
00	1	Report Deploy Status	Internal state of report setting				
D7	0	Keep Deploy Success Flag Channel 7 (default)	Deploy Information for channel based on bit D8 Will Either be DEPLOY_STATUS7 or				
	1	Clear Deploy Success Flag Channel 7	DEPLOY_SUCCESS7				
D6	0	Keep Deploy Success Flag Channel 6 (default)	Deploy Information for channel based on bit D8 Will Either be DEPLOY_STATUS6 or				
	1	Clear Deploy Success Flag Channel 6	DEPLOY_SUCCESS6				
D5	0	Keep Deploy Success Flag Channel 5 (default)	Deploy Information for channel based on bit D8 Will Either be DEPLOY_STATUS5 or				
	1	Clear Deploy Success Flag Channel 5	DEPLOY_SUCCESS5				
D4	0	Keep Deploy Success Flag Channel 4 (default)	Deploy Information for channel based on bit D8 Will Either be DEPLOY_STATUS4 or				
	1	Clear Deploy Success Flag Channel 4	DEPLOY_SUCCESS4				
D3	0	Keep Deploy Success Flag Channel 3 (default)	Deploy Information for channel based on bit D8 Will Either be DEPLOY_STATUS3 or DEPLOY_SUCCESS3				
	1	Clear Deploy Success Flag Channel 3					



Bit		MOSI Command	MISO Response					
Бі	State	Des	scription					
D2	0	Keep Deploy Success Flag Channel 2 (default)	Deploy Information for channel based on bit D8 Will Either be DEPLOY_STATUS2 or					
	1 Clear Deploy Success Flag Channel 2		DEPLOY_SUCCESS2					
D1	0	Keep Deploy Success Flag Channel 1 (default)	Deploy Information for channel based on bit D8 Will Either be DEPLOY_STATUS1 or					
	1	Clear Deploy Success Flag Channel 1	DEPLOY_SUCCESS1					
D0	0 Keep Deploy Success Flag Channel 0 (default)		Deploy Information for channel based on bit D8 Will Either be DEPLOY_STATUS0 or					
	1	Clear Deploy Success Flag Channel 0	DEPLOY_SUCCESS0					

Table 26. MOSI diagnostic mode 1 bit definition

The DEPLOY\_SUCCESSx flag indicates if the corresponding channel's drivers were activated and that the activation period has completed. This bit is set when the activation period has expired. The DEPLOY\_SUCCESSx flag will be '1' until it is cleared by writing a '1' to the appropriate channel(s) (bits D7-D0).

The DEPLOY\_STATUSx bit will become '1' when there is a valid Arm and Fire sequence for the corresponding channel. The DEPLOY\_STATUSx bit transitioning from a '0' to a '1' does not depend on the state of the FEN function. It will become '0' when time out has expired. Depending on the state of FEN the DEPLOY\_STATUSx flag could be '1' for a minimum of 1x  $t_{\text{DEPLOY}}$  and a maximum of up to 2 x  $t_{\text{DEPLOY}}$  (see *Figure 8*.). The Deployment status is captured on the falling edge of CS\_D.

Bit D8 is used to select the meaning of bit D7 through bit D0 in the status response message. When this bit is set to '1,' bits D7 through D0 in the status response message will report the state of the DEPLOY\_STATUSx flag.

When this bit is '0,' bit D7 through bit D0 in the status response message will report the DEPLOY\_SUCCESSx flag. The following table shows the conditions for the DEPLOY\_STATUSx flag and the DEPLOY\_SUCCESSx flag.

DEPLOY_STATUSx flag	DEPLOY_SUCCESSx flag	Description
0	0	No Deployment in process or has been initiated since POR or since last Clear of Success flag
0	1	Deployment has successfully completed
1	0	Deployment in process
1	1	Deployment terminated / LSD shutdown

Table 27. DEPLOY\_STATUSx flag and the DEPLOY\_SUCCESSx flag conditions

Once the Deploy Success Flag is set, it will inhibit the subsequent deployment command until a SPI command to clear this deployment success flag is received. Bits D7 through bit D0 are used to clear/keep the deploy success flag. When these bits are set to '1,' the flag can be cleared. Otherwise, the state of these flags is not affected. **The Success flag must be cleared to allow re-activation of the drivers** 



# Monitor mode 2

Monitor mode main information:

• Current limit measurement of channels

The SPI message definition for MOSI commands and MISO responses in Monitor Mode 2 are defined below.

MSB															LSB
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI Command for Monitor Mode 2															
1	1	Р	CLR	0	1	Current Measurement Channel Select			0	0	0	0	0	0	0
MISO	Respor	nse for	Monito	r Mode	2										
1	1	Р	0	0	1	Mea	Current asureme Channel	ent		Cu	rrent N	leasure	ement [	Data	

### Table 28. MOSI monitor mode 2 Bit definition

Bit		MOSI command	MISO response			
Dit	State	Descri	iption			
D15	1	Mode bits	See above for state			
D14	1	Mode bits	See above for state			
D13		Odd parity – Includes all 16 bits	Odd Parity – Includes all 16 bits			
	0	Keep timer measurements	See above for state			
D12	1	Clear "current measurement time" stored on the register of channel selected by D9:D7	See above for state			
D11	0	Monitor mode selection bits	See above for state			
D10	1	Monitor mode selection bits	See above for state			
D9		Channel selected for current				
D8		measurement	Internal Stored channel selections bits			
D7		See Table 29				
D6:D0	0	-	Current measurement of selected channel			

Bits [D9:D7].

Used when sending the MOSI command to select the channel to be measured. The MISO response will echo the MOSI command.

Table 29.	Current measurement channel selections
-----------	--

Channel	Bit D9	Bit D08	Bit D07
0	0	0	0
1	0	0	1
2	0	1	0
3	0	1	1



Table 29. Current measurement channel selections (continued)

All other combinations for MOSI bits D9:D7 will produce an error response of 0xD000.

1

Bits [D6:D0]

Current measurement data of selected squib channel. Bit weight is nominally 25µs for a total measurement time 3.175ms.

1

### Monitor mode 3

Monitor mode main information:

7

- Status of FENx Function FENx pin OR'd with Internal FENx latch
- Status of current for each channel

The SPI message definition for MOSI commands and MISO responses in Monitor Mode 3 are defined below.

MSB															LSB
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI Command for Monitor Mode 3															
1	1	Ρ	0	1	0	CFS	0	0	0	0	0	0	0	0	0
MISO I	Respor	nse for	Monite	or Mod	le 3										
1	1	Ρ	0	1	0	CFS	POR STAT	CF7	CF6	CF5	CF4	CF3	CF2	CF1	CF0

#### Table 30. **MOSI monitor mode 3 bit definition**

Bit		MOSI command	MISO response				
DIL	State	Description					
D15	1	Mode Bits	See above for state				
D14	1		See above for state				
D13	-	Odd Parity – Includes all 16 bits	Odd Parity – Includes all 16 bits				
D12	0	-	See above for state				
D11	1	-	See above for state				
D10	0	-	See above for state				
D09		Status Type 0 = Current limit status 1 = FEN function status	0 = current measurement status reported in bit D7:D0 1 = FEN function status reported in D7:D0				
D08	0	-	POR status				
D7:D0	0	-	Current measurement status of channels or FEN status as indicated below				



L9659

1

# Bit [D8] POR status

0= Reset occurred. Bit cleared when read

1= Normal

#### With Bit D9=0 CFS

Bit D7:D4	ʻ0000'
Bit D3:	0 = FEN4 input or FEN4 latch timer inactive
	1 = FEN4 input or FEN4 latch timer active
Bit D2:	0 = FEN3 input or FEN3 latch timer inactive
	1 = FEN3 input or FEN3 latch timer active
Bit D1:	0 = FEN2 input or FEN2 latch timer inactive
	1 = FEN2 input or FEN2 latch timer active
Bit D0:	0 = FEN1 input or FEN1 latch timer inactive
	1 = FEN1 input or FEN1 latch timer active

Note: The FEN status is the result of the state of the FEN input pin OR'd with the FEN latch timer. The FEN latch timer will remain inactive until a transition of '1' to '0' on the FEN input (assuming the pin was high for a minimum of 16µs). At that time the FEN latch timer will be active and keep the internal FEN signal active based on the programmed time (0ms, 128ms, 256ms or 512ms) for that particular FEN function.

#### With Bit D9=1 CFS

Bit D7:	0 = Current through channel 7 is below $I_{MEAS}$
	1 = Current through channel 7 is above $I_{MEAS}$
Bit D6:	0 = Current through channel 6 is below $I_{MEAS}$
	1 = Current through channel 6 is above $I_{MEAS}$
Bit D5:	0 = Current through channel 5 is below $I_{MEAS}$
	1 = Current through channel 5 is above $I_{MEAS}$
Bit D4:	$0 = Current through channel 4 is below I_{MEAS}$
	1 = Current through channel 4 is above $I_{MEAS}$
Bit D3:	0 = Current through channel 3 is below $I_{MEAS}$
	1 = Current through channel 3 is above $I_{MEAS}$
Bit D2:	0 = Current through channel 2 is below $I_{MEAS}$
	1 = Current through channel 2 is above $I_{MEAS}$
Bit D1:	$0 = Current through channel 1 is below I_{MEAS}$
	1 = Current through channel 1 is above $I_{MEAS}$
Bit D0:	$0 = Current through channel 0 is below I_{MEAS}$
	1 = Current through channel 0 is above $I_{MEAS}$

Note: current status for channel is captured on the falling edge of chip select



# Monitor mode 4

Monitor mode main information:

- Revision
- L9659 ID

The SPI message definition for MOSI commands and MISO responses in Monitor Mode 4 are defined below

MSB															LSB
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI	MOSI Command for Monitor Mode 4														
1	1	Р	0	1	1	0	0	0	0	0	0	0	0	0	0
MISO I	MISO Response for Monitor Mode 4														
1	1	Р	0	1	1	ID3	ID2	ID1	ID0	R5	R4	R3	R2	R1	R0

# Table 31. MOSI monitor mode 4 bit definition

Bit		MOSI command	MISO response						
DIL	State	e Description							
D15	1	Mode Bits	See above for state						
D14	1		See above for state						
D13		Odd Parity – Includes all 16 bits	Odd Parity – Includes all 16 bits						
D12	0	-	See above for state						
D11	1	Mode selection	See above for state						
D10	1	Mode selection	See above for state						
D9-D6	0	-	'0100' is device L9659						
D5:D0	0	-	Revision Information						

The MOSI response for the first pass L9659 will be 0xED08



# 4 Package information

In order to meet environmental requirements, ST offers these devices in different grades of ECOPACK<sup>®</sup> packages, depending on their level of environmental compliance. ECOPACK<sup>®</sup> specifications, grade definitions and product status are available at: <u>www.st.com</u>.

 $\mathsf{ECOPACK}^{\mathbb{R}}$  is an ST trademark.

	mm inch				inch		
DIM.	MIN.	TYP.	MAX.	MIN.	TYP.	MAX.	OUTLINE AND MECHANICAL DATA
А			1.60			0.063	
A1	0.05		0.15	0.002		0.006	
A2	1.35	1.40	1.45	0.053	0.055	0.057	
В	0.17	0.22	0.27	0.0066	0.0086	0.0106	
С	0.09		0.20	0.0035		0.0079	
D	11.80	12.00	12.20	0.464	0.472	0.480	
D1	9.80	10.00	10.20	0.386	0.394	0.401	
D3		7.50			0.295		A CONTRACTOR OF
е		0.50			0.0197		- CARLES - CARLES
Е	11.80	12.00	12.20	0.464	0.472	0.480	
E1	9.80	10.00	10.20	0.386	0.394	0.401	
E3		7.50			0.295		
L	0.45	0.60	0.75	0.0177	0.0236	0.0295	
L1		1.00			0.0393		
К		0° (mir	ı.), 3.5°	(min.), 7	°(max.)		LQFP64 (10 x 10 x 1.4mm)
CCC			0.080			0.0031	
							A1 A2 A1 A2 Seating Plane
							T II

Figure 10. LQFP64 mechanical data and package dimensions.



# 5 Revision history

# Table 32. Document revision history

Date	Revision	Changes			
26-Jul-2011	1	Initial release.			
19-Sep-2013	2	Updated disclaimer.			



#### Please Read Carefully:

Information in this document is provided solely in connection with ST products. STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All ST products are sold pursuant to ST's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the ST products and services described herein, and ST assumes no liability whatsoever relating to the choice, selection or use of the ST products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by ST for the use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering the use in any manner whatsoever of such third party products or services or any intellectual property contained therein.

UNLESS OTHERWISE SET FORTH IN ST'S TERMS AND CONDITIONS OF SALE ST DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF ST PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

ST PRODUCTS ARE NOT DESIGNED OR AUTHORIZED FOR USE IN: (A) SAFETY CRITICAL APPLICATIONS SUCH AS LIFE SUPPORTING, ACTIVE IMPLANTED DEVICES OR SYSTEMS WITH PRODUCT FUNCTIONAL SAFETY REQUIREMENTS; (B) AERONAUTIC APPLICATIONS; (C) AUTOMOTIVE APPLICATIONS OR ENVIRONMENTS, AND/OR (D) AEROSPACE APPLICATIONS OR ENVIRONMENTS. WHERE ST PRODUCTS ARE NOT DESIGNED FOR SUCH USE, THE PURCHASER SHALL USE PRODUCTS AT PURCHASER'S SOLE RISK, EVEN IF ST HAS BEEN INFORMED IN WRITING OF SUCH USAGE, UNLESS A PRODUCT IS EXPRESSLY DESIGNATED BY ST AS BEING INTENDED FOR "AUTOMOTIVE, AUTOMOTIVE SAFETY OR MEDICAL" INDUSTRY DOMAINS ACCORDING TO ST PRODUCT DESIGN SPECIFICATIONS. PRODUCTS FORMALLY ESCC, QML OR JAN QUALIFIED ARE DEEMED SUITABLE FOR USE IN AEROSPACE BY THE CORRESPONDING GOVERNMENTAL AGENCY.

Resale of ST products with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by ST for the ST product or service described herein and shall not create or extend in any manner whatsoever, any liability of ST.

ST and the ST logo are trademarks or registered trademarks of ST in various countries. Information in this document supersedes and replaces all information previously supplied. The ST logo is a registered trademark of STMicroelectronics. All other names are the property of their respective owners.

© 2013 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan -Malaysia - Malta - Morocco - Philippines - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

www.st.com



Doc ID 022048 Rev 2