



# **IDT™ 89EBPES8T5A**

## **Evaluation Board Manual**

**(Eval Board: 18-636-002)**

**July 2009**

6024 Silver Creek Valley Road, San Jose, California 95138  
Telephone: (800) 345-7015 • (408) 284-8200 • FAX: (408) 284-2775  
Printed in U.S.A.  
©2009 Integrated Device Technology, Inc.

---

---

#### DISCLAIMER

Integrated Device Technology, Inc. reserves the right to make changes to its products or specifications at any time, without notice, in order to improve design or performance and to supply the best possible product. IDT does not assume any responsibility for use of any circuitry described other than the circuitry embodied in an IDT product. The Company makes no representations that circuitry described herein is free from patent infringement or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent, patent rights or other rights, of Integrated Device Technology, Inc.

**Boards that fail to function should be returned to IDT for replacement. Credit will not be given for the failed boards nor will a Failure Analysis be performed.**

#### LIFE SUPPORT POLICY

Integrated Device Technology's products are not authorized for use as critical components in life support devices or systems unless a specific written agreement pertaining to such intended use is executed between the manufacturer and an officer of IDT.

1. Life support devices or systems are devices or systems which (a) are intended for surgical implant into the body or (b) support or sustain life and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in a significant injury to the user.
2. A critical component is any components of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

---

IDT, the IDT logo, and Integrated Device Technology are trademarks or registered trademarks of Integrated Device Technology, Inc.



# Table of Contents

## Notes

### Description of the EB8T5A Eval Board

|                        |     |
|------------------------|-----|
| Introduction .....     | 1-1 |
| Board Features.....    | 1-2 |
| Hardware .....         | 1-2 |
| Software.....          | 1-2 |
| Other .....            | 1-2 |
| Revision History ..... | 1-3 |

### Installation of the EB8T5A Eval Board

|                                                                      |      |
|----------------------------------------------------------------------|------|
| EB8T5A Installation .....                                            | 2-1  |
| Hardware Description .....                                           | 2-1  |
| Host System .....                                                    | 2-1  |
| Reference Clocks.....                                                | 2-1  |
| Power Sources.....                                                   | 2-3  |
| External Power Source.....                                           | 2-3  |
| Vaux Support.....                                                    | 2-4  |
| PCI Express Serial Data Transmit Termination Voltage Converter ..... | 2-6  |
| PCI Express Digital Power Voltage Converter.....                     | 2-6  |
| PCI Express Analog Power Voltage Converter .....                     | 2-6  |
| Core Logic Voltage Converter .....                                   | 2-6  |
| 3.3V I/O Power Module.....                                           | 2-6  |
| Power-up Sequence .....                                              | 2-6  |
| Required Jumpers .....                                               | 2-6  |
| Reset.....                                                           | 2-6  |
| Fundamental Reset .....                                              | 2-6  |
| Downstream Reset .....                                               | 2-7  |
| Boot Configuration Vector.....                                       | 2-7  |
| SMBus Interfaces.....                                                | 2-8  |
| SMBus Slave Interface .....                                          | 2-8  |
| SMBus Master Interface .....                                         | 2-10 |
| JTAG Header .....                                                    | 2-10 |
| Attention Buttons.....                                               | 2-11 |
| Miscellaneous Jumpers, Headers.....                                  | 2-11 |
| LEDs .....                                                           | 2-12 |
| PCI Express Connectors.....                                          | 2-14 |
| EB8T5A Board Figure .....                                            | 2-16 |

### Software for the EB8T5A Eval Board

|                                 |     |
|---------------------------------|-----|
| Introduction .....              | 3-1 |
| Device Management Software..... | 3-1 |

### Schematics

|                  |     |
|------------------|-----|
| Schematics ..... | 4-1 |
|------------------|-----|

**Notes**



## List of Tables

**Notes**

|            |                                                                       |      |
|------------|-----------------------------------------------------------------------|------|
| Table 2.1  | Clock Source Selection .....                                          | 2-1  |
| Table 2.2  | Clock Frequency Selection .....                                       | 2-2  |
| Table 2.3  | Spread Spectrum Clock Selection .....                                 | 2-2  |
| Table 2.4  | SMA Connectors - Onboard Reference Clock .....                        | 2-2  |
| Table 2.5  | External Power Connector - J4 .....                                   | 2-3  |
| Table 2.6  | Downstream Reset Selection .....                                      | 2-7  |
| Table 2.7  | Boot Configuration Vector Signals .....                               | 2-7  |
| Table 2.8  | Boot Configuration Vector Switches S3, S4, and S5 (ON=0, OFF=1) ..... | 2-8  |
| Table 2.9  | Slave SMBus Interface Connector .....                                 | 2-9  |
| Table 2.10 | SMBus Slave Interface Address Configuration .....                     | 2-9  |
| Table 2.11 | PES8T5A SMBus Slave Interface Address Setting .....                   | 2-9  |
| Table 2.12 | EEPROM SMBus Address Setting .....                                    | 2-10 |
| Table 2.13 | JTAG Connector Pin Out .....                                          | 2-11 |
| Table 2.14 | Attention Buttons .....                                               | 2-11 |
| Table 2.15 | Miscellaneous Jumpers, Headers .....                                  | 2-11 |
| Table 2.16 | LED Indicators .....                                                  | 2-13 |
| Table 2.17 | PCI Express x4 Connector Pinout .....                                 | 2-14 |
| Table 2.18 | PCI Express x1 Connector Pinout .....                                 | 2-15 |

**Notes**



## List of Figures

**Notes**

|            |                                                       |     |
|------------|-------------------------------------------------------|-----|
| Figure 1.1 | Function Block Diagram of the EB8T5A Eval Board ..... | 1-1 |
| Figure 2.1 | Clock Distribution Block Diagram .....                | 2-3 |
| Figure 2.2 | Power Distribution Block Diagram .....                | 2-4 |
| Figure 2.3 | APWRDIS# Timing .....                                 | 2-5 |
| Figure 2.4 | APWRDIS# Timing Circuit .....                         | 2-5 |

## **Notes**



# Description of the EB8T5A Eval Board

## Notes

### Introduction

In this manual, references to the PES8T5A also apply to the PES6T5 and PES5T5 unless otherwise indicated.

The 89HPES8T5A switch (also referred to as PES8T5A in this manual) is a member of IDT's PCI Express® standard (PCIe®) based line of products. It is an 8-lane, 5-port switch. One upstream port is provided for connecting to the root complex (RC), and up to four downstream ports are available for connecting to PCIe endpoints or to another switch. More information on this device can be found in the appropriate User Manual (89HPES8T5A, 89HPES6T5, or 89HPES5T5).

The 89EBPES8T5A Evaluation Board (also referred to as EB8T5A in this manual) provides an evaluation platform for the PES8T5A switch. It is also a cost effective way to add a PCIe downstream port (x1) to an existing system with a limited number of PCIe downstream ports. The EB8T5A eval board is designed to function as an add-on card to be plugged into a x4 PCIe slot available on a motherboard hosting an appropriate root complex, microprocessor(s), and four downstream ports. The EB8T5A is a vehicle to test and evaluate the functionality of the PES8T5A chip. Customers can use this board to get a headstart on software development prior to the arrival of their own hardware. The EB8T5A is also used by IDT to reproduce system-level hardware or software issues reported by customers. Figure 1.1 illustrates the functional block diagram representing the main parts of the EB8T5A board.

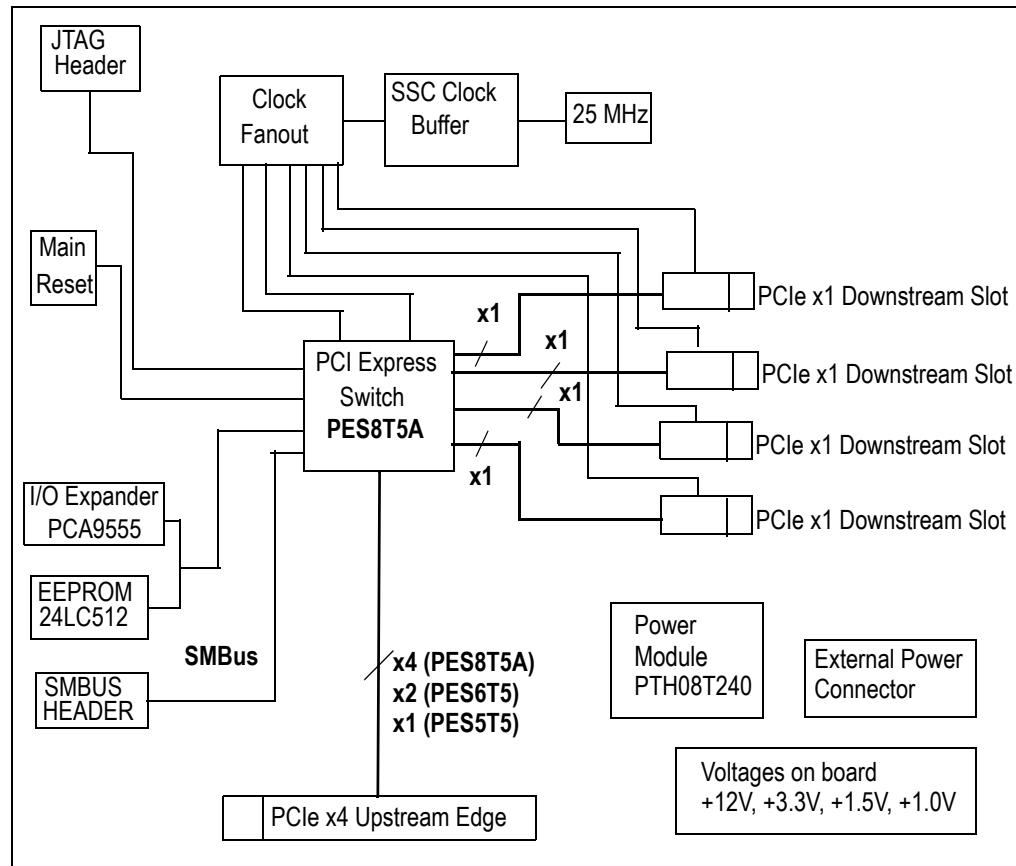


Figure 1.1 Function Block Diagram of the EB8T5A Eval Board

**Notes****Board Features****Hardware**◆ **PCIe 5 port switch**

- PES8T5A — Five ports (one x4 port and four x1 ports), 8 PCIe lanes
- PES6T5 — Five ports (one x2 port and four x1 ports), 6 PCIe lanes
- PES5T5 — Five ports (five x1 ports), 5 PCIe lanes
- PCIe Base Specification Revision 1.1 compliant
- Integrates eight 2.5 Gbps embedded SerDes
- Up to 256 byte maximum Payload Size
- Automatic lane reversal and polarity inversion supported on all lanes
- Automatic per port link width negotiation to x4, x2, x1
- Load configuration from an optional serial EEPROM via SMBUS

◆ **Upstream, Downstream Port**

- One edge connector on the upstream port, to be plugged into a slot with at least x4 capable mechanical slot connector on a host motherboard
- Four slot connectors on the downstream ports, for PCIe endpoint add-on cards to be plugged in.

◆ **Numerous user selectable configurations set using onboard jumpers and DIP-switches**

- Source of clock - host clock or onboard clock generator
- Two clock rates and spread spectrum settings
- Boot mode selection

◆ **Vaux Support**◆ **SMBUS Slave Interface (4 pin header)**◆ **SMBUS Master Interface connected to the Serial EEPROMs through I/O expander**

## ◆ “Attention” button for each downstream port to initiate a hot swap event on each port

◆ **Four pin connector for optional external power supply**◆ **Push button for Warm Reset**◆ **Several LEDs to display status, reset, power, “Attention”, etc.**◆ **One 14-pin JTAG header****Software**

There is no software or firmware executed on the board. However, useful software is provided along with the Evaluation Board to facilitate configuration and evaluation of the PES8T5A within host systems running popular operating systems.

◆ **Installation programs**

- Operating Systems Supported: Windows2000, WindowsXP, Linux

◆ **GUI based application for Windows and Linux**

- Allows users to view and modify registers in the PES8T5A
- Binary file generator for programming the serial EEPROMs attached to the SMBUS.

**Other**

- ◆ A metal bracket is required to firmly hold in place the four endpoints plugged into the EB8T5A board.
- ◆ An external power supply may be required under some conditions.
- ◆ SMBUS cable may be required for certain evaluation exercises.
- ◆ SMA connectors are provided on the EB8T5A board for specific test points.

**Notes****Revision History**

**September 10, 2007:** Initial publication of board manual.

**July 23, 2009:** Added PES6T5 and PES5T5 devices to eval board manual. Updated Power Sources section, Table 2.15, and Schematics. Added Note after Table 2.17.

**Notes**



# Installation of the EB8T5A Eval Board

## Notes

### EB8T5A Installation

This chapter discusses the steps required to configure and install the EB8T5A evaluation board. All available DIP switches and jumper configurations are explained in detail.

The primary installation steps are:

1. Configure jumper/switch options suitable for the evaluation or application requirements.
2. Connect PCI Express endpoint cards to the downstream port PCIe slots on the evaluation board.
3. Insert the evaluation board into the host system (motherboard with root complex chipset).
4. Apply power to the host system.

The EB8T5A board is shipped with all jumpers and switches configured to their default settings. In most cases, the board does not require further modification or setup.

### Hardware Description

The PES8T5 is an 8-lane, 5-port PCI Express® switch. It is a peripheral chip that performs PCI Express based switching with a feature set optimized for high performance applications such as servers and storage. It provides fan-out and switching functions between a PCI Express upstream port and 4 downstream ports or peer-to-peer switching between downstream ports.

The EB8T5A has four PCI Express downstream ports, accessible through four x4 open-ended connectors.

Basic requirements for the board to run are:

- Host system with a PCI Express root complex supporting x4 configuration through a PCI Express x4 slot.
- PCI Express Endpoint Cards capable of training x1 link.

### Host System

The evaluation board cannot be operated as a standalone unit. A host system implementing a PCI Express root complex supporting x4 configuration through a PCI Express x4 slot is required to take full advantage of the PES8T5's capabilities.

### Reference Clocks

The PES8T5A requires a differential reference clock. The EB8T5A derives this clock from a common source which is user-selectable. The common source can be either the host system's reference clock or the onboard clock generator. Selection is made by resistor switch described in Table 2.1.

| <b>Clock Configuration Switch - S3[3]</b> |                                                                 |
|-------------------------------------------|-----------------------------------------------------------------|
| <b>S3[3]</b>                              | <b>Clock Source</b>                                             |
| ON                                        | Onboard Reference Clock – Use onboard clock generator           |
| OFF                                       | Upstream Reference Clock – Host system provides clock (Default) |

Table 2.1 Clock Source Selection

**Notes**

The source for the onboard clock is the ICS9FG104 clock generator device (U8) connected to a 25MHz oscillator (Y1). When using the onboard clock generator, the EB8T5A allows selection between multiple clock rates and spread spectrum settings via DIP switches as described in Tables 2.2 and 2.3 respectively. Spread Spectrum technology reduces peak EMI emissions by modulating the frequency to spread the peak energy over a wider bandwidth.

| <b>Clock Frequency Switch - S3[1]</b> |                        |
|---------------------------------------|------------------------|
| <b>S3[1]</b>                          | <b>Clock Frequency</b> |
| OFF                                   | 125MHz                 |
| ON                                    | 100MHz (Default)       |

Table 2.2 Clock Frequency Selection

| <b>Clock Spread Spectrum Switch - S3[2]</b> |                                   |
|---------------------------------------------|-----------------------------------|
| <b>S3[2]</b>                                | <b>Spread Spectrum</b>            |
| OFF                                         | Enable Spread Spectrum            |
| ON                                          | Disable Spread Spectrum (Default) |

Table 2.3 Spread Spectrum Clock Selection

If the Clock Spread Spectrum is used to modulate data rate, then both ports must use same modulated clock source. Therefore, if your system uses SSC, the on-board clock generator must be disabled and the upstream reference clock should be used instead.

The output of the onboard clock generator is accessible through two SMA connectors located on the Evaluation Board. See Table 2.4. This can be used to connect a scope for probing or capturing purposes and cannot be used to drive the clock from an external source.

| <b>Onboard Reference Clock Output (Differential) – J18, J19</b> |                          |
|-----------------------------------------------------------------|--------------------------|
|                                                                 |                          |
| J19                                                             | Positive Reference Clock |
| J18                                                             | Negative Reference Clock |

Table 2.4 SMA Connectors - Onboard Reference Clock

Figure 2.1 illustrates the clock distribution block diagram for the EB8T5A evaluation board.

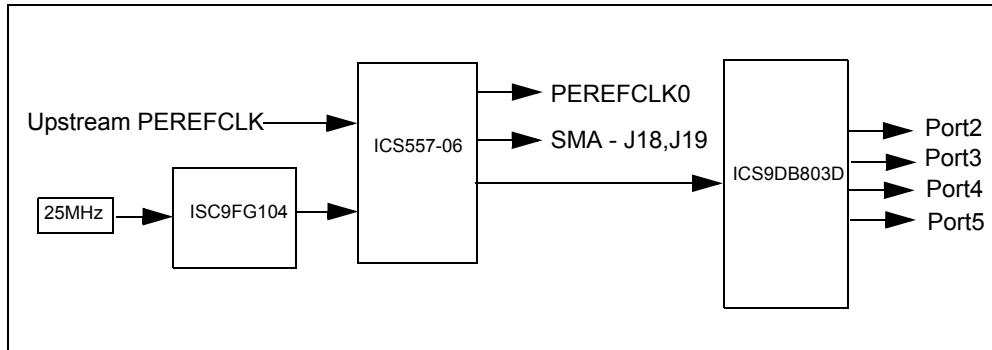
**Notes**

Figure 2.1 Clock Distribution Block Diagram

**Power Sources**

Power for the EB8T5A is generated from the 12.0V PCI Express upstream slot power or optionally from 3.3Vaux. A 12.0V to 3.3V DC-DC converter will be used to provide power to four DC-DC converters to generate VDDcore, VDDpe, VDDpea, and VTT voltages. The 3.3V from the 12.0V converter is used to power VDDio. When in power down mode the DC-DC converters are powered directly from 3.3Vaux through a MOSFET switch.

If add-in cards require more power than the upstream slot can support, an external source is required to supply this extra power via an auxiliary 4-pin power connector on the board. Header W1, W5, and W11 (see Table 2.15) are used to select the proper power source for the switch and all downstream ports.

**External Power Source**

If necessary, external power is supplied to the EB8T5A board through a 4-pin auxiliary power connector attached to J4. The external power supply provides +12V to the EB8T5A as described in Table 2.5. The +5V is unused.

| <b>Pin</b> | <b>Signal</b> |
|------------|---------------|
| 1          | +12V          |
| 2          | GND           |
| 3          | GND           |
| 4          | +5V           |

Table 2.5 External Power Connector - J4

## Notes

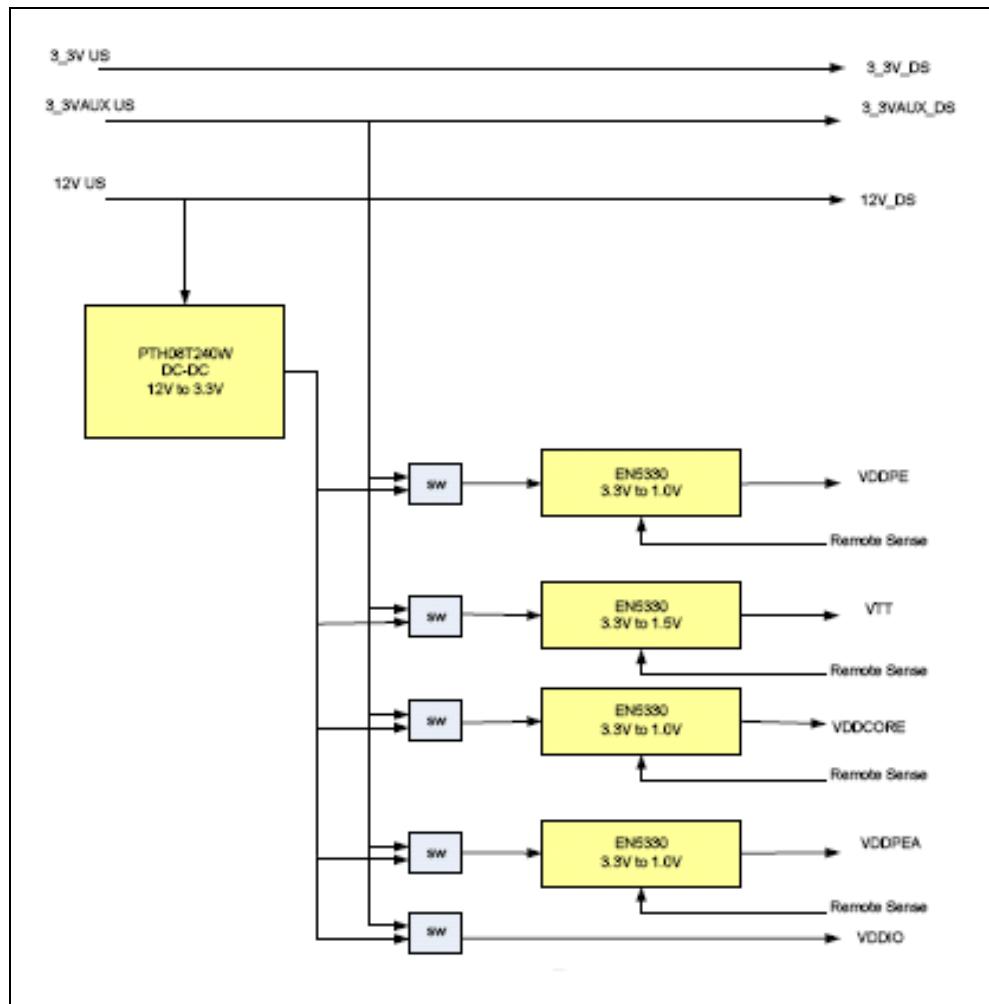


Figure 2.2 Power Distribution Block Diagram

## Vaux Support

Power supply support will be provided to EB8T5A from 12.0V upstream power to 3.3Vaux upstream power when in sleep mode. The WAKE# signal direction, both an input and output will be supported by jumper selection. The APWRDIS# signal for auxiliary power disable requires the following timing on power-up.

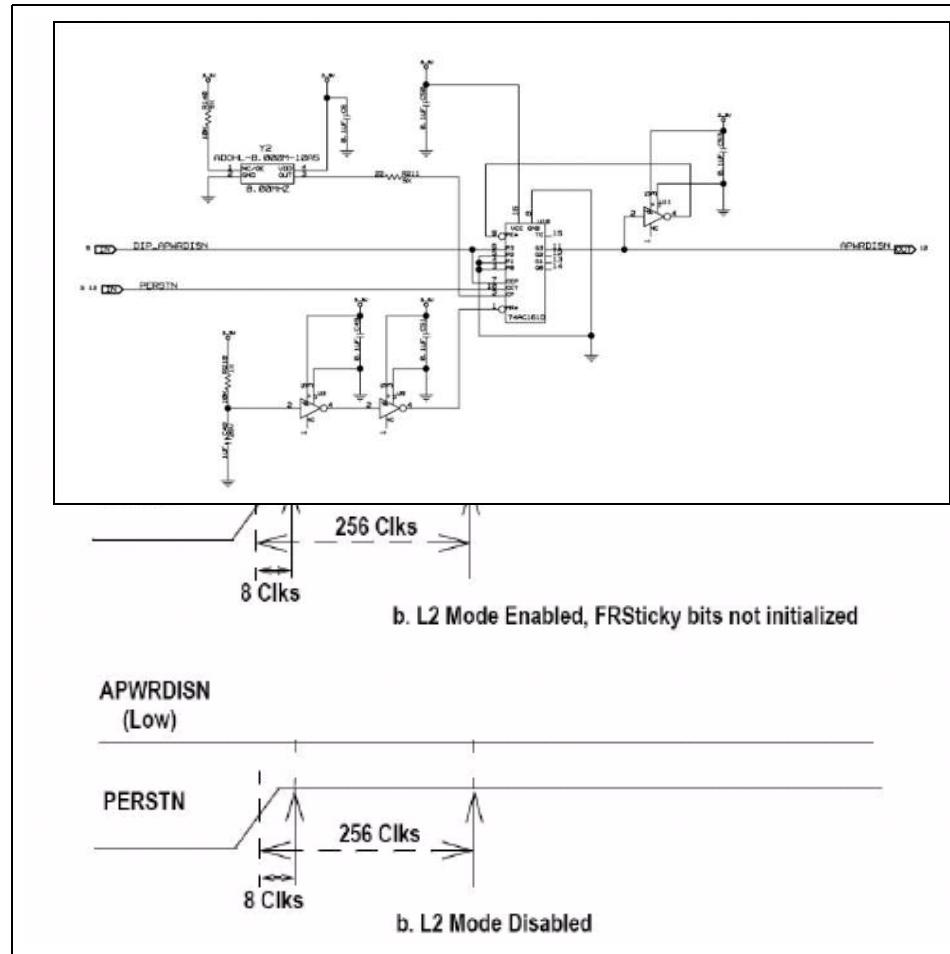
**Notes**

Figure 2.3 APWRDIS# Timing

On initial power up APWRDIS# must be held low initially for 8 clocks after PERST# is removed. Then it must be sampled high 256 clocks after PERSTN# is removed to enable L2 mode. Subsequent PERST# will not affect the APWRDIS# state. This timing will be provided by the following circuit.

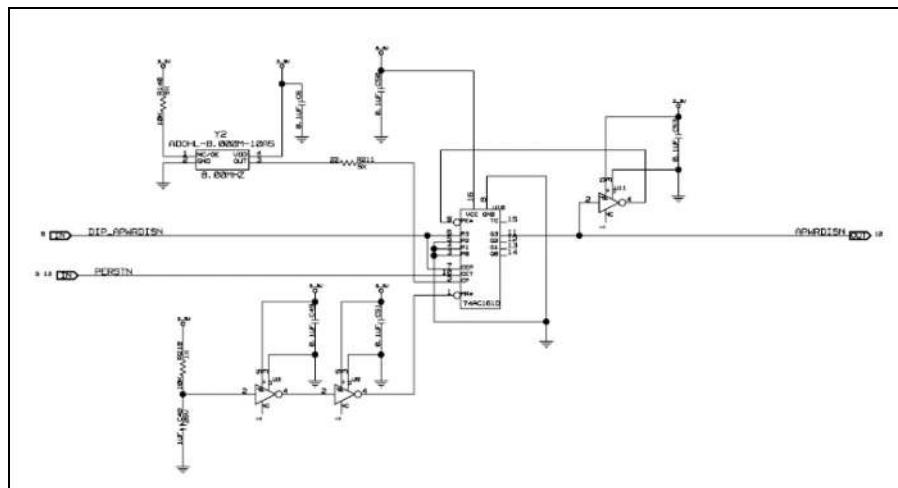


Figure 2.4 APWRDIS# Timing Circuit

**Notes****PCI Express Serial Data Transmit Termination Voltage Converter**

A DC-DC converter (U6) provides a 1.5V PCI Express serial data transmit termination voltage (shown as VTTPE or VPETVTT) to the PES8T5A.

**PCI Express Digital Power Voltage Converter**

A separate DC-DC converter (U16) provides a 1.0V PCI Express digital power voltage (VDDPE) to the PES8T5A.

**PCI Express Analog Power Voltage Converter**

A separate DC-DC converter (U7) provides a 1.0V PCI Express analog power voltage (shown as VDDAPE or VDDPEA) to the PES8T5A.

**Core Logic Voltage Converter**

A separate DC-DC converter (U1) provides the 1.0V core voltage (VDDCORE) to the PES8T5A.

**3.3V I/O Power Module**

A 12V to 3.3V power module (U5) provides the 3.3V I/O voltage (VDDIO) to the PES8T5A.

**Power-up Sequence**

The power-up sequence must be as following:

1. VDDIO - 3.3V
2. VDDCORE, VDDAPE, VDDPE - 1.0V
3. VTTPE - 1.5V

When powering up, each voltage level must ramp up and stabilize prior to applying the next voltage in the sequence to ensure internal latch-up issues are avoided. There are no maximum time limitations between sequential valid power level requirements. To insure that the sequencing requirements are met, a 0.047µF is used at the SOFTSTART cap on the VTTPE's voltage converter (U6 pin 36) in the EB8T5A.

**Required Jumpers**

To deliver power to the PES8T5A switch, the following jumpers must be shunted: W4, W10, W23, W24, and W25. These jumpers were implemented so that the power consumption of the PES8T5A can be measured.

**Reset**

The PES8T5A supports two types of reset mechanisms as described in the PCI Express specification:

- *Fundamental Reset: This is a system-generated reset that propagates along the PCI Express tree through a single side-band signal PERST# which is connected to the Root Complex, the PES8T5A, and the endpoints.*
- *Hot Reset: This is an In-band Reset, communicated downstream via a link from one device to another. Hot Reset may be initiated by software. This is further discussed in the 89HPES8T5A User Manual. The EB8T5A evaluation board provides seamless support for Hot Reset.*

**Fundamental Reset**

There are two types of Fundamental Resets which may occur on the EB8T5A evaluation board:

- *Cold Reset: During initial power-on, the onboard voltage monitor (TLC7733D) will assert the PCI Express Reset (PERSTN) input pin of the PES8T5A.*
- *Warm Reset: This is triggered by hardware while the device is powered on. Warm Reset can be initiated by two methods:
 
  - Pressing a push-button switch (S1) located on EB8T5A board*

**Notes**

- The host system board IO Controller Hub asserting PERST# signal, which propagates through the PCIe upstream edge connector of the EB8T5A. Note that one can bypass the onboard voltage monitor (TLC7733D) by moving the shunt from pin 1-2 to pin 2-3 (default) on W2.

Both events cause the onboard voltage monitor (TLC7733D) to assert the PCI Express Reset (PERSTN) input of the PES8T5A while power is on.

**Downstream Reset**

The PES8T5A provides a choice of either a software-controlled reset for each downstream port through GPIO pins or a fundamental reset through PERST#. Selection is made by jumpers described in Table 2.6.

| Port # | Jumper | Selection                                                                                  |
|--------|--------|--------------------------------------------------------------------------------------------|
| 5      | W8     | [1-2] Software controlled reset through GPIO10<br>[2-3] Fundamental reset PERST# (default) |
| 4      | W9     | [1-2] Software controlled reset through GPIO1<br>[2-3] Fundamental reset PERST# (default)  |
| 3      | W6     | [1-2] Software controlled reset through GPIO9<br>[2-3] Fundamental reset PERST# (default)  |
| 2      | W7     | [1-2] Software controlled reset through GPIO0<br>[2-3] Fundamental reset PERST# (default)  |

Table 2.6 Downstream Reset Selection

**Boot Configuration Vector**

A boot configuration vector consisting of the signals listed in Table 2.7 is sampled by the PES8T5A during a fundamental reset (while PERSTN is active). The boot configuration vector defines the essential parameters for switch operation and is set using DIP switches S3, S4, and S5 as defined in Table 2.8.

| Signal    | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CCLKDS    | <b>Common Clock Downstream.</b> When the CCLKDS pin is asserted, it indicates that a common clock is being used between the downstream device and the downstream port.<br><b>Default:</b> 0x1                                                                                                                                                                                                                                                                                                                                                    |
| CCLKUS    | <b>Common Clock Upstream.</b> When the CCLKUS pin is asserted, it indicates that a common clock is being used between the upstream device and the upstream port. <b>Default:</b> 0x1                                                                                                                                                                                                                                                                                                                                                             |
| MSMBSMODE | <b>Master SMBus Slow Mode.</b> The assertion of this pin indicates that the master SMBus should operate at 100 KHz instead of 400 kHz. <b>Default:</b> 0x0                                                                                                                                                                                                                                                                                                                                                                                       |
| RSTHALT   | <b>Reset Halt.</b> When this signal is asserted during a PCI Express fundamental reset, the PES8T5A executes the reset procedure and remains in a reset state with the Master and Slave SMBuses active. This allows software to read and write registers internal to the device before normal device operation begins. The device exits the reset state when the RSTHALT bit is cleared in the P0_SWCTL register through the SMBus.<br>The value may be overridden by modifying the RSTHALT bit in the P0_SWCTL register.<br><b>Default:</b> 0x0 |

Table 2.7 Boot Configuration Vector Signals (Part 1 of 2)

**Notes**

| <b>Signal</b> | <b>Description</b>                                                                                                                                                                                                                             |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SWMODE[2:0]   | <b>Switch Mode.</b> These configuration pins determine the PES8T5A switch operating mode.<br><b>Default:</b> 0x0<br>0x0 - Normal switch mode<br>0x1 - Normal switch mode with Serial EEPROM-based initialization<br>0x2 through 0x8 - Reserved |
| REFCLKM       | <b>PCI Express Reference Clock Mode Select.</b> This signal selects the frequency of the reference clock input. <b>Default:</b> 0x0<br>0x0 - 100 MHz<br>0x1 - 125 MHz                                                                          |
| MSMBADDR[2:0] | <b>Master SMBus Address.</b> These pins determine the SMBus address of the serial EEPROM from which configuration information is loaded. <b>Default:</b> 0x0                                                                                   |
| APWRDIS#      | <b>Auxiliary Power Disable.</b> When this pin is active, it disables the device from using auxiliary power supply. <b>Default:</b> 0x0                                                                                                         |

Table 2.7 Boot Configuration Vector Signals (Part 2 of 2)

| <b>Signal</b> | <b>Description</b> | <b>Default</b> |
|---------------|--------------------|----------------|
| S3[4]         | CCLKDS             | OFF            |
| S3[5]         | CCLKUS             | OFF            |
| S3[6]         | MSMBSMODE          | ON             |
| S5[6]         | RSTHALT            | ON             |
| S5[1]         | SWMODE[0]          | ON             |
| S5[2]         | SWMODE[1]          | ON             |
| S5[3]         | SWMODE[2]          | ON             |
| S5[5]         | APWRDIS#           | ON             |
| S4[5]         | MSMBADDR[1]        | ON             |
| S4[6]         | MSMBADDR[2]        | ON             |
| S4[7]         | MSMBADDR[3]        | ON             |
| S4[8]         | MSMBADDR[4]        | ON             |

Table 2.8 Boot Configuration Vector Switches S3, S4, and S5 (ON=0, OFF=1)

## SMBus Interfaces

The System Management Bus (SMBus) is a two-wire interface through which various system component chips can communicate. It is based on the principles of operation of I<sup>2</sup>C. Implementation of the SMBus signals in the PCI Express connector is optional and may not be present on the host system. The SMBus interface consist of an SMBus clock pin, an SMBus data pin, and 4 SMBus address pins.

The PES8T5A contains two SMBus interfaces: a slave SMBus interface and a master SMBus interface. The slave SMBus interface allows a SMBus Master device (such as the Intel E7520) full access to all software-visible registers. The Master SMBus interface provides connection to the external serial EEPROMs used for initialization and the I/O expander used for hot-plug signals.

### SMBus Slave Interface

On the PES8T5A board, the slave SMBus interface is accessible through the PCI Express edge connector as well as a 4-pin header as described in Table 2.9.

**Notes**

| <b>Slave SMBus Interface Connector<br/>J21</b> |               |
|------------------------------------------------|---------------|
| <b>Pin</b>                                     | <b>Signal</b> |
| 1                                              | N/C           |
| 2                                              | SCL           |
| 3                                              | GND           |
| 4                                              | SDA           |

Table 2.9 Slave SMBus Interface Connector

A fixed slave SMBus address specified by the SSMBADDR[5:3:1] pins is used.

For a fixed address, the SMBus address of the PES8T5A slave interface is **0b1110111** by default and is configurable using DIP switch S4 as described in Tables 2.10 and 2.11.

| <b>Slave Interface Address Configuration</b> |               |
|----------------------------------------------|---------------|
| <b>Address Bit</b>                           | <b>Signal</b> |
| 1                                            | SSMBUSADDR[1] |
| 2                                            | SSMBUSADDR[2] |
| 3                                            | SSMBUSADDR[3] |
| 4                                            | 0             |
| 5                                            | SSMBUSADDR[5] |
| 6                                            | 1             |
| 7                                            | 1             |

Table 2.10 SMBus Slave Interface Address Configuration

| <b>SMBUS Slave Interface Address Setting</b> |                              |                              |                              |                                        |
|----------------------------------------------|------------------------------|------------------------------|------------------------------|----------------------------------------|
| <b>S4[4]<br/>SSMBADDR[5]</b>                 | <b>S4[3]<br/>SSMBADDR[3]</b> | <b>S4[2]<br/>SSMBADDR[2]</b> | <b>S4[1]<br/>SSMBADDR[1]</b> | <b>Slave Interface<br/>Bus Address</b> |
| OFF                                          | OFF                          | OFF                          | OFF                          | 0b1110111 (Default)                    |
| OFF                                          | OFF                          | OFF                          | ON                           | 0b1110110                              |
| OFF                                          | OFF                          | ON                           | OFF                          | 0b1110101                              |
| OFF                                          | OFF                          | ON                           | ON                           | 0b1110100                              |
| OFF                                          | ON                           | OFF                          | OFF                          | 0b1110011                              |
| OFF                                          | ON                           | OFF                          | ON                           | 0b1110010                              |
| OFF                                          | ON                           | ON                           | OFF                          | 0b1110001                              |
| OFF                                          | ON                           | ON                           | ON                           | 0b1110000                              |
| ON                                           | OFF                          | OFF                          | OFF                          | 0b1100111                              |
| ON                                           | OFF                          | OFF                          | ON                           | 0b1100110                              |

Table 2.11 PES8T5A SMBus Slave Interface Address Setting (Part 1 of 2)

**Notes**

| SMBUS Slave Interface Address Setting |                      |                      |                      |                                |
|---------------------------------------|----------------------|----------------------|----------------------|--------------------------------|
| S4[4]<br>SSMBADDR[5]                  | S4[3]<br>SSMBADDR[3] | S4[2]<br>SSMBADDR[2] | S4[1]<br>SSMBADDR[1] | Slave Interface<br>Bus Address |
| ON                                    | OFF                  | ON                   | OFF                  | 0b1100101                      |
| ON                                    | OFF                  | ON                   | ON                   | 0b1100100                      |
| ON                                    | ON                   | OFF                  | OFF                  | 0b1100011                      |
| ON                                    | ON                   | OFF                  | ON                   | 0b1100010                      |
| ON                                    | ON                   | ON                   | OFF                  | 0b1100001                      |
| ON                                    | ON                   | ON                   | ON                   | 0b1100000                      |

Table 2.11 PES8T5A SMBus Slave Interface Address Setting (Part 2 of 2)

The slave SMBus interface responds to the following SMBus transactions initiated by an SMBus master. Initiation of any SMBus transaction other than those listed above produces undefined results. See the SMBus 2.0 specification for a detailed description of the following transactions:

- Byte and Word Write/Read
- Block Write/Read

**SMBus Master Interface**

Connected to the master SMBus interface are four 16-bit I/O Expanders (PCA9555) and a serial EEPROM (24LC512). Four I/O Expanders are used as the interface for the onboard hot-plug controllers (MIC2591B).

The bus address for the selected EEPROM device is 0b1010000 by default and the lower four bits is configurable using switch S4 as described in Table 2.12.

| S4[8] | S4[7] | S4[6] | S4[5] | Bus Address      |
|-------|-------|-------|-------|------------------|
| OFF   | OFF   | OFF   | OFF   | 0b1111           |
| OFF   | OFF   | OFF   | ON    | 0b1110           |
| OFF   | OFF   | ON    | OFF   | 0b1101           |
| OFF   | OFF   | ON    | ON    | 01100            |
| OFF   | ON    | OFF   | OFF   | 0b1011           |
| OFF   | ON    | OFF   | ON    | 0b1010           |
| OFF   | ON    | ON    | OFF   | 0b1001           |
| OFF   | ON    | ON    | ON    | 0b1000           |
| ON    | ON    | ON    | ON    | 0b0000 (Default) |

Table 2.12 EEPROM SMBus Address Setting

**JTAG Header**

The PES8T5A provides a JTAG connector J4 for access to the PES8T5A JTAG interface. The connector is a 2.54 x 2.54 mm pitch male 10-pin connector. Refer to Table 2.12 for the JTAG Connector J2 pin out.

**Notes**

| <b>JTAG Connector J2</b> |                        |                  |            |               |                  |
|--------------------------|------------------------|------------------|------------|---------------|------------------|
| <b>Pin</b>               | <b>Signal</b>          | <b>Direction</b> | <b>Pin</b> | <b>Signal</b> | <b>Direction</b> |
| 1                        | /TRST - Test reset     | Input            | 2          | GND           | —                |
| 3                        | TDI - Test data        | Input            | 4          | GND           | —                |
| 5                        | TDO - Test data        | Output           | 6          | GND           | —                |
| 7                        | TMS - Test mode select | Input            | 8          | GND           | —                |
| 9                        | TCK - Test clock       | Input            | 10         | GND           | —                |

Table 2.13 JTAG Connector Pin Out

**Attention Buttons**

The PES8T5A features four attention buttons, shown in Table 2.13. Each button corresponds to a particular port and is used to initiate hot-swapping events.

| <b>Button</b> | <b>Description</b>      |
|---------------|-------------------------|
| SW4           | Port 5 Attention Button |
| SW3           | Port 4 Attention Button |
| SW2           | Port 3 Attention Button |
| SW1           | Port 2 Attention Button |

Table 2.14 Attention Buttons

**Miscellaneous Jumpers, Headers**

| <b>Miscellaneous Jumpers, Headers</b> |             |                |                                                                                                  |
|---------------------------------------|-------------|----------------|--------------------------------------------------------------------------------------------------|
| <b>Ref. Designator</b>                | <b>Type</b> | <b>Default</b> | <b>Description</b>                                                                               |
| S2[1]                                 | Switch      | OFF            | Port2: Manually-operated Retention Latch                                                         |
| S2[2]                                 | Switch      | OFF            | Port3: Manually-operated Retention Latch                                                         |
| S2[3]                                 | Switch      | OFF            | Port4: Manually-operated Retention Latch                                                         |
| S2[4]                                 | Switch      | OFF            | Port5: Manually-operated Retention Latch                                                         |
| S6[4]                                 | Switch      | OFF            | Bypass hot-plug controller - Enables direct power (+12V and +3.3V) to Port 5 ( <b>Default</b> )  |
| S6[3]                                 | Switch      | OFF            | Bypass hot-plug controller - Enables direct power (+12V and +3.3V) to Ports 4 ( <b>Default</b> ) |
| S6[2]                                 | Switch      | OFF            | Bypass hot-plug controller - Enables direct power (+12V and +3.3V) to Ports 3 ( <b>Default</b> ) |
| S6[1]                                 | Switch      | OFF            | Bypass hot-plug controller - Enables direct power (+12V and +3.3V) to Ports 2 ( <b>Default</b> ) |

Table 2.15 Miscellaneous Jumpers, Headers (Part 1 of 2)

**Notes**

| Miscellaneous Jumpers, Headers |        |             |                                                                                                                   |
|--------------------------------|--------|-------------|-------------------------------------------------------------------------------------------------------------------|
| Ref. Designator                | Type   | Default     | Description                                                                                                       |
| W32                            | Header | 2-3 Shunted | 1-2: Port 2, +3.3V source base on hot-plug controller<br>2-3: Port 2, +3.3V source from upstream port power       |
| W31                            | Header | 2-3 Shunted | 1-2: Port 2, +12V source base on hot-plug controller<br>2-3: Port 2, +12V source from upstream port power         |
| W30                            | Header | 2-3 Shunted | 1-2: Port 2, +3.3Vaux source base on hot-plug controller<br>2-3: Port 2, +3.3Vaux source from upstream port power |
| W35                            | Header | 2-3 Shunted | 1-2: Port 3, +3.3V source base on hot-plug controller<br>2-3: Port 3, +3.3V source from upstream port power       |
| W34                            | Header | 2-3 Shunted | 1-2: Port 3, +12V source base on hot-plug controller<br>2-3: Port 3, +12V source from upstream port power         |
| W33                            | Header | 2-3 Shunted | 1-2: Port 3, +3.3Vaux source base on hot-plug controller<br>2-3: Port 3, +3.3Vaux source from upstream port power |
| W38                            | Header | 2-3 Shunted | 1-2: Port 4, +3.3V source base on hot-plug controller<br>2-3: Port 4, +3.3V source from upstream port power       |
| W37                            | Header | 2-3 Shunted | 1-2: Port 4, +12V source base on hot-plug controller<br>2-3: Port 4, +12V source from upstream port power         |
| W36                            | Header | 2-3 Shunted | 1-2: Port 4, +3.3Vaux source base on hot-plug controller<br>2-3: Port 4, +3.3Vaux source from upstream port power |
| W50                            | Header | 2-3 Shunted | 1-2: Port 5, +3.3V source base on hot-plug controller<br>2-3: Port 5, +3.3V source from upstream port power       |
| W40                            | Header | 2-3 Shunted | 1-2: Port 5, +12V source base on hot-plug controller<br>2-3: Port 5, +12V source from upstream port power         |
| W39                            | Header | 2-3 Shunted | 1-2: Port 5, +3.3Vaux source base on hot-plug controller<br>2-3: Port 5, +3.3Vaux source from upstream port power |
| W15                            | Header | Open        | 1-2: Select WAKEN# as an input<br>2-3: Select WAKE# as an output                                                  |
| S2[6]                          | Switch | On          | Power Good Enable Force On switch for ICS90DB803 clock output enable (OE2#)                                       |
| S2[1]                          | Switch | On          | Power Good Enable Force On switch for ICS90DB803 clock output enable (OE3#)                                       |
| S6[6]                          | Switch | On          | Power Good Enable Force On switch for ICS90DB803 clock output enable (OE4#)                                       |
| S6[5]                          | Switch | On          | Power Good Enable Force On switch for ICS90DB803 clock output enable (OE5#)                                       |
| W1, W5, W11                    | Header | 1-2 Shunted | 1-2: +12V source from upstream port (Default)<br>2-3: +12V source from external power connect                     |
| W3                             | Header | Shunted     | Disable EEPROM Write protect feature (Default)                                                                    |

Table 2.15 Miscellaneous Jumpers, Headers (Part 2 of 2)

**LEDs**

There are several LED indicators on the EB8T5A which convey status feedback. A description of each is provided in Table 2.15.

**Notes**

| <b>Location</b> | <b>Color</b> | <b>Definition</b>                 |
|-----------------|--------------|-----------------------------------|
| DS87            | Green        | Port 2: Power-is-good indicator   |
| DS86            | Green        | Port 3: Power-is-good indicator   |
| DS85            | Green        | Port 4: Power-is-good indicator   |
| DS84            | Green        | Port 5: Power-is-good indicator   |
| DS83            | Amber        | Port2: Attention Input indicator  |
| DS82            | Amber        | Port3: Attention Input indicator  |
| DS81            | Amber        | Port4: Attention Input indicator  |
| DS80            | Amber        | Port5: Attention Input indicator  |
| DS79            | Green        | Port2: Presence Detect indicator  |
| DS78            | Green        | Port3: Presence Detect indicator  |
| DS77            | Green        | Port4: Presence Detect indicator  |
| DS76            | Green        | Port5: Presence Detect indicator  |
| DS64            | Amber        | Port2: Attention Output indicator |
| DS63            | Amber        | Port3: Attention Output indicator |
| DS62            | Amber        | Port4: Attention Output indicator |
| DS61            | Amber        | Port5: Attention Output indicator |
| DS57            | Green        | Port 2: Power indicator           |
| DS56            | Green        | Port 3: Power indicator           |
| DS55            | Green        | Port 4: Power indicator           |
| DS54            | Green        | Port 5: Power indicator           |
| DS91            | Red          | Port 2: MRL indicator             |
| DS90            | Red          | Port 3: MRL indicator             |
| DS89            | Red          | Port 4: MRL indicator             |
| DS88            | Red          | Port 5: MRL indicator             |
| DS95            | Red          | Port 2: Power Fault indicator     |
| DS94            | Red          | Port 3: Power Fault indicator     |
| DS93            | Red          | Port 4: Power Fault indicator     |
| DS92            | Red          | Port 5: Power Fault indicator     |
| DS99            | Green        | Port 2: Link Up indicator         |
| DS98            | Green        | Port 3: Link Up indicator         |
| DS97            | Green        | Port 4: Link Up indicator         |
| DS96            | Green        | Port 5: Link Up indicator         |
| DS100           | Green        | Port 0: Link Up indicator         |
| DS105           | Amber        | Port0: Link Activity indicator    |
| DS104           | Amber        | Port2: Link Activity indicator    |

Table 2.16 LED Indicators (Part 1 of 2)

**Notes**

| <b>Location</b> | <b>Color</b> | <b>Definition</b>              |
|-----------------|--------------|--------------------------------|
| DS103           | Amber        | Port3: Link Activity indicator |
| DS102           | Amber        | Port4: Link Activity indicator |
| DS101           | Amber        | Port5: Link Activity indicator |

Table 2.16 LED Indicators (Part 2 of 2)

**PCI Express Connectors**

| <b>Pin</b>            | <b>Side A</b> |                                       | <b>Side B</b> |                                   |
|-----------------------|---------------|---------------------------------------|---------------|-----------------------------------|
| 1                     | +12V          | 12V power                             | PRSNT1#       | Hot-Plug presence detect          |
| 2                     | +12V          | 12V power                             | +12V          | 12V power                         |
| 3                     | RSVD          | Reserved                              | +12V          | 12V power                         |
| 4                     | GND           | Ground                                | GND           | Ground                            |
| 5                     | SMCLK         | SMBus clock                           | JTAG2         | TCK (Test Clock) JTAG i/f clk i/p |
| 6                     | SMDAT         | SMBus Data                            | JTAG          | TDI (Test Data Input)             |
| 7                     | GND           | Ground                                | JTAG          | TDO (Test Data Output)            |
| 8                     | +3.3V         | 3.3V power                            | JTAG          | TMS (Test Mode Select)            |
| 9                     | JTAG1         | TRST# (Test/Reset) resets<br>JTAG i/f | +3.3V         | 3.3V power                        |
| 10                    | 3.3Vaux       | 3.3V auxiliary power                  | +3.3V         | 3.3V power                        |
| 11                    | WAKE#         | Signal for Link reactivation          | PERST#        | Fundamental Reset                 |
| <b>Mechanical Key</b> |               |                                       |               |                                   |
| 12                    | RSVD          | Reserved                              | GND           | Ground                            |
| 13                    | GND           | Ground                                | REFCLK+       | REFCLK Reference clock            |
| 14                    | PETp0         | Transmitter differential              | REFCLK-       | (differential pair)               |
| 15                    | PETn0         | pair, Lane 0                          | GND           | Ground                            |
| 16                    | GND           | Ground                                | PERp0         | Receiver differential             |
| 17                    | PRSNT2#       | Hot-Plug presence detect              | PERn0         | pair, Lane 0                      |
| 18                    | GND           | Ground                                | GND           | Ground                            |
| 19                    | PETp1         | Transmitter differential              | RSVD          | Reserved                          |
| 20                    | PETn1         | pair, Lane 1                          | GND           | Ground                            |
| 21                    | GND           | Ground                                | PERp1         | Receiver differential             |
| 22                    | GND           | Ground                                | PERn1         | pair, Lane 1                      |
| 23                    | PETp2         | Transmitter differential              | GND           | Ground                            |
| 24                    | PETn2         | pair, Lane 2                          | GND           | Ground                            |
| 25                    | GND           | Ground                                | PERp2         | Receiver differential             |
| 26                    | GND           | Ground                                | PERn2         | pair, Lane 2                      |

Table 2.17 PCI Express x4 Connector Pinout (Part 1 of 2)

**Notes**

| <b>Pin</b> | <b>Side A</b> |                          | <b>Side B</b> |                       |
|------------|---------------|--------------------------|---------------|-----------------------|
| 27         | PETp3         | Transmitter differential | GND           | Ground                |
| 28         | PETn3         | pair, Lane 3             | GND           | Ground                |
| 29         | GND           | Ground                   | PERp3         | Receiver differential |
| 30         | RSVD          | Reserved                 | PERn3         | pair, Lane 3          |
| 31         | PRSNT2#       | Hot-Plug presence detect | GND           | Ground                |
| 32         | GND           | Ground                   | RSVD          | Reserved              |

Table 2.17 PCI Express x4 Connector Pinout (Part 2 of 2)


**Note:** R347 should be populated with a 0 ohm resistor (0402) for systems that require PRSNT2# for the x1 width to be connected.

| <b>Pin</b>            | <b>Side A</b> |                                       | <b>Side B</b> |                                   |
|-----------------------|---------------|---------------------------------------|---------------|-----------------------------------|
| 1                     | +12V          | 12V power                             | PRSNT1#       | Hot-Plug presence detect          |
| 2                     | +12V          | 12V power                             | +12V          | 12V power                         |
| 3                     | RSVD          | Reserved                              | +12V          | 12V power                         |
| 4                     | GND           | Ground                                | GND           | Ground                            |
| 5                     | SMCLK         | SMBus clock                           | JTAG2         | TCK (Test Clock) JTAG i/f clk i/p |
| 6                     | SMDAT         | SMBus Data                            | JTAG          | TDI (Test Data Input)             |
| 7                     | GND           | Ground                                | JTAG          | TDO (Test Data Output)            |
| 8                     | +3.3V         | 3.3V power                            | JTAG          | TMS (Test Mode Select)            |
| 9                     | JTAG1         | TRST# (Test/Reset)<br>resets JTAG i/f | +3.3V         | 3.3V power                        |
| 10                    | 3.3Vaux       | 3.3V auxiliary power                  | +3.3V         | 3.3V power                        |
| 11                    | WAKE#         | Signal for Link reactivation          | PERST#        | Fundamental Reset                 |
| <b>Mechanical Key</b> |               |                                       |               |                                   |
| 12                    | RSVD          | Reserved                              | GND           | Ground                            |
| 13                    | GND           | Ground                                | REFCLK+       | REFCLK Reference clock            |
| 14                    | PETp0         | Transmitter differential              | REFCLK-       | (differential pair)               |
| 15                    | PETn0         | pair, Lane 0                          | GND           | Ground                            |
| 16                    | GND           | Ground                                | PERp0         | Receiver differential             |
| 17                    | PRSNT2#       | Hot-Plug presence detect              | PERn0         | pair, Lane 0                      |
| 18                    | GND           | Ground                                | GND           | Ground                            |

Table 2.18 PCI Express x1 Connector Pinout

**Note:** These x4 and x1 PCI Express connectors comply with the PCIe specification. The EB8T5A uses x1 (mechanically x4) connector on all downstream ports. According to the PCI Express specification, the PRSNT1# pin should be wired to the farthest available PRSNT2# pin on the connector. In the EB8T5A, all PRSNT2# pins are tied together. This allows the board to be installed in a x1 or a x4 slot. The open-ended x4 slot allows the insertion of physical lane width greater than x4 to be installed without the need of slot reducer.

## EB8T5A Board Figure

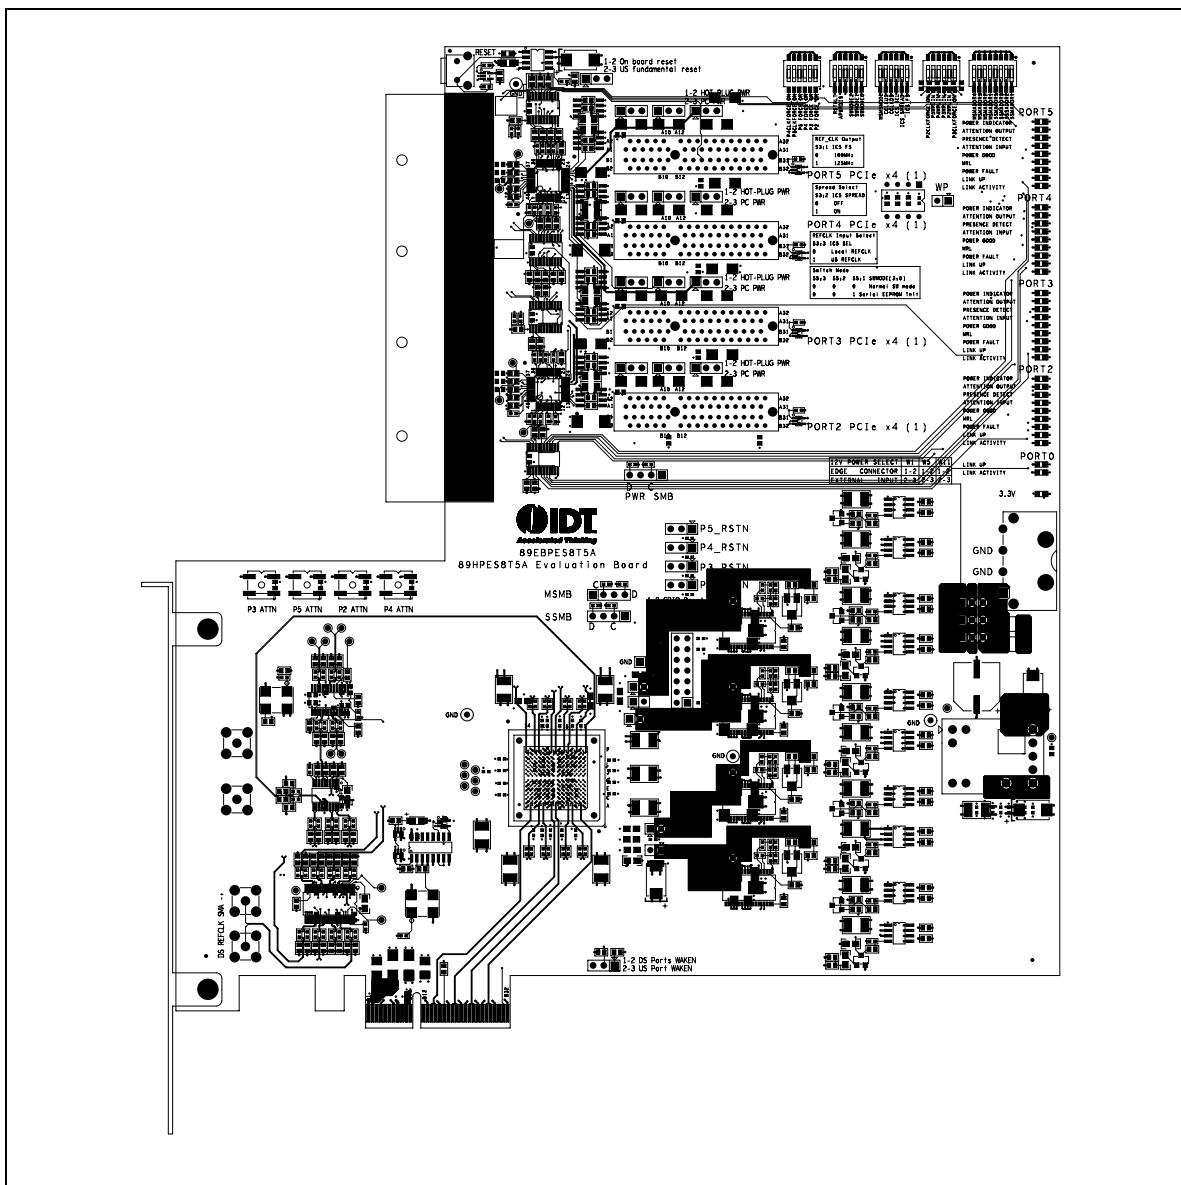



## Software for the EB8T5A Eval Board

### Notes

#### Introduction

This chapter discusses some of the main features of the available software to give users a better understanding of what can be achieved with the EB8T5A evaluation board using the device management software.

Device management software and related user documentation are available on a CD which is included in the Evaluation Board Kit. This information is also available on IDT's FTP site. For more information, contact IDT at [ssdhelp@idt.com](mailto:ssdhelp@idt.com).

#### Device Management Software

The primary use of the Device Management Software package is to enable users of the evaluation board to access all the registers in the PES8T5 device. This access can be achieved using the PCI Express in-band configuration cycles through the upstream port on the PES8T5.

This software also enables users to save a snapshot of the current register set into a dump file which can be used for debugging purposes. An export/import facility is also available to create and use "Configuration" files which can be used to initialize the switch device with specific values in specific registers.

A conversion utility is also provided to translate a configuration file into an EEPROM programmable data structure. This enables the user to program an appropriate serial EEPROM with desirable register settings for the PES8T5, and then to populate that EEPROM onto the Evaluation Board. It is also possible to program the EEPROM directly on the Evaluation Board using a feature provided by the software package.

The front end of the Device Management Software is a user-friendly Graphical User Interface which allows the user to quickly read or write the registers of interest. The GUI also permits the user to run the software in "simulation" mode with no real hardware attached, allowing the creation of configuration files for the PES8T5 in the absence of the actual device.

Much of the Device Management Software is written with device-independent and OS-independent code. The software will be guaranteed to work on Linux (/sys interface) and MS Windows XP. It may function flawlessly on various flavors of MS Windows, but may not be validated on all. The fact that the software is device-independent assures its scalability to future PCIe parts from IDT. Once users are familiar with the GUI, they will be able to use the same GUI on all PCIe parts from IDT. This software is customized for each device through an XML device description file which includes information on the number of ports, registers, types of registers, information on bit-fields within each register, etc.


**Notes**



## Schematics


**Notes****Schematics**


## BLOCK DIAGRAM

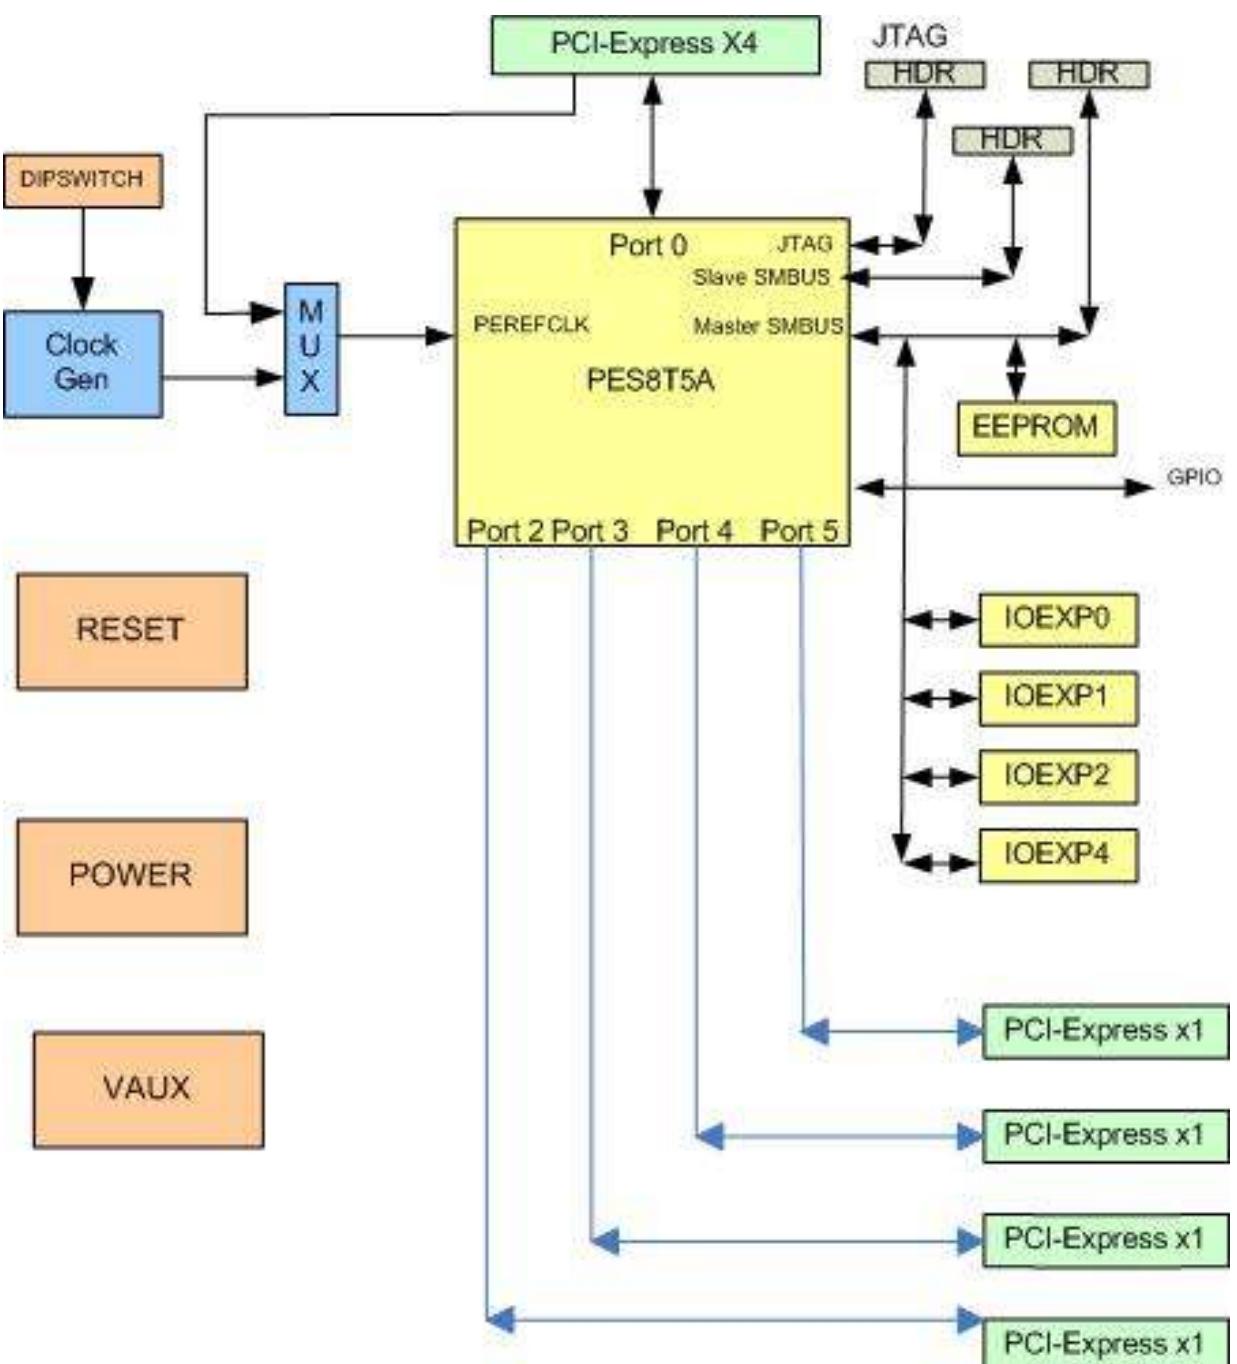

| REVISIONS   |     |                 |            |           |
|-------------|-----|-----------------|------------|-----------|
| DCN         | REV | DESCRIPTION     | DATE       | CHANGE BY |
| PCB-0161R01 | 1.0 | INITIAL RELEASE | 2008-04-14 | T. TRAN   |
|             |     |                 |            |           |
|             |     |                 |            |           |
|             |     |                 |            |           |

| SHEET | DESCRIPTION                    |
|-------|--------------------------------|
| 1     | TABLE OF CONTENTS              |
| 2     | POWER REGULATORS PES8T5A       |
| 3     | POWER MOSFETS FOR 3.3VAUX      |
| 4     | CLOCKS                         |
| 5     | RESET, SMBUS, JTAG, DIPSW      |
| 6     | APWRDISN TIMING CIRCUIT        |
| 7     | EPROM ATTN_SW WAKE             |
| 8     | IO EXPANDERS                   |
| 9     | IO EXPANDER LEDs               |
| 10    | HOT SWAP CONTROL PORT 2/4      |
| 11    | HOT SWAP CONTROL PORT 3/5      |
| 12    | PES8T5A - CLOCK, SMBUS, GPIO   |
| 13    | PES8T5A - PORT 0               |
| 14    | PES8T5A - DOWNSTREAM PORTS     |
| 15    | DOWNSTREAM PORT 2/3 CONNECTORS |
| 16    | DOWNSTREAM PORT 4/5 CONNECTORS |
| 17    | PES8T5A - POWER                |

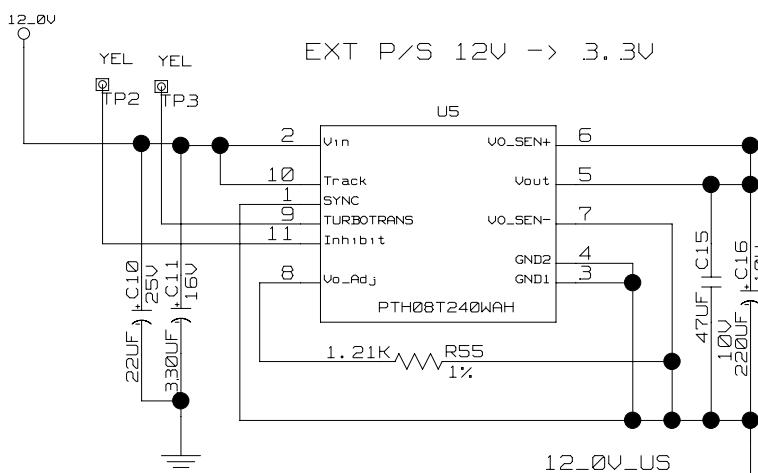

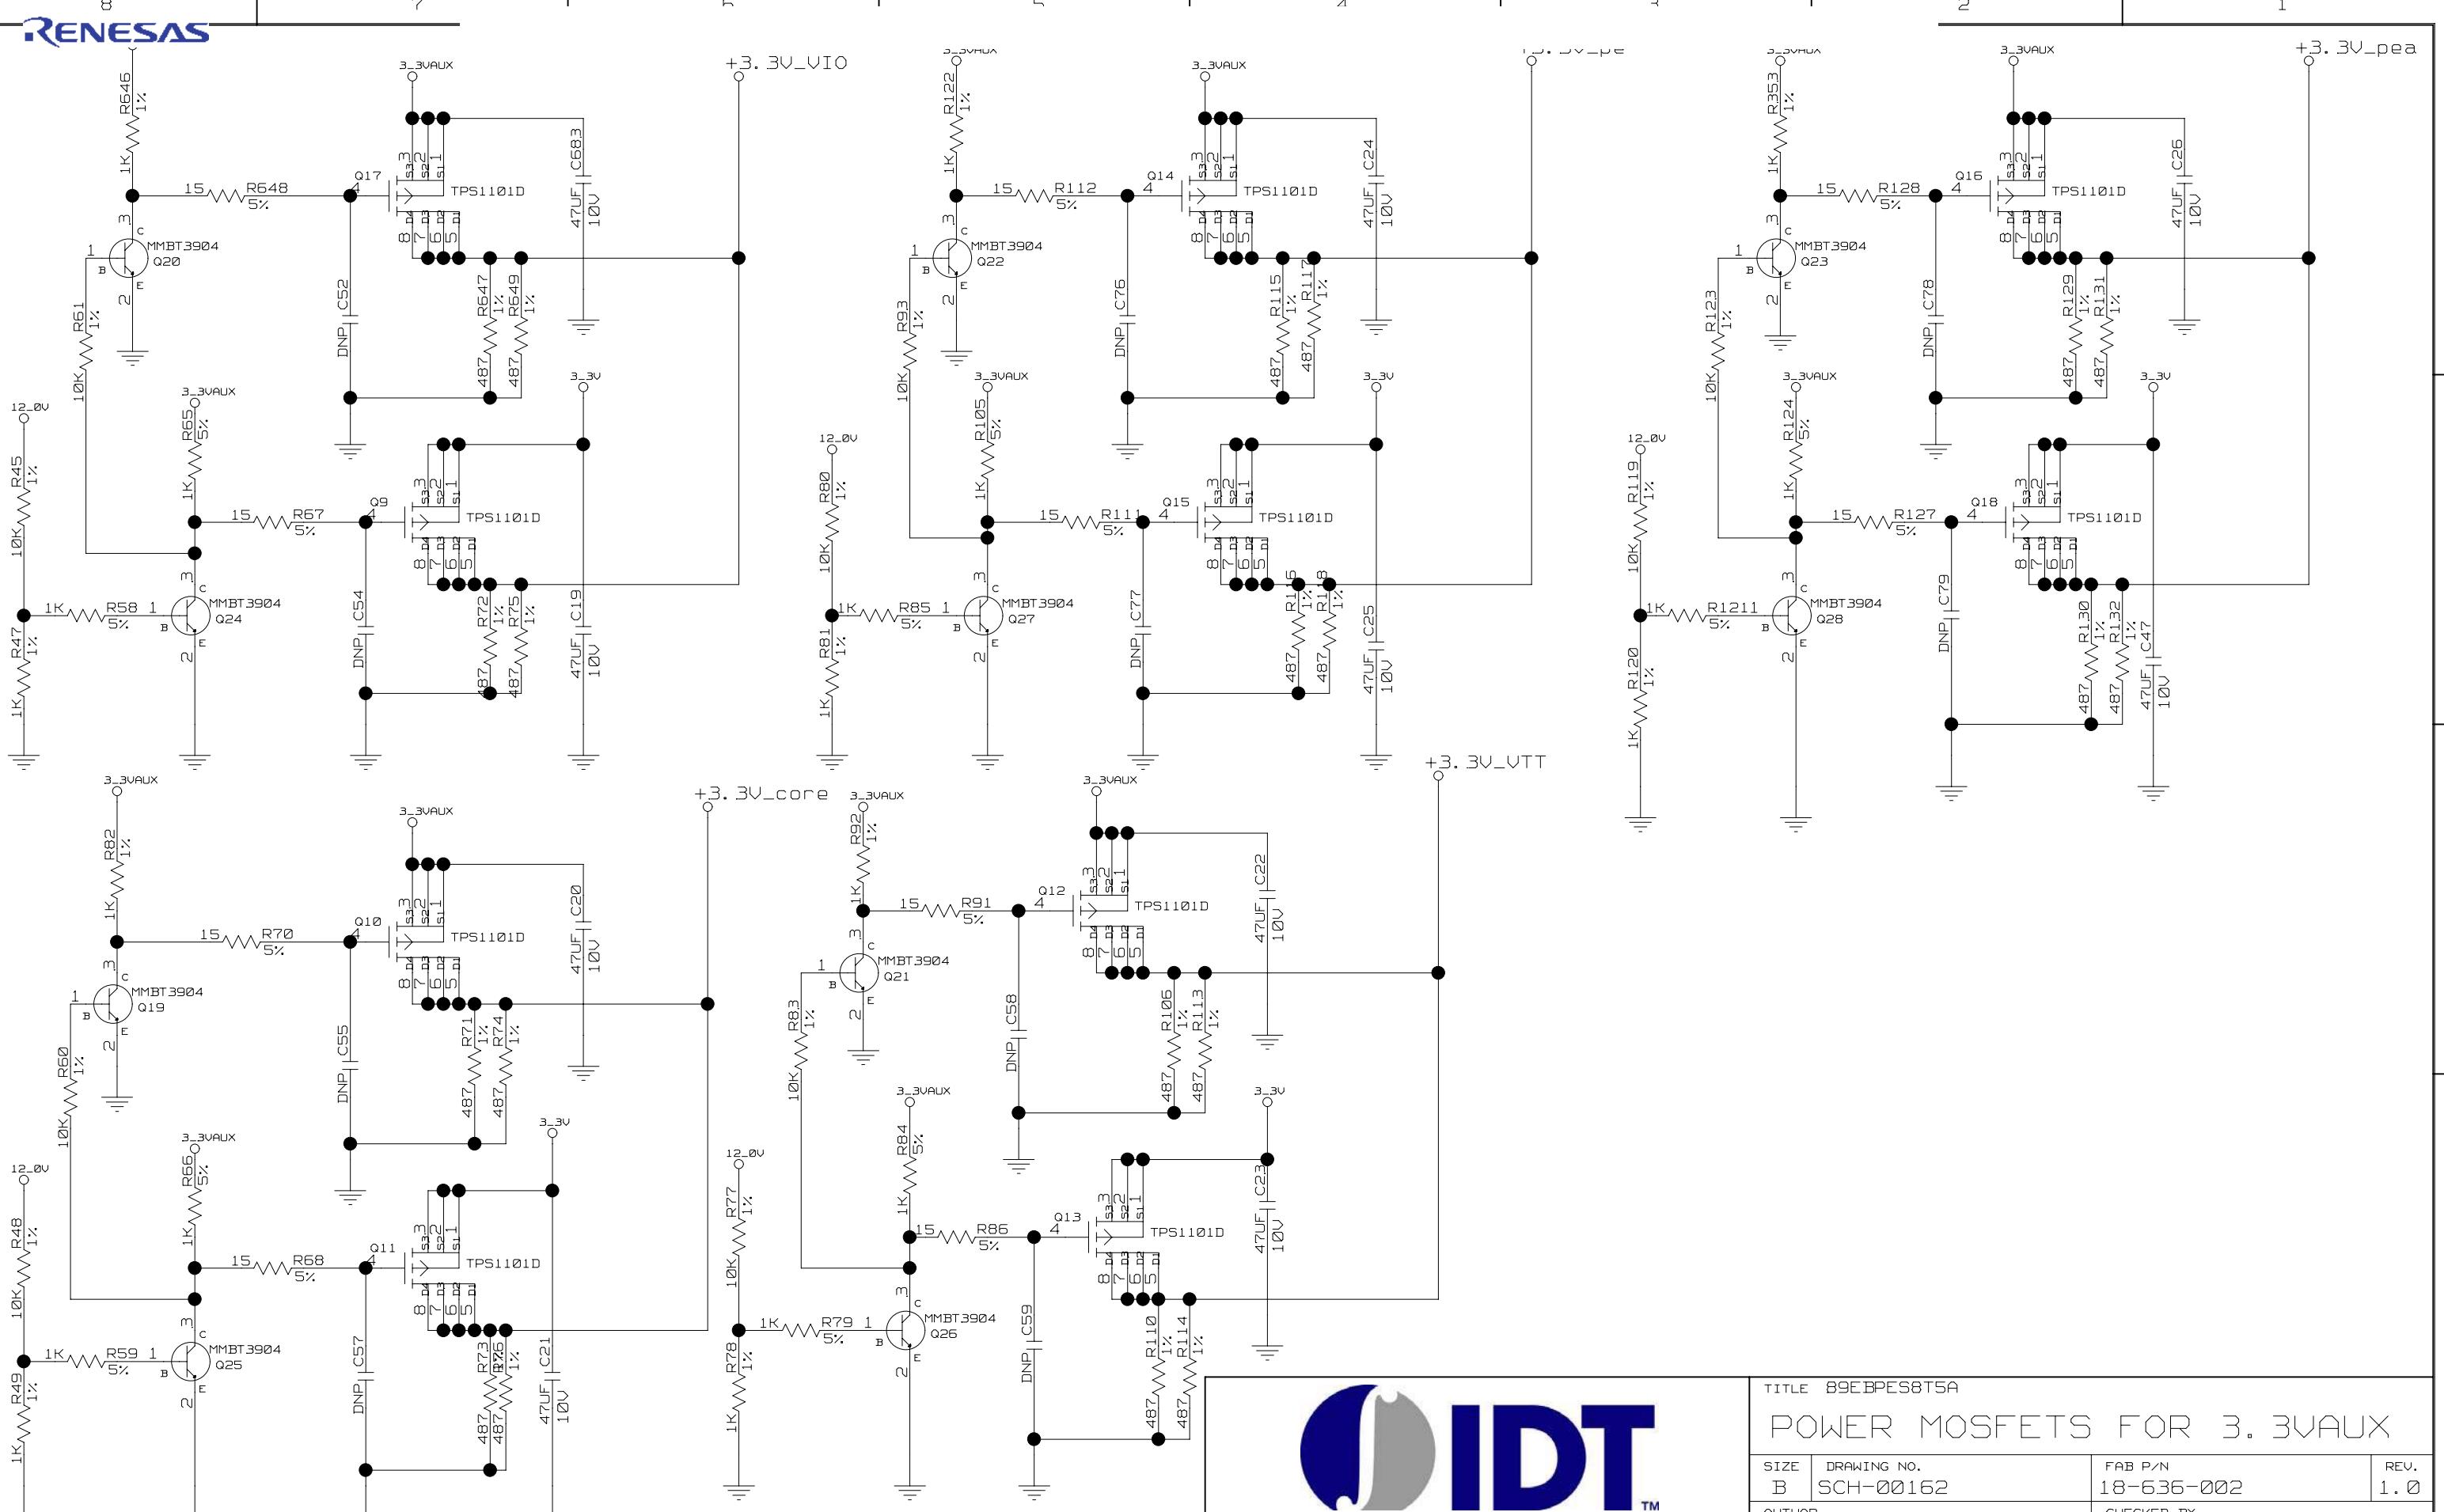

© 2019 Renesas Electronics Corporation





CONFIDENTIAL PROPERTY OF INTEGRATED DEVICE TECHNOLOGY, INC.  
6024 SILVER CREEK VALLEY RD. SAN JOSE, CA 95138  
COPYRIGHT (C) IDT 2008

TITLE 89EBPES8T5A

# POWER MOSFETS FOR 3.3V AUX

|                          |                          |                       |              |
|--------------------------|--------------------------|-----------------------|--------------|
| SIZE<br>B                | DRAWING NO.<br>SCH-00162 | FAB P/N<br>18-636-002 | REV.<br>1. 0 |
| AUTHOR<br>T. Tran        | CHECKED BY<br>D. Huang   |                       |              |
| Thu Apr 24 10:22:11 2008 |                          | SHEET 3 OF 17         |              |
|                          | 2                        | 1                     |              |

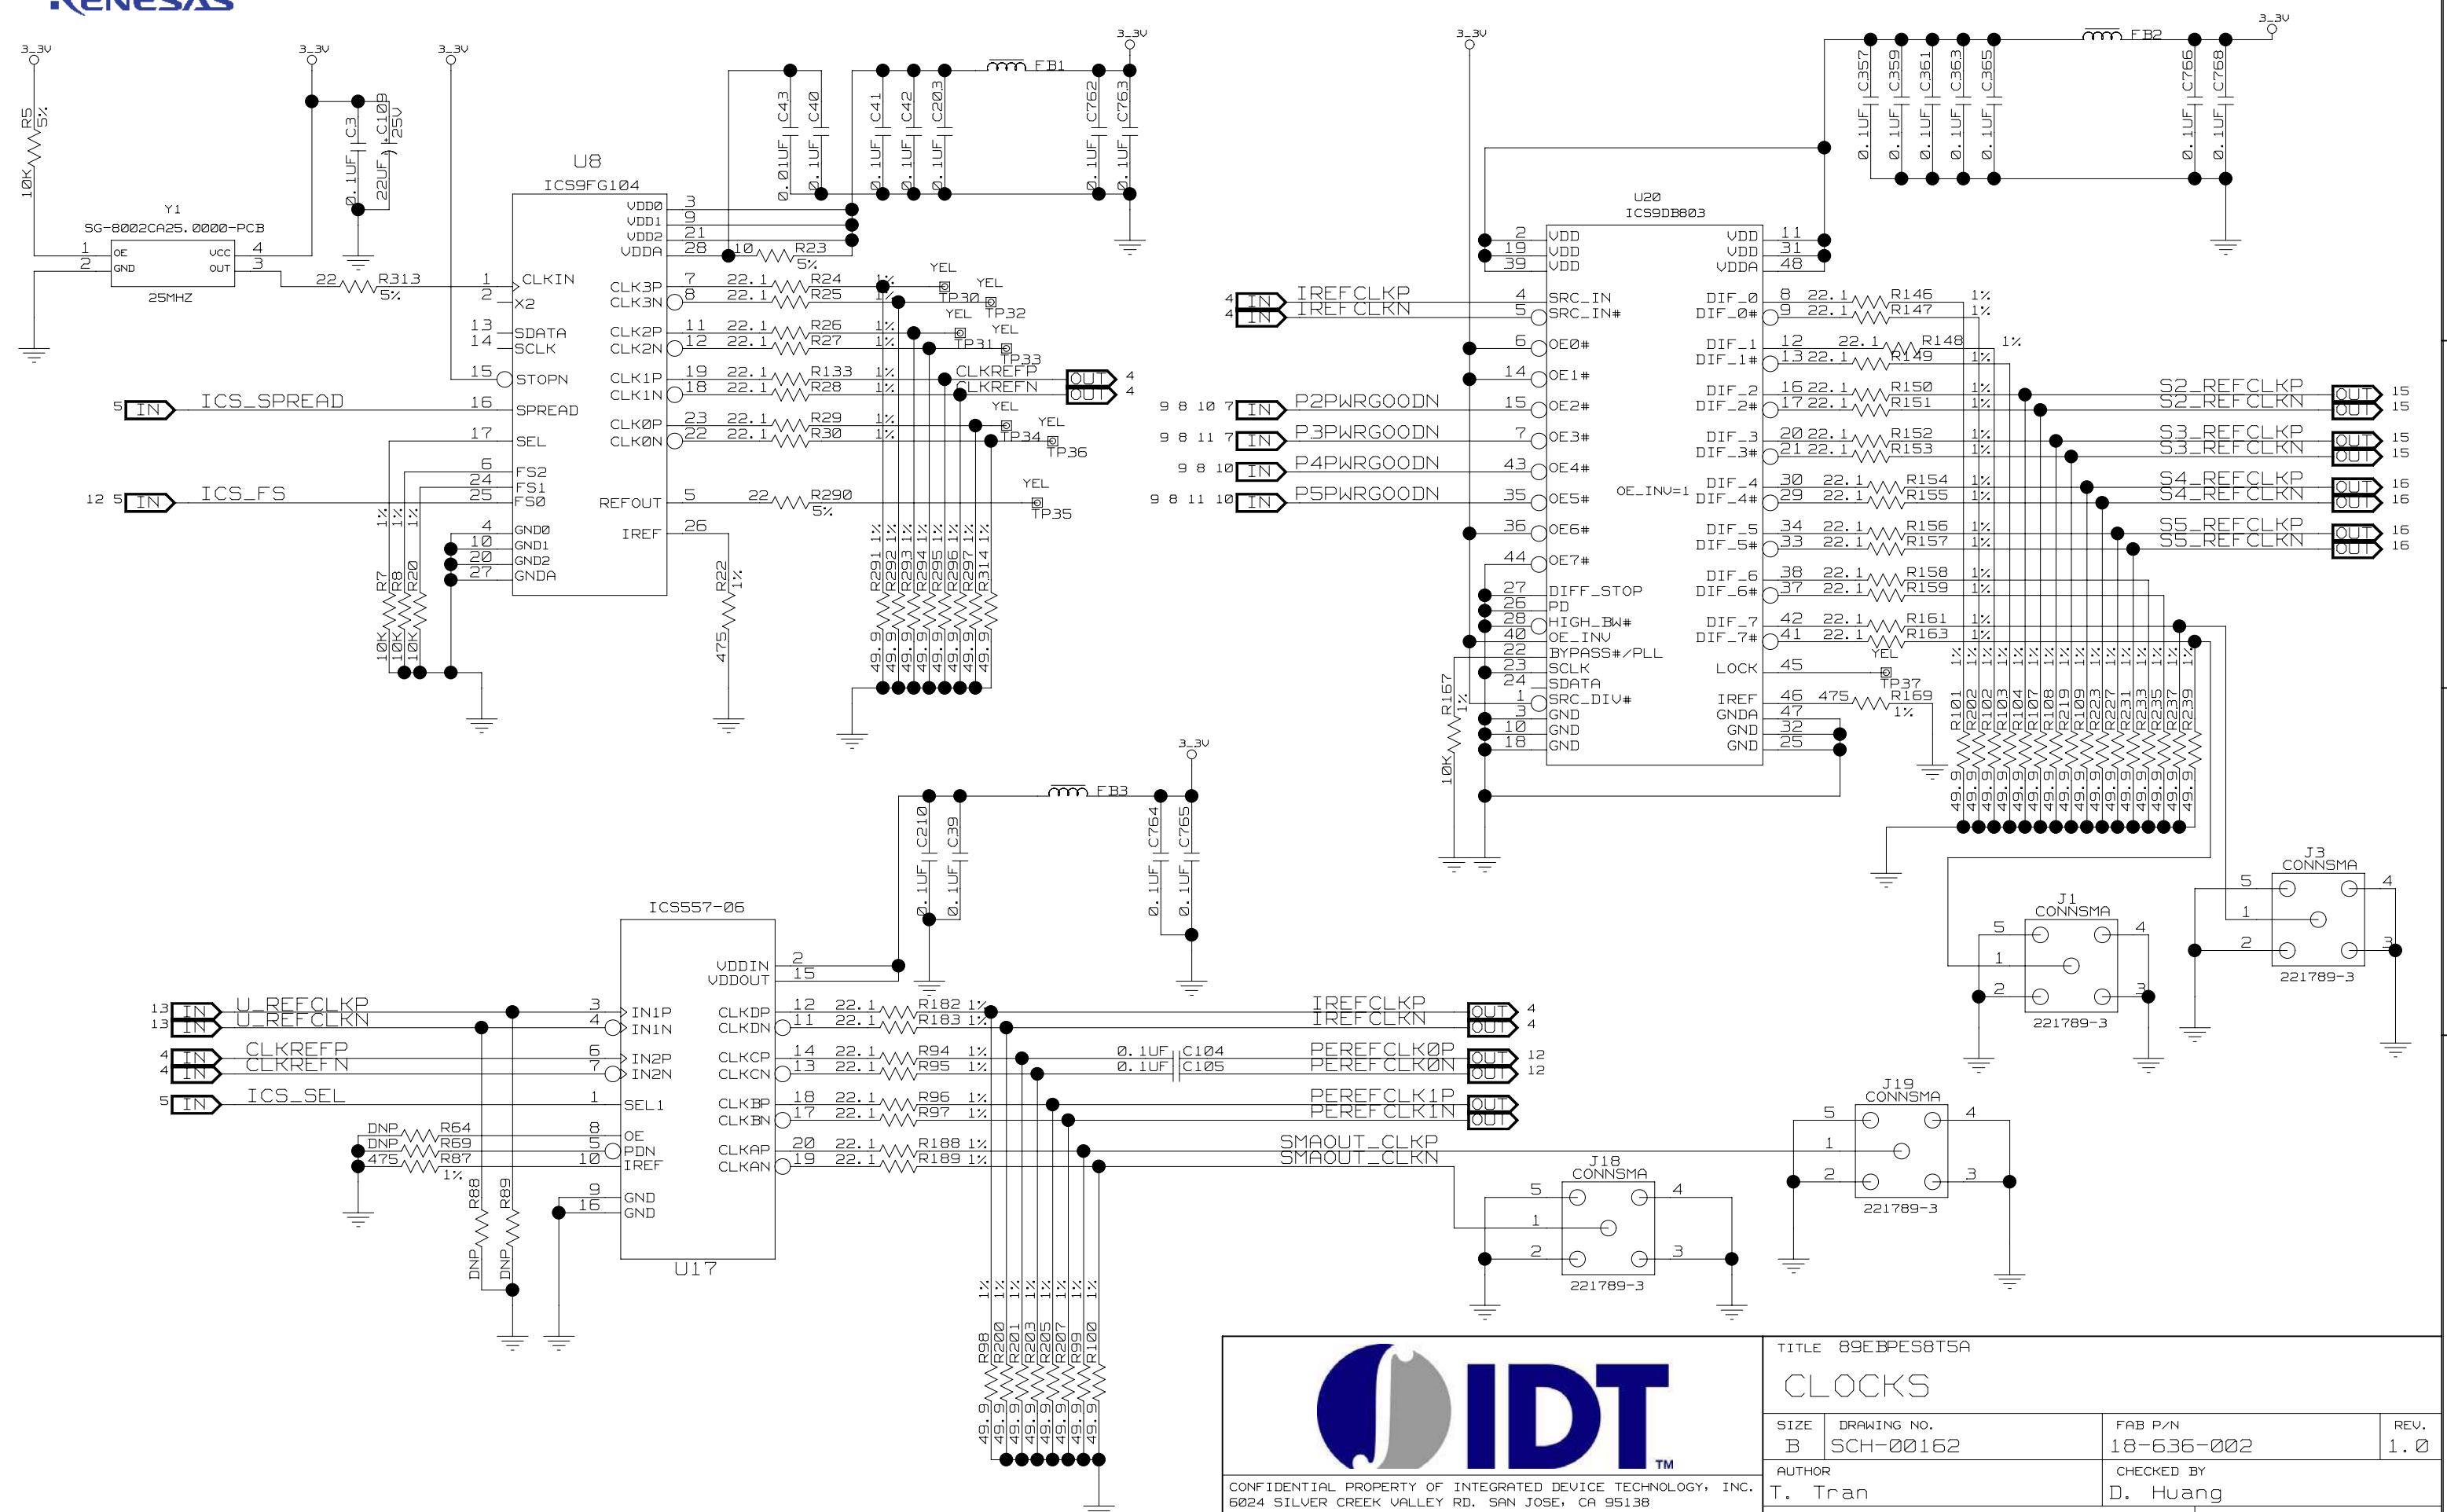

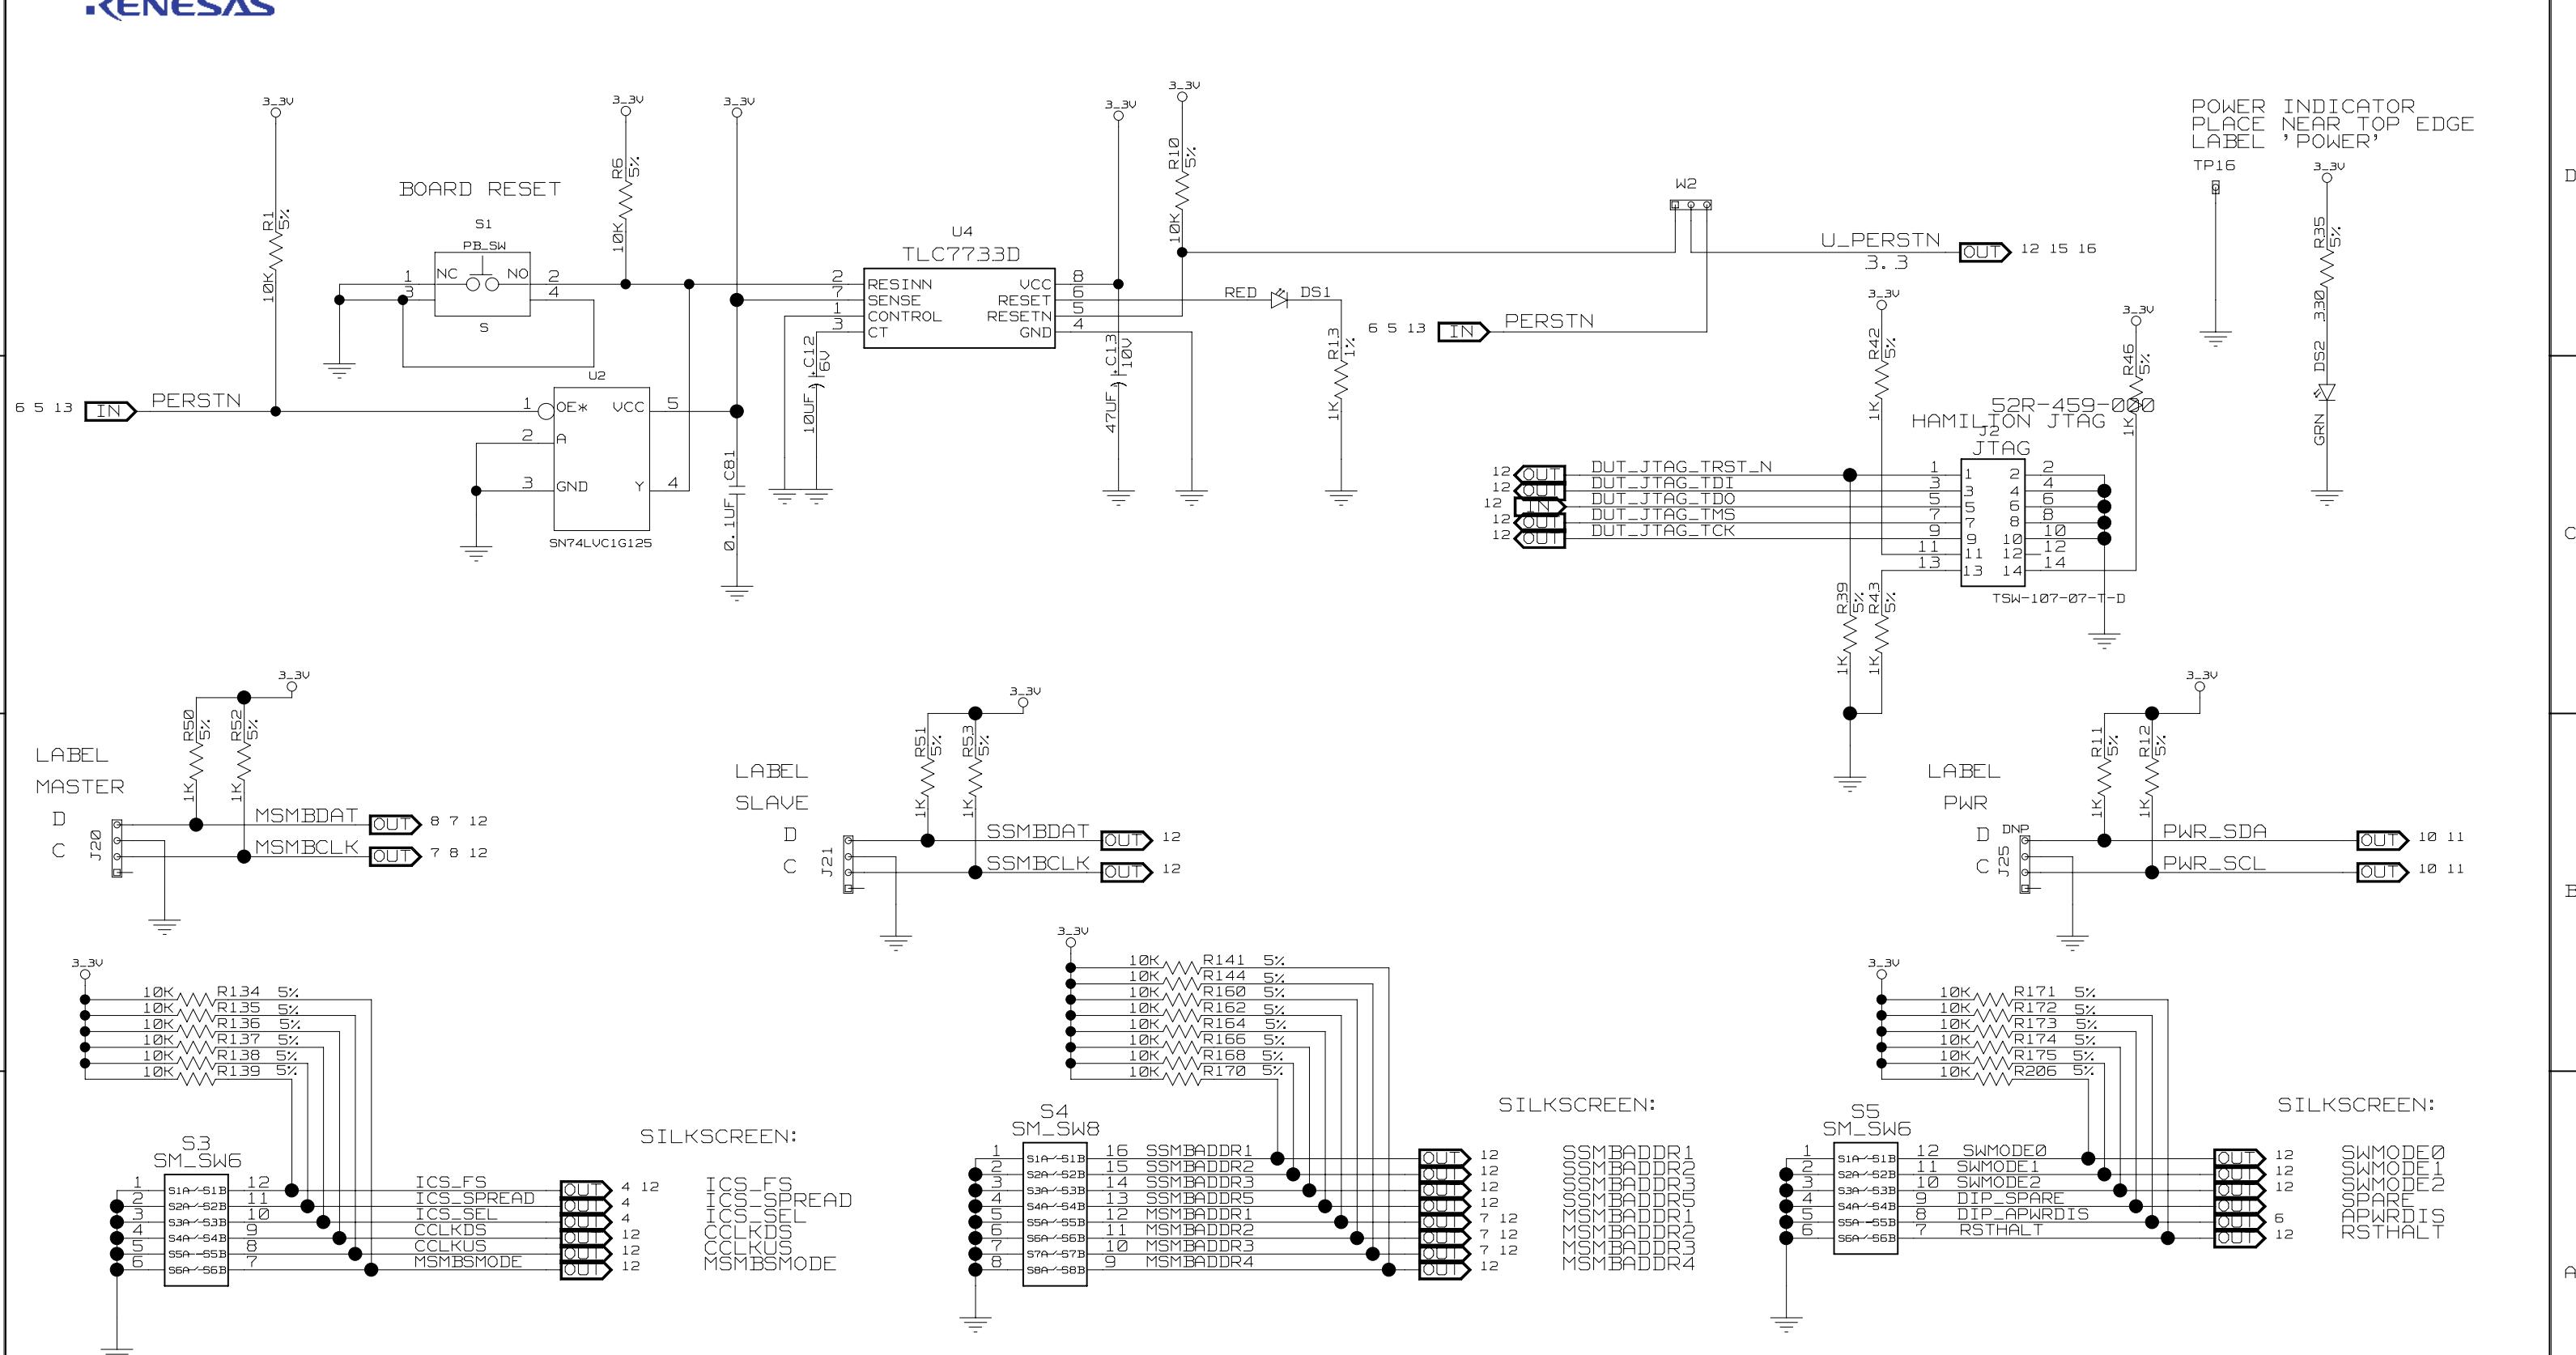


CONFIDENTIAL PROPERTY OF INTEGRATED DEVICE TECHNOLOGY, INC.  
6024 SILVER CREEK VALLEY RD. SAN JOSE, CA 95138  
COPYRIGHT (C) IDT 2008

TITLE 89EBPES8T5A  
RESET, JTAG, SMBUS, DIPSW


|           |                          |                       |           |
|-----------|--------------------------|-----------------------|-----------|
| SIZE<br>B | DRAWING NO.<br>SCH-00162 | FAB P/N<br>18-636-002 | REV<br>1. |
|-----------|--------------------------|-----------------------|-----------|

AUTHOR T. Tran CHECKED BY D. Huang  
THE C 24 18120112 2020 SHEET 5 OF 17

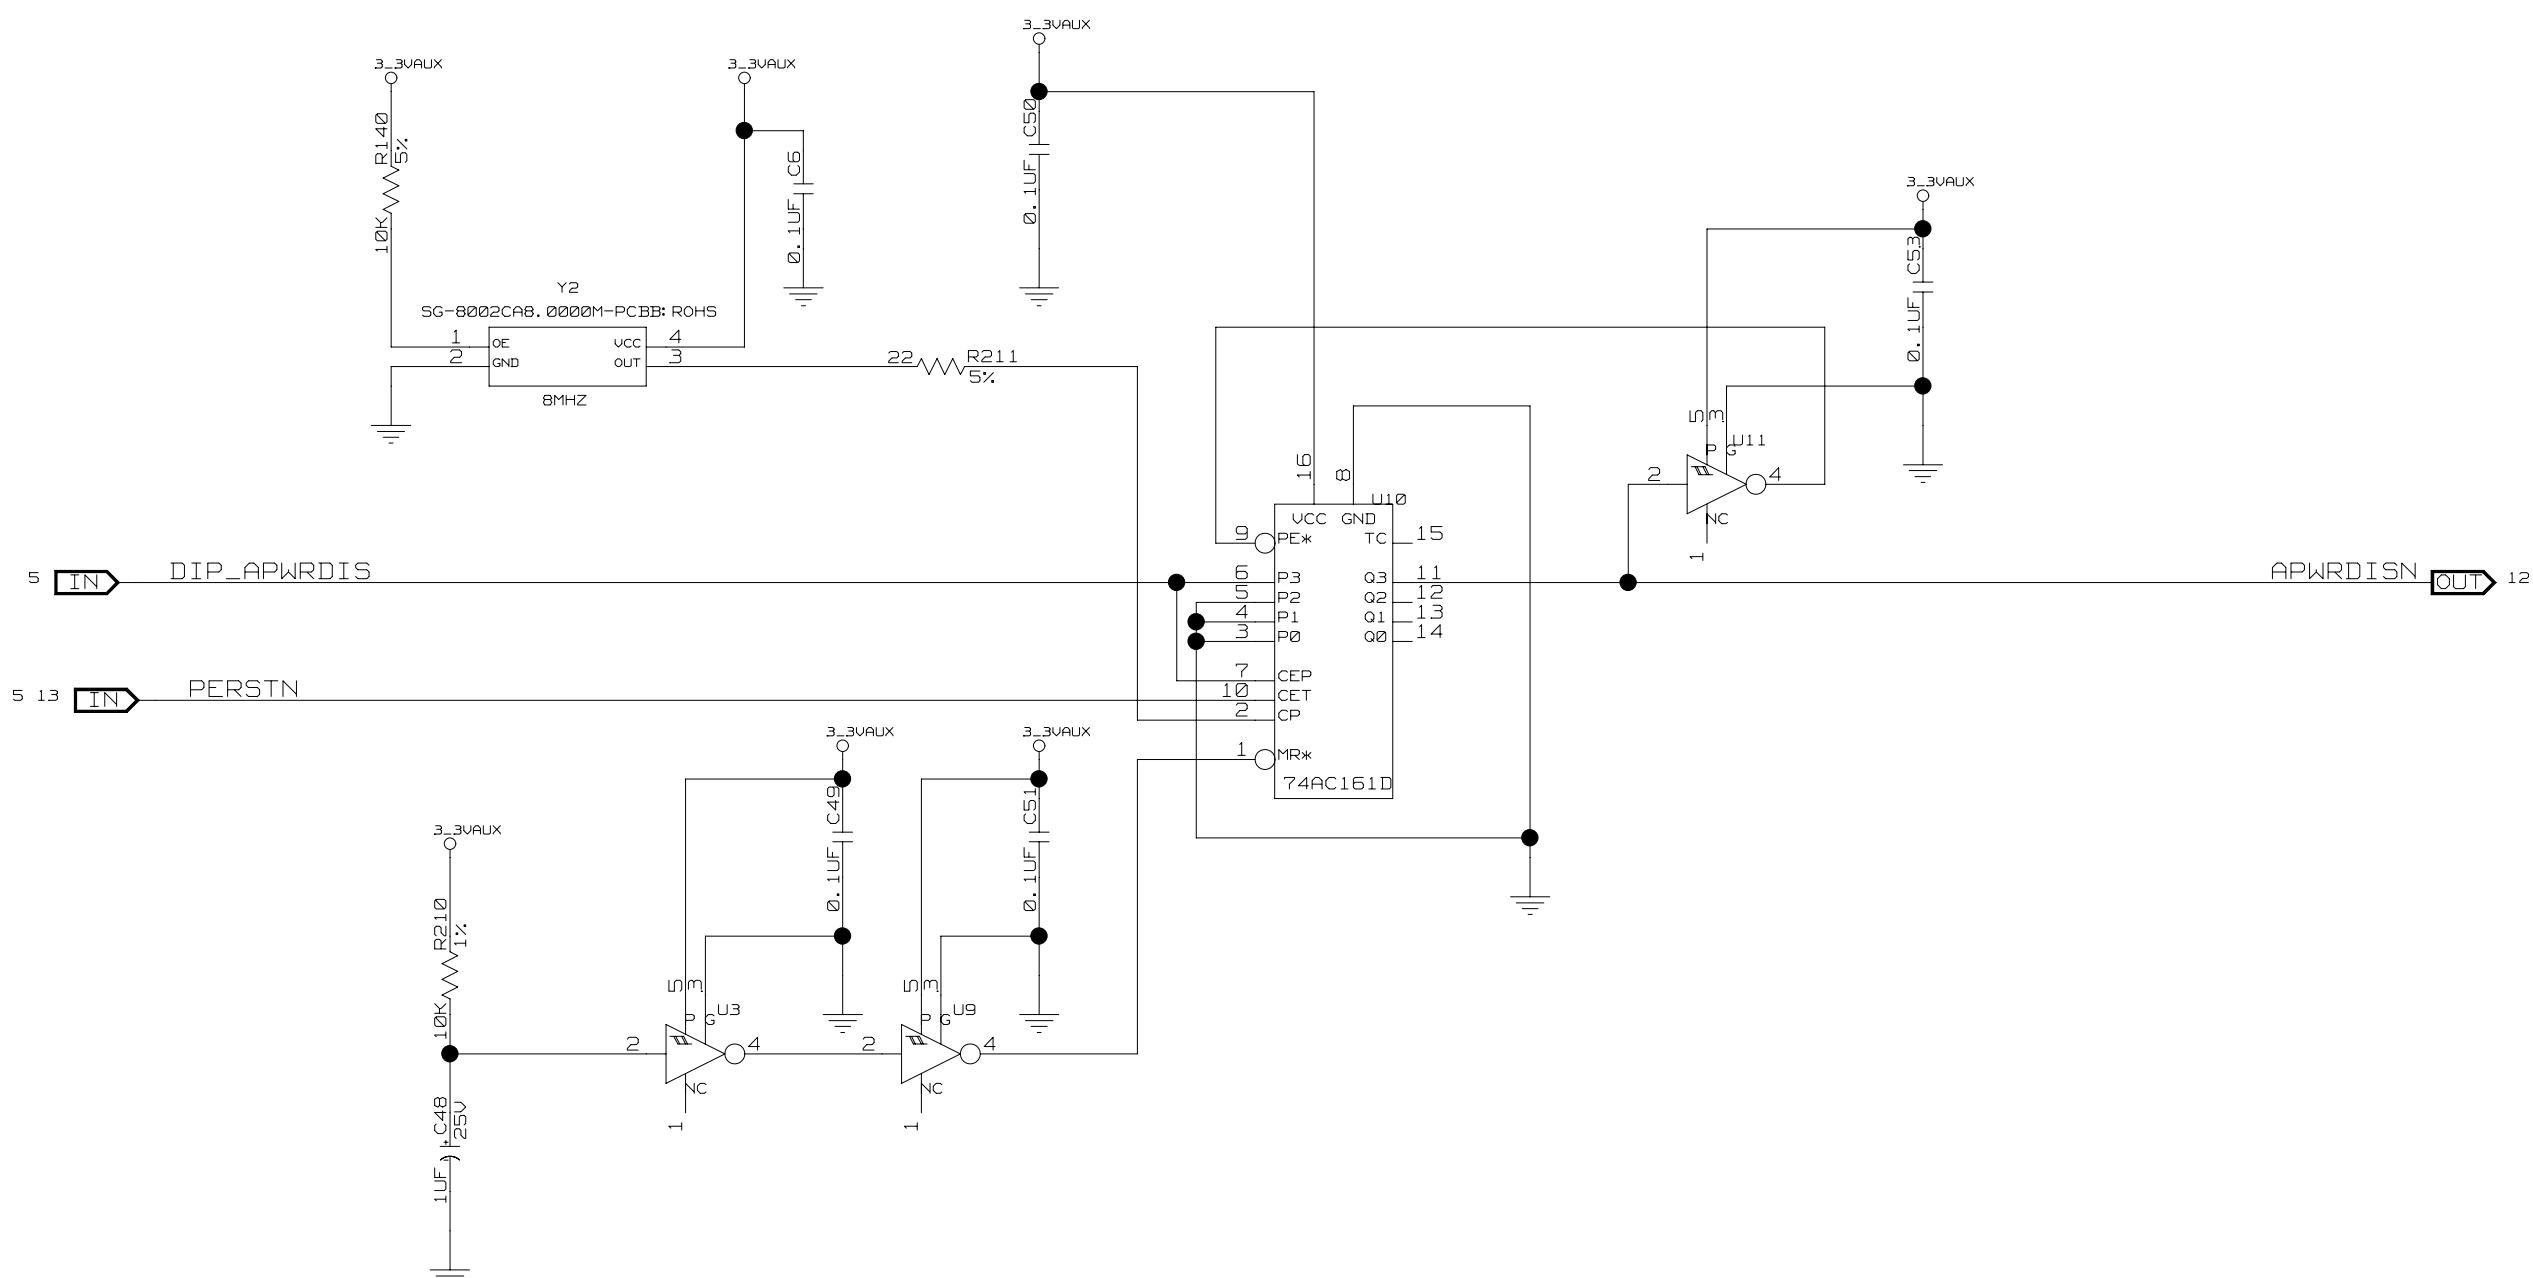


CONFIDENTIAL PROPERTY OF INTEGRATED DEVICE TECHNOLOGY, INC.  
6024 SILVER CREEK VALLEY RD. SAN JOSE, CA 95138  
COPYRIGHT (C) IDT 2008

| TITLE 89EBPES8T5A        |             |            |               |
|--------------------------|-------------|------------|---------------|
| APWRDISN TIMING CIRCUIT  |             |            |               |
| SIZE                     | DRAWING NO. | FAB P/N    | REV.          |
| B                        | SCH-00162   | 18-636-002 | 1.0           |
| AUTHOR                   | CHECKED BY  |            |               |
| T. Tran                  | D. Huang    |            |               |
| Thu Apr 24 10:22:13 2008 |             |            | SHEET 6 OF 17 |

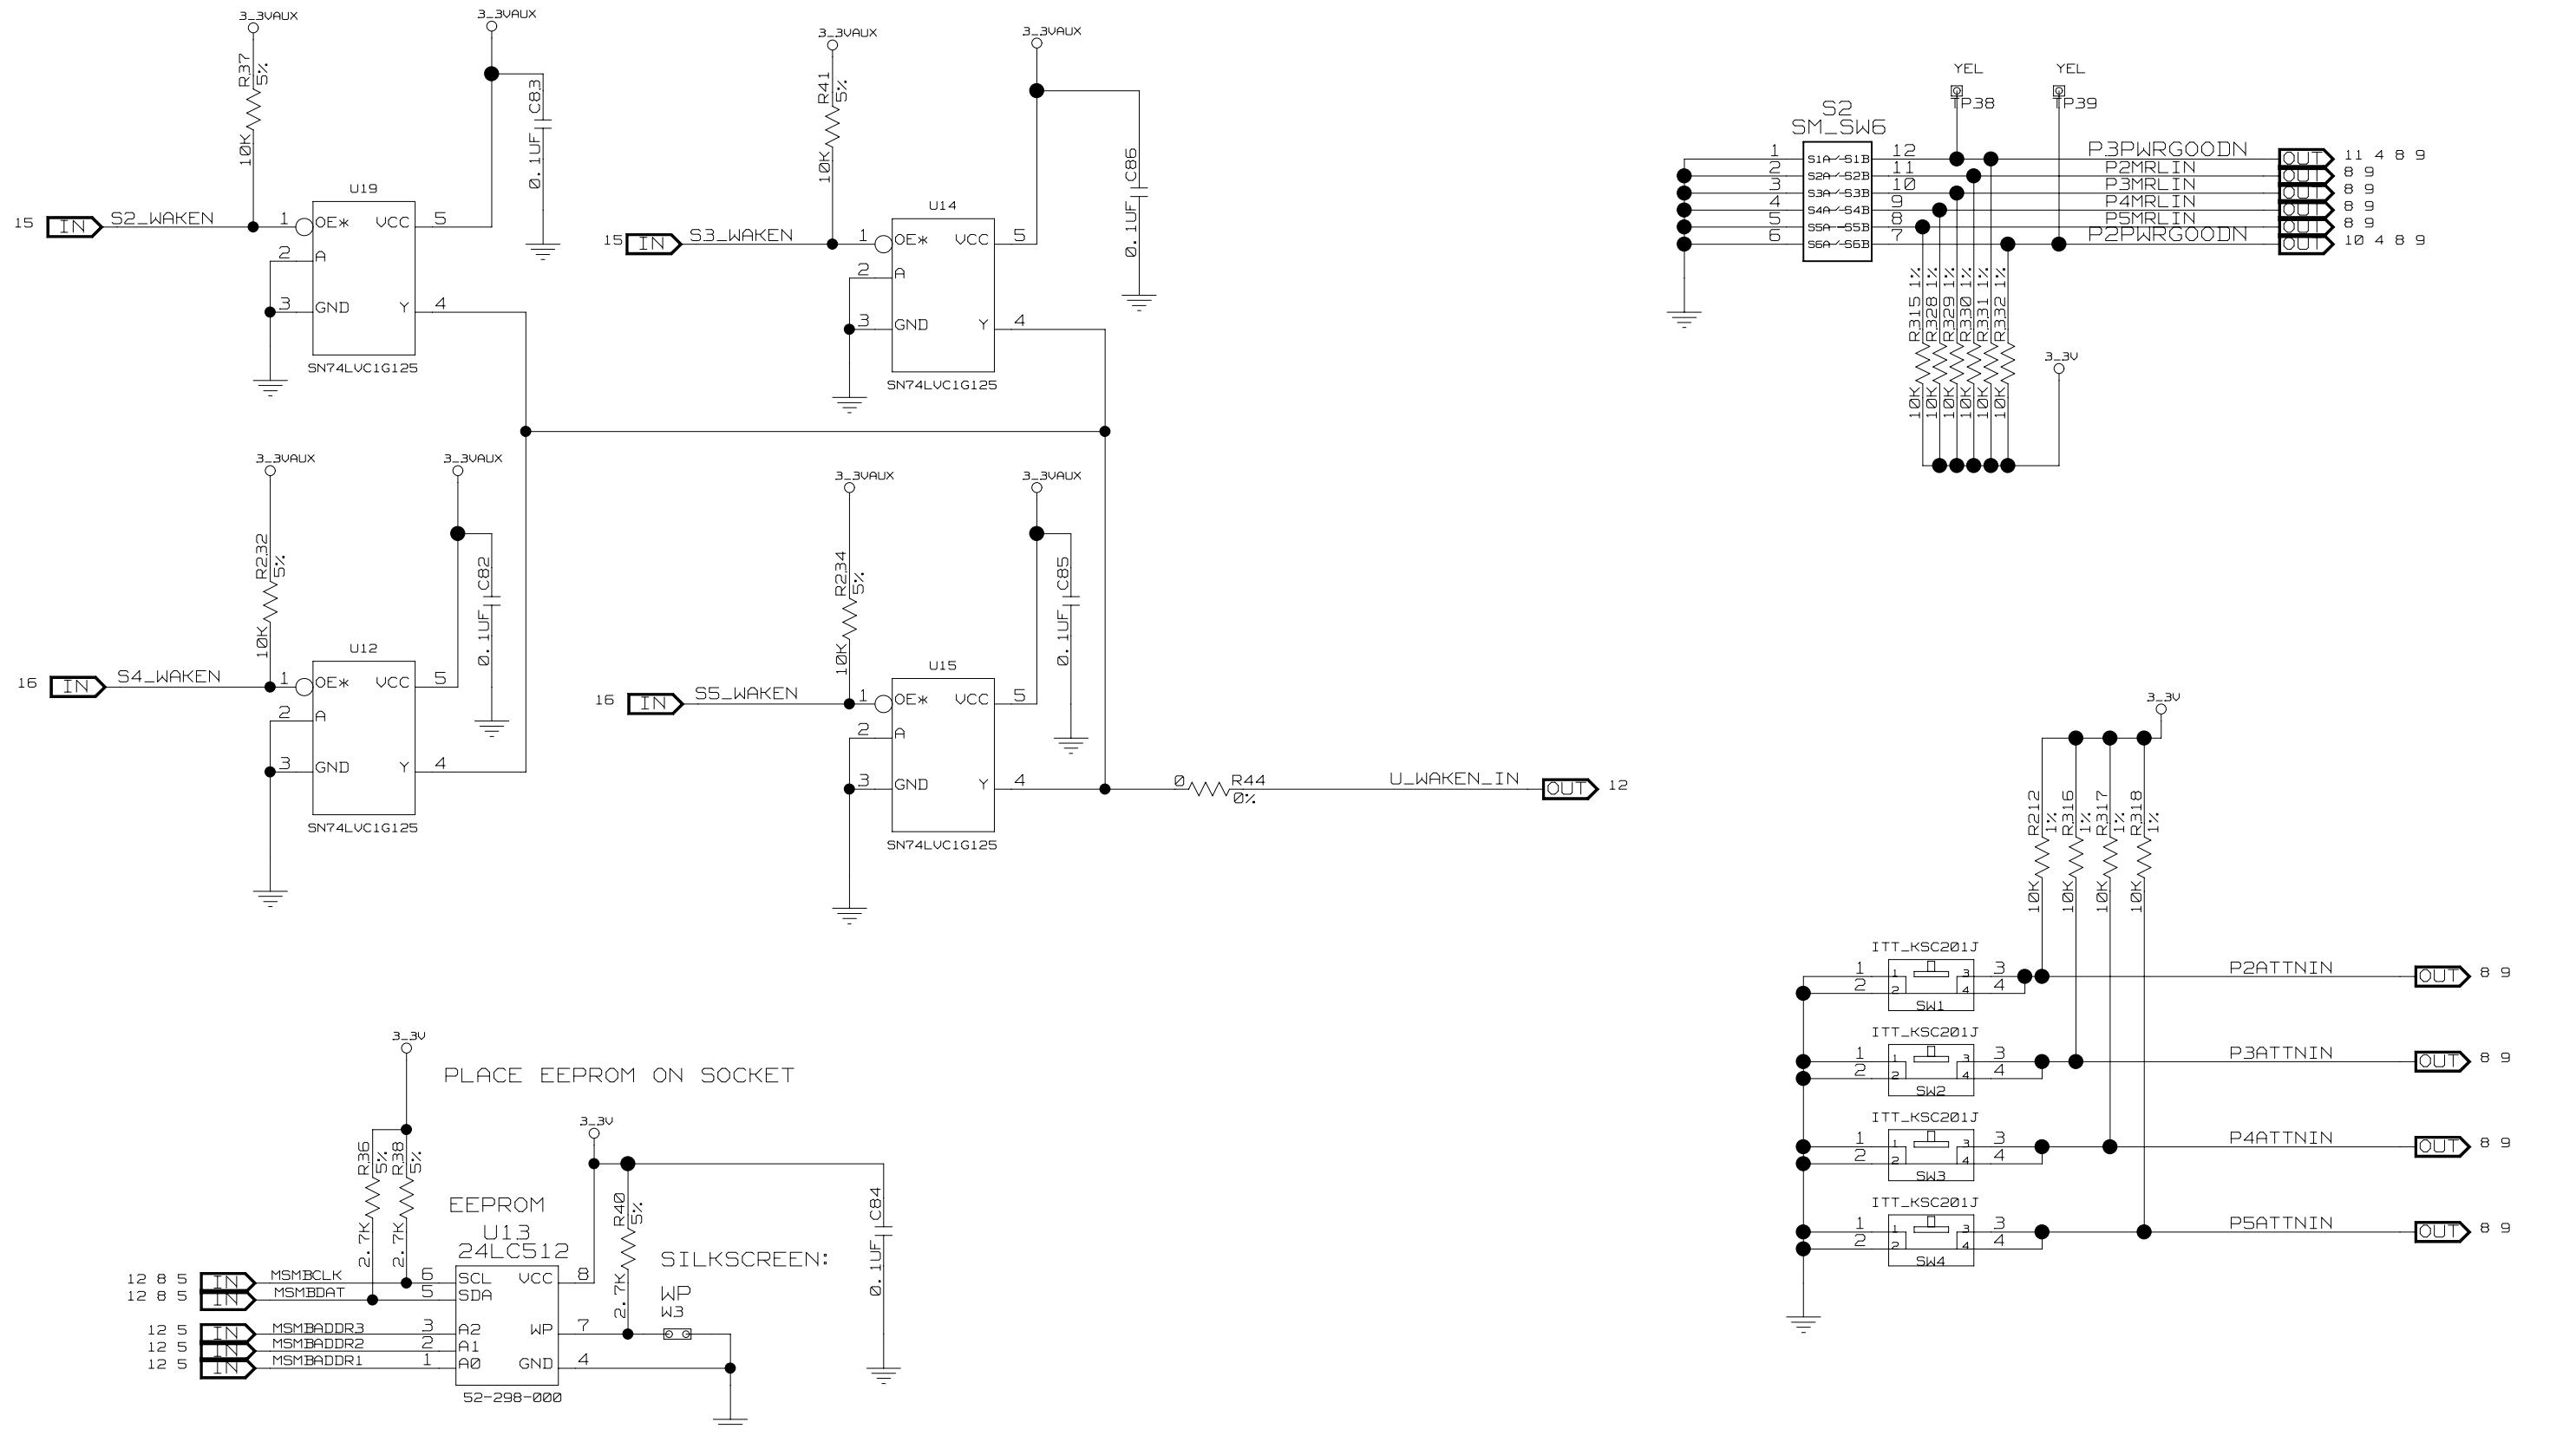

|                          |                                              |
|--------------------------|----------------------------------------------|
|                          | TITLE 89EBPES8T5A<br>EEPROM ATTN_SW WAKE MRL |
| SIZE B                   | DRAWING NO. SCH-00162                        |
|                          | FAB P/N 18-636-002                           |
| AUTHOR T. Tran           | REV. 1.0                                     |
|                          | CHECKED BY D. Huang                          |
| Thu Apr 24 10:22:14 2008 | SHEET 7 OF 17                                |

CONFIDENTIAL PROPERTY OF INTEGRATED DEVICE TECHNOLOGY, INC.  
6024 SILVER CREEK VALLEY RD. SAN JOSE, CA 95138  
COPYRIGHT (C) IDT 2008

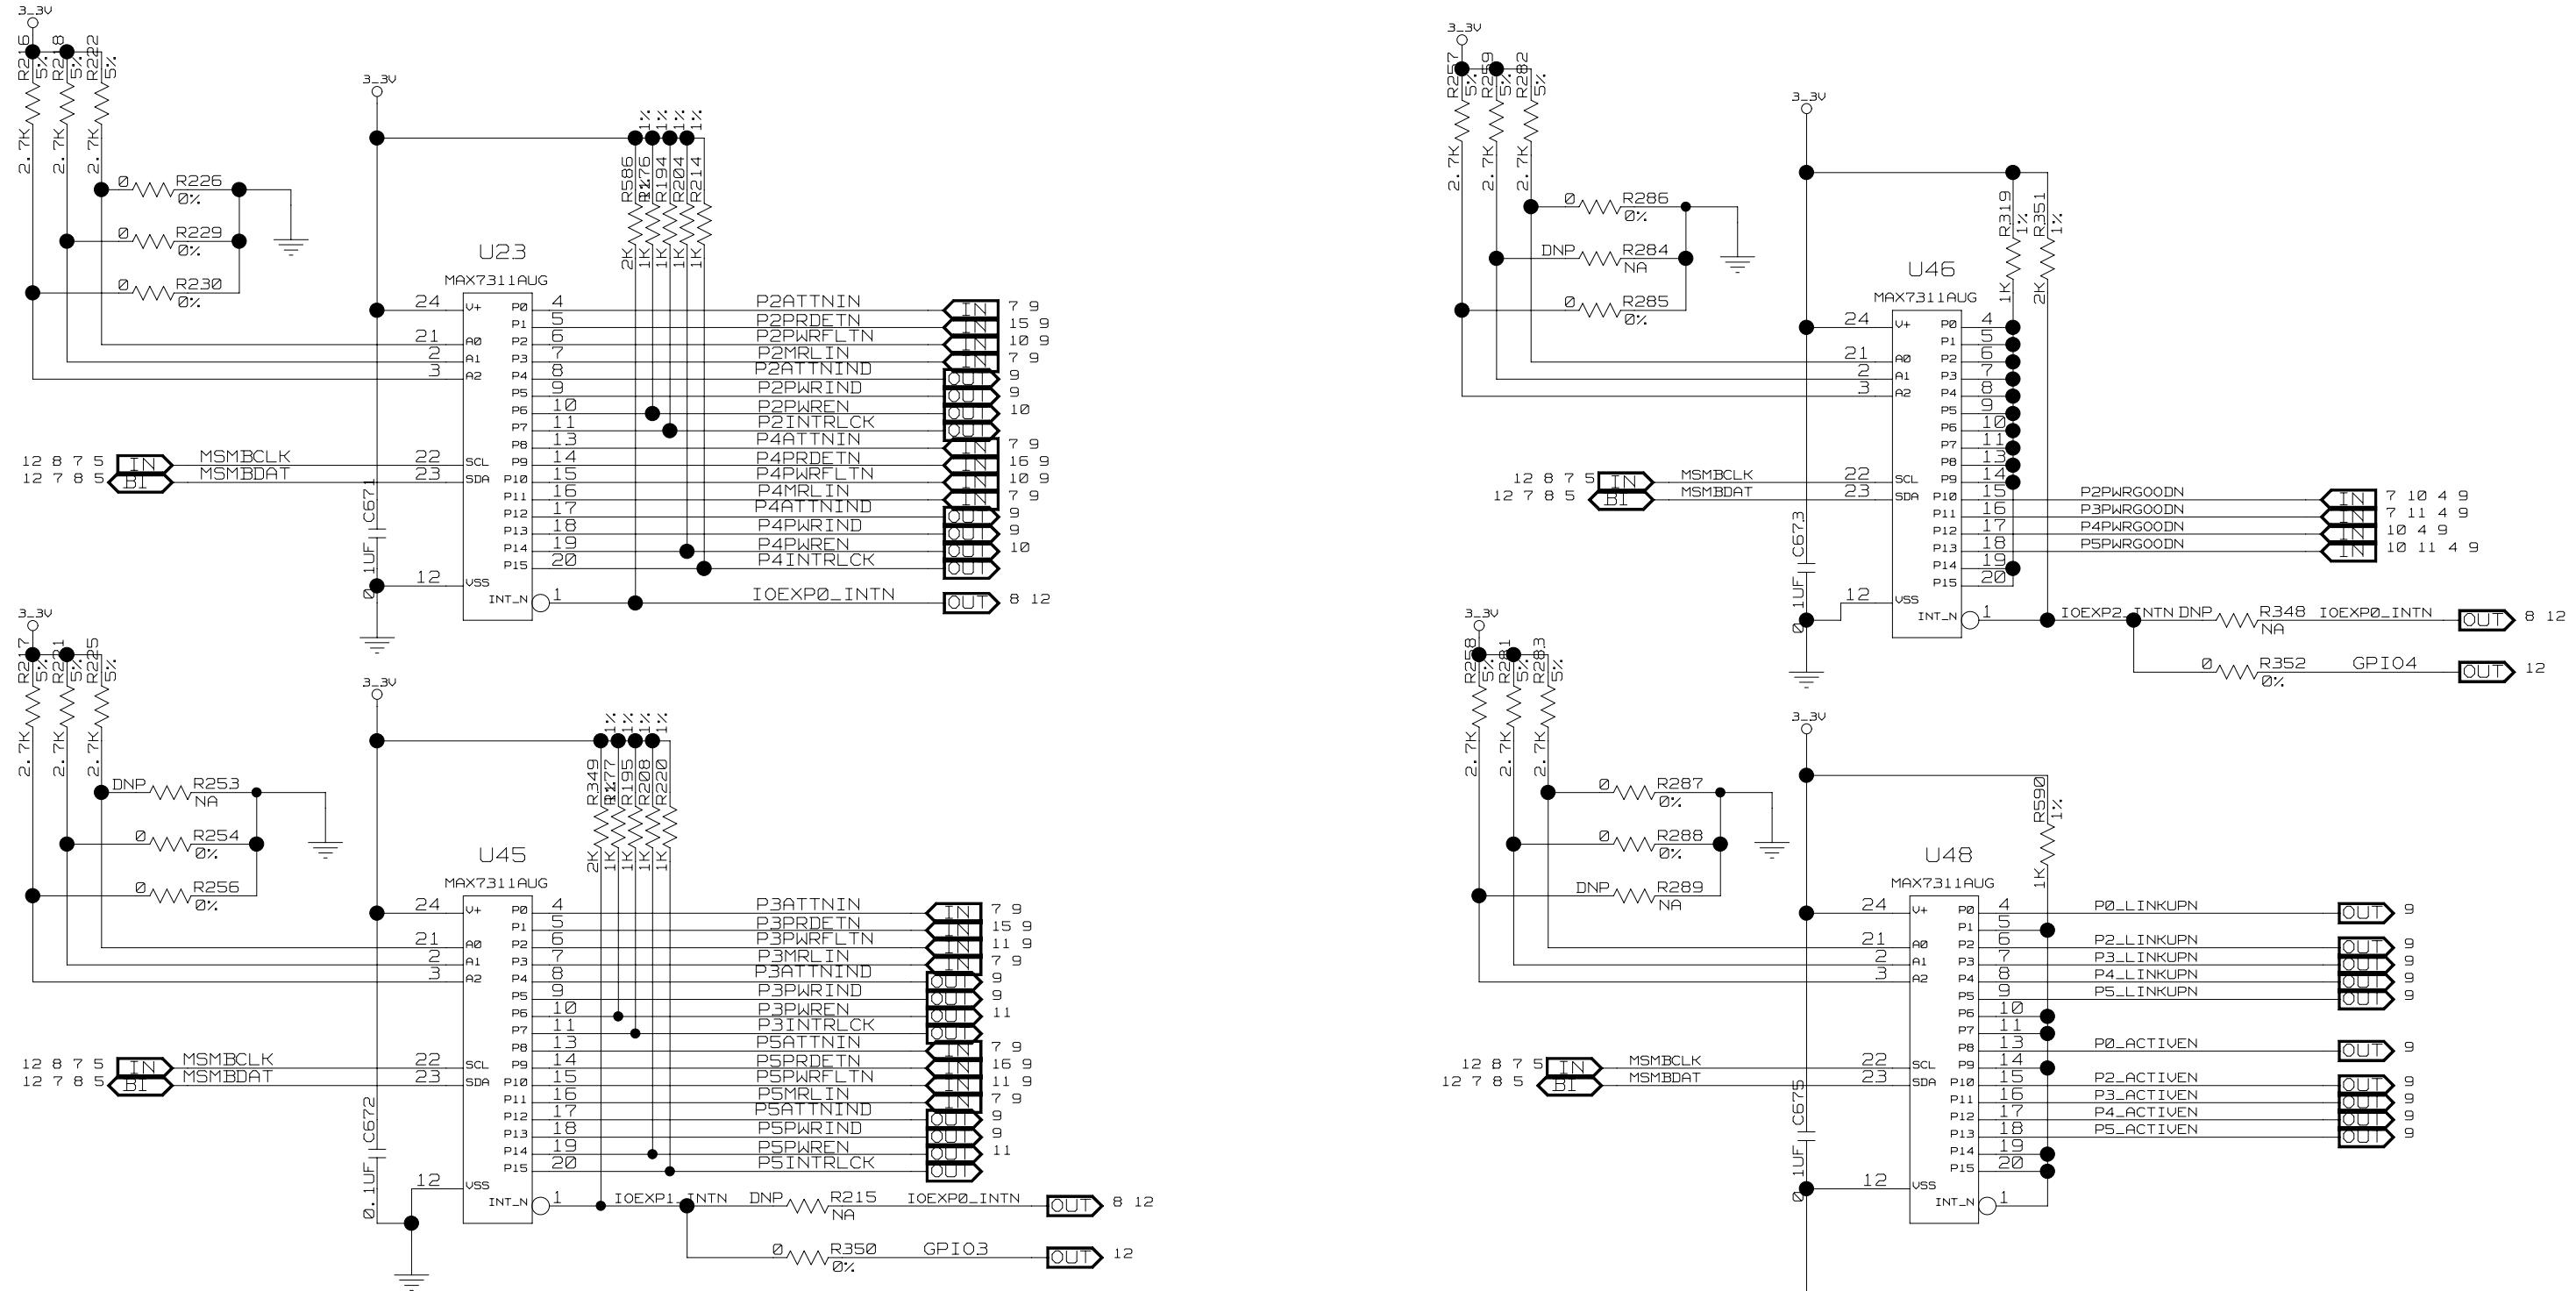


CONFIDENTIAL PROPERTY OF INTEGRATED DEVICE TECHNOLOGY, INC.  
6024 SILVER CREEK VALLEY RD. SAN JOSE, CA 95138  
COPYRIGHT © 1997 IDT 2000


TITLE 89EBPES8T5A  
IO EXPANDERS

|                          |                          |                        |             |
|--------------------------|--------------------------|------------------------|-------------|
| SIZE<br>B                | DRAWING NO.<br>SCH-00162 | FAB P/N<br>18-636-002  | REV.<br>1.0 |
| AUTHOR<br>T. Tran        |                          | CHECKED BY<br>D. Huang |             |
| Thu Apr 24 10:22:14 2008 |                          | SHEET 8 OF 17          |             |


## POWER INDICATOR LED (GREEN)

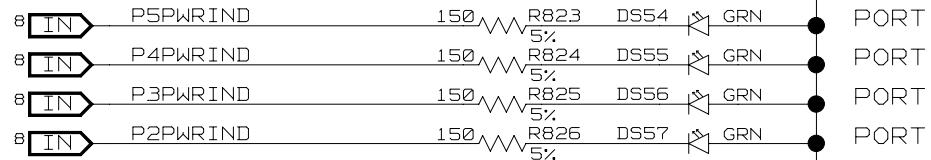


## MRL LED (RED)

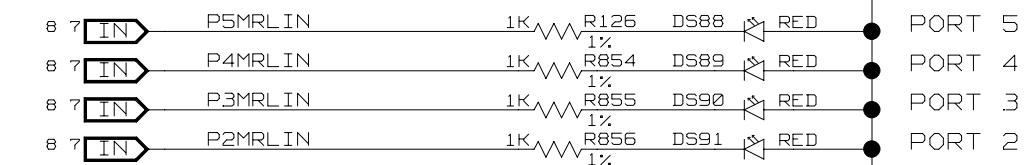


## ATTENTION OUTPUT LED (AMBER)

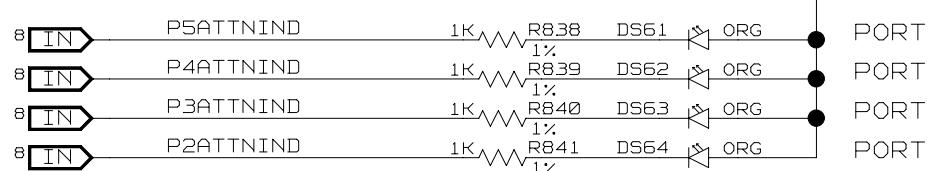


## POWER FAULT LED (RED)

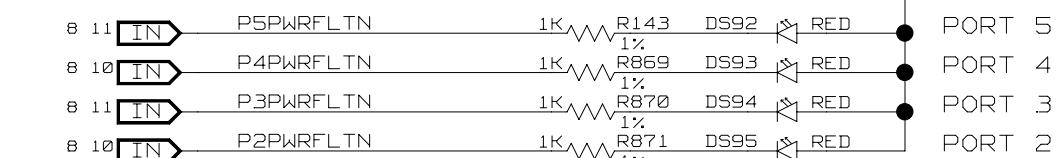


## PRESENCE DETECT LED (GREEN)

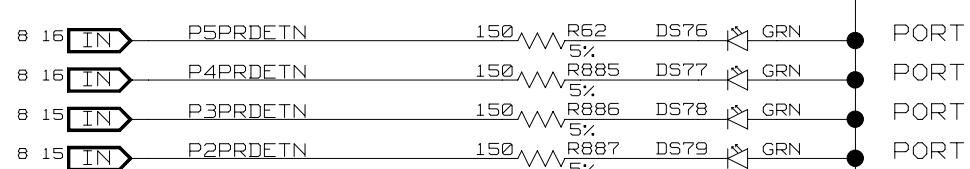


## LINK UP LED (GREEN)

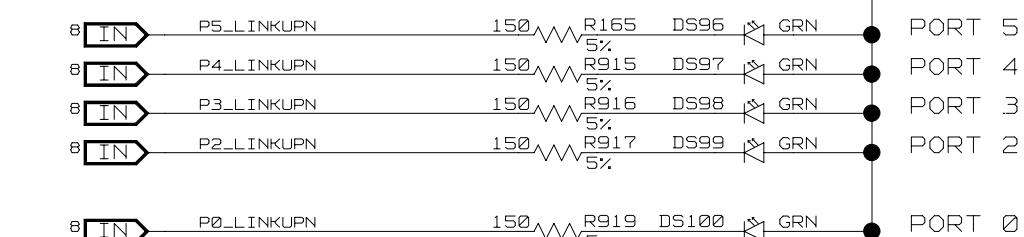

## ATTENTION INPUT LED (AMBER)

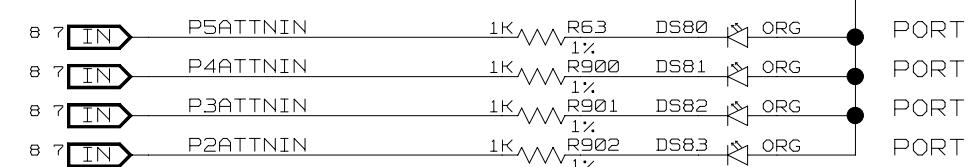

## LINK ACTIVITY LED (AMBER)

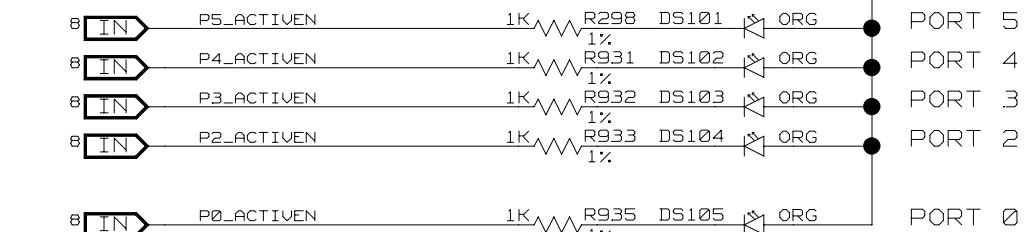

## POWER GOOD LED (GREEN)




|                |                          |
|----------------|--------------------------|
|                | TITLE 89EBPES8T5A        |
|                | IO EXPANDER LEDS         |
| SIZE B         | DRAWING NO. SCH-00162    |
|                | FAB P/N 18-636-002       |
| AUTHOR T. Tran | REV. 1.0                 |
|                | CHECKED BY D. Huang      |
|                | Thu Apr 24 10:22:15 2008 |
|                | SHEET 9 OF 17            |

7

A

1

POWER CONTROLLER PORT 23

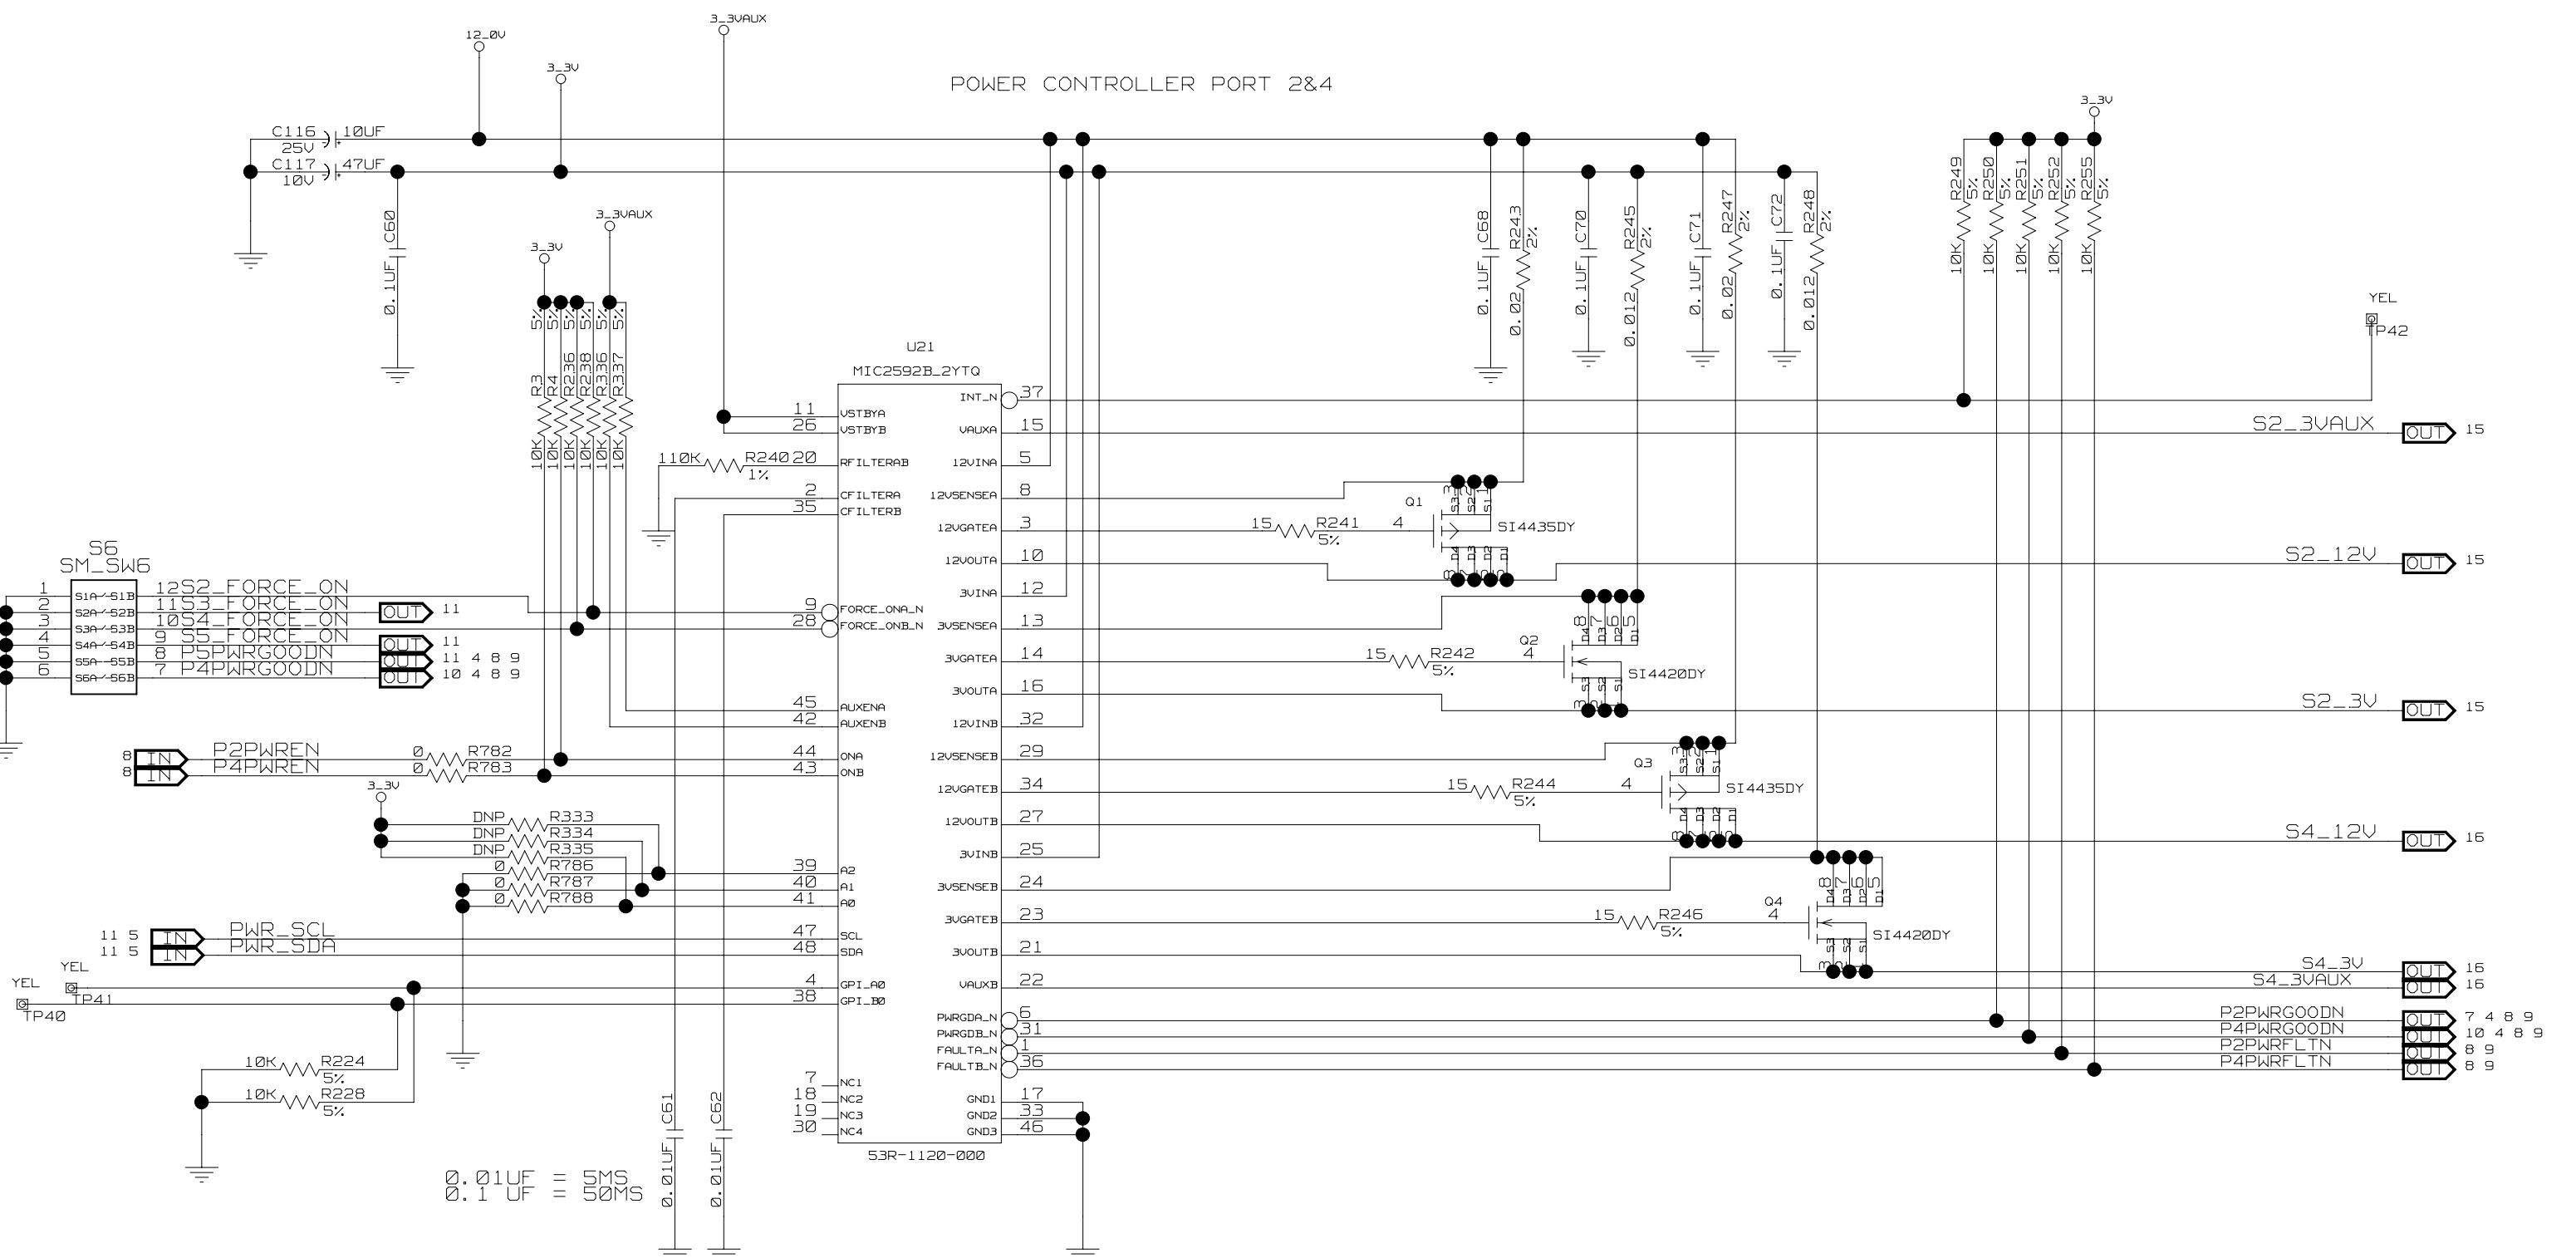

TITLE 89EBPES8T5A

## HOT SWAP CONTROL PORT 2/3

SIZE      DRAWING NO.  
B      SCH-00162


FAB P/N 18-636-002


AUTHOR  
c. T. Tsao

CHECKED BY  
D. Huang

CONFIDENTIAL PROPERTY OF INTEGRATED DEVICE TECHNOLOGY, INC.  
6024 SILVER CREEK VALLEY RD. SAN JOSE, CA 95138  
COPYRIGHT (C) 1997 IDT 2000


## POWER CONTROLLER PORT 3&amp;5

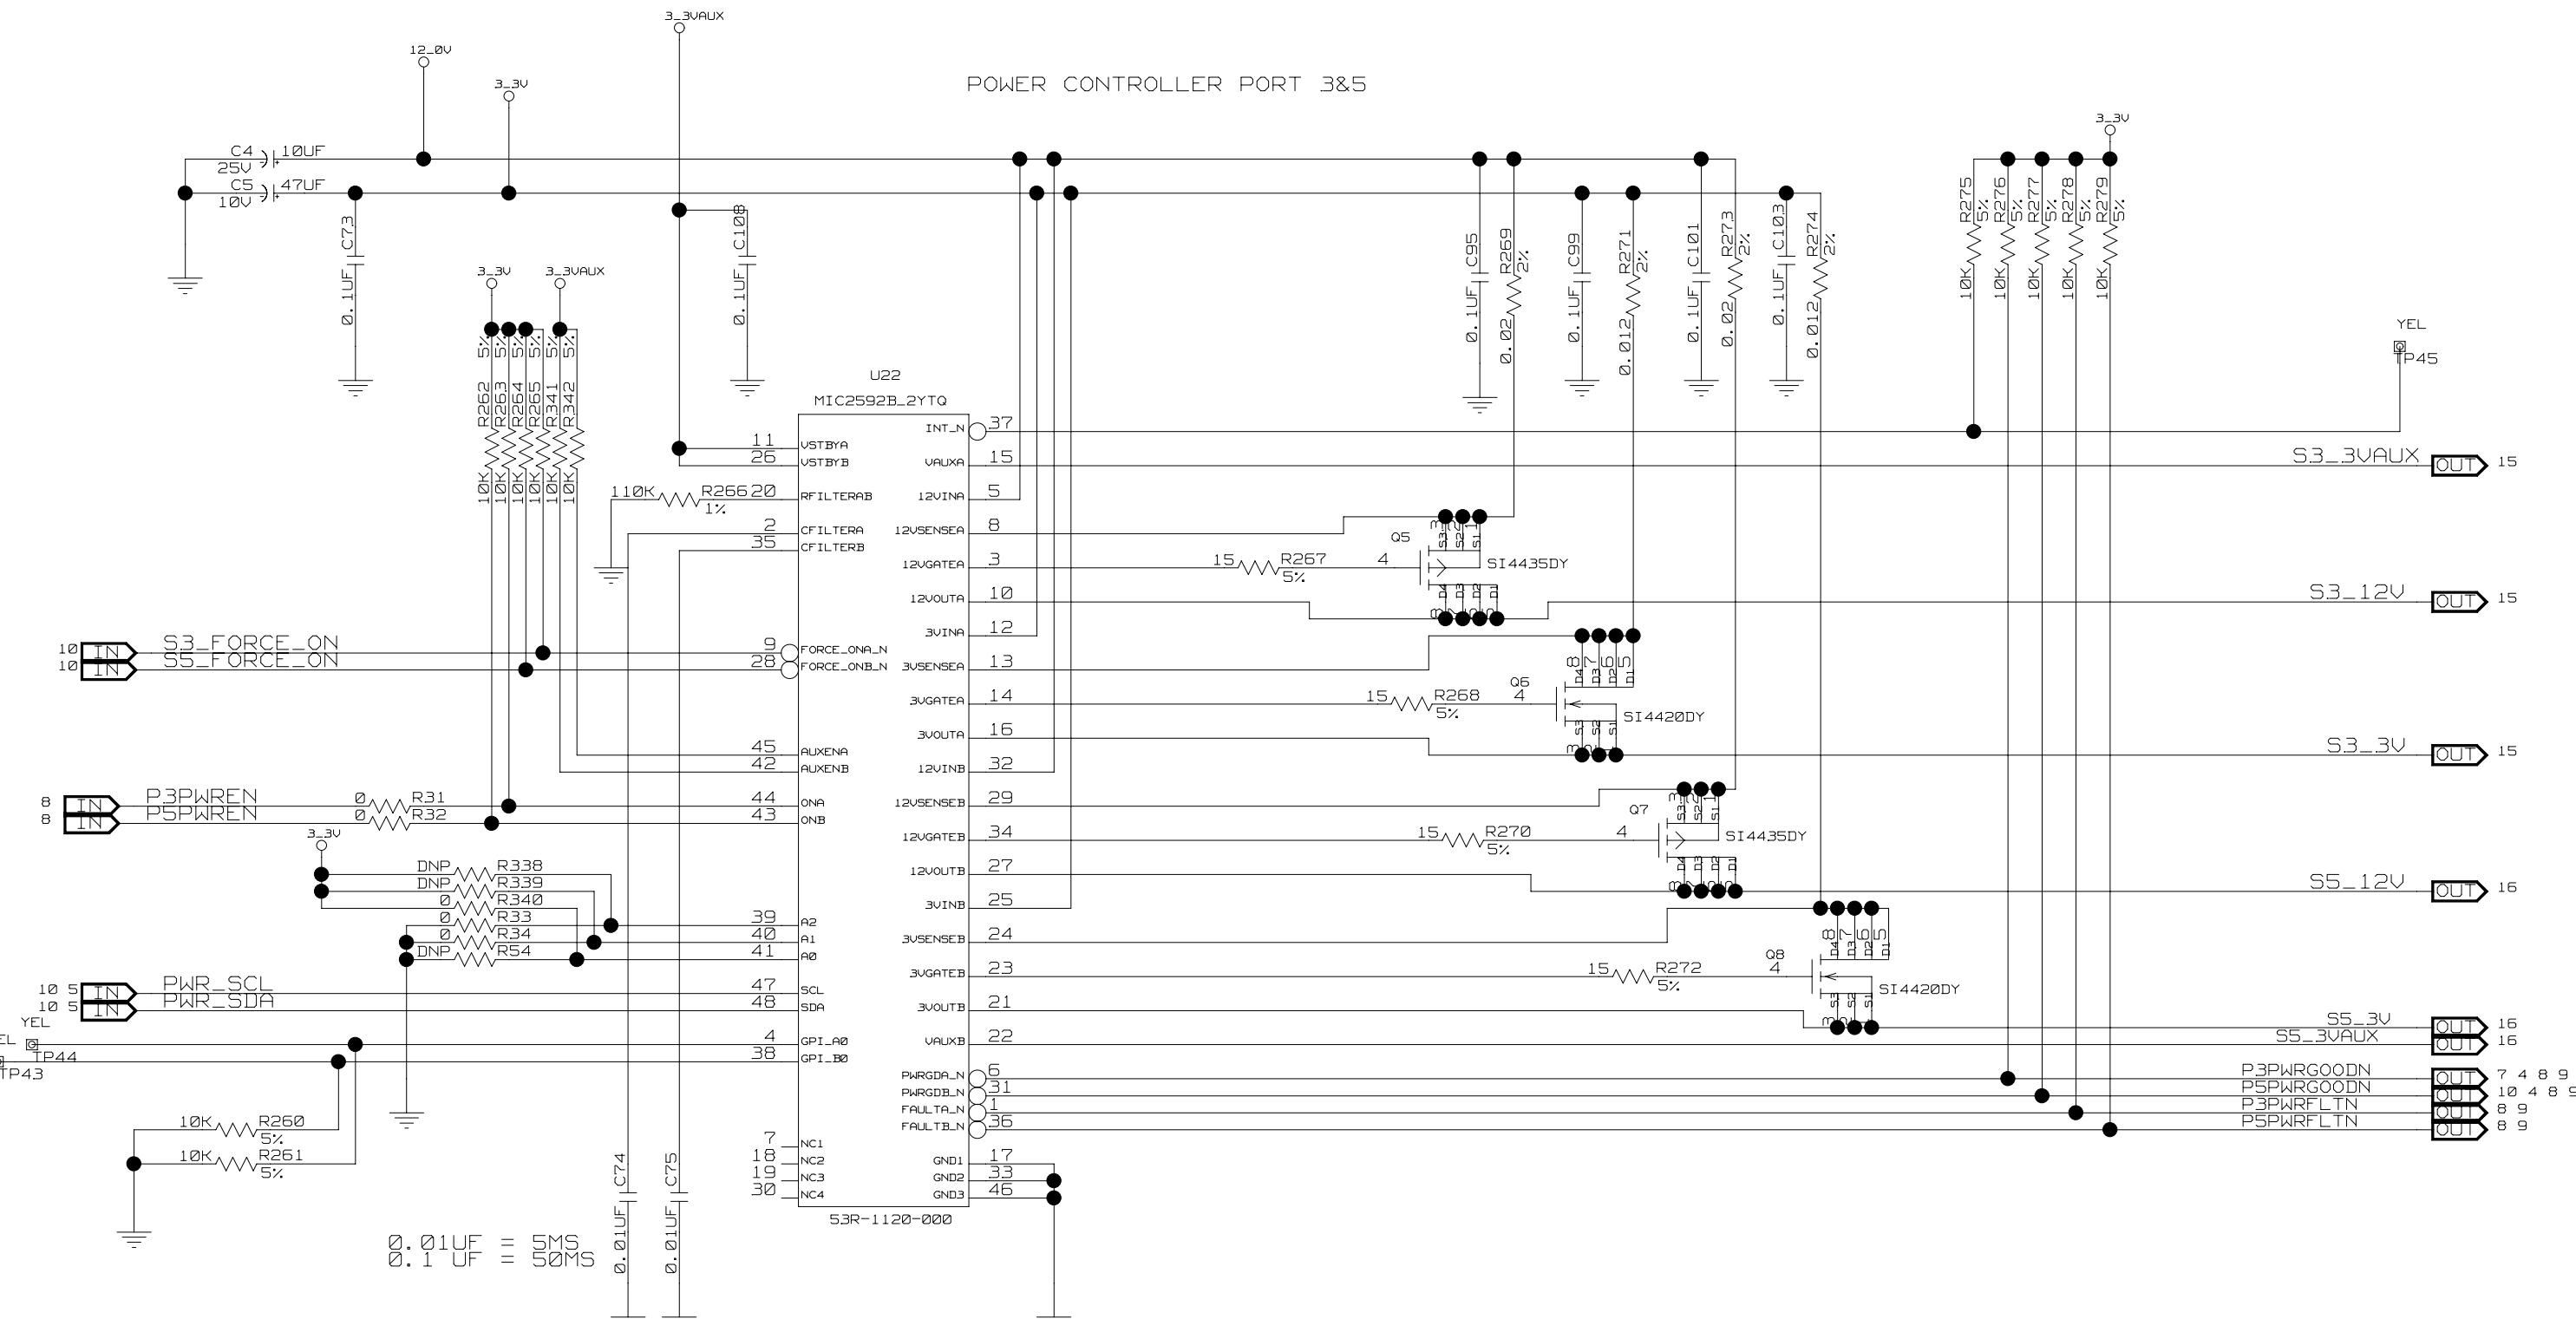

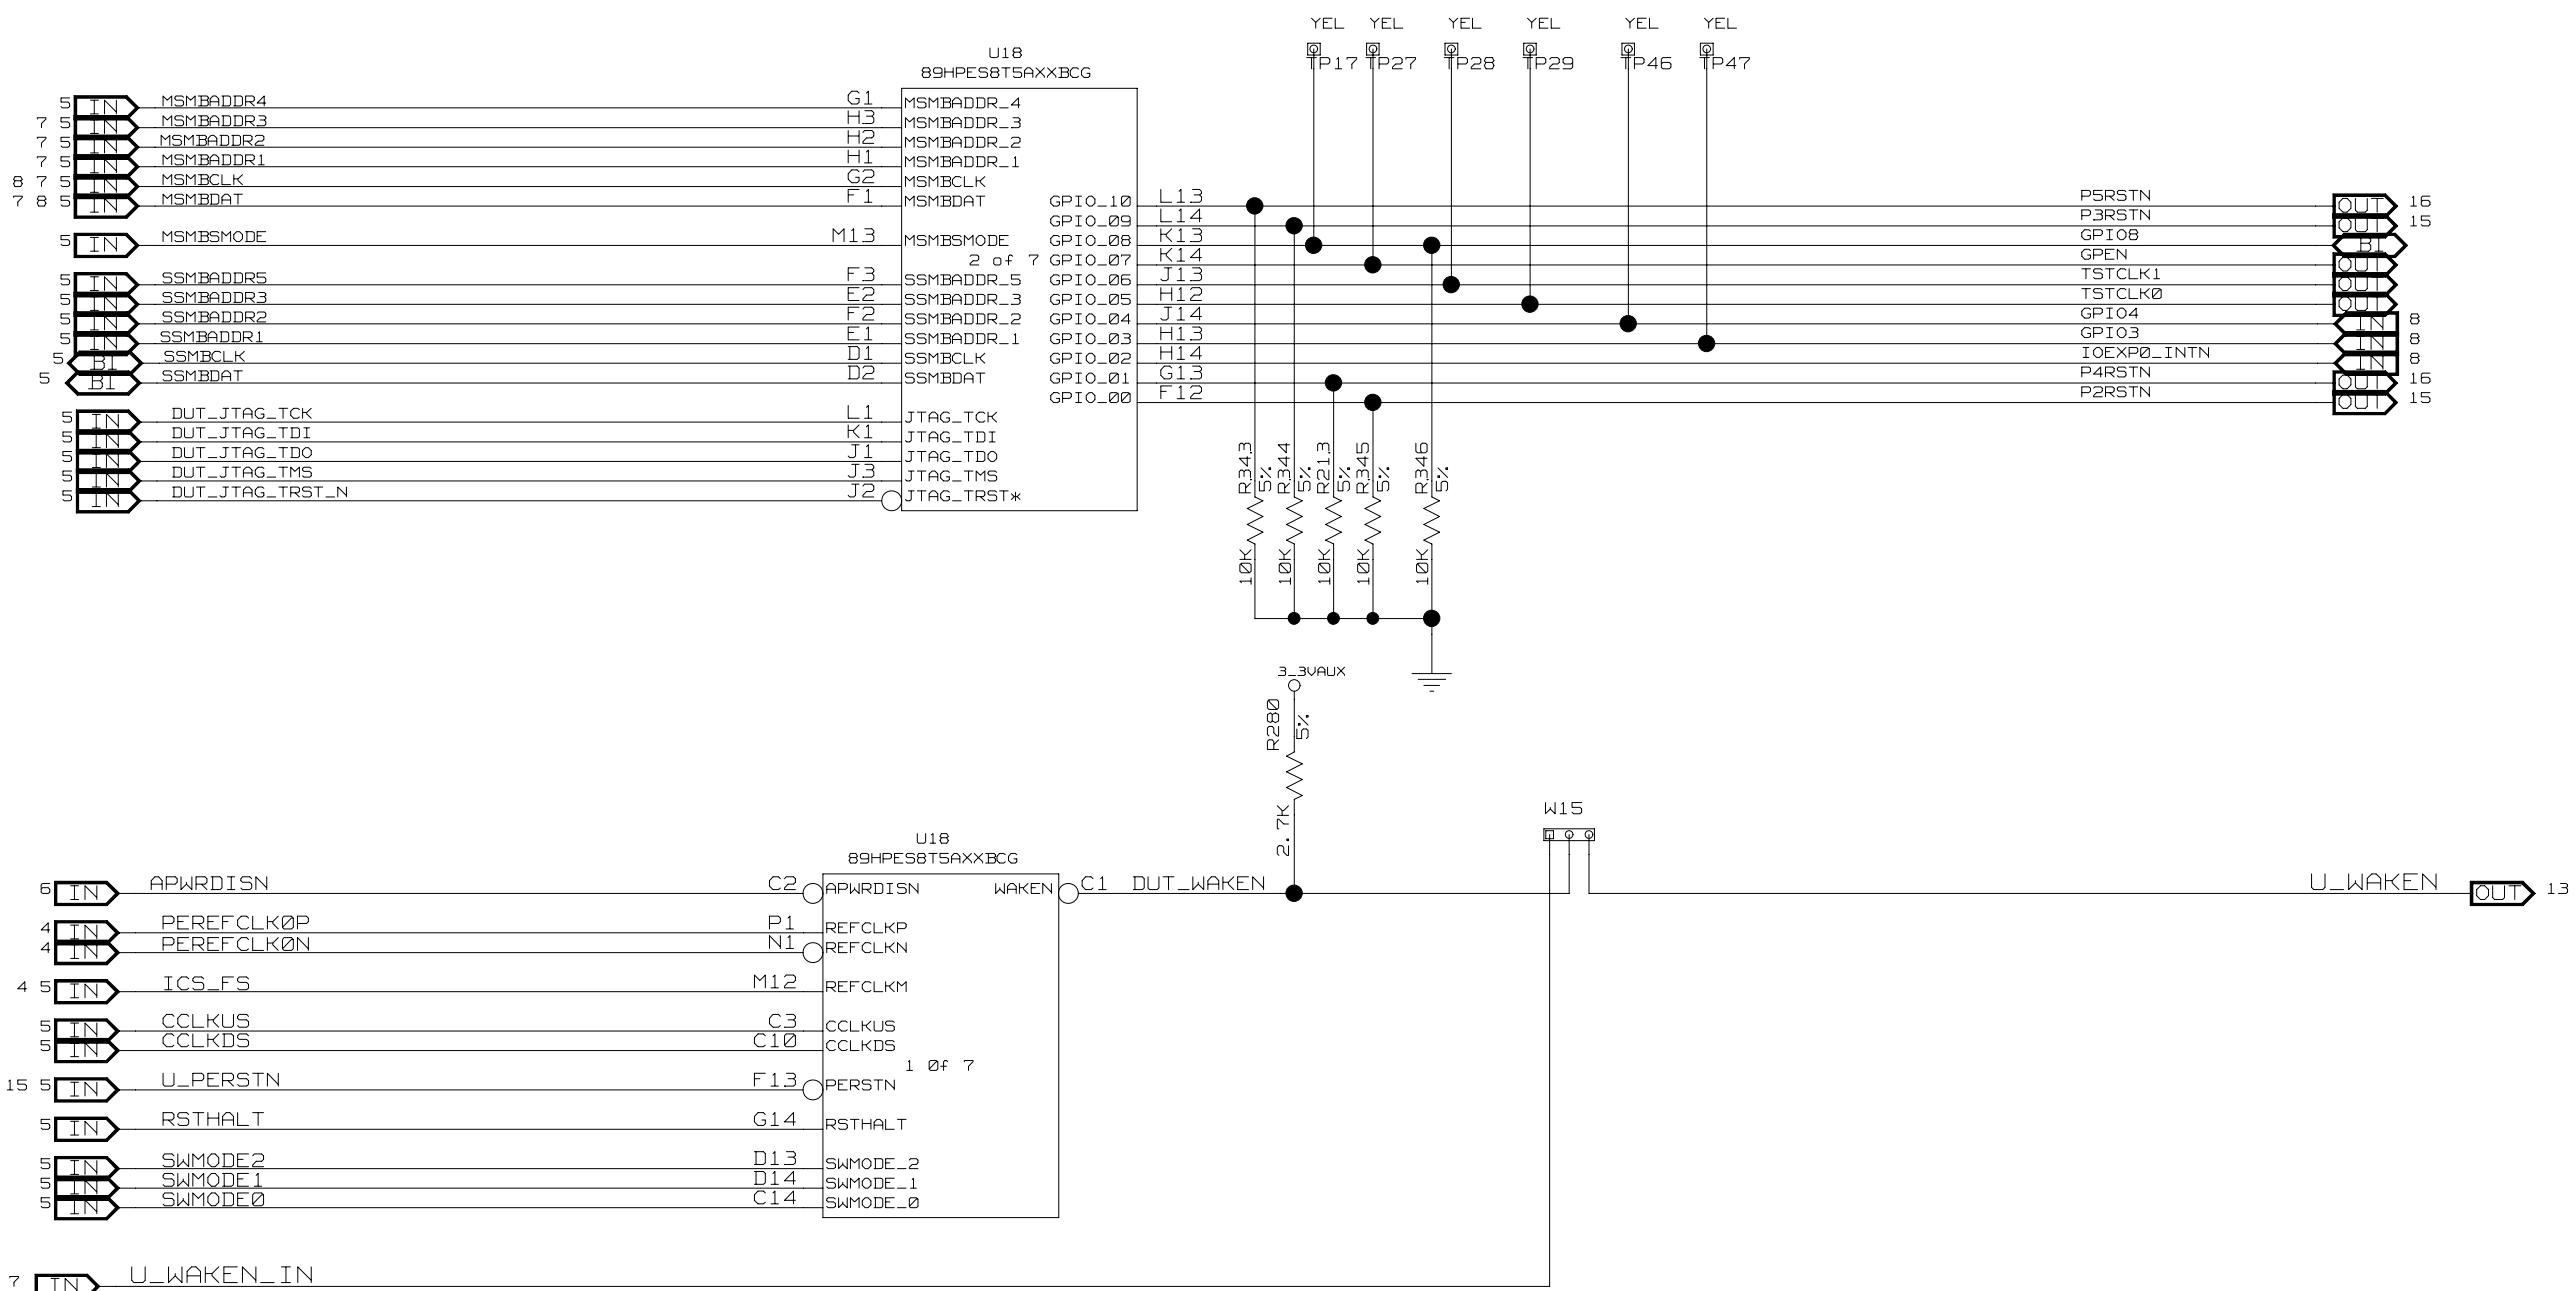



|                            |                       |                     |          |
|----------------------------|-----------------------|---------------------|----------|
| TITLE 89EPES8T5A           |                       |                     |          |
| PES8T5A CLOCK, SMBUS, GPIO |                       |                     |          |
| SIZE B                     | DRAWING NO. SCH-00162 | FAB P/N 18-636-002  | REV. 1.0 |
| AUTHOR T. Tran             |                       | CHECKED BY D. Huang |          |
| Thu Apr 24 10:22:17 2008   |                       | SHEET 12 OF 17      |          |

CONFIDENTIAL PROPERTY OF INTEGRATED DEVICE TECHNOLOGY, INC.  
6024 SILVER CREEK VALLEY RD. SAN JOSE, CA 95138  
COPYRIGHT (C) IDT 2008

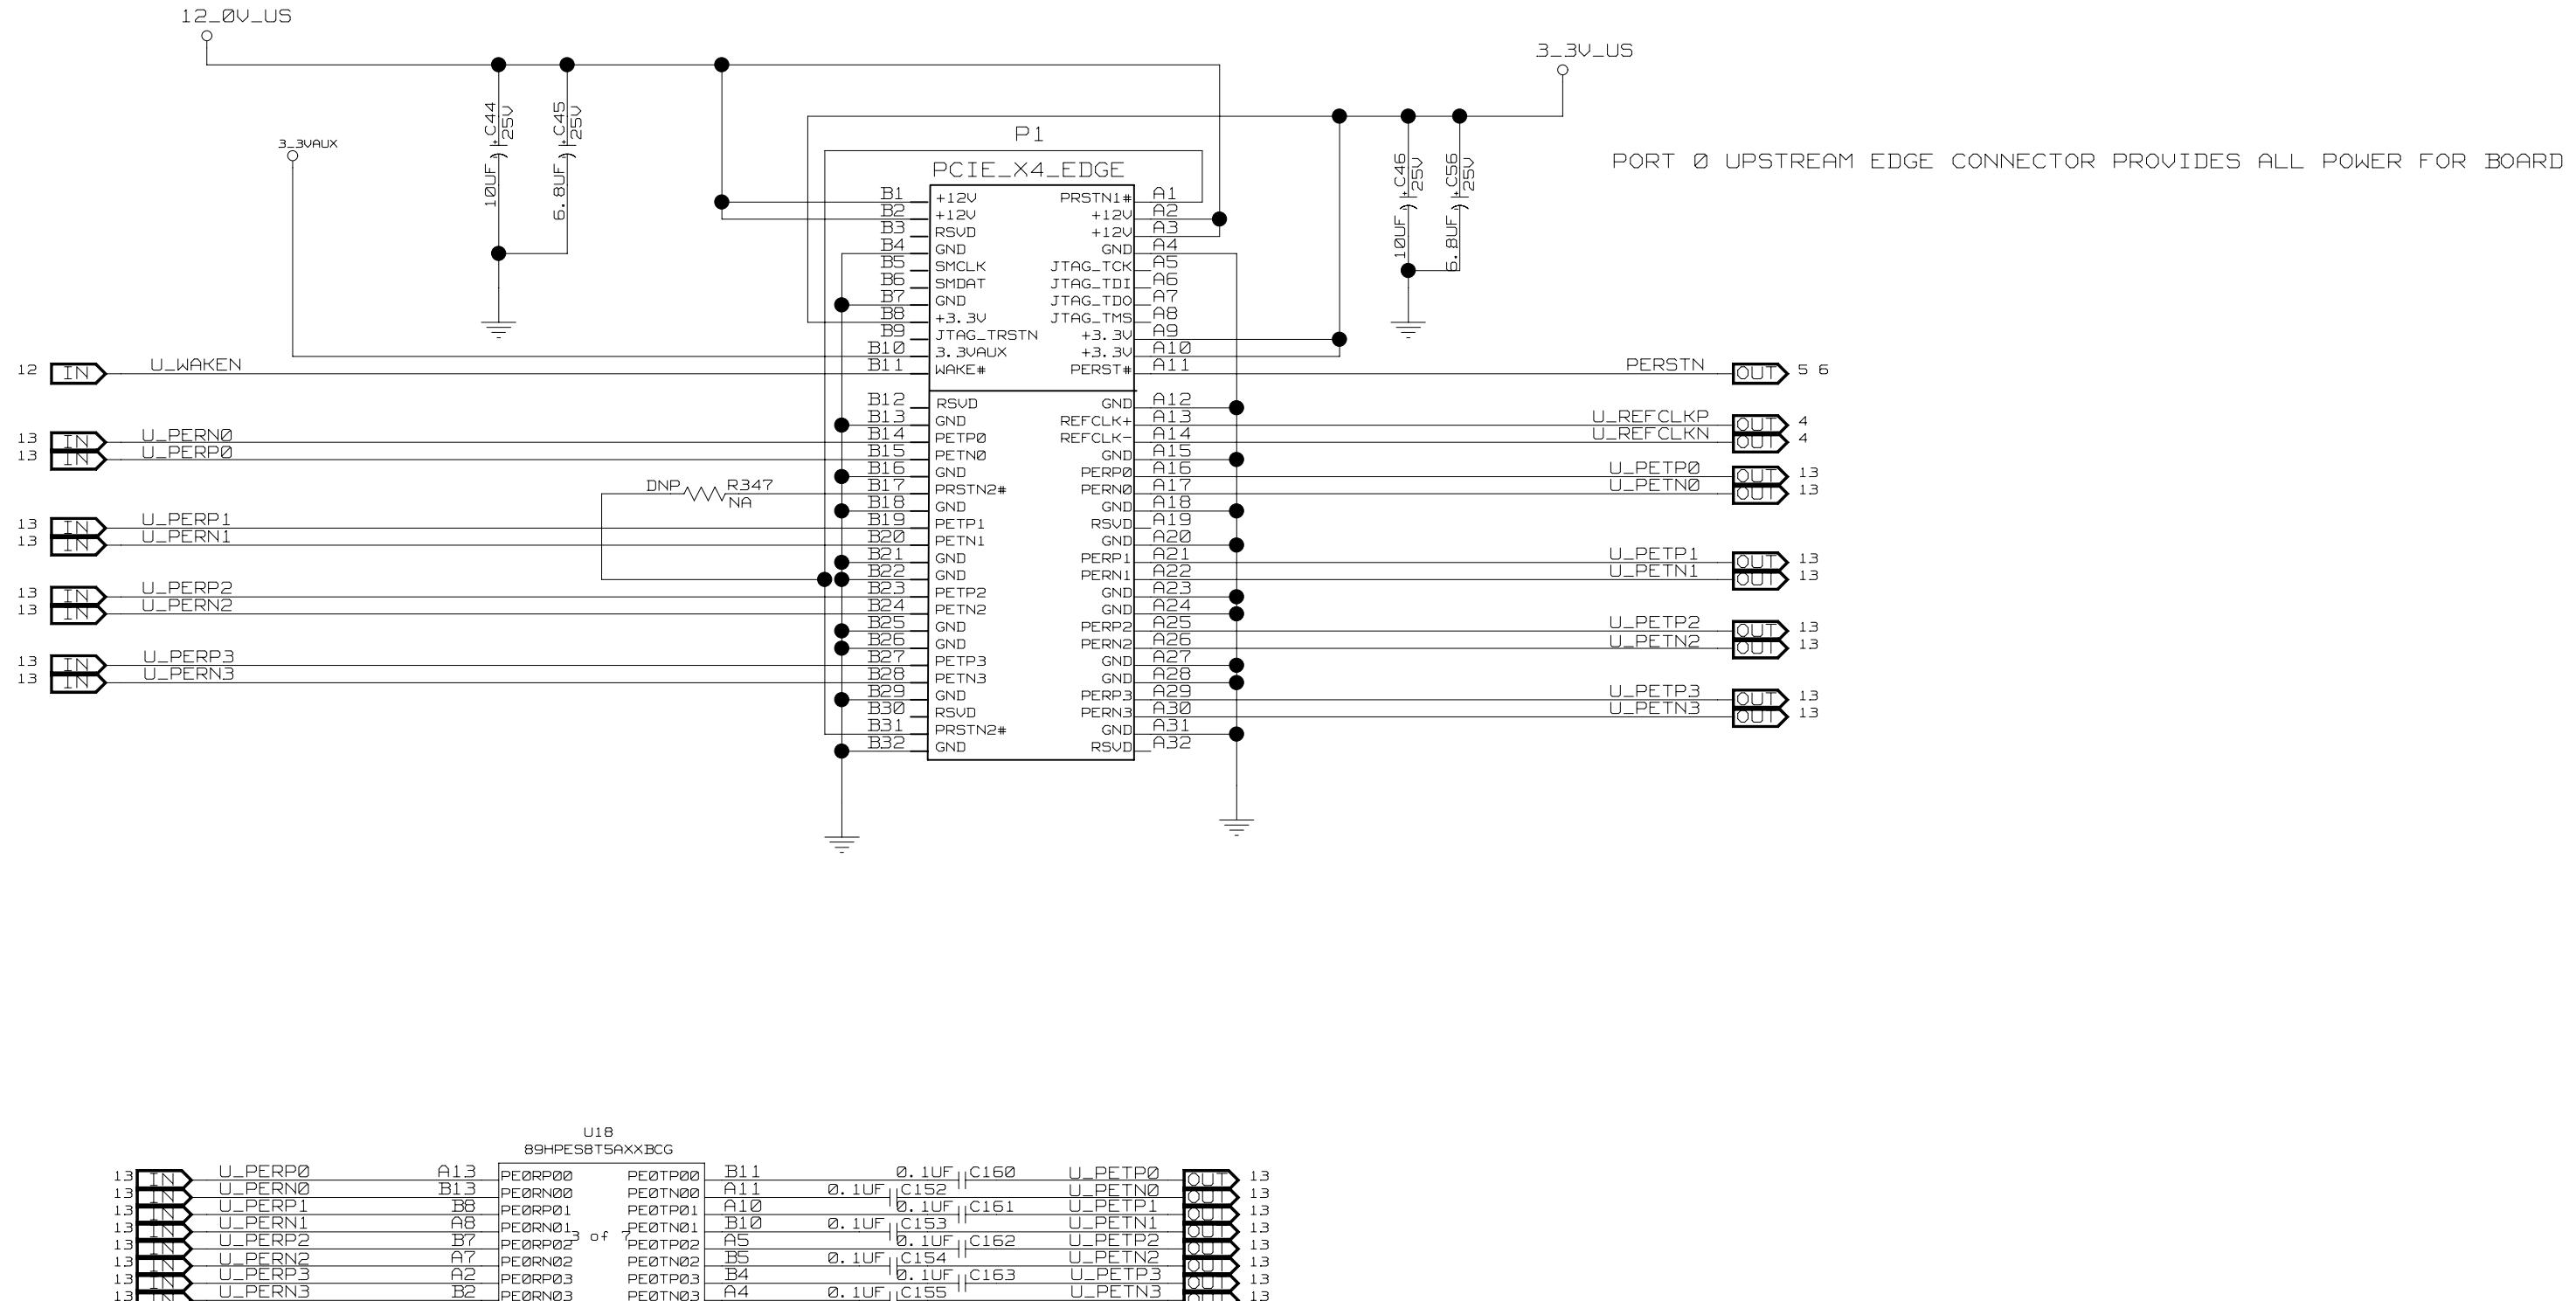

| TITLE 89EBPES8T5A        |                       |                    |          |
|--------------------------|-----------------------|--------------------|----------|
| PES8T5A PORT 0 EDGE CONN |                       |                    |          |
| SIZE B                   | DRAWING NO. SCH-00162 | FAB P/N 18-636-002 | REV. 1.0 |
| AUTHOR T. Tran           | CHECKED BY D. Huang   |                    |          |
| Thu Apr 24 10:22:17 2008 | SHEET 13 OF 17        |                    |          |

CONFIDENTIAL PROPERTY OF INTEGRATED DEVICE TECHNOLOGY, INC.  
6024 SILVER CREEK VALLEY RD. SAN JOSE, CA 95138  
COPYRIGHT (C) IDT 2008

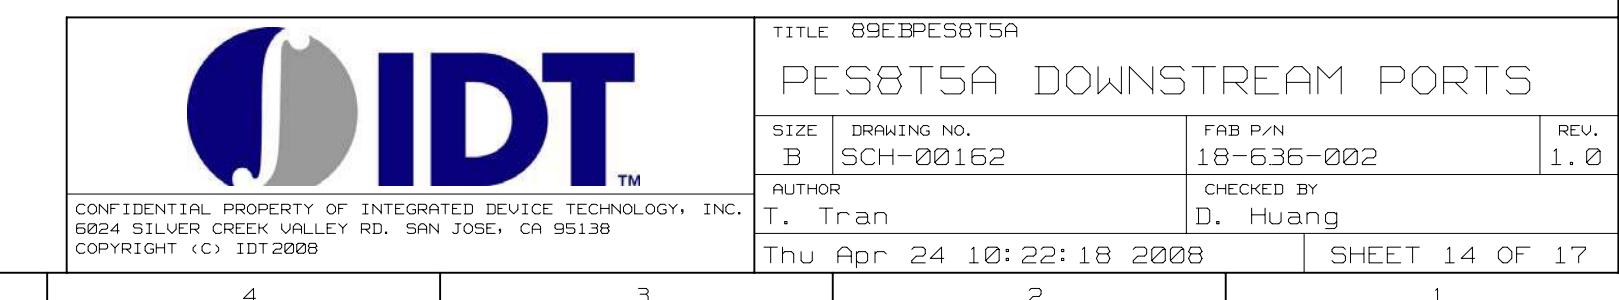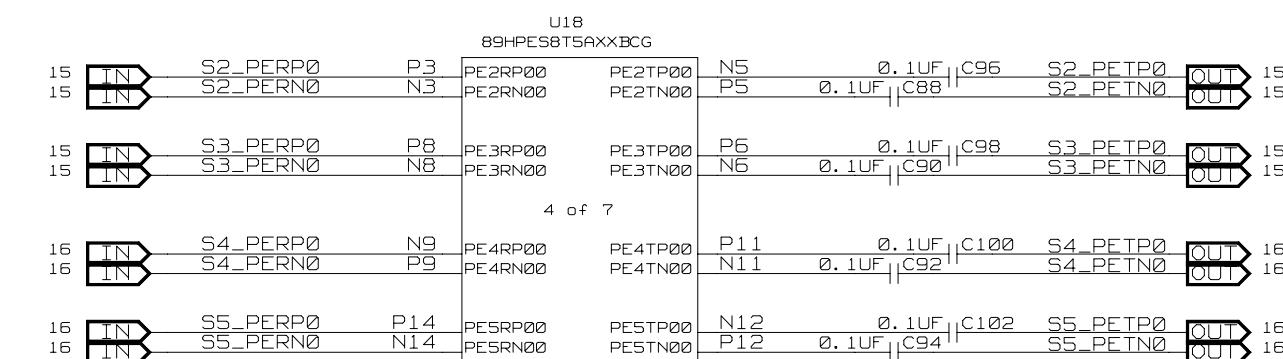



7

6


5

4

3



2

1

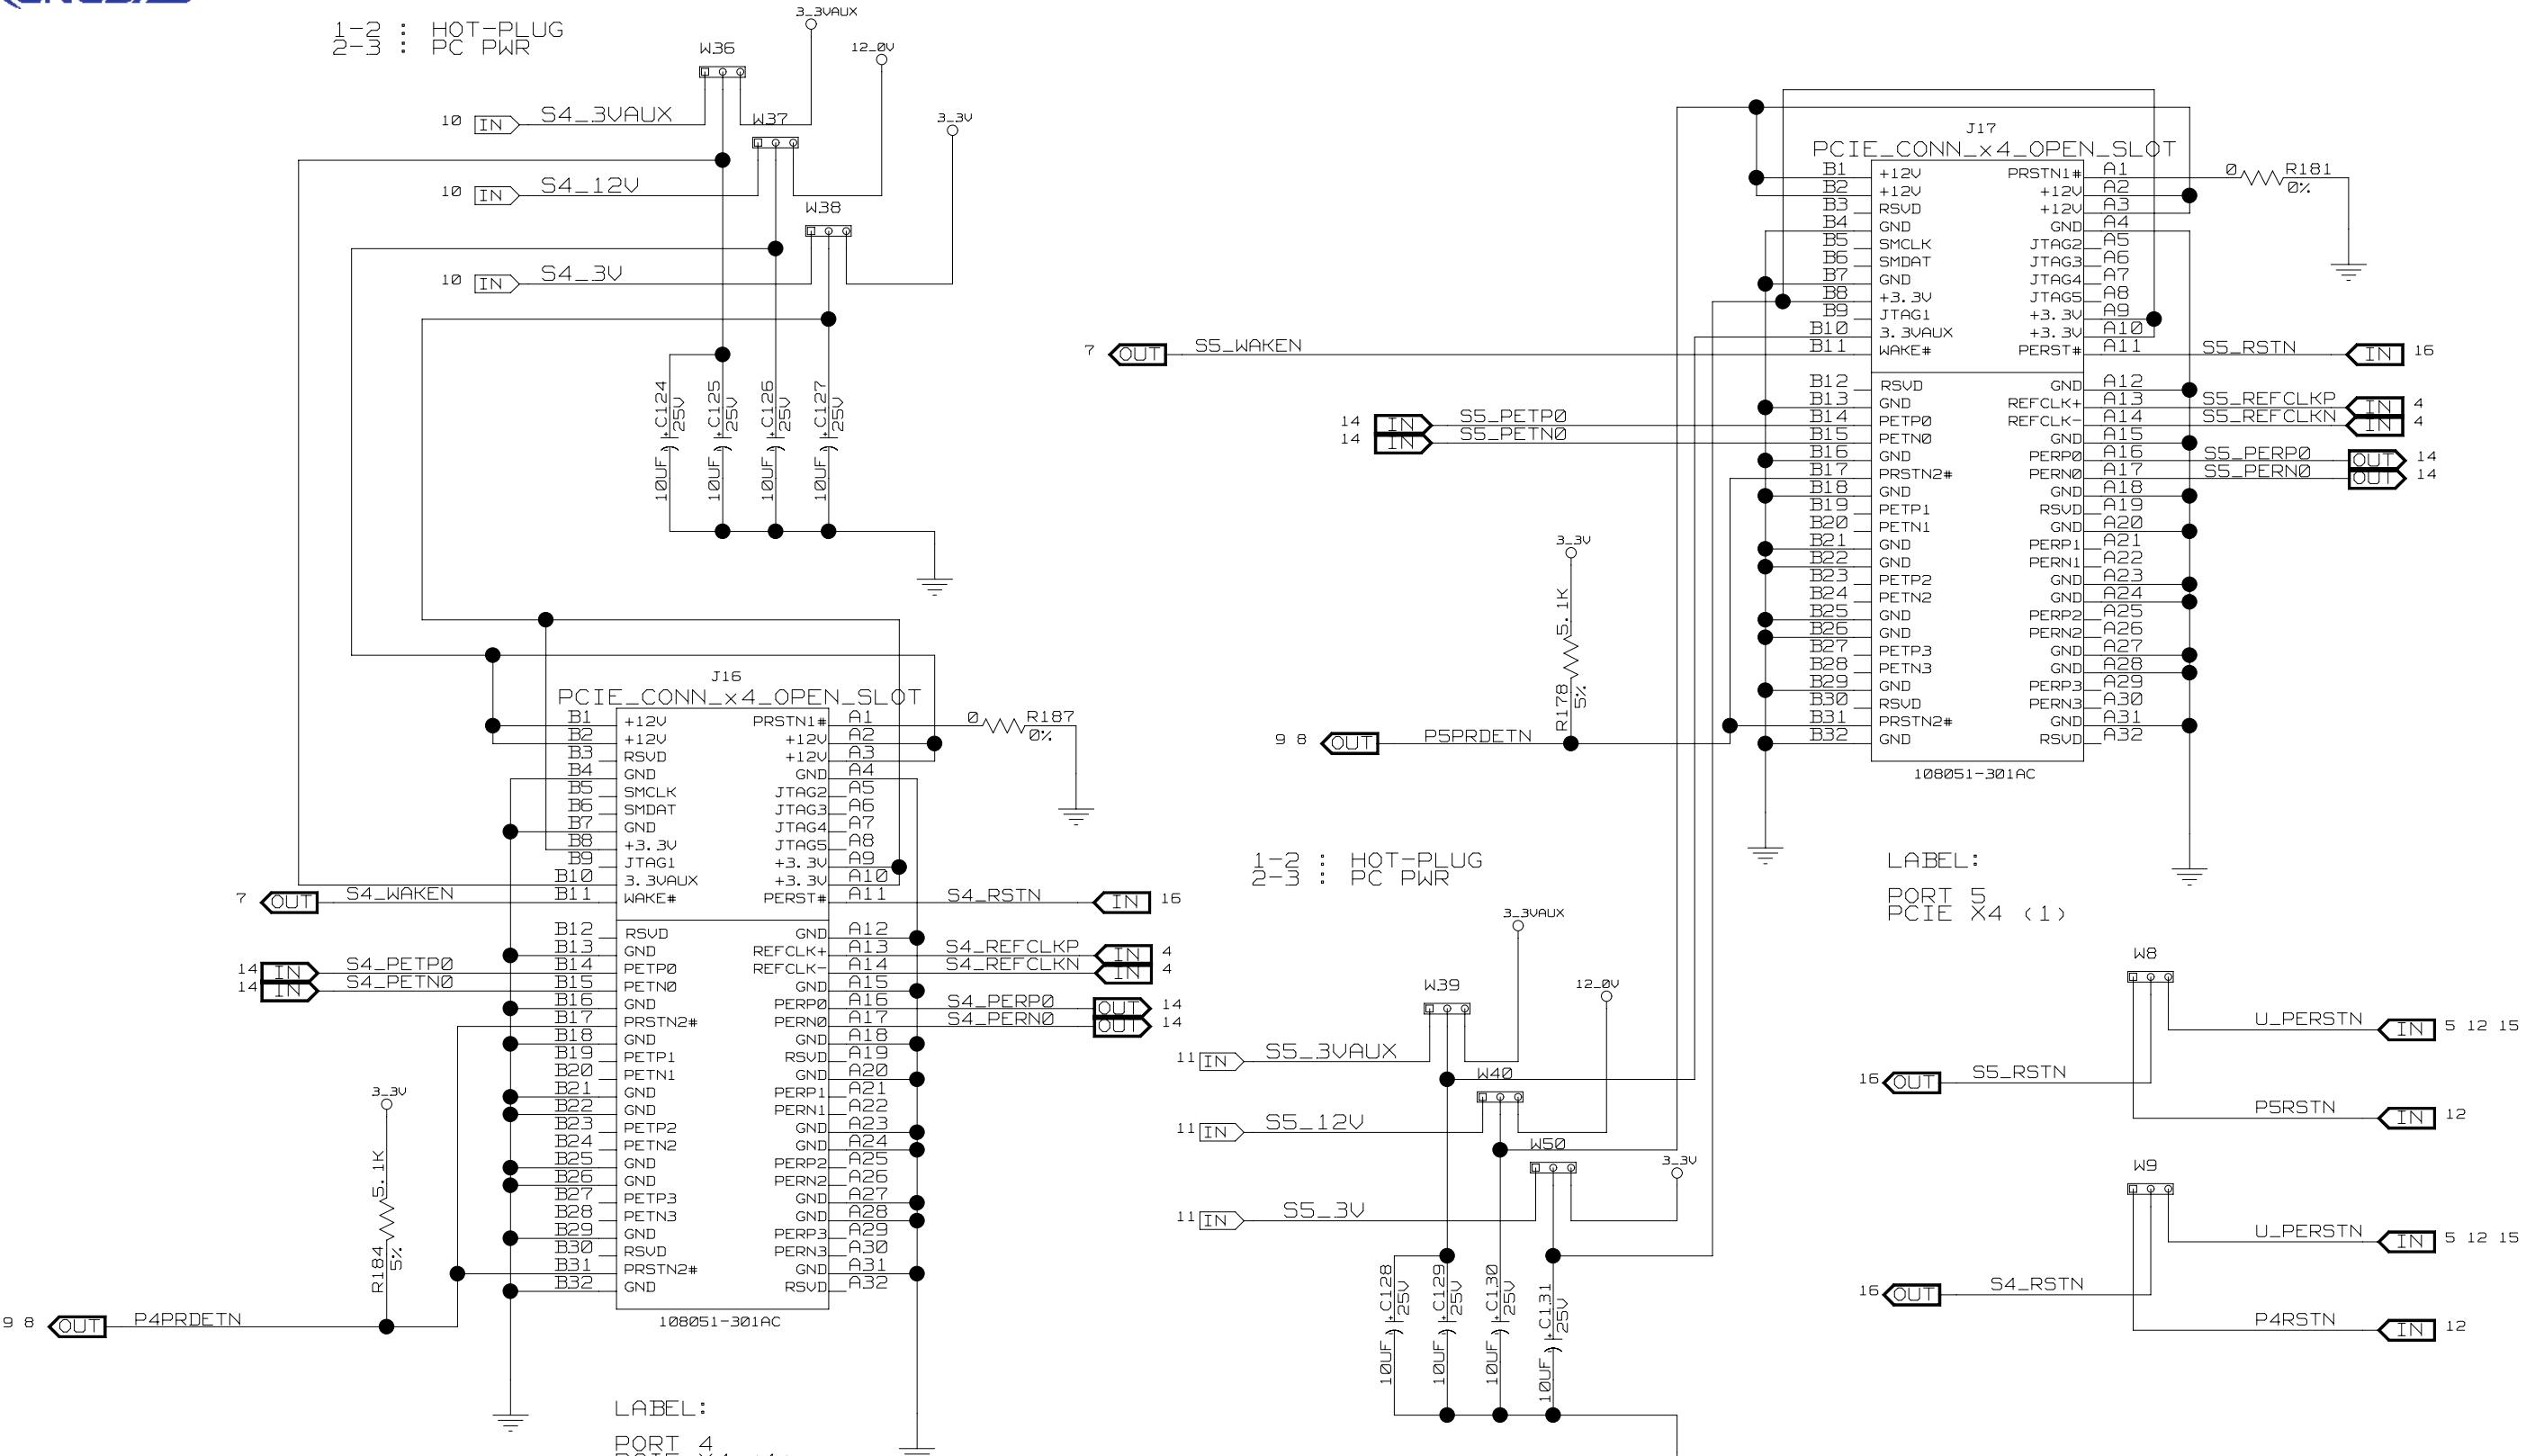

CONFIDENTIAL PROPERTY OF INTEGRATED DEVICE TECHNOLOGY, INC.  
6024 SILVER CREEK VALLEY RD. SAN JOSE, CA 95138  
COPYRIGHT (C) IDT 2008

| TITLE 89EBPES8T5A |             |                          |                |
|-------------------|-------------|--------------------------|----------------|
| PORT 4 AND PORT 5 |             | FAB P/N                  | REV.           |
| SIZE              | DRAWING NO. | 18-636-002               | 1.0            |
| AUTHOR            | T. Tran     | CHECKED BY               | D. Huang       |
|                   |             | Thu Apr 24 10:22:19 2008 | SHEET 16 OF 17 |

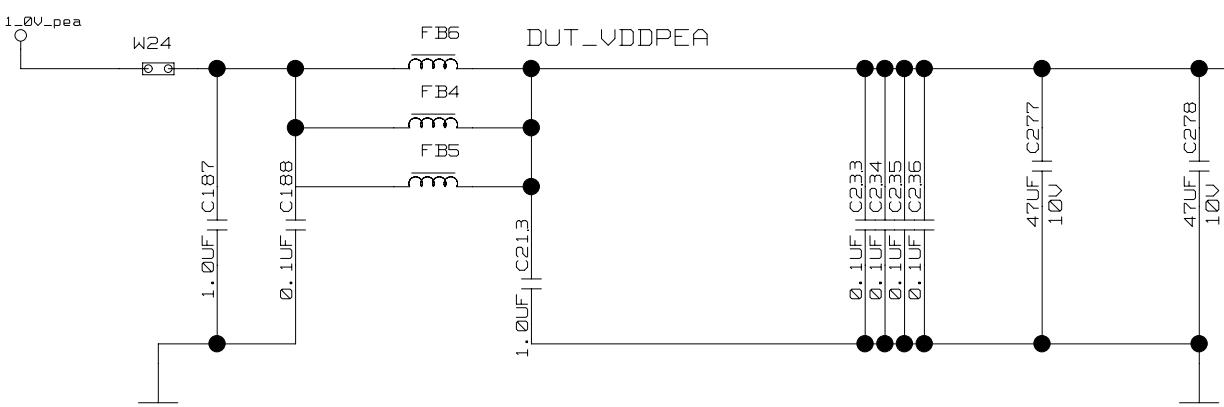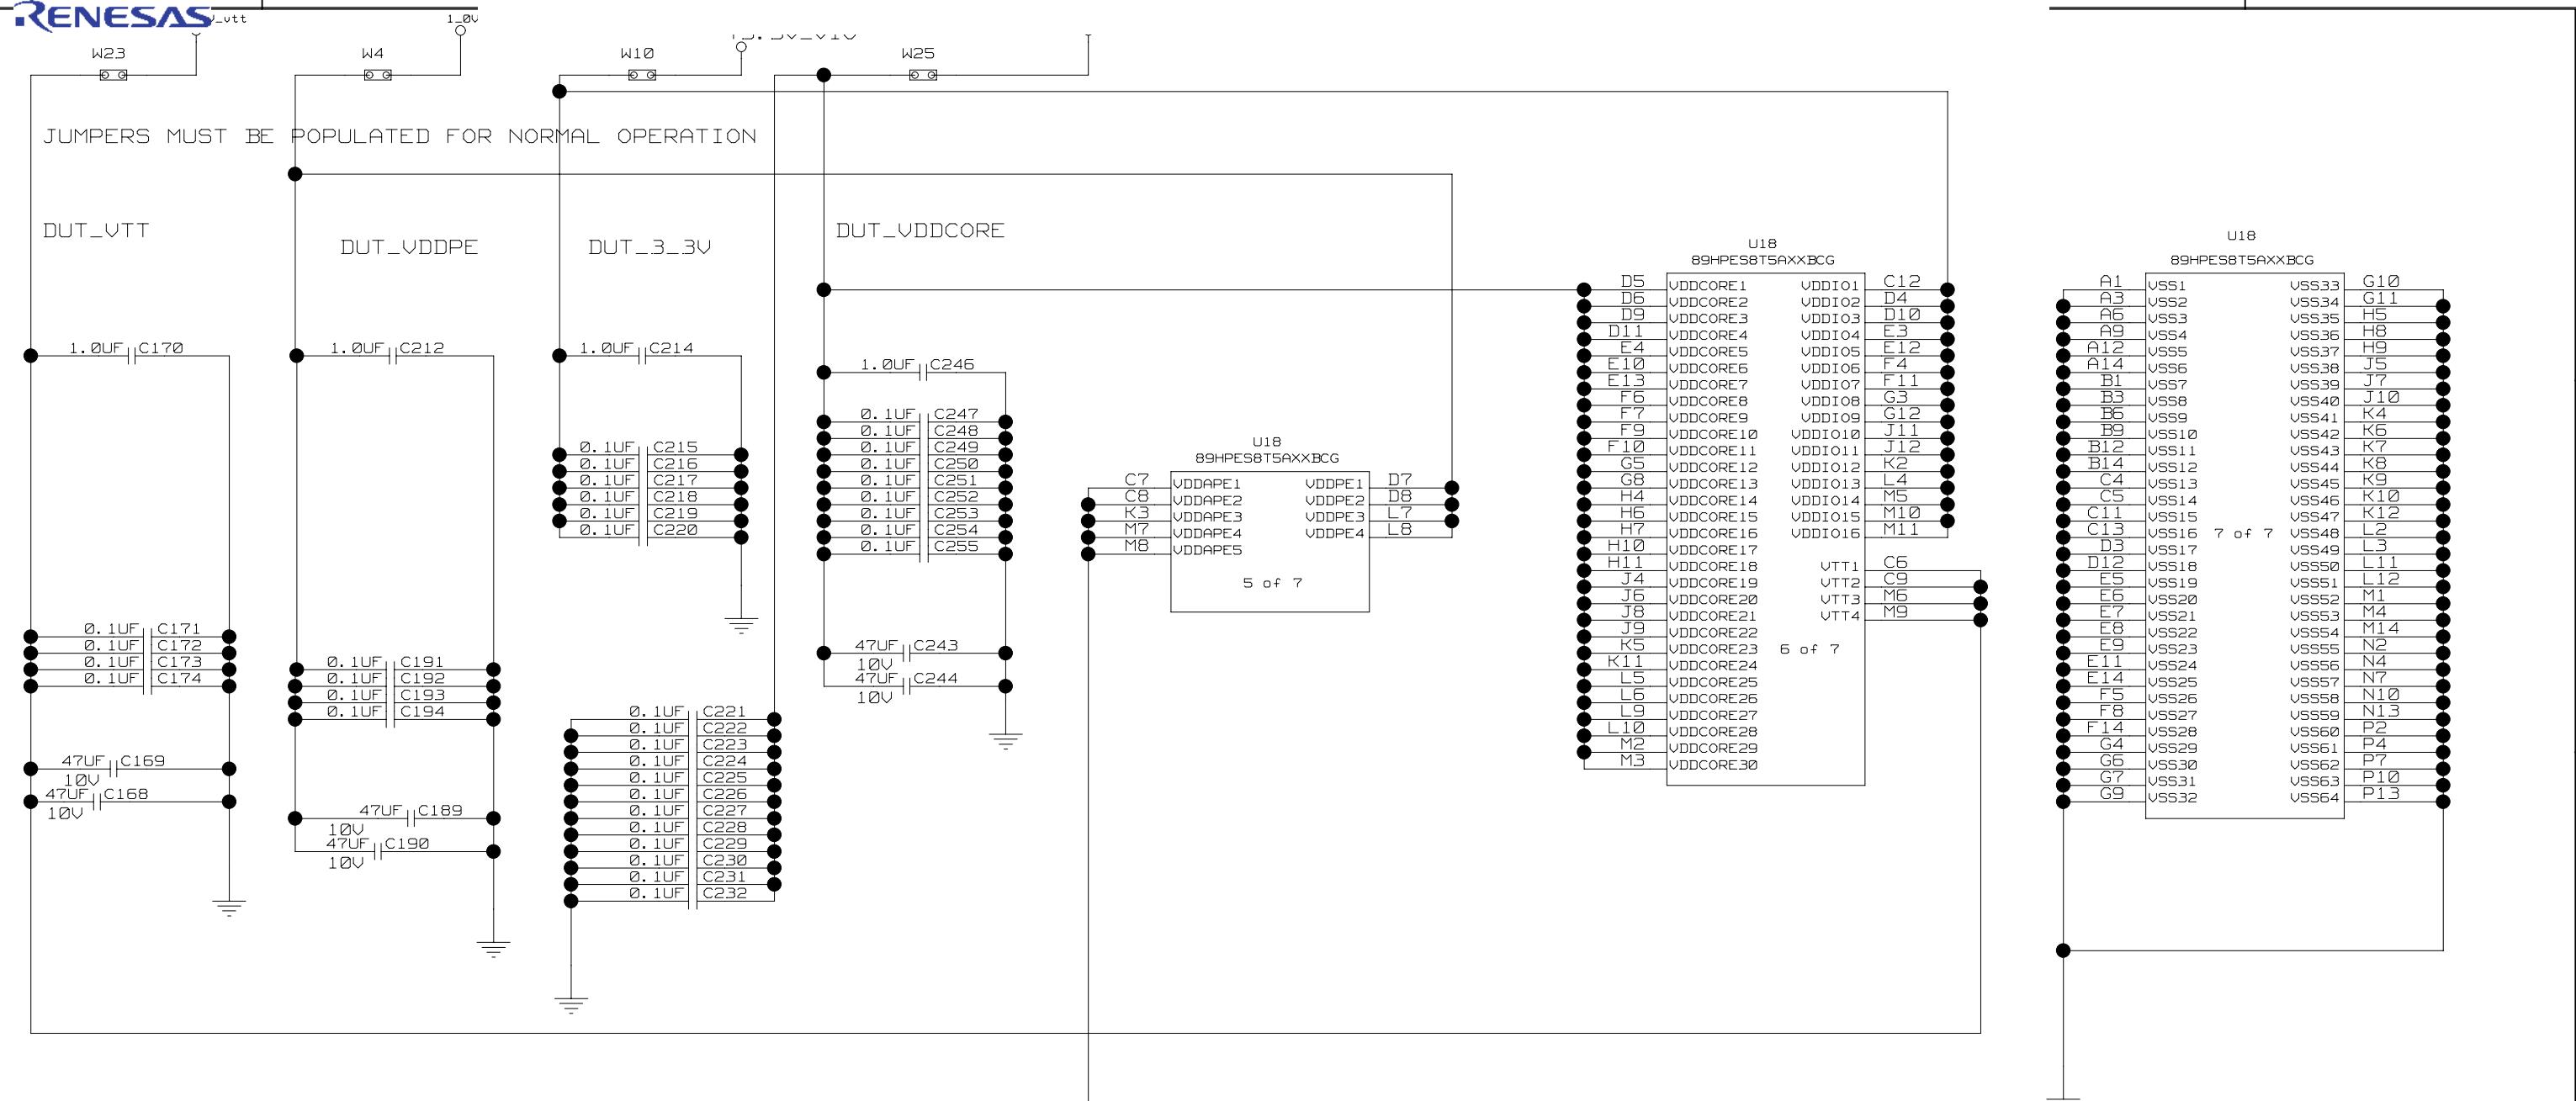

CONFIDENTIAL PROPERTY OF INTEGRATED DEVICE TECHNOLOGY, INC.  
6024 SILVER CREEK VALLEY RD. SAN JOSE, CA 95138  
COPYRIGHT (C) IDT 2008

TITLE 89EBPES8T5A  
PES8T5A POWER

|                          |                       |                    |          |
|--------------------------|-----------------------|--------------------|----------|
| SIZE B                   | DRAWING NO. SCH-00162 | FAB P/N 18-636-002 | REV. 1.0 |
| AUTHOR T. Tran           | CHECKED BY D. Huang   |                    |          |
| Thu Apr 24 10:22:19 2008 | SHEET 17 OF 17        |                    |          |

## **IMPORTANT NOTICE AND DISCLAIMER**

RENESAS ELECTRONICS CORPORATION AND ITS SUBSIDIARIES ("RENESAS") PROVIDES TECHNICAL SPECIFICATIONS AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for developers skilled in the art designing with Renesas products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. Renesas grants you permission to use these resources only for development of an application that uses Renesas products. Other reproduction or use of these resources is strictly prohibited. No license is granted to any other Renesas intellectual property or to any third party intellectual property. Renesas disclaims responsibility for, and you will fully indemnify Renesas and its representatives against, any claims, damages, costs, losses, or liabilities arising out of your use of these resources. Renesas' products are provided only subject to Renesas' Terms and Conditions of Sale or other applicable terms agreed to in writing. No use of any Renesas resources expands or otherwise alters any applicable warranties or warranty disclaimers for these products.

(Disclaimer Rev.1.0 Mar 2020)

### **Corporate Headquarters**

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan  
[www.renesas.com](http://www.renesas.com)

### **Contact Information**

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:  
[www.renesas.com/contact/](http://www.renesas.com/contact/)

### **Trademarks**

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.