

TPS65916 EVM User's Guide

This user's guide describes the characteristics, operation, and use of the TPS65916EVM. An EVM description, graphical user interface (GUI) description, interface requirements, and complete schematic are included.

Contents

1	Introduction	1
2	Schematics, Bill of Materials, and Layout	4
3	Setup and Operation.....	16

List of Figures

1	EVM	2
2	Powered EVM.....	4
3	TPS65916 EVM Schematic (Page 1)	5
4	TPS65916 EVM Schematic (Page 2)	6
5	TPS65916 EVM Schematic (Page 3)	7
6	TPS65916 EVM Schematic (Page 4)	8
7	Composite - Top View	12
8	Top Layer	13
9	Layer 1 GND.....	13
10	Layer 2 SIGNAL	14
11	Layer 3 POWER.....	14
12	Bottom Layer.....	15
13	Composite - Bottom View	15
14	Default GPIO Configuration	16
15	GPIO Configuration After GPIO_1 Set to Logic High	17
16	Low Level Configuration Page.....	18
17	Sample Script	19

List of Tables

1	Default Jumper Settings for TPS65916EVM.....	3
2	TPS65916EVM BOM.....	8

1 Introduction

The TPS65916 device is a power-management integrated circuit (PMIC) for industrial and consumer applications. The device provides five configurable step-down converters, with up to 7 A of output current for memory, processor core, input/output (I/O), or preregulation of LDOs. The TPS65916 device contains 5 LDO regulators for external use. For more details, see the device datasheet, [TPS65916 Power Management Unit \(PMU\) for Processor](#).

1.1 EVM Overview

The features of this EVM are as follows:

- Allows monitoring of all LDO and SMPS output voltages.
- Allows loading of all SMPS outputs.
- Allows access to the GPIOs and other logic signals to test functionality.
- Optimized layout for stable operation of all SMPS.
- Onboard MSP430 to enable communication with the PMIC.
- Graphical User Interface (GUI) on Windows® to allow access to the registers of the PMIC through USB-I2C.

1.2 EVM with Components Identified

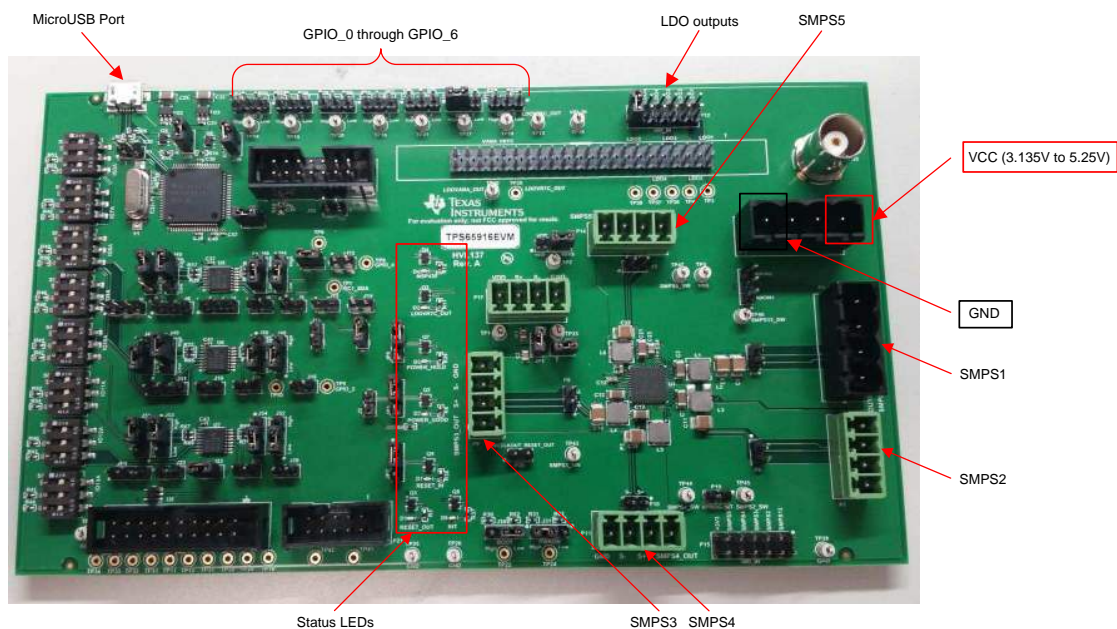


Figure 1. EVM

LEDs —Display status of POWERGOOD, RESET_IN, POWER_HOLD, LDOVRTC_OUT, RESET_OUT, INT, and power supply of MSP430

USB —Connection to PC to enable communication through the GUI

MSP430 —Microcontroller used to convert USB data to I²C format

SMPSxx —Monitor point for SMPS outputs

LDO Outputs —Monitor point for LDO outputs

VIO SelectorX —Jumper used to select VIO voltage. P12 requires a jumper installed, and by default pins 11 and 12 are shorted to select external 1.8 V as VIO. Only one jumper should be installed between P12 and P15.

GPIOs —Jumper that provides access to the GPIOs

VSYS —VSYS power supply input. P16 is the same connector as SMPS12_OUT and must not be confused to prevent applying VSYS to SMPS-output.

1.3 Default Jumper Settings

Table 1 describes the default jumper settings for the TPS65916 EVM. No changes should be made to these settings without consulting the TPS65916 EVM schematic.

Table 1. Default Jumper Settings for TPS65916EVM

JUMPER	PURPOSE	EVM CONFIGURATION
P12	VIO Selection	Pins 11 and 12 are shorted to select external 1.8V as VIO
P15	VIO Selection	No pins on this header are shorted since there is a shunt on P12.
J2	POWERGOOD Pull-up resistor	J2 is closed to enable the pull-up resistor for the POWERGOOD signal
J3	Level Shifter Voltage Selection	J3 is closed to select VIO as the level shifted voltage for U5, U6, and U7
J7	I ² C or SPI CLK	J7 is closed to select the I2C_SCL signal
J10	I ² C or SPI Data	J10 is closed to select the I2C_SDA signal
J22	GPIO_1 GUI Control	J22 is closed to allow GPIO_1 (RESET_IN) to be controlled through the GUI
J26	GPIO_5 Selection	GPIO_5 is shorted HIGH to allow the device to power-up
J30	BOOT Selection	BOOT is shorted LOW to exercise the default power-up sequence
J31	PWRON Selection	PWRON is shorted HIGH
J32	LDO5 Input Selection	J32 is closed to supply LDO5 from the same supply as the other LDOs
J35	I2C_SCL Connection to PMIC	J35 is closed to use the onboard SCL signal from the MSP430
J36	I2C_SDA Connection to PMIC	J36 is closed to use the onboard SDA signal from the MSP430
J43 – J54	Level Shifter Direction Selection and Enable	Jumpers J43 through J54 should be left as they are configured to enable proper level shifter functionality
JP1	LDO Input Selection	JP1 is closed to supply the LDOs from VSYS instead of an external supply (VDD)
JP2	VCC_SENSE Selection	VCC_SENSE is shorted to VSYS instead of an external supply (VDD)
JP3	D2 Indicator Selection	Pins 1 and 2 are shorted to allow the status of POWERGOOD signal to be indicated by D2
JP6	D5 Indicator Selection	Pins 1 and 2 are shorted to allow the status of the POWER_HOLD signal to be indicated by D5
JP7	D7 Indicator Selection	Pins 1 and 2 are shorted to allow the status of the RESET_IN signal to be indicated by D7

1.4 Power-Supply Requirements and Connections

To set up the EVM, ensure that VSYS (3.3 V to 5 V) is connected to the pin labeled **VSYS** of P16, and that GND is connected to the pin labeled **GND** of P16.

1.4.1 VIO Selection

As mentioned in [Table 1](#), there are two 12-pin headers (P12 and P15) for selecting the voltage to use for the VIO supply voltage of the PMIC.

CAUTION

It is important to make sure that there is a total of one shunt populated between P12 and P15. If there is a shunt on P12, there should not be one on P15 and vice versa. Also, there should never be more than one shunt on either P12 or P15. Violating this requirement will short two PMIC outputs together, which could potentially damage the PMIC device.

Power for the MSP430 and the two fixed voltage LDOs (3.3-V and 1.8-V outputs) is supplied through the USB connection, as shown in [Figure 2](#).

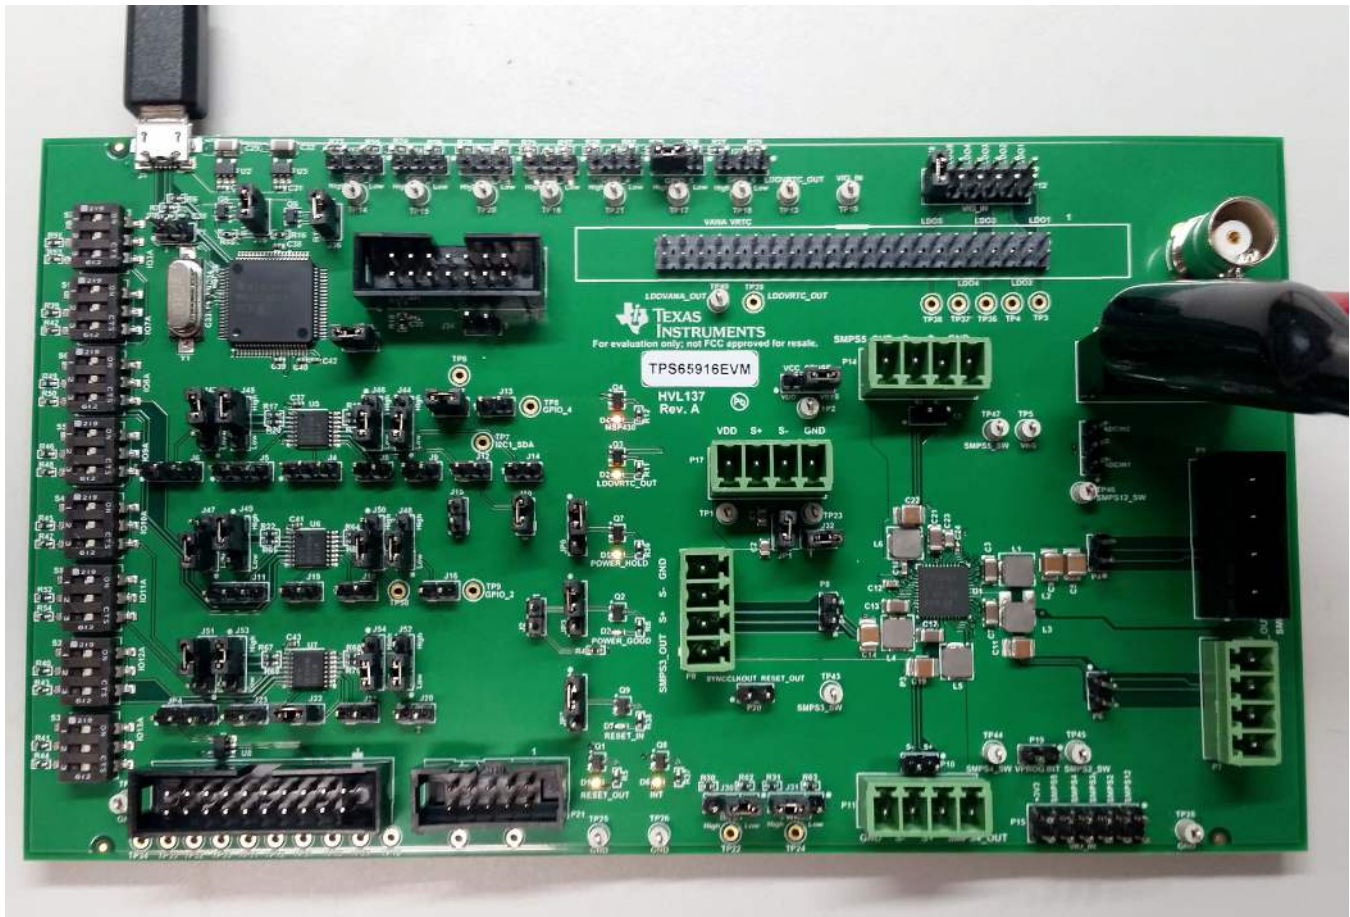


Figure 2. Powered EVM

2 Schematics, Bill of Materials, and Layout

This section contains the schematics, bill of materials (BOM) and layout for the EVM.

2.1 EVM Schematics


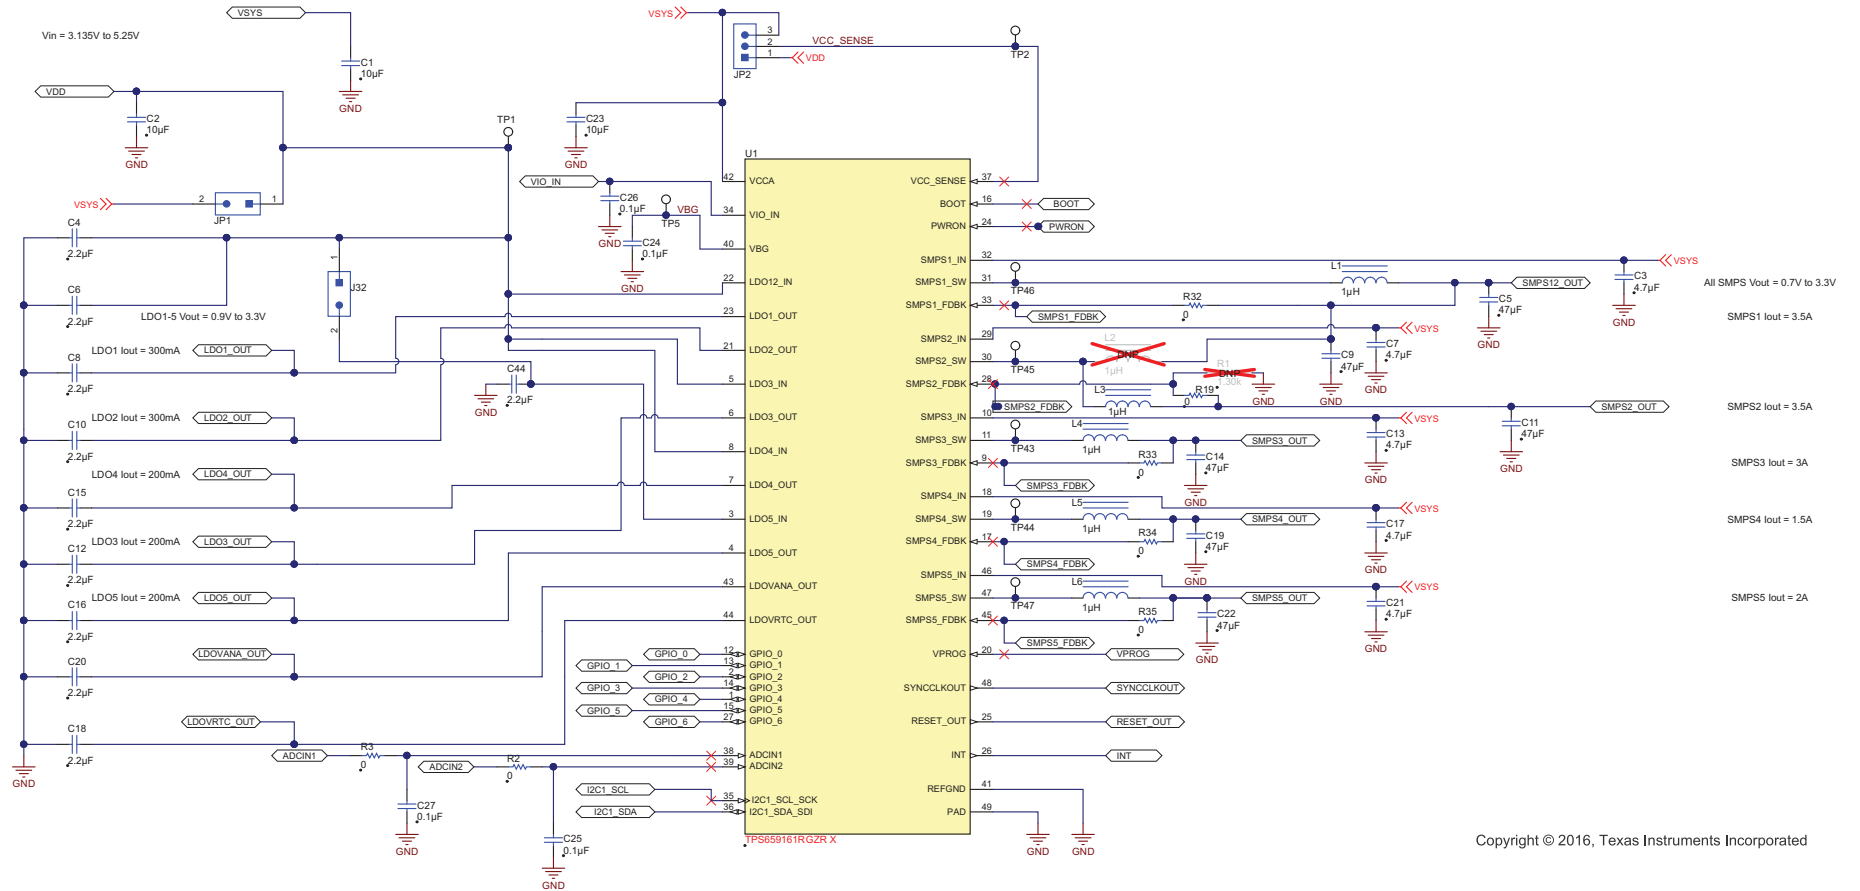


Figure 3. TPS65916 EVM Schematic (Page 1)

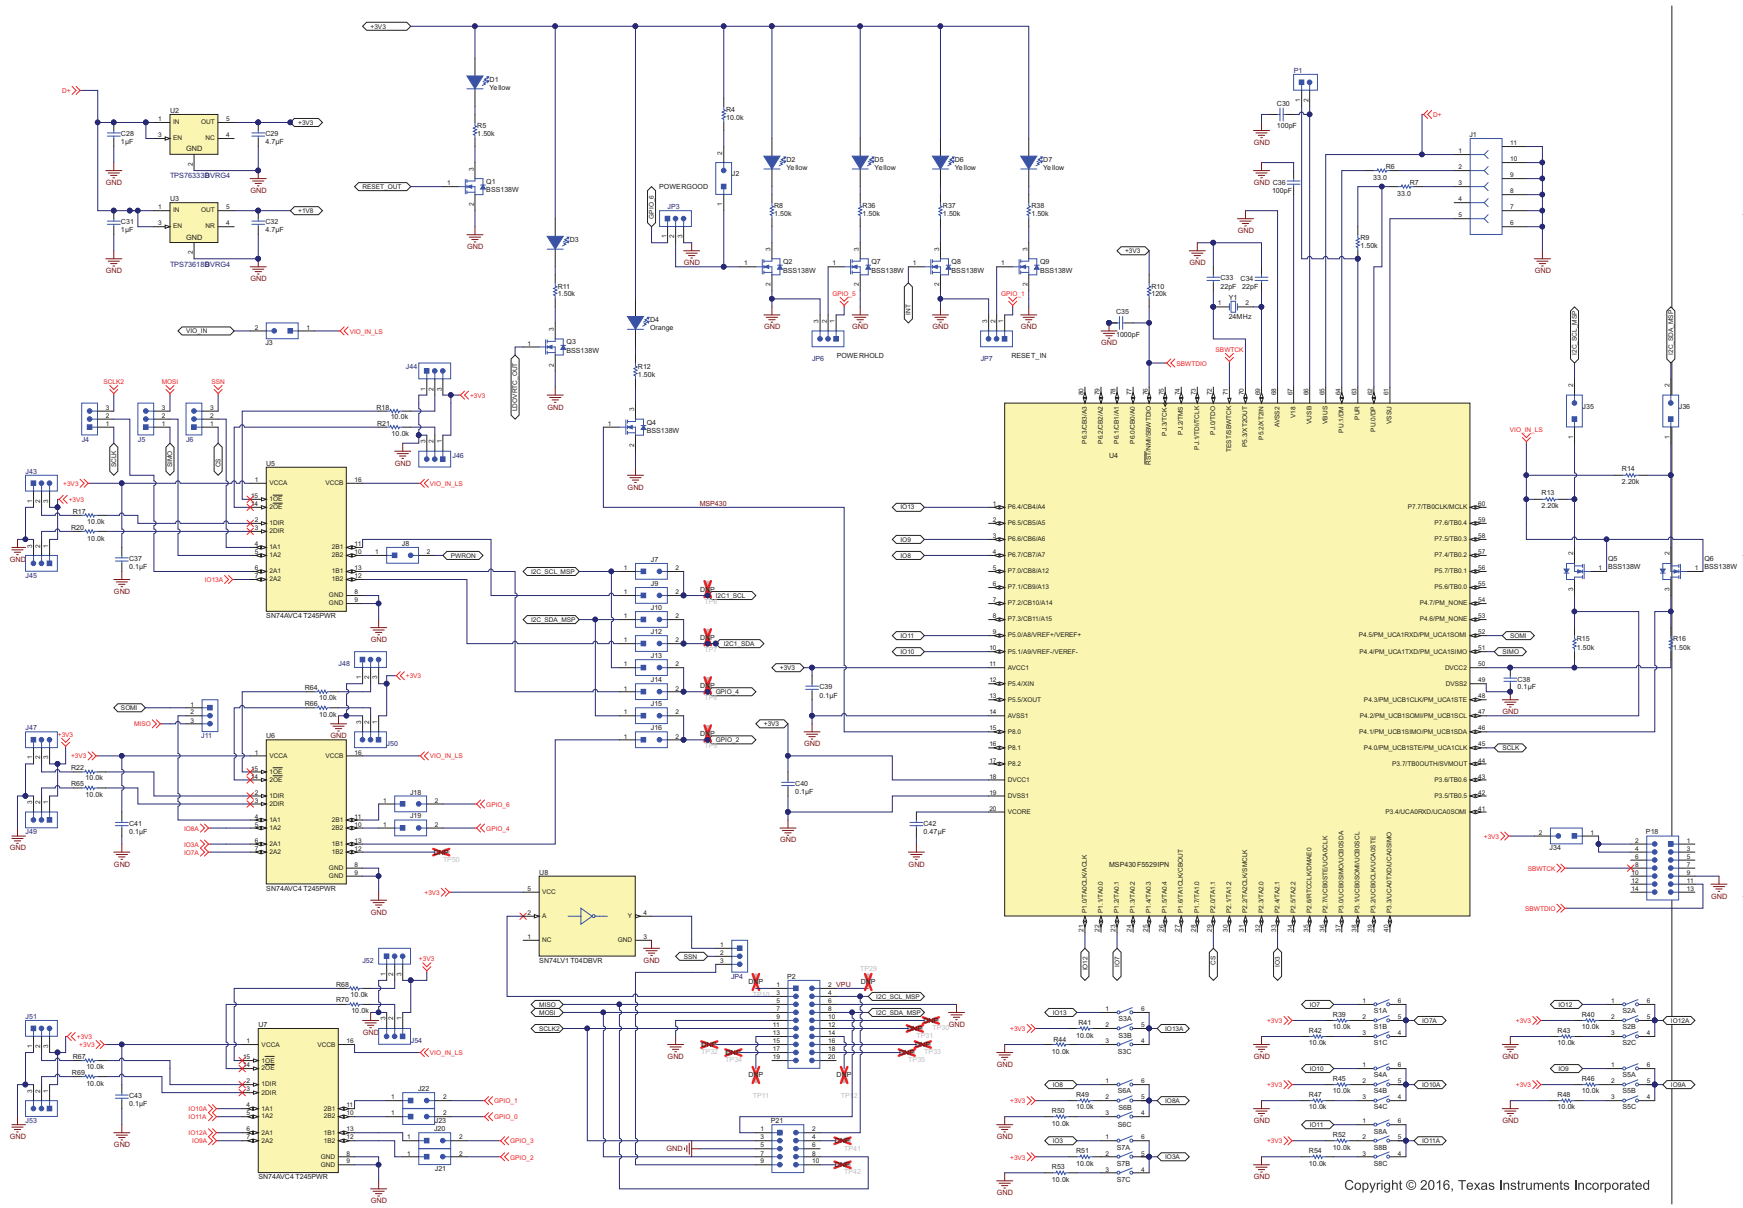

Copyright © 2016, Texas Instruments Incorporated

Figure 4. TPS65916 EVM Schematic (Page 2)

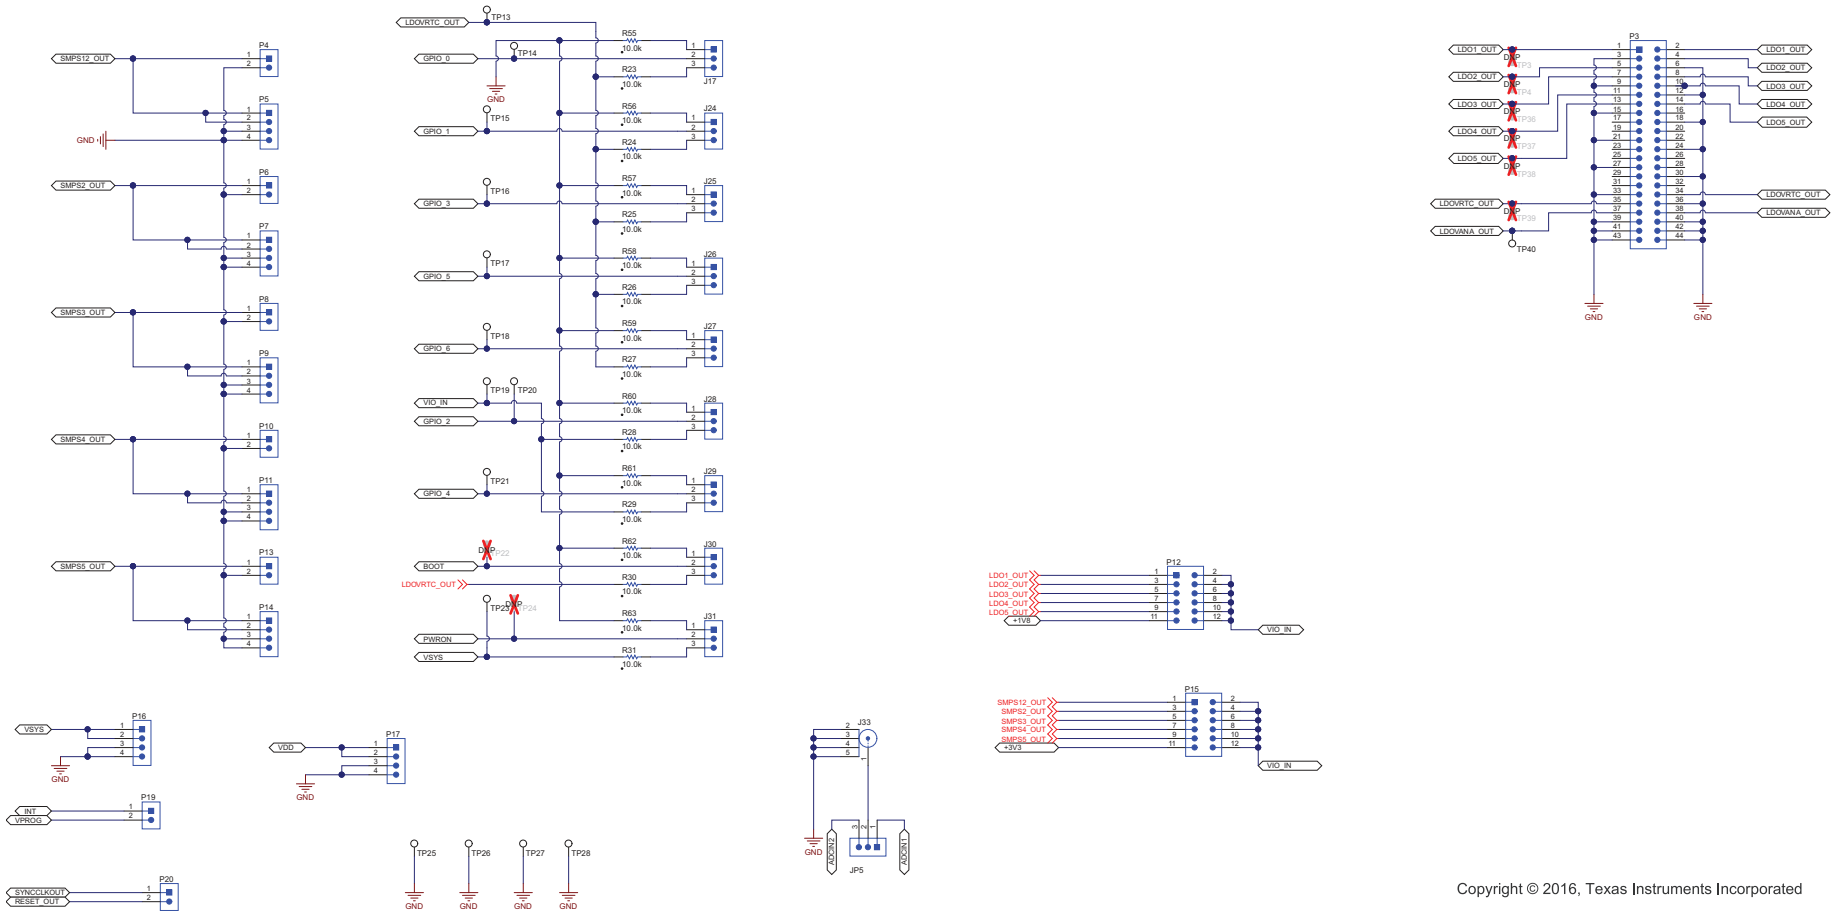


Figure 5. TPS65916 EVM Schematic (Page 3)

Copyright © 2016, Texas Instruments Incorporated

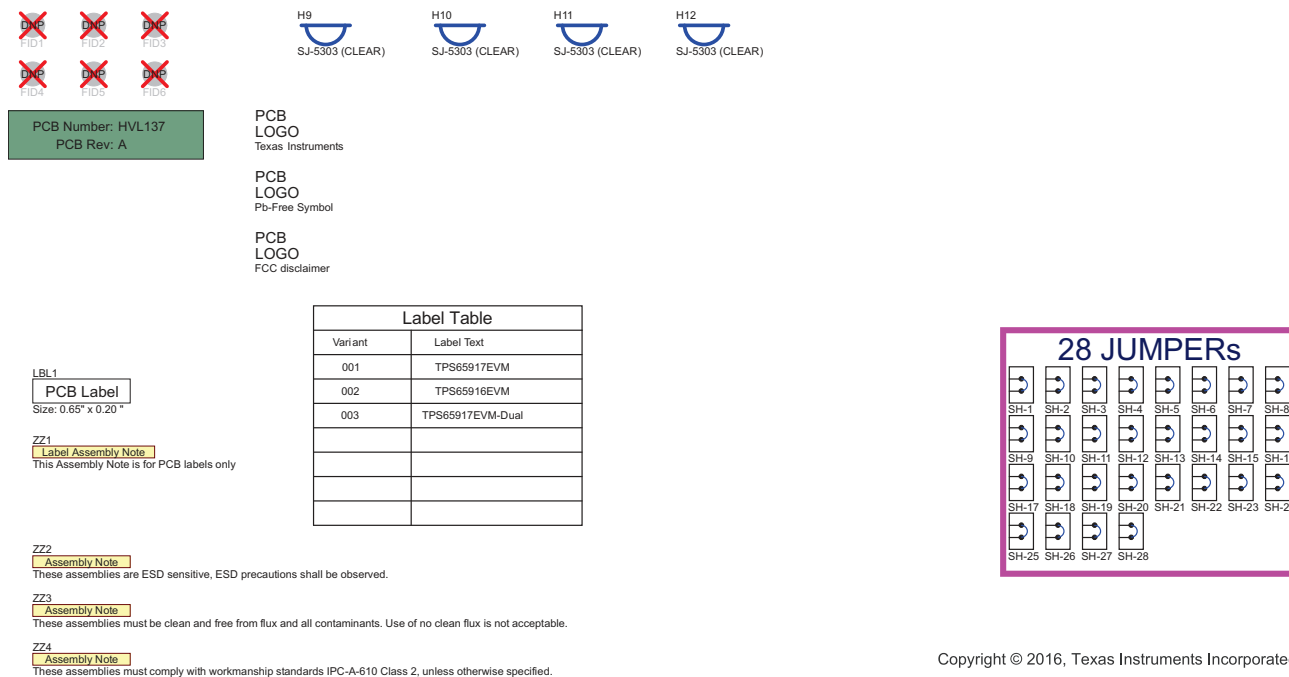


Figure 6. TPS65916 EVM Schematic (Page 4)

2.2 EVM Bill of Materials

Table 2 lists the bill of materials (BOM) for the TPS65916EVM.

Table 2. TPS65916EVM BOM

Designator	Quantity	Value	Description	Package Reference	Part Number	Manufacturer
!PCB	1		Printed Circuit Board		HVL137	Any
C1, C2, C23	3	10uF	CAP, CERM, 10 µF, 6.3 V, +/- 10%, X7R, 0805	0805	GCM21BR70J106KE22L	MuRata
C3, C7, C13, C17, C21, C29, C32	7	4.7uF	CAP, CERM, 4.7 µF, 16 V, +/- 10%, X7R, AEC-Q200 Grade 1, 1206	1206	GCM31CR71C475KA37L	MuRata
C4, C6, C8, C10, C12, C15, C16, C18, C20, C44	10	2.2uF	CAP, CERM, 2.2 µF, 6.3 V, +/- 10%, X7R, AEC-Q200 Grade 1, 0603	0603	GCM188R70J225KE22D	MuRata
C5, C9, C11, C14, C19, C22	6	47uF	CAP, CERM, 47 µF, 6.3 V, +/- 20%, X7R, 1210	1210	GCM32ER70J476ME19L	MuRata
C24, C25, C26, C27	4	0.1uF	CAP, CERM, 0.1 µF, 16 V, +/- 10%, X7R, 0402	0402	GCM155R71C104KA55D	MuRata
C28, C31	2	1uF	CAP, CERM, 1 µF, 6.3 V, +/- 10%, X5R, 0402	0402	GRM155R60J105KE19D	MuRata

Copyright © 2016, Texas Instruments Incorporated

Table 2. TPS65916EVM BOM (continued)

Designator	Quantity	Value	Description	Package Reference	Part Number	Manufacturer
C30, C36	2	100pF	CAP, CERM, 100 pF, 50 V, +/- 5%, C0G/NP0, 0402	0402	GRM1555C1H101JA01D	MuRata
C33, C34	2	22pF	CAP, CERM, 22 pF, 50 V, +/- 5%, C0G/NP0, 0402	0402	C1005C0G1H220J050BA	TDK
C35	1	1000pF	CAP, CERM, 1000 pF, 50 V, +/- 10%, X7R, 0402	0402	GRM155R71H102KA01D	MuRata
C37, C38, C39, C40, C41, C43	6	0.1uF	CAP, CERM, 0.1 µF, 6.3 V, +/- 10%, X5R, 0402	0402	GRM155R60J104KA01D	MuRata
C42	1	0.47uF	CAP, CERM, 0.47 µF, 6.3 V, +/- 10%, X5R, 0402	0402	04026D474KAT2A	AVX
D1, D2, D3, D5, D6, D7	6	Yellow	LED, Yellow, SMD	Yellow LED	SML-P12YTT86	Rohm
D4	1	Orange	LED, Orange, SMD	Orange LED	SML-P12DTT86	Rohm
H9, H10, H11, H12	4		Bumpon, Hemisphere, 0.44 X 0.20, Clear	Transparent Bumpon	SJ-5303 (CLEAR)	3M
J1	1		Connector, Receptacle, Micro-USB Type B, R/A, Bottom Mount SMT	Micro USB-B receptacle	ZX62-B-5PA(11)	Hirose Electric Co. Ltd.
J2, J3, J7, J8, J9, J10, J12, J13, J14, J15, J16, J18, J19, J20, J21, J22, J23, J32, J34, J35, J36, JP1	22		Header, 100mil, 2x1, Tin, TH	Header, 2 PIN, 100mil, Tin	PEC02SAAN	Sullins Connector Solutions
J4, J5, J6, J11, J17, J24, J25, J26, J27, J28, J29, J30, J31, J43, J44, J45, J46, J47, J48, J49, J50, J51, J52, J53, J54, JP2, JP3, JP4, JP5, JP6, JP7	31		Header, 100mil, 3x1, Tin, TH	Header, 3 PIN, 100mil, Tin	PEC03SAAN	Sullins Connector Solutions
J33	1		Connector, TH, BNC	Amphenol_112404	112404	Amphenol Connex
L1, L3, L4, L5, L6	5	1uH	Inductor, Shielded Drum Core, Powdered Iron, 1 µH, 4.2 A, 0.043 ohm, SMD	4.7x1.2x4.3mm	IHLP1616ABER1R0M11	Vishay-Dale
LBL1	1		Thermal Transfer Printable Labels, 0.650" W x 0.200" H - 10,000 per roll	PCB Label 0.650"H x 0.200"W	THT-14-423-10	Brady
P1, P4, P6, P8, P10, P13, P19, P20	8		Header, 100mil, 2x1, Tin plated, TH	Header, 2 PIN, 100mil, Tin	PEC02SAAN	Sullins Connector Solutions
P2	1		Header (Shrouded), 2.54mm, 10x2, Gold, Black, TH	Header (Shrouded), 2.54mm, 10x2, TH	SBH11-PBPC-D10-ST-BK	Sullins Connector Solutions
P3	1		Header, 2.54 mm, 22x2, Tin, TH	Header, 2.54 mm, 22x2, TH	MTLW-122-05-T-D-170	Samtec
P5, P16	2		Header(shrouded), 5.08mm, 4x1, Tin, TH	Header(shrouded), 5.08mm, 4x1, TH	1740288	Phoenix Contact
P7, P9, P11, P14, P17	5		Header(shrouded), 3.81mm, 4x1, Tin, TH	Header(shrouded), 3.81mm, 4x1, TH	1803442	Phoenix Contact
P12, P15	2		Header, 100mil, 6x2, Tin, TH	Header, 6x2, 100mil, Tin	PEC06DAAN	Sullins Connector Solutions
P18	1		Header (shrouded), 100 mil, 7x2, Gold plated, TH	7x2 Shrouded Header	SBH11-PBPC-D07-ST-BK	Sullins Connector Solutions
P21	1		Header (shrouded), 100mil, 5x2, High-Temperature, Gold, TH	5x2 Shrouded header	N2510-6002-RB	3M
Q1, Q2, Q3, Q4, Q5, Q6, Q7, Q8, Q9	9	50V	MOSFET, N-CH, 50 V, 0.21 A, SOT-323	SOT-323	BSS138W	Fairchild Semiconductor

Table 2. TPS65916EVM BOM (continued)

Designator	Quantity	Value	Description	Package Reference	Part Number	Manufacturer
R2, R3, R19, R32, R33, R34, R35	7	0	RES, 0, 5%, 0.063 W, 0402	0402	ERJ-2GE0R00X	Panasonic
R4, R17, R18, R20, R21, R22, R23, R24, R25, R26, R27, R28, R29, R30, R31, R39, R40, R41, R42, R43, R44, R45, R46, R47, R48, R49, R50, R51, R52, R53, R54, R55, R56, R57, R58, R59, R60, R61, R62, R63, R64, R65, R66, R67, R68, R69, R70	47	10.0k	RES, 10.0 k, 1%, 0.1 W, 0402	0402	ERJ-2RKF1002X	Panasonic
R5, R8, R9, R11, R12, R15, R16, R36, R37, R38	10	1.50k	RES, 1.50 k, 0.1%, 0.063 W, AEC-Q200 Grade 0, 0402	0402	ERA-2AEB152X	Panasonic
R6, R7	2	33.0	RES, 33.0, 1%, 0.062 W, 0402	0402	RC0402FR-0733RL	Yageo America
R10	1	120k	RES, 120 k, 1%, 0.1 W, AEC-Q200 Grade 0, 0402	0402	ERJ-2RKF1203X	Panasonic
R13, R14	2	2.20k	RES, 2.20 k, 1%, 0.063 W, 0402	0402	RC0402FR-072K2L	Yageo America
S1, S2, S3, S4, S5, S6, S7, S8	8		Switch, Slide, SPST 3 poles, SMT	3 poles SPST Switch	219-3LPST	CTS Electrocomponents
SH-1, SH-2, SH-3, SH-4, SH-5, SH-6, SH-7, SH-8, SH-9, SH-10, SH-11, SH-12, SH-13, SH-14, SH-15, SH-16, SH-17, SH-18, SH-19, SH-20, SH-21, SH-22, SH-23, SH-24, SH-25, SH-26, SH-27, SH-28	28	1x2	Shunt, 100mil, Gold plated, Black	Shunt	969102-0000-DA	3M
TP1, TP2, TP5, TP13, TP14, TP15, TP16, TP17, TP18, TP19, TP20, TP21, TP23, TP25, TP26, TP27, TP28, TP40, TP43, TP44, TP45, TP46, TP47	23		Test Point, Miniature, White, TH	White Miniature Testpoint	5002	Keystone
U1	1		Power Management Unit (PMU) for Processor, RGZ0048D	RGZ0048D	TPS659161RGZR	Texas Instruments
U2	1		Single Output LDO, 150 mA, Fixed 3.3 V Output, 2.7 to 10 V Input, with Low IQ, 5-pin SOT-23 (DBV), -40 to 125 degC, Green (RoHS & no Sb/Br)	DBV0005A	TPS76333DBVRG4	Texas Instruments
U3	1		Single Output Low Noise LDO, 400 mA, Fixed 1.8 V Output, 1.7 to 5.5 V Input, with Reverse Current Protection, 5-pin SOT-23 (DBV), -40 to 85 degC, Green (RoHS & no Sb/Br)	DBV0005A	TPS73618DBVRG4	Texas Instruments
U4	1		Mixed Signal MicroController, PN0080A	PN0080A	MSP430F5529IPN	Texas Instruments
U5, U6, U7	3		4-Bit Dual-supply Bus Transceiver with Configurable Voltage Translation and 3-State Outputs, PW0016A	PW0016A	SN74AVC4T245PWR	Texas Instruments
U8	1		SN74LV1T04 Single Power Supply Inverter Gate CMOS Logic Level Shifter, DBV0005A	DBV0005A	SN74LV1T04DBVR	Texas Instruments

Table 2. TPS65916EVM BOM (continued)

Designator	Quantity	Value	Description	Package Reference	Part Number	Manufacturer
Y1	1		Crystal, 24MHz, 18pF, SMD	Body12.7x4.7mm	ABLS-24.000MHZ-K4F-T	Abracon Corporation
FID1, FID2, FID3, FID4, FID5, FID6	0		Fiducial mark. There is nothing to buy or mount.	Fiducial	N/A	N/A
L2	0	1uH	Inductor, Shielded Drum Core, Powdered Iron, 1 μ H, 4.2 A, 0.043 ohm, SMD	4.7x1.2x4.3mm	IHLP1616ABER1R0M11	Vishay-Dale
R1	0	1.30k	RES, 1.30 k, 1%, 0.063 W, 0402	0402	CRCW04021K30FKED	Vishay-Dale
TP3, TP4, TP6, TP7, TP8, TP9, TP10, TP11, TP12, TP22, TP24, TP29, TP30, TP31, TP32, TP33, TP34, TP35, TP36, TP37, TP38, TP39, TP41, TP42, TP50	0		Test Point, Miniature, White, TH	White Miniature Testpoint	5002	Keystone

2.3 Layout and Component Placement

Figure 7 through Figure 13 show the overviews and layers of the printed circuit board (PCB) and the component placement of the EVM.

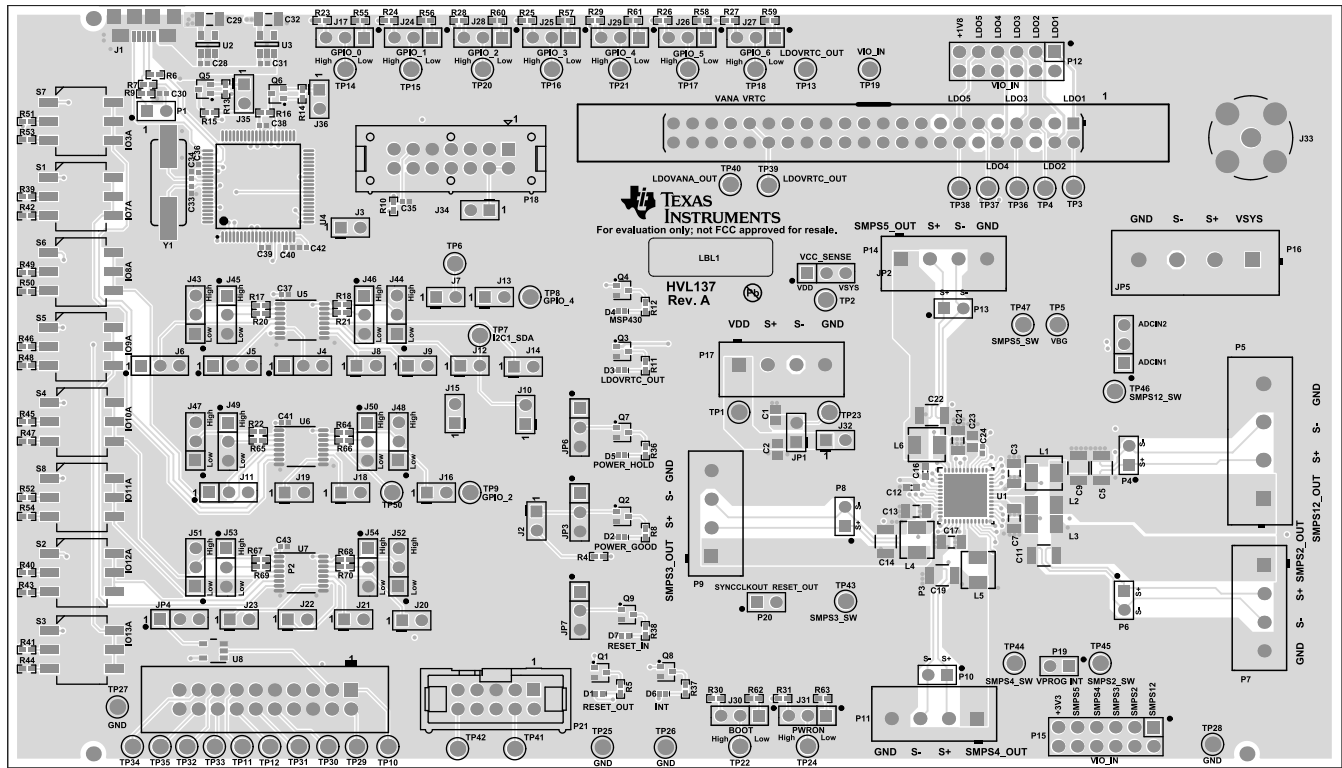


Figure 7. Composite - Top View

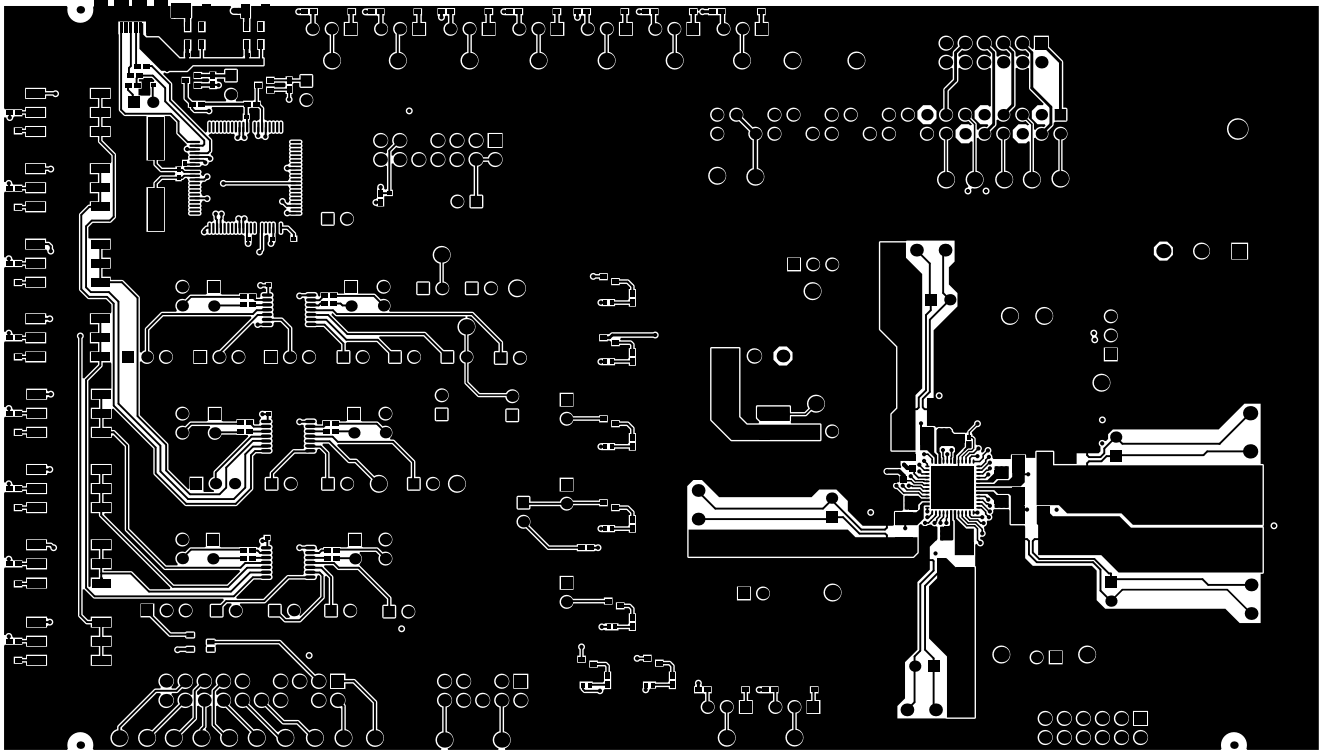


Figure 8. Top Layer

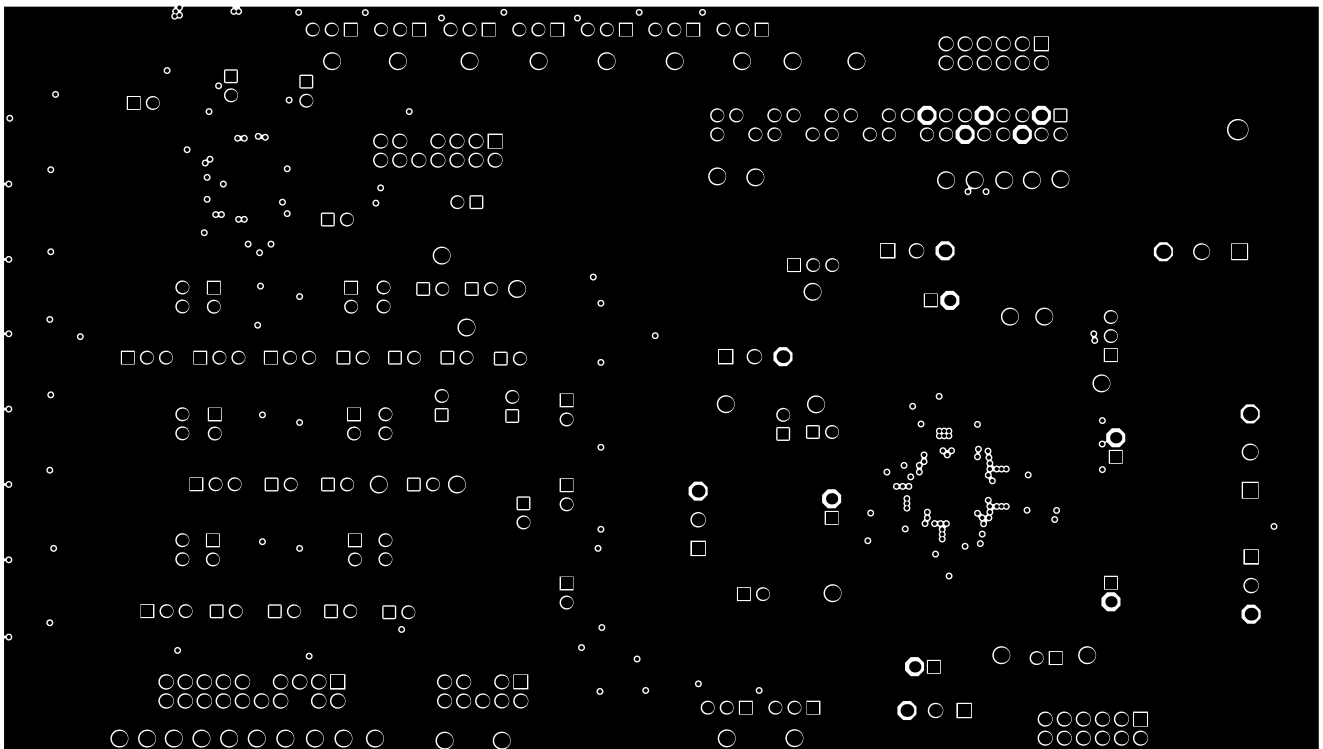


Figure 9. Layer 1 GND

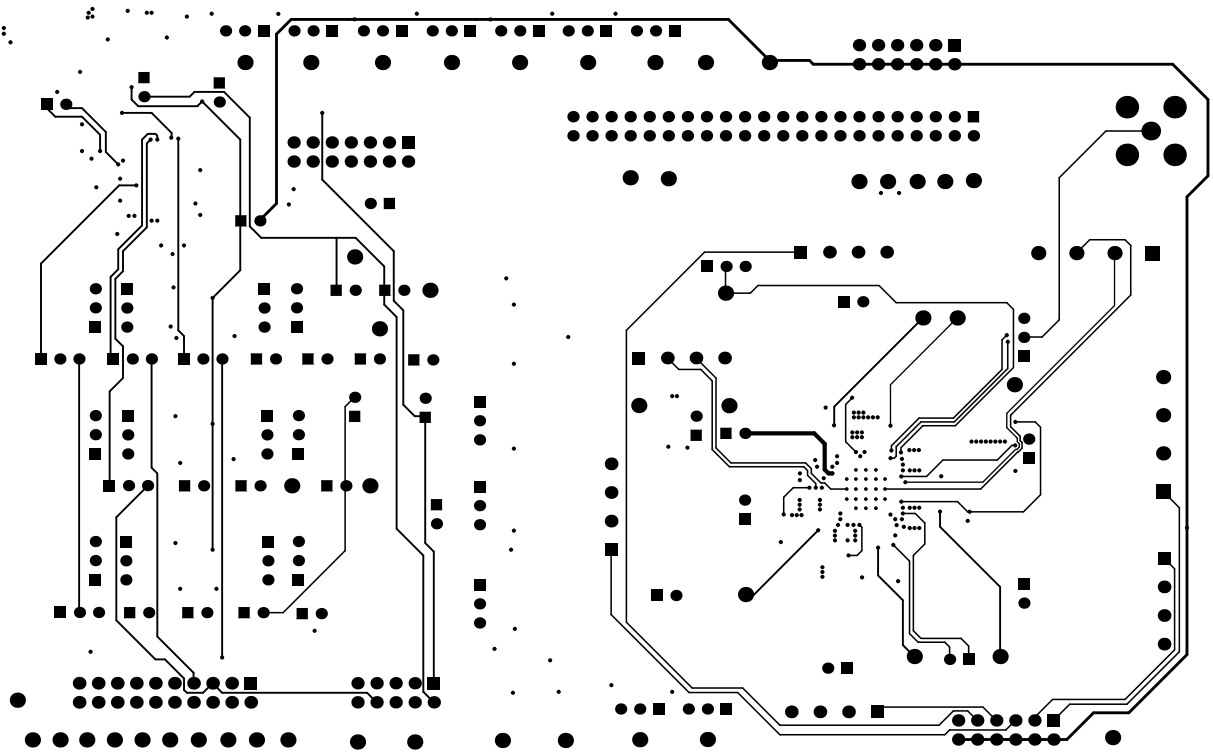


Figure 10. Layer 2 SIGNAL

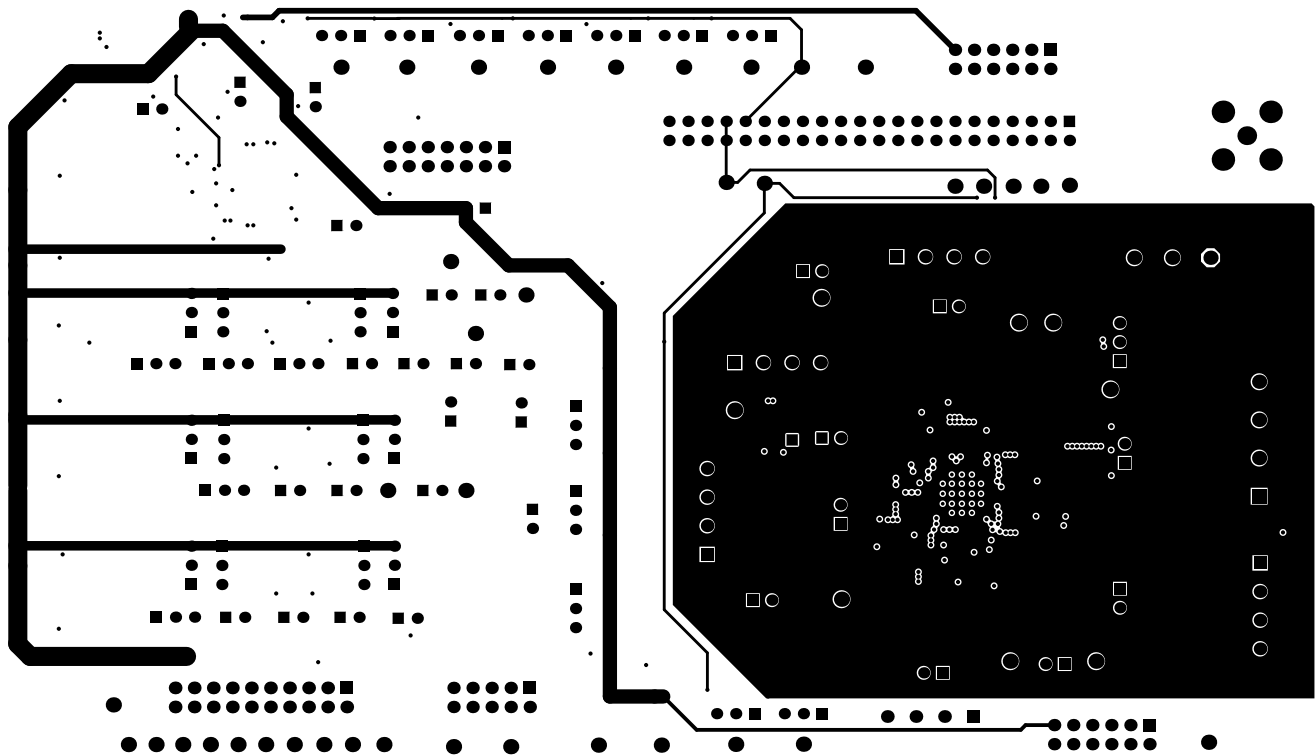


Figure 11. Layer 3 POWER

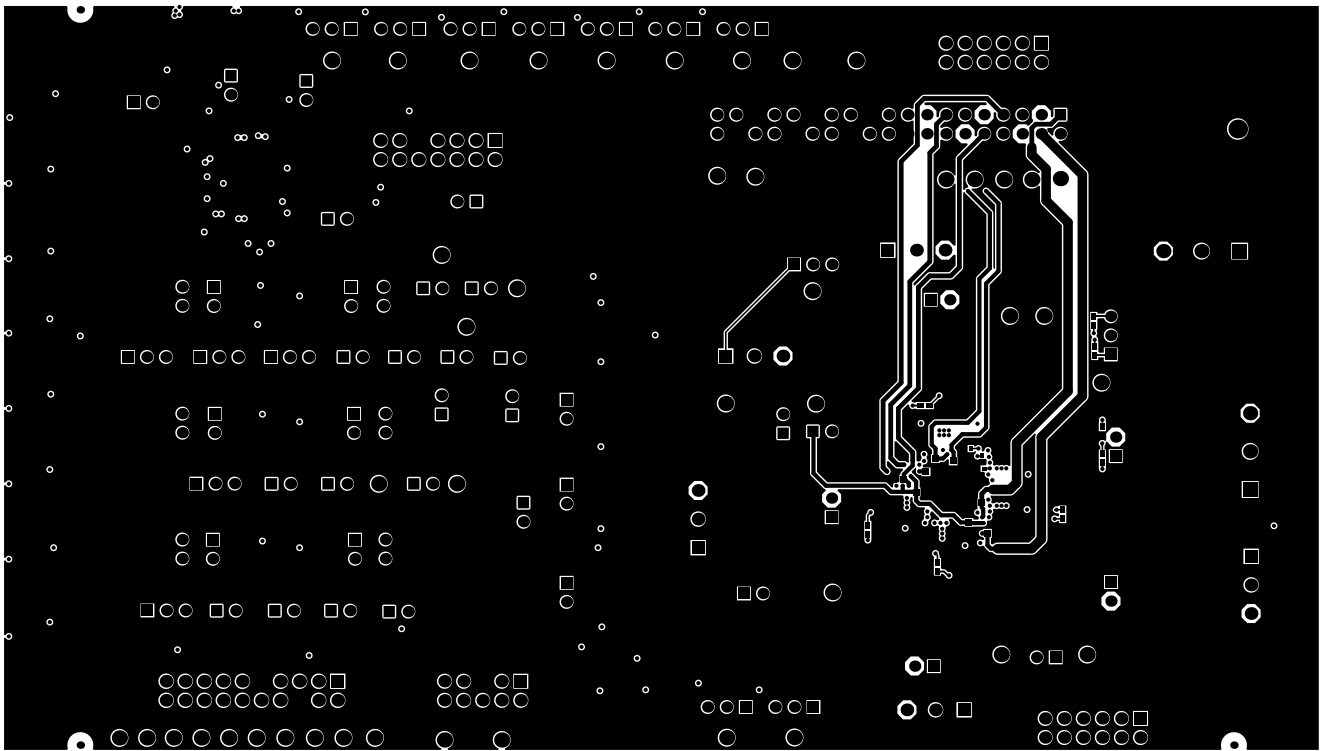


Figure 12. Bottom Layer

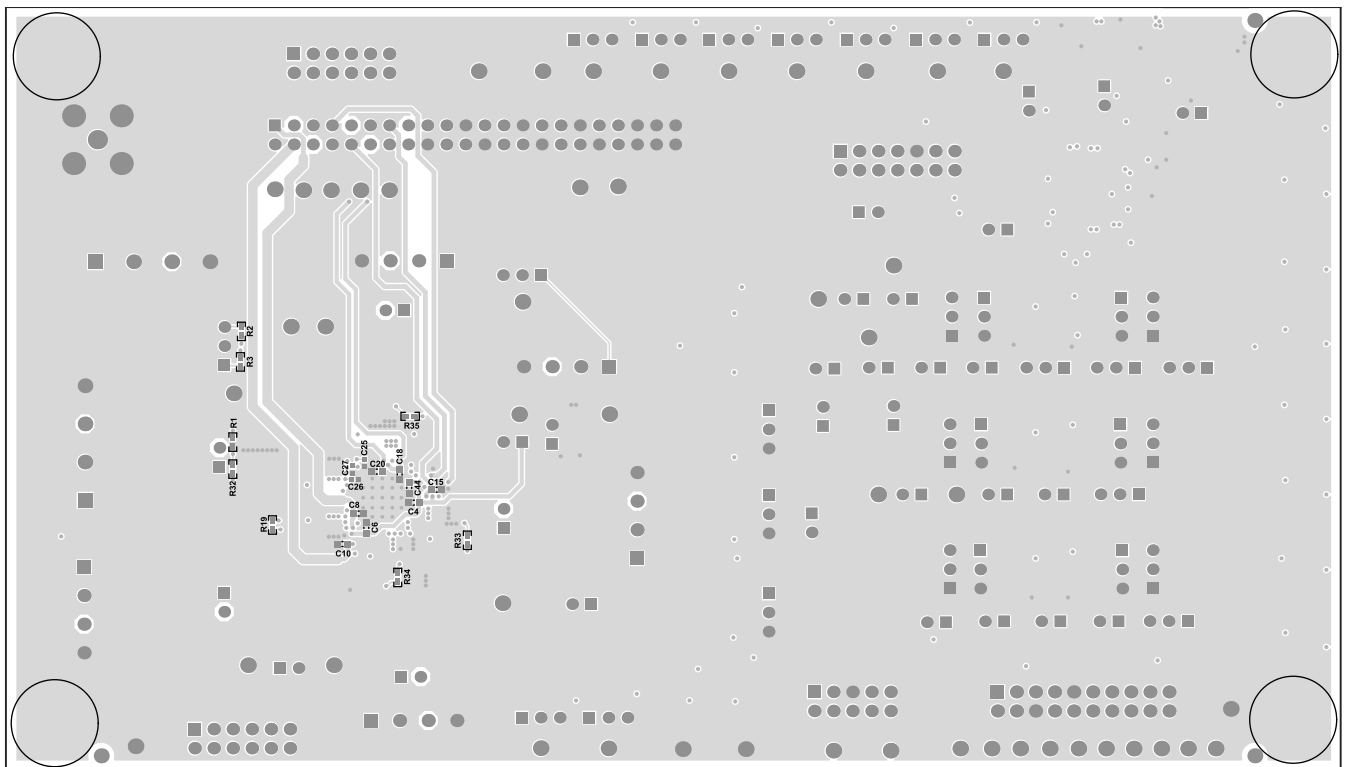


Figure 13. Composite - Bottom View

3 Setup and Operation

3.1 Powering up the Device

To turn on the device, perform the following steps:

1. Make sure supply voltage is off, unplug the USB, and close the GUI.
2. Plug in the USB cable to the EVM through the J1 micro-USB connector.
3. Plug in the other end of the USB cable to the computer USB port.
4. Ensure that VSYS (3.3 V to 5 V) is connected to the pin labeled VSYS of P16 and that GND is connected to the pin labeled GND of P16 (Figure 1).
5. Set supply voltage to between 3.3 V and 5 V with an appropriate current limit. Turn on supply voltage. The RESET_OUT LED (D1), LDOVRTC_OUT LED (D3), POWER_HOLD LED (D5), LDOVRTC_OUT, and POWER_GOOD (D2) should light. See Figure 2.

3.2 TPS65916EVM Graphical User Interface (GUI)

The GUI for TPS65916EVM gives the user the ability to interact with the internal registers of the device while also allowing control of some input pins. The GUI can be downloaded from TI.com.

The TPS65916EVM GUI has three pages. The first page is labeled *DUT Config*, the second page is labeled *Low Level Configuration*, and the third page is labeled *About*.

3.2.1 Communicating with Device – Digital Inputs

The *DUT_Control* page of the GUI controls the digital input signals to the PMIC. The GUI can control 6 signals. Since all of these signals are inputs to the PMIC, they need to be configured as outputs from the perspective of the GUI. To set the desired signal as an input or output, check the box next to the corresponding signal. Checking this box changes the text label to *Output* and configures the signal as an output. Any GPIO configured as output has a second check box labeled *Low* to the right of it. (Figure 14).

	Default Setting on EVM		GPIO State	
	REGEN1	GPIO_0	<input type="checkbox"/> Input	● Read
	NRESWARM	GPIO_1	<input checked="" type="checkbox"/> Output <input type="checkbox"/> Low	● Set
	GPIO_2	GPIO_2	<input type="checkbox"/> Input	● Read
	SYNCD CDC	GPIO_3	<input type="checkbox"/> Input	● Read
	REGEN2	GPIO_4	<input type="checkbox"/> Input	● Read
Note: GPIO_5 is only controlled by J26	POWERHOLD	GPIO_5	<input type="checkbox"/> Input	● Read
	NSLEEP	GPIO_6	<input checked="" type="checkbox"/> Output <input type="checkbox"/> Low	● Set

Figure 14. Default GPIO Configuration

To set the desired signal to a logic low, while the new check box displays *Low*, click the corresponding **Set** button. The corresponding indicator LED should stay off.

To set the desired signal to a logic high, check the *Low* check box and the text changes to display *High*.

Next, click the **Set** button and the corresponding indicator LED should light (Figure 15).









	Default Setting on EVM		GPIO State	
REGEN1	GPIO_0	<input type="checkbox"/> Input		<input type="button" value="Read"/>
NRESWARM	GPIO_1	<input checked="" type="checkbox"/> Output <input checked="" type="checkbox"/> High		<input type="button" value="Set"/>
GPIO_2	GPIO_2	<input type="checkbox"/> Input		<input type="button" value="Read"/>
SYNCD CDC	GPIO_3	<input type="checkbox"/> Input		<input type="button" value="Read"/>
REGEN2	GPIO_4	<input type="checkbox"/> Input		<input type="button" value="Read"/>
Note: GPIO_5 is only controlled by J26	POWERHOLD	GPIO_5		<input type="button" value="Read"/>
	NSLEEP	GPIO_6	<input checked="" type="checkbox"/> Output <input type="checkbox"/> Low	<input type="button" value="Set"/>

Figure 15. GPIO Configuration After GPIO_1 Set to Logic High

3.2.2 Communicating With Device – I²C

The *Low Level Configuration* page (Figure 16) of the GUI is where I²C communication with the device is done. This page has four groups (blocks) of registers. Expand each group by clicking the “+” next to the group, which lists all the registers in that group. Additional columns display when the name of a register is selected (highlighted), including the Address, Default state, R/W status, and bit fields of the register.

- To read data from the register, select the appropriate register and click the *Read Register* icon .
- The register data displays on the right side of the page in the *Bit Fields* columns labeled 7 to 0.
- To write data to the register, click the bits in the *Bit Fields* labeled 7 to 0 for the register to write. The register will be written to immediately. If writes should not be immediate, change the write type using the **Update Mode** pulldown to *Deferred*, change the bits to the desired value, and click the *Write Register* icon .

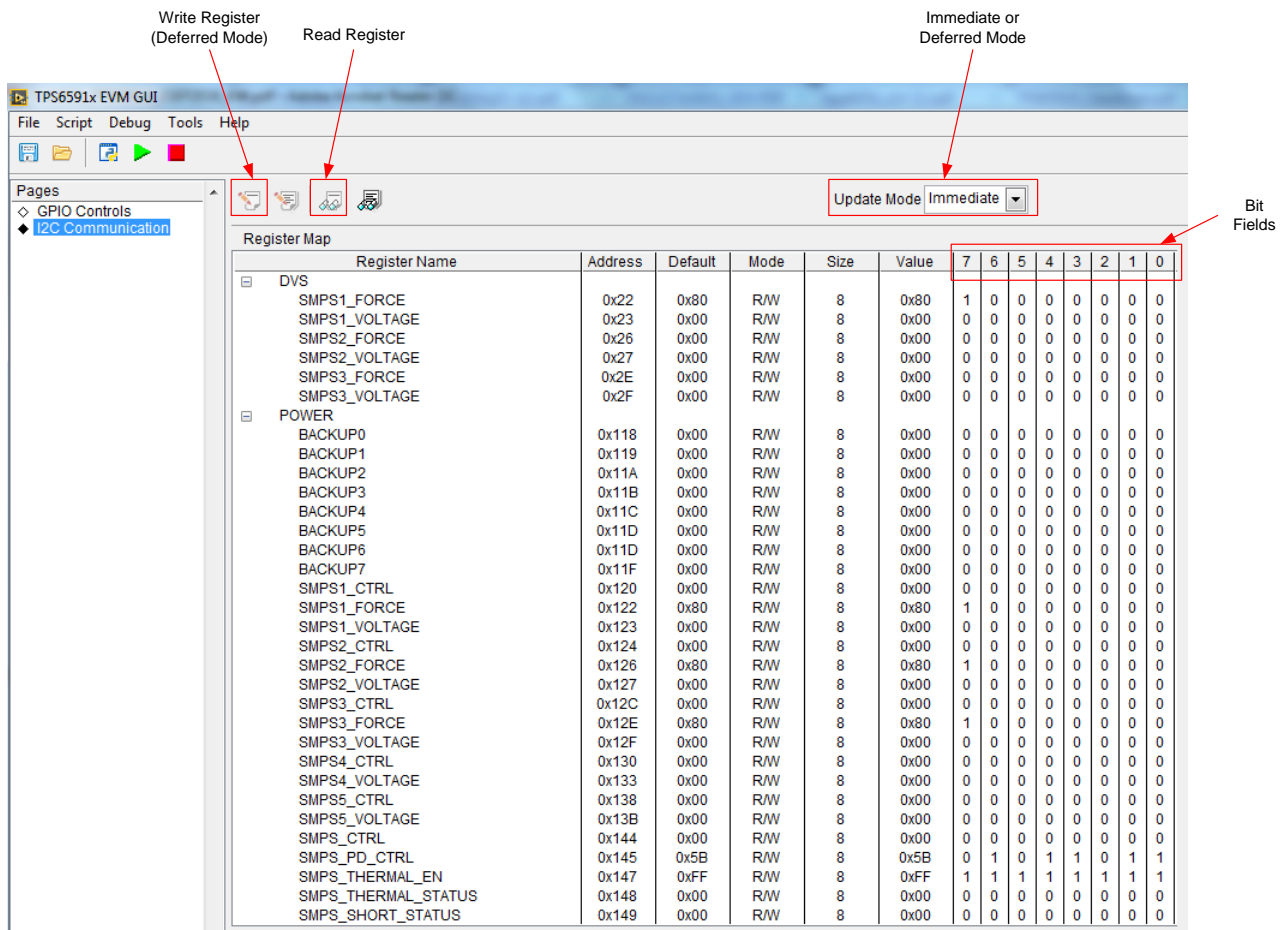


Figure 16. Low Level Configuration Page

3.3 Running a Script with the GUI

Use the script editor to automate a series of register writes, static bit writes, and delays.

- To launch the script window from the main GUI menu, select *Script* → *Launch Window*. The script editor opens a blank window.
- To record a script, from the main GUI menu, select *Script* → *Start Recording* and then run the commands from the main GUI. After each register write or read, the script editor records the command that was run.
- When finished recording, select *Script* → *Stop Recording*.
- To save the script, on the script window menu select *File* → *Save As...* and then choose the destination for the script file.
- To run the script again, press the **F5** key or on the *Script* window menu, select *Run* → *Run Module*.
 - If an attempt is made to run the script before being saved, a prompt displays for the user to save the script.
 - Otherwise, to save the script, select *File* → *Save As...* and then choose the destination for the script file.
- The script in [Figure 17](#) turns on SMPS1 to 1.15 V and then turns on SMPS3 to 1.25 V. These commands can run a power up and power down sequence quickly, eliminating the need to manually turn on all of the rails.

```

File Edit Format Run Options Window Help
GUI_Module=__import__('TPS6591x')

GUI=GUI_Module.Device_GUI("TPS6591x.exe")
GUI.write_register("POWER","SMPS1_VOLTAGE", 0x49)
GUI.write_register("POWER","SMPS1_CTRL", 0x5)
GUI.write_register("POWER","SMPS3_VOLTAGE", 0x51)
GUI.write_register("POWER","SMPS3_CTRL", 0x5)
GUI.__del__()
    
```

Figure 17. Sample Script

Revision History

DATE	REVISION	NOTES
September 2016	*	Initial Release

STANDARD TERMS AND CONDITIONS FOR EVALUATION MODULES

1. *Delivery:* TI delivers TI evaluation boards, kits, or modules, including any accompanying demonstration software, components, or documentation (collectively, an "EVM" or "EVMs") to the User ("User") in accordance with the terms and conditions set forth herein. Acceptance of the EVM is expressly subject to the following terms and conditions.
 - 1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductors products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM ("Software") shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms and conditions that accompany such Software
 - 1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.
2. *Limited Warranty and Related Remedies/Disclaimers:*
 - 2.1 These terms and conditions do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.
 - 2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for any defects that are caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI. Moreover, TI shall not be liable for any defects that result from User's design, specifications or instructions for such EVMs. Testing and other quality control techniques are used to the extent TI deems necessary or as mandated by government requirements. TI does not test all parameters of each EVM.
 - 2.3 If any EVM fails to conform to the warranty set forth above, TI's sole liability shall be at its option to repair or replace such EVM, or credit User's account for such EVM. TI's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by TI and that are determined by TI not to conform to such warranty. If TI elects to repair or replace such EVM, TI shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.
3. *Regulatory Notices:*
 - 3.1 *United States*
 - 3.1.1 *Notice applicable to EVMs not FCC-Approved:*

This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.
 - 3.1.2 *For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:*

CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement for Class A EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3.2 Canada

3.2.1 For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210

Concerning EVMs Including Radio Transmitters:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concernant les EVMs avec appareils radio:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concerning EVMs Including Detachable Antennas:

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

3.3 Japan

3.3.1 *Notice for EVMs delivered in Japan:* Please see http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_01.page 日本国内に輸入される評価用キット、ボードについては、次のところをご覧ください。
http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_01.page

3.3.2 *Notice for Users of EVMs Considered "Radio Frequency Products" in Japan:* EVMs entering Japan may not be certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, not certified to Technical Regulations of Radio Law of Japan, User is required by Radio Law of Japan to follow the instructions below with respect to EVMs:

1. Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above, User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】 開発キットの中には技術基準適合証明を受けていないものがあります。技術適合証明を受けていないもののご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。日本テキサス・インスツルメンツ株式会社
東京都新宿区西新宿 6 丁目 2 4 番 1 号
西新宿三井ビル

3.3.3 *Notice for EVMs for Power Line Communication:* Please see http://www.tij.co.jp/llds/ti_ja/general/eStore/notice_02.page
電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。http://www.tij.co.jp/llds/ti_ja/general/eStore/notice_02.page

4 *EVM Use Restrictions and Warnings:*

4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.

4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.

4.3 *Safety-Related Warnings and Restrictions:*

4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.

4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.

4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.

5. *Accuracy of Information:* To the extent TI provides information on the availability and function of EVMs, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.

6. *Disclaimers:*
- 6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY WRITTEN DESIGN MATERIALS PROVIDED WITH THE EVM (AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.
- 6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS AND CONDITIONS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT MADE, CONCEIVED OR ACQUIRED PRIOR TO OR AFTER DELIVERY OF THE EVM.
7. *USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS.* USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS AND CONDITIONS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.
8. *Limitations on Damages and Liability:*
- 8.1 *General Limitations.* IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS AND CONDITIONS OR THE USE OF THE EVMS PROVIDED HEREUNDER, REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TI MORE THAN ONE YEAR AFTER THE RELATED CAUSE OF ACTION HAS OCCURRED.
- 8.2 *Specific Limitations.* IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY WARRANTY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS AND CONDITIONS, OR ANY USE OF ANY TI EVM PROVIDED HEREUNDER, EXCEED THE TOTAL AMOUNT PAID TO TI FOR THE PARTICULAR UNITS SOLD UNDER THESE TERMS AND CONDITIONS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM AGAINST THE PARTICULAR UNITS SOLD TO USER UNDER THESE TERMS AND CONDITIONS SHALL NOT ENLARGE OR EXTEND THIS LIMIT.
9. *Return Policy.* Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.
10. *Governing Law:* These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2015, Texas Instruments Incorporated

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have **not** been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products

Audio	www.ti.com/audio
Amplifiers	amplifier.ti.com
Data Converters	dataconverter.ti.com
DLP® Products	www.dlp.com
DSP	dsp.ti.com
Clocks and Timers	www.ti.com/clocks
Interface	interface.ti.com
Logic	logic.ti.com
Power Mgmt	power.ti.com
Microcontrollers	microcontroller.ti.com
RFID	www.ti-rfid.com
OMAP Applications Processors	www.ti.com/omap
Wireless Connectivity	www.ti.com/wirelessconnectivity

Applications

Automotive and Transportation	www.ti.com/automotive
Communications and Telecom	www.ti.com/communications
Computers and Peripherals	www.ti.com/computers
Consumer Electronics	www.ti.com/consumer-apps
Energy and Lighting	www.ti.com/energy
Industrial	www.ti.com/industrial
Medical	www.ti.com/medical
Security	www.ti.com/security
Space, Avionics and Defense	www.ti.com/space-avionics-defense
Video and Imaging	www.ti.com/video

TI E2E Community

e2e.ti.com