
AVR32934: EVK1104AU Getting Started Guide

Features

- Powering up the board
- Preparing the board for audio playback
- Playing music

1 Introduction

The EVK1104AU is a reference design and development system for the AT32UC3A3256AU, a 32-bit Atmel® AVR® audio microcontroller from Atmel Corporation.

From a hardware point of view, the EVK1104AU is identical to the EVK1104, so you can refer to the EVK1104 for more information (schematics, BOM, etc.). The only difference is that the main microcontroller is an AT32UC3A3256AU instead of an AT32UC3A3256.

The AT32UC3A3256AU is an audio microcontroller that authorizes execution of Atmel licensed Audio firmware IPs such as commercial MP3, AAC, WMA audio decoders.

The kit is equipped with a rich set of memories and peripherals that make the EVK1104AU a perfect audio platform. This guide shows the user how to get quickly started with this kit.

Figure 1-1 EVK1104AU board



32-bit Atmel Microcontrollers

EVK1104AU Getting Started Guide

Rev. 32182A-AVR-11/11





2 Powering up the board


The EVK1104AU board can be powered from 3 different sources, external power supply, "USB VCP" and "USB USER" connector. If two power sources are applied at the same time the following priorities are used to select the current valid power source:

1. External power supply (header J2)
2. USB VCP
3. USB USER

That means that if an external power supply is connected to the board, it has the highest priority and will therefore serve as current power supply. Other power supplies that are connected to the board at the same time will be ignored.

On the PCB revision 1, the external power supply must be 5.5V. In order to be able to supply external USB devices that are connected to the board the minimal power supply specification should be 5.5V, 1A. This ensures that the board will work properly if a USB device is connected that needs the maximum allowed 500mA as specified in the USB specification. It is not possible to draw that amount of current from the host through a normal USB cable but there are cables available that can be connected to two hosts (such a cable is not a kit content).

When playing music from a mass-storage device, it is enough to power the board from the USB VCP connector. Use the "Mini-B plug to std-A plug 1.5m USB2.0" cable that is included in the kit and connect it between the host and the board USB VCP connector.

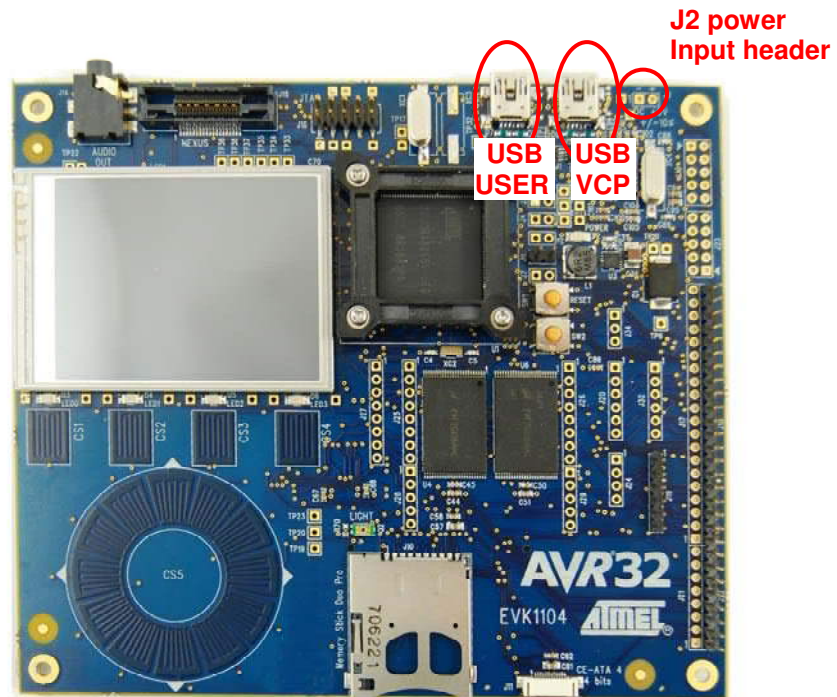Figure 2-1 Possible power input interfaces on the EVK1104AU

More information about the different power inputs is available in the hardware user's guide.

When the board is powered the green LED, marked with "PWR", will light up and the default board firmware will start to run.

3 Preparing the board for audio playback


In order to play some music a USB mass-storage device must be connected to the "USB USER" connector by using the "Mini-A plug to std-A receptacle" adaptor cable. The adaptor cable is a kit content.

The default audio output should be configured to use the on board codec and thus the jumpers on J6 should be set as indicated in the figure if not already set up like this.


4 Browsing the disk and playing music

After a mass-storage device has been connected to the USB-USER port the player enters the disk browsing view. To control the application the touch sensors can be used that are marked in the Figure 4-1.

Figure 4-1 Touch sensors for controlling the audio application

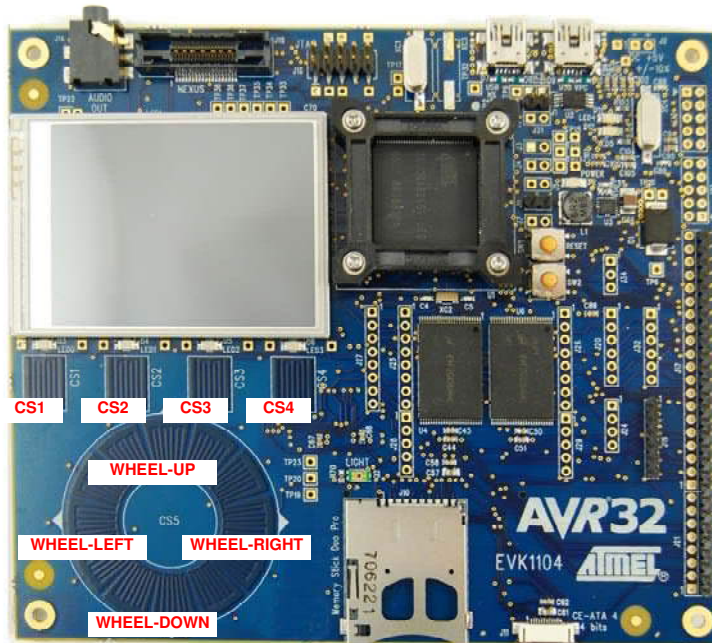

4.1 Disk browsing view

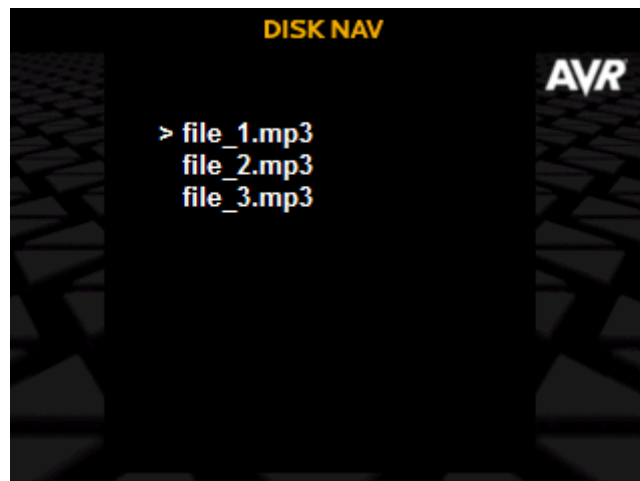


In this view it is possible to browse the storage media but only MP3 files and directories will be shown. Use the touch sensors to browse the storage media for the music file or playlist you want to play.

- WHEEL-UP: Browse the file list up.
- WHEEL-DOWN: Browse the file list down
- WHEEL-LEFT: Enter the parent directory. If the user is in the root directory of the current selected storage media a touch of this button will result in a menu which lets the user select a storage media.
- WHEEL-RIGHT: Enter a subdirectory or play the currently selected file or playlist.
- CS3: Play the currently selected file or playlist.

By playing a file or a playlist the audio player will change its view from the disk view to the play view.

4.2 Play view

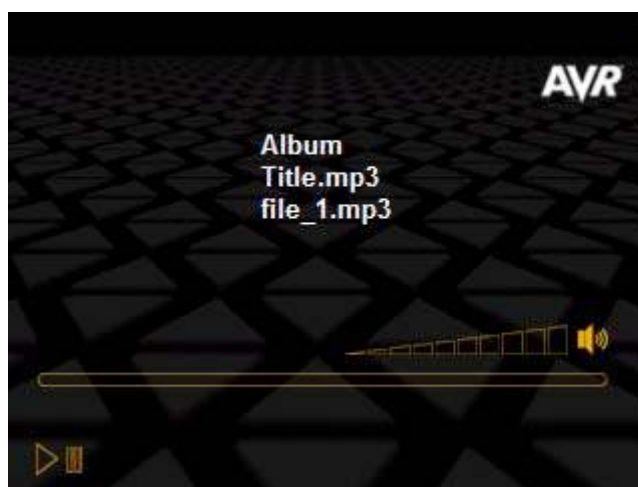

Following functionality have the touch sensors in the play view.

- WHEEL-UP: Increase the volume.
- WHEEL-DOWN: Decrease the volume.
- WHEEL-LEFT: Play previous song in playlist or on disk.
- WHEEL-RIGHT: Play the next song in playlist or on disk.
- CS3: Play/Pause.
- CS1: go back to the navigation window. In this mode, the current file is still playing, and the user can browse the disk and select a new audio file with CS3 or WHEEL-RIGHT. User can also switch back to the play view with CS4: it will display the current playing file.
- CS4: repeat/shuffle modes. While in the play mode, this key gives access to the repeat/shuffle modes. Slide from WHEEL-UP to WHEEL-RIGHT to select Repeat or Shuffle. Press CS2 to change mode. Go back to the Play view with CS1.



5 References and further information

EVK1104 hardware reference: This is included in the AVR Studio[®] 5 and on the avrfreaks wiki page (<http://www.avrfreaks.net>).

Support : audio@atmel.com

**Atmel Corporation**

2325 Orchard Parkway
San Jose, CA 95131
USA

Tel: (+1)(408) 441-0311

Fax: (+1)(408) 487-2600

www.atmel.com

Atmel Asia Limited

Unit 01-5 & 16, 19F
BEA Tower, Millennium City 5
418 Kwun Tong Road
Kwun Tong, Kowloon
HONG KONG

Tel: (+852) 2245-6100

Fax: (+852) 2722-1369

Atmel Munich GmbH

Business Campus
Parking 4
D-85748 Garching b. Munich
GERMANY

Tel: (+49) 89-31970-0

Fax: (+49) 89-3194621

Atmel Japan

9F, Tonetsu Shinkawa Bldg.
1-24-8 Shinkawa
Chou-ku, Tokyo 104-0033
JAPAN

Tel: (+81) 3523-3551

Fax: (+81) 3523-7581

© 2011 Atmel Corporation. All rights reserved.

Atmel®, Atmel logo and combinations thereof, AVR®, AVR® logo, AVR Studio®, and others are registered trademarks or trademarks of Atmel Corporation or its subsidiaries. Other terms and product names may be trademarks of others.

Disclaimer: The information in this document is provided in connection with Atmel products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Atmel products. **EXCEPT AS SET FORTH IN THE ATMEL TERMS AND CONDITIONS OF SALES LOCATED ON THE ATMEL WEBSITE, ATMEL ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL ATMEL BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS AND PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF ATMEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.** Atmel makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and product descriptions at any time without notice. Atmel does not make any commitment to update the information contained herein. Unless specifically provided otherwise, Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel products are not intended, authorized, or warranted for use as components in applications intended to support or sustain life.