




T2 Terminator Tooling Application Tooling Specification Sheet Order No. 63858-7000

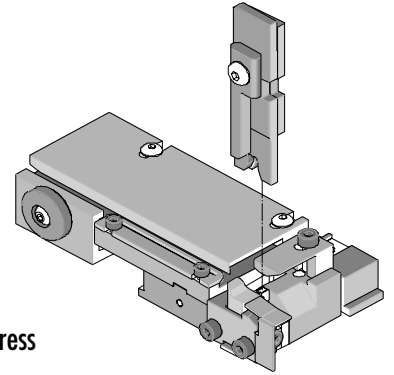

FEATURES

- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- It is ideally suited for mid-volume bench operations
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tab length
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements


SCOPE

Products: 2.00mm (.079") Wire to Board Dual Grid Connector Receptacle Terminal

| Terminal Series No. | Terminal Order No. | Wire Size | | Insulation Diameter | | Strip Length | |
|---------------------|--------------------|-----------|-----------------|---------------------|-----------|--------------|-----------|
| | | AWG | mm ² | mm | In. | mm | In. |
| 501647 | 501647-1000 | 22-26 | 0.13-0.32 | 0.95-1.50 | .037-.059 | 2.10-2.50 | .083-.098 |

Note: Terminal will accommodate the UL1007 Wires

DEFINITION OF TERMS

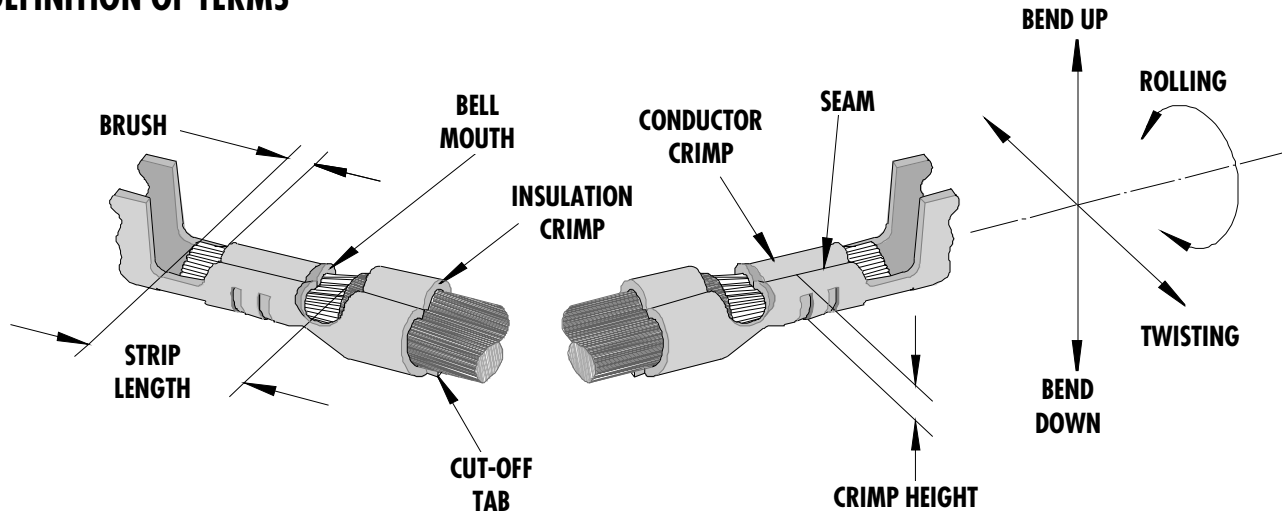

The above terminal drawing is a generic terminal representation. It is not an image of any terminal listed in the scope.

CRIMP SPECIFICATION

| Terminal Order No. | Bell mouth | | Cut-off Tab Max. | | Conductor Brush | |
|--------------------|------------|-----------|------------------|------|-----------------|-----------|
| | mm | In. | mm | In. | mm | In. |
| 501647-1000 | 0.10-0.45 | .004-.018 | 0.25 | .010 | 0.10-0.90 | .004-.035 |

| Terminal Order No. | Bend up | Bend down | Twist | Roll | Punch Width (Ref) | | | | Seam Seam shall not be open and no wire allowed out of the crimping area |
|--------------------|---------|-----------|--------|------|-------------------|------|------------|------|-----------------------------------------------------------------------------------|
| | Degree | | Degree | | Conductor | | Insulation | | |
| | mm | In | mm | In | mm | In | mm | In | |
| 501647-1000 | 3 | 3 | 3 | 8 | 1.20 | .047 | 1.50 | .059 | |

After crimping, the crimp profiles should measure the following:

| Terminal Order No. | Wire Size | | Conductor | | | |
|--------------------|-----------|-----------------|--------------|-----------|-------------------|------|
| | | | Crimp Height | | Crimp Width (Ref) | |
| | AWG | mm ² | mm | In. | mm | In. |
| 501647-1000 | 22 | 0.32 | 0.83-0.88 | .033-.035 | 1.25 | .049 |
| 501647-1000 | 24 | 0.20 | 0.75-0.80 | .029-.031 | 1.25 | .049 |
| 501647-1000 | 26 | 0.13 | 0.70-0.75 | .027-.029 | 1.25 | .049 |

| Terminal Order No. | Wire Size | | Insulation | | | | Pull Force Min. | |
|--------------------|-----------|-----------------|--------------------|------|-------------------|------|-----------------|-----|
| | | | Crimp Height (Ref) | | Crimp Width (Ref) | | | |
| | AWG | mm ² | mm | In. | mm | In. | N | Lb. |
| 501647-1000 | 22 | 0.32 | 1.65 | .065 | 1.60 | .063 | 39.2 | 8.8 |
| 501647-1000 | 24 | 0.20 | 1.60 | .063 | 1.60 | .063 | 29.4 | 6.6 |
| 501647-1000 | 26 | 0.13 | 1.55 | .061 | 1.60 | .063 | 19.6 | 4.4 |

* Tool Qualification Notes:

1. This Terminator was qualified to the above specifications with UL1007 wire.
2. Pull Force should be measured with no influence from the insulation crimp.
3. The above specifications are guidelines to an optimum crimp.

PARTS LIST

| T-2 Terminator 63858-7000 | | | | |
|----------------------------------|-----------------|------------------------|--------------------------|-----------------|
| Item | Order No | Engineering No. | Description | Quantity |
| Perishable Tooling | | | | |
| | 63858-7070 | 63858-7070 | Tool Kit (All "Y" Items) | REF |
| 1 | 63444-1207 | 63444-1207 | Conductor Punch | 1 Y |
| 2 | 63445-1217 | 63445-1217 | Conductor Anvil | 1 Y |
| 3 | 63446-1510 | 63446-1510 | Insulation Punch | 1 Y |
| 4 | 63445-1503 | 63445-1503 | Insulation Anvil | 1 Y |
| 5 | 63443-0002 | 63443-0002 | Cut-Off Plunger Front | 1 Y |
| 6 | 63443-0012 | 63443-0012 | Plunger Retainer Front | 1 Y |
| Other Components (87050) | | | | |
| 7 | 11-24-1067 | 4996-4 | Cut-off Plunger Spring | 1 |
| 8 | 11-40-4039 | 8302-5 | Plunger Striker Front | 1 |
| 9 | 63443-0021 | 63443-0021 | Lower Tooling Key | 1 |
| 10 | 63443-6003 | 63443-6003 | Rear Cover | 1 |
| 11 | 11-18-4083 | 60707-8 | Front Cover | 1 |
| 12 | 63443-2405 | 63443-2405 | Anvil Mount | 1 |
| 13 | 63443-4025 | 63443-4025 | Wire Stop | 1 |
| 14 | 63443-0009 | 63443-0009 | Scrap Chute Front | 1 |
| Frame | | | | |
| 15 | 63800-8500 | 63800-8500 | T2 Terminator | 1 |
| Hardware | | | | |
| 16 | N/A | N/A | M3 by 6 Long SHCS | 2** |
| 17 | N/A | N/A | M4 by 6 Long SHCS | 1** |
| 18 | N/A | N/A | M4 by 12 Long BHCS | 2** |
| 19 | N/A | N/A | M4 by 16 Long SHCS | 1** |
| 20 | N/A | N/A | M4 by 20 Long SHCS | 1** |
| 21 | N/A | N/A | M4 by 50 Long SHCS | 1** |
| 22 | N/A | N/A | 3MM by 6Long Roll Pin | 1** |
| 23 | N/A | N/A | #10-32 by 3/8" Long BHCS | 1** |

** Available from an industrial supply company such as MSC (1-800-645-7270).

Assembly Drawing

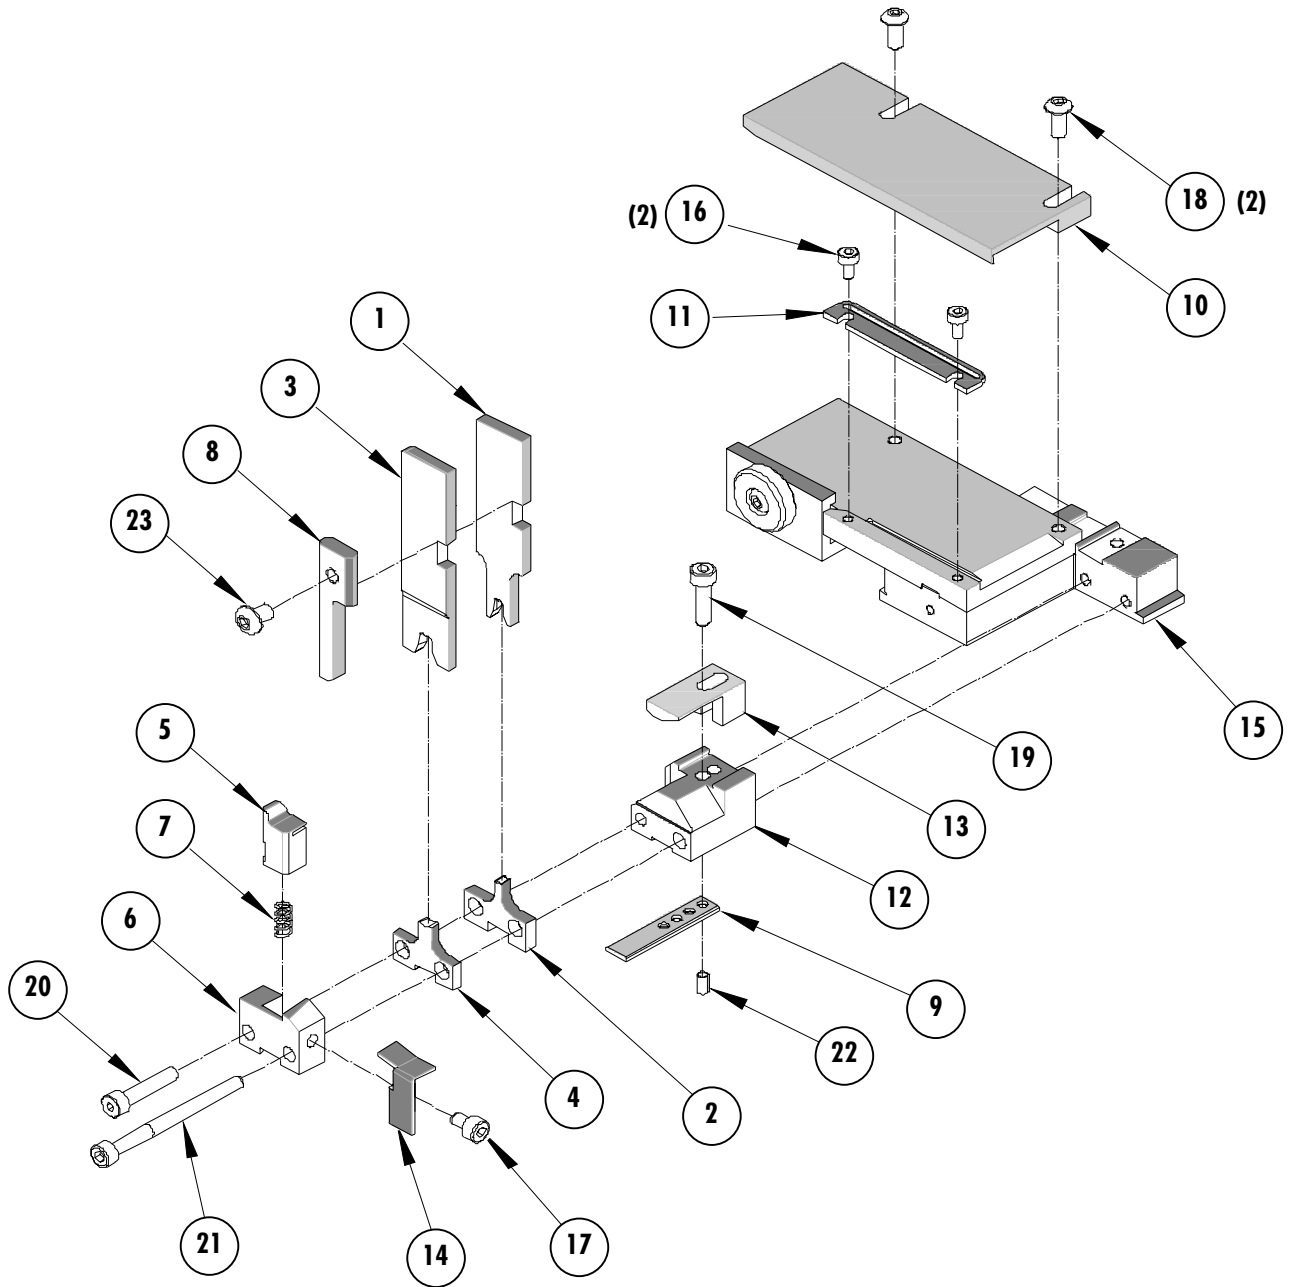


Figure 1

NOTES

Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
2. Select T2 Feed finger assembly from Terminator box.
3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
5. Release the feed arm spring.
6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

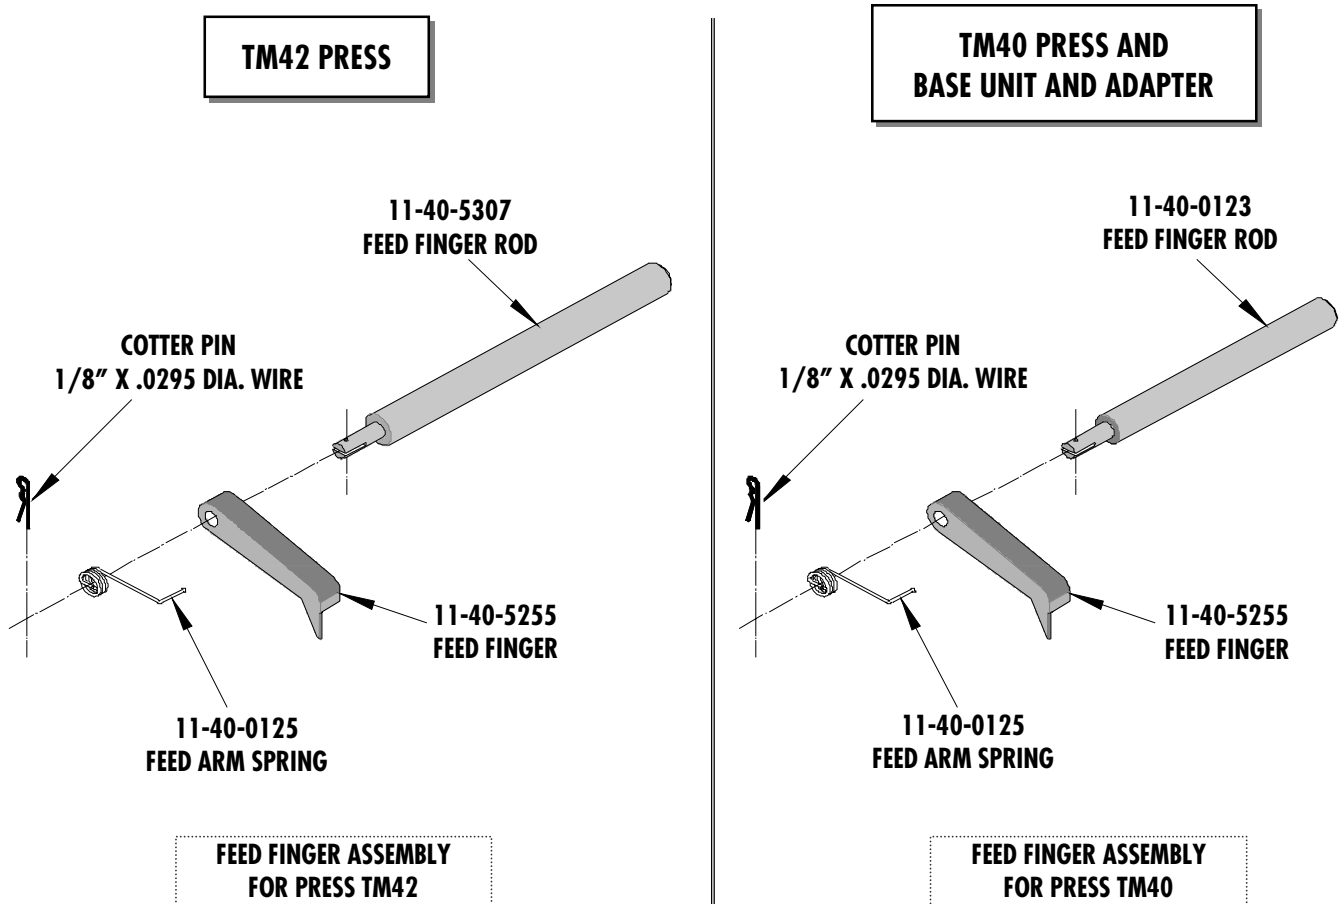


Figure 2

NOTES

1. Molex recommends an extra perishable tooling kit be maintained at your facility.
2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
5. Wear safety glasses at all times.
6. For recommended maintenance refer to the TM40, TM42 Manual.

CAUTION: To prevent injury never operate this Terminator without the guards supplied with the press or in place. Reference the TM42 press manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Americas Headquarters
Lisle, Illinois 60532 U.S.A.
1-800-78MOLEX
amerinfo@molex.com

Far East North Headquarters
Yamato, Kanagawa, Japan
81-462-65-2324
feninfo@molex.com

Far East South Headquarters
Jurong, Singapore
65-6-268-6868
fesinfo@molex.com

European Headquarters
Munich, Germany
49-89-413092-0
eurinfo@molex.com

Corporate Headquarters
2222 Wellington Ct.
Lisle, IL 60532 U.S.A.
630-969-4550
Fax: 630-969-1352

Visit our Web site at <http://www.molex.com>