

## ABSTRACT


The TPSM33625EVM and TPSM33625FEVM enables the evaluation of the TPSM33625 and TPSM33625F power modules. The EVMs allow for several configurations of the power module. Additionally, electrical test points provide ease in verifying the performance of the power regulator. Lastly, these EVMs serve as a basis for the TPSM33625 and TPSM33625F layout and component selection.

**CAUTION**



Read the user's guide before use.

**CAUTION**



Hot surface! Contact can cause burns. Do not touch!

## Table of Contents

<b>1 Introduction</b> .....	<b>3</b>
<b>2 Setup Procedure</b> .....	<b>4</b>
<b>3 Test Setup</b> .....	<b>5</b>
<b>4 Schematic</b> .....	<b>7</b>
<b>5 TPSM33625EVM and TPSM33625FEVM Evaluation</b> .....	<b>9</b>
<b>6 Layout</b> .....	<b>13</b>
<b>7 Bill of Materials</b> .....	<b>17</b>
<b>8 Related Documentation</b> .....	<b>18</b>
<b>9 Revision History</b> .....	<b>19</b>

## List of Figures

Figure 3-1. Test Setup Diagram.....	6
Figure 4-1. Schematic-Compliance Testing Filter.....	7
Figure 4-2. Schematic (TPSM33625EVM) – TPSM33625.....	7
Figure 4-3. Schematic (TPSM33625FEVM) – TPSM33625F.....	7
Figure 4-4. Schematic (TPSM33625EVM) – Configuration Jumpers and Evaluation Test Points.....	8
Figure 4-5. Schematic (TPSM33625FEVM) – Configuration Jumpers and Evaluation Test Points.....	8
Figure 5-1. CISPR32 Conducted Scan.....	9
Figure 5-2. CISPR32 Conducted Scan.....	9
Figure 5-3. IR Top Case Measurement.....	10
Figure 5-4. IR Top Case Measurement.....	10
Figure 5-5. IR Top Case Measurement.....	11
Figure 5-6. IR Top Case Measurement.....	11

Figure 5-7. IR Top Case Measurement.....	12
Figure 5-8. IR Top Case Measurement.....	12
Figure 6-1. PCB Top 2-D (TPSM33625EVM).....	13
Figure 6-2. PCB Top 2-D (TPSM33625FEVM).....	13
Figure 6-3. PCB Bottom 2-D.....	14
Figure 6-4. Top Layer.....	14
Figure 6-5. Mid Layer 1.....	15
Figure 6-6. Mid Layer 2.....	15
Figure 6-7. Bottom Layer.....	16

### List of Tables

Table 1-1. EVM Overview.....	3
Table 2-1. Suggested Frequency and Output Voltage Settings.....	4
Table 3-1. Description of Jumpers, Test Points, and Terminal Blocks.....	5
Table 7-1. Bill of Materials.....	17

### Trademarks

All trademarks are the property of their respective owners.

## 1 Introduction

The output voltage of the TPSM33625EVM and TPSM33625FEVM can be configured from 1.8 V to 12 V with a load current up to 2.5 A. Measurement points are provided to easily measure conversion efficiency and look at other performance metrics. In addition, jumpers and test points are provided to evaluate the features of the TPSM33625 and TPSM33625F, such as programmable enable UVLO, adjustable switching frequency and mode select (or synchronization), and power-good flag.

The EVM layout allows the TPSM33625 and TPSM33625F and the orderable part numbers to be installed, and their specific features to be evaluated. The TPSM33625EVM comes installed with the TPSM33625RDNR, the adjustable switching frequency (RT pin) version of the TPSM33625. The TPSM33625FEVM comes installed with the TPSM33625FRDNR, the fixed 1-MHz version of the TPSM33625 with mode selection and synchronization pin.

The TPSM33625EVM is configured by default to be enabled with an output voltage of 5 V, and a switching frequency of 2.2 MHz with frequency foldback (auto mode) at light load. The TPSM33625FEVM is configured by default to be enabled with an output voltage of 5 V, and configured for auto mode. The following sections outline the step-by-step procedure to use the TPSM33625EVM and TPSM33625FEVM and the performance that is exhibited.

**Table 1-1. EVM Overview**

<b>EVM</b>	<b>Buck Regulator</b>	<b>Buck Features</b>
TPSM33625EVM	TPSM33625RDNR	Output: 3.3 V/ADJ (1-15 V) Fsw: ADJ Mode: Auto
TPSM33625FEVM	TPSM33625FRDNR	Output: 5 V/ADJ (1-15 V) Fsw: 1 MHz Mode: Auto/FPWM

## 2 Setup Procedure

The following procedure outlines the steps to be taken for using the TPSM33625EVM and TPSM625FEVM. Use this section in conjunction with [Section 3](#) to correctly setup the EVM.

1. Determine the output voltage that is to be evaluated, then reference [Section 2](#). This table provides the recommended jumper configurations.
2. After making any required changes, confirm that the output voltage is within a couple percent of the set output voltage.
3. Verify the performance of the EVM and compare with applicable curves within this user's guide.
4. Consult on [e2e](#) if there are concerns in the evaluation of this device.

**Table 2-1. Suggested Frequency and Output Voltage Settings**

V <sub>OUT</sub> (V)	Suggested Frequency
1.8	300 kHz
2.5	800 kHz
3.3	1 MHz
5	1 MHz (J4: 3 – 4) *2.2 MHz can improve transient response for given output capacitance.
12	2.2 MHz

### 3 Test Setup

**Table 3-1. Description of Jumpers, Test Points, and Terminal Blocks**

Reference Designator	Description
J1	Input to series, PI filter for EMC compliance testing. Note polarity, which is annotated in the silkscreen. Connect to a terminal block with a short, thick gauge (18AWG) wire.
TP1, TP2	$V_{IN}$ test points that bypass the EMC filter and connect directly to input capacitors. Enables more accurate efficiency measurements as well as potential parasitic minimization and signal integrity of AC measurements. Connect to test points with a short, thick gauge (18AWG) wire.
TP4	PGOOD test point for verifying PGOOD (output) flag feature.
TP3, TP6	$V_{OUT}$ test points connected directly to output capacitors. Enables more accurate efficiency measurements, as well, potential parasitic minimization and signal integrity of AC measurements. Connect to test points with a short, thick gauge (18AWG) wire.
J2	Output ( $V_{OUT}$ ) terminal block. Connect to terminal block with a short, thick gauge (18AWG) wire.
TP11, TP12	EN test point for accurately measuring EN voltage. If EN voltage is to be applied (externally), resistor R2 and R4 potentially can need to be removed.
J5	Disable the regulator by shorting the pins of the jumper.
J4	<p>TPSM33625EVM: Jumper for configuring the switching frequency of the converter. Using the "key" annotated in the schematic and also in the silkscreen. Placing the jumper on the adjacent pins sets the annotated switching frequency.</p> <p>TPSM33625FEVM: Jumper for configuring the mode or for external signal source synchronization. The EVM is configured for fixed 1-MHz operation. The mode is set by using the "key" annotated in the schematic and also in the silkscreen, and by placing the jumper on the pins next to the annotated mode. Auto mode: Diode emulation (discontinuous inductor current) and frequency foldback in light-load condition. FPWM mode: Forced continuous conduction (continuous inductor current), constant frequency operation in light-load condition. In addition to determining the mode of the device, this pin can be used for synchronization to the frequency and phase of an external signal source. Reference the data sheet for corresponding signal source requirements.</p>
TP7, TP8	Test points for applying an external signal source to synchronize the regulator to. The synchronization function is only to be used with the TPSM33625FEVM (TPSM33625FRDNR).
J3	Jumper for configuring the output voltage. Set the voltage by using the "key" annotated in the schematic and also in the silkscreen, and by placing the jumper on the pins next to the annotated output voltage.
TP9, TP10	Test points for applying an AC signal source (across an injection resistor) often used in evaluating the loop response in a current mode regulator, such as the TPSM33625 or TPSM33625F.

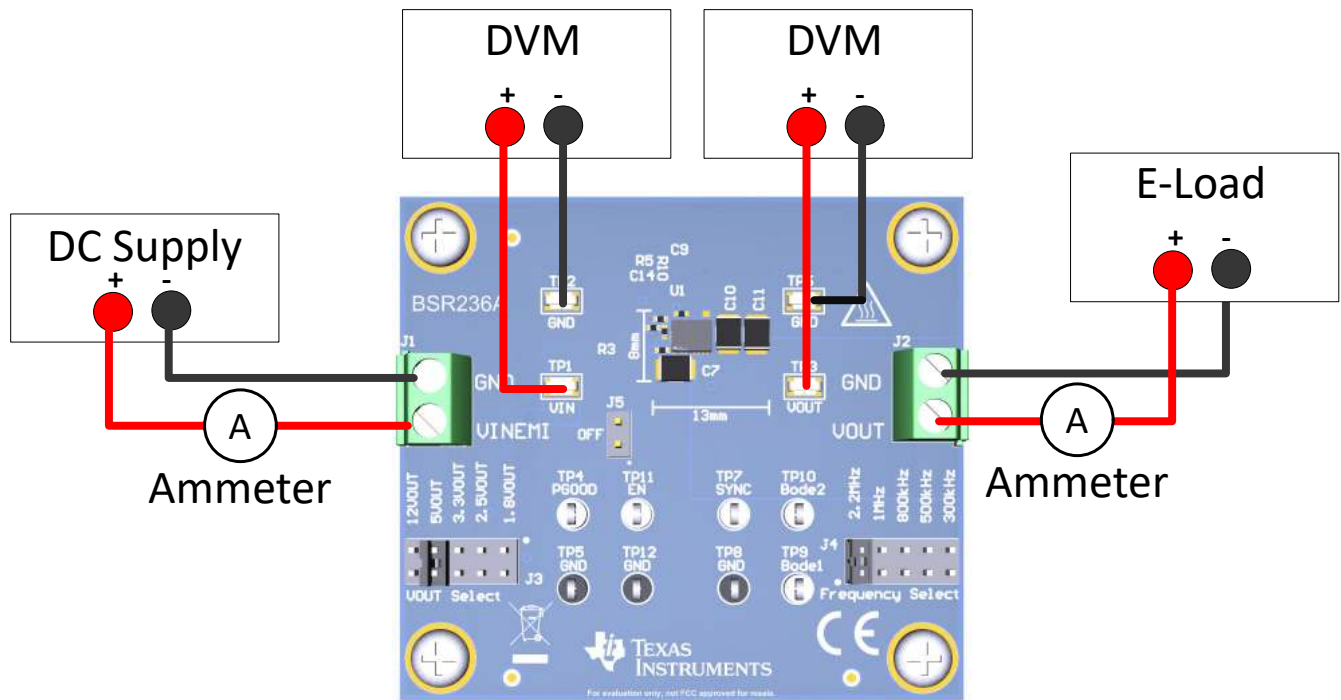


Figure 3-1. Test Setup Diagram

## 4 Schematic

Customers can choose to implement a PI filter in series with the input of a power regulator, which allows for the differential noise generated to be attenuated, allowing a noise emission regulation to be met. The filter crossover frequency is designed for 1-MHz switching frequency, attenuating the switching frequency and the corresponding harmonics greatly. A damping capacitor is provided (C5), to damp the high-Q PI filter. For more information on filter damping, see [Section 8](#).

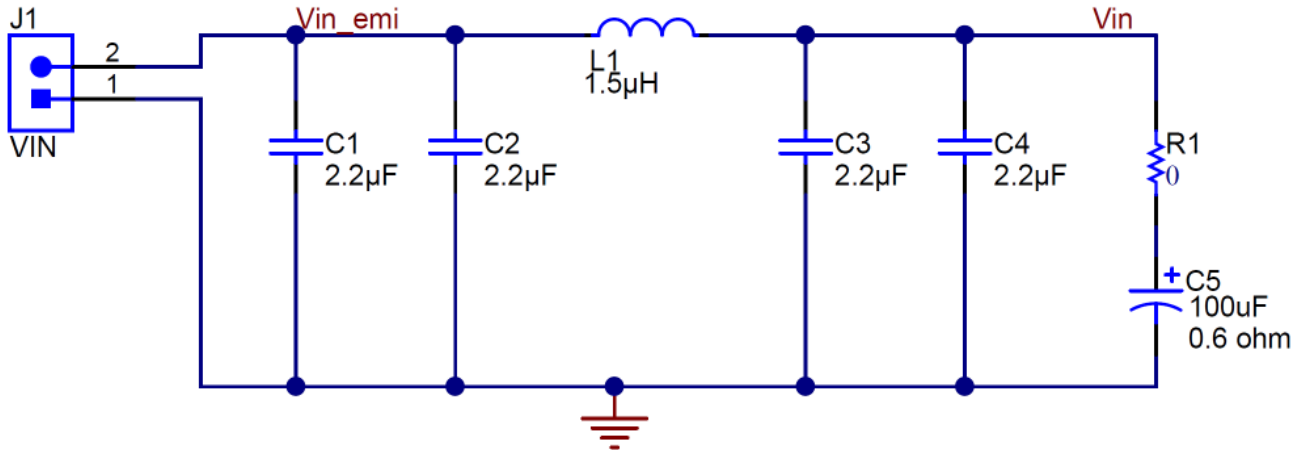


Figure 4-1. Schematic-Compliance Testing Filter

In the buck schematic, the difference between the TPSM33625EVM and TPSM33625FFEVM is the REFDES=U1 device part number. Use a buck schematic with additional feedback resistors to program the output voltage and add a placeholder for additional output capacitance to achieve stability or meet a output transient specification with pin definition RT (adjustable frequency) or Mode/Sync (mode select or synchronization) differing.

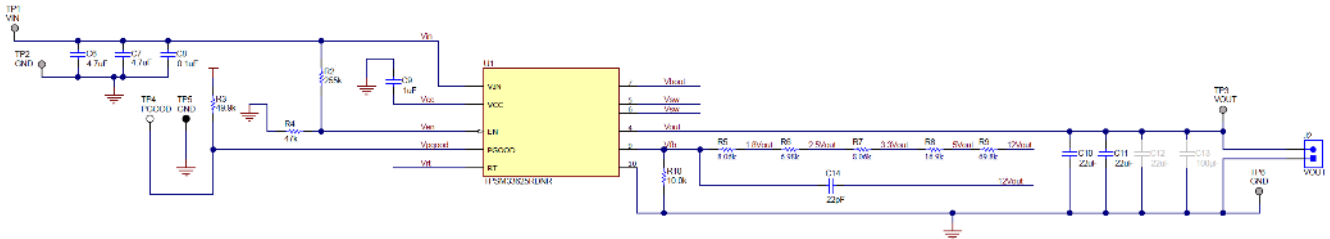


Figure 4-2. Schematic (TPSM33625EVM) – TPSM33625


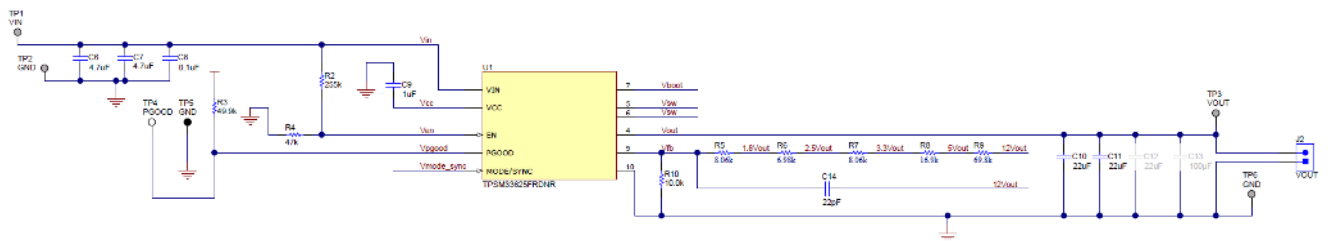



Figure 4-3. Schematic (TPSM33625FEVM) – TPSM33625F

A disable, frequency select, and output voltage select jumper are provided to aid the evaluation. Additionally, test points to evaluate product features and stability are provided.

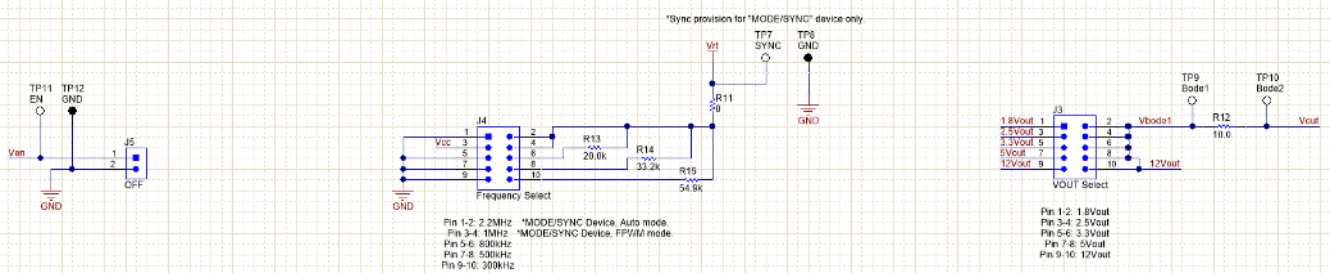

**Figure 4-4. Schematic (TPSM33625EVM) – Configuration Jumpers and Evaluation Test Points**

A disable, mode select or synchronization, and output voltage select jumper are provided to aid the evaluation. Additionally, test points to evaluate product features and stability are provided.

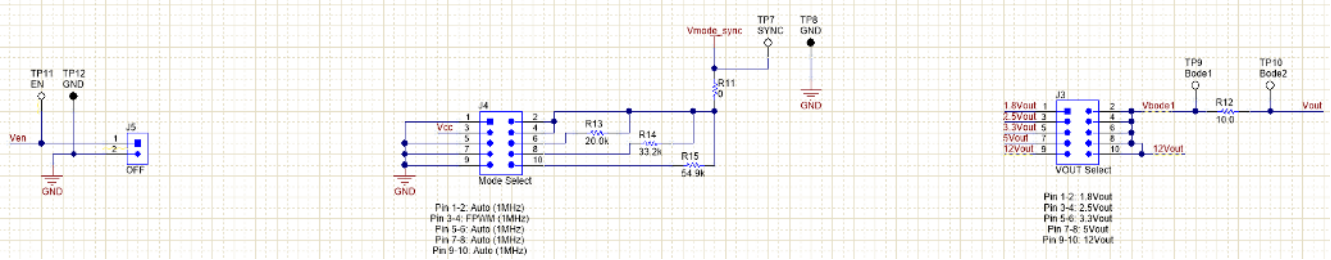

**Figure 4-5. Schematic (TPSM33625FEVM) – Configuration Jumpers and Evaluation Test Points**



## 5 TPSM33625EVM and TPSM33625FEVM Evaluation

The data was tested on unmodified EVM, configured for 1-MHz operation and 5 V<sub>OUT</sub>, and was measured at 12 V and a 2-A load.

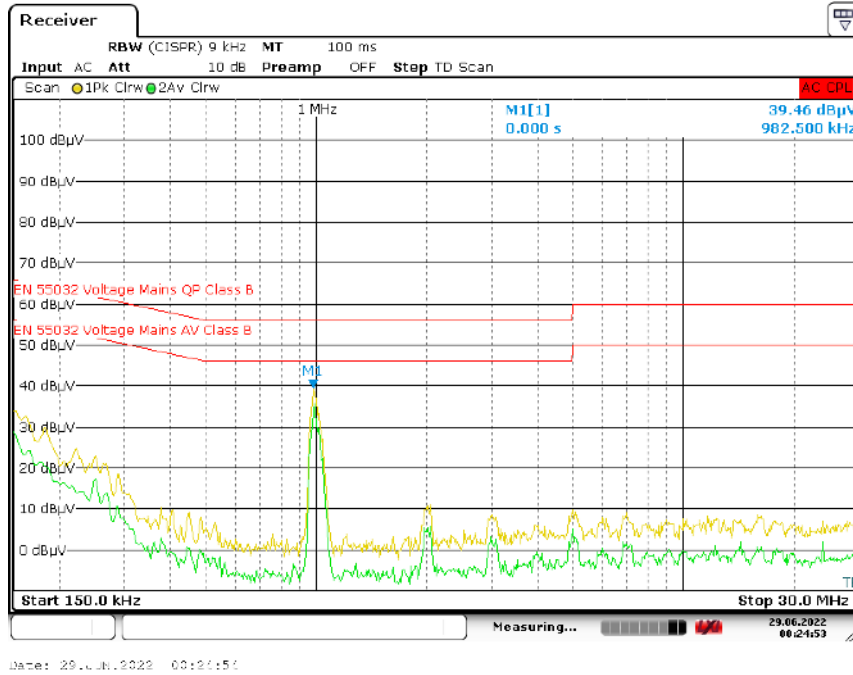


Figure 5-1. CISPR32 Conducted Scan

The data was tested on unmodified EVM, configured for 1-MHz operation and 5 V<sub>OUT</sub>, and was measured at 24 V<sub>IN</sub> and a 2-A load.


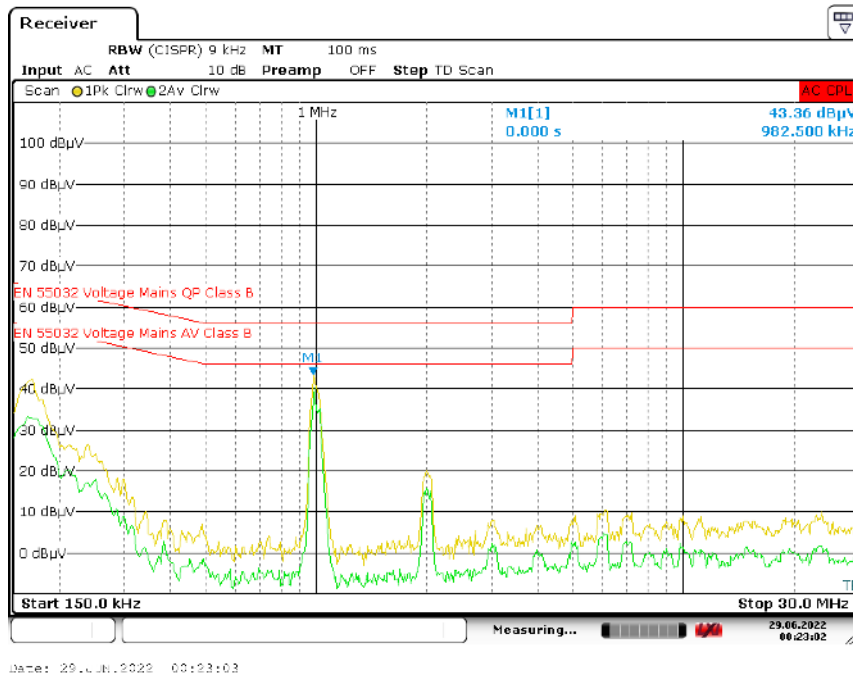



Figure 5-2. CISPR32 Conducted Scan

12 V<sub>IN</sub>, 2.2 MHz, 2-A load (continuous)

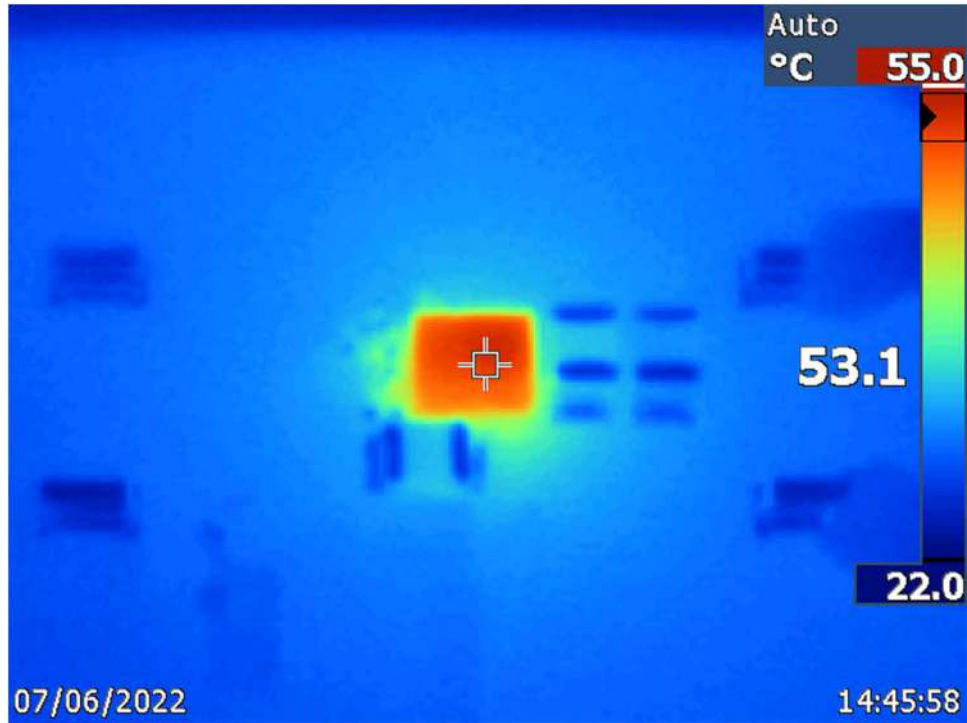

**Figure 5-3. IR Top Case Measurement**

12 V<sub>IN</sub>, 1 MHz, 2-A load (continuous)

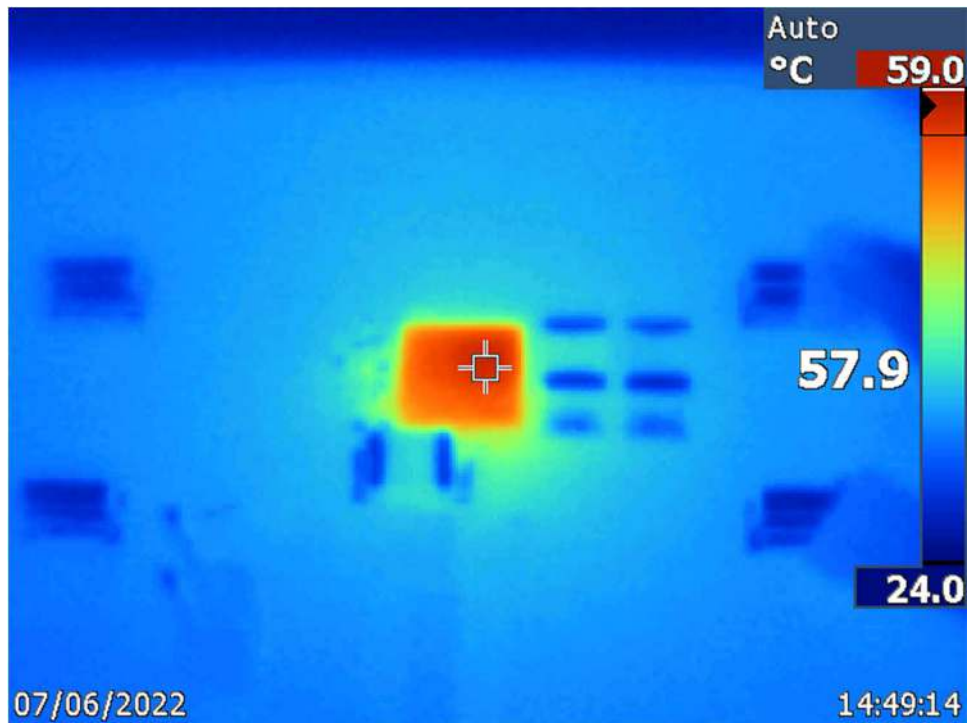

**Figure 5-4. IR Top Case Measurement**

12 V<sub>IN</sub>, 500 kHz, 2-A load (continuous)

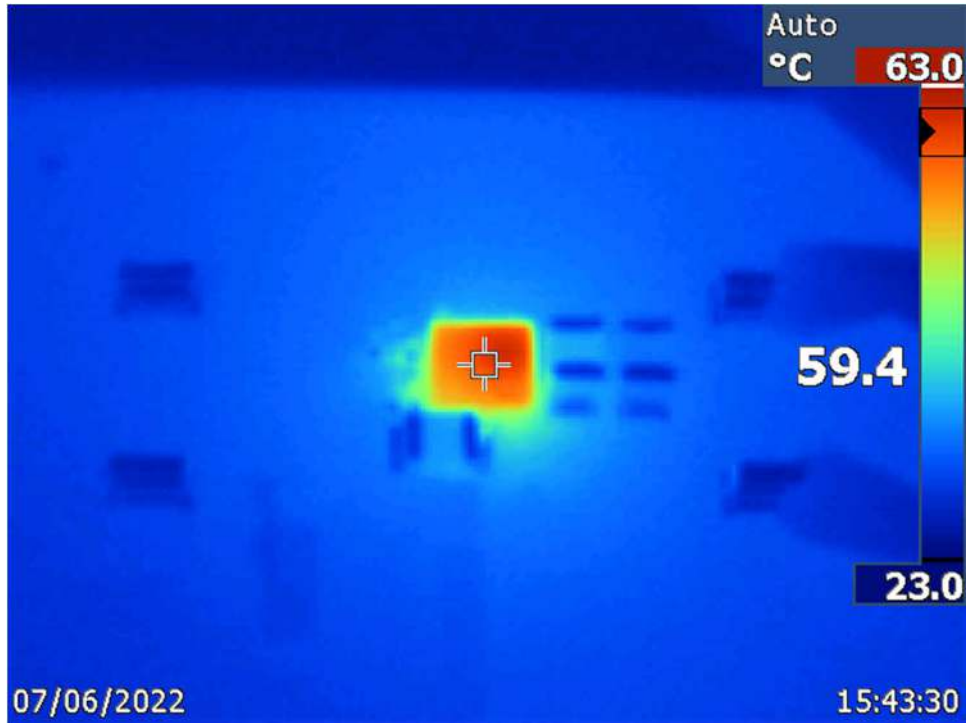


Figure 5-5. IR Top Case Measurement

24 V<sub>IN</sub>, 2.2 MHz, 2-A load (continuous)


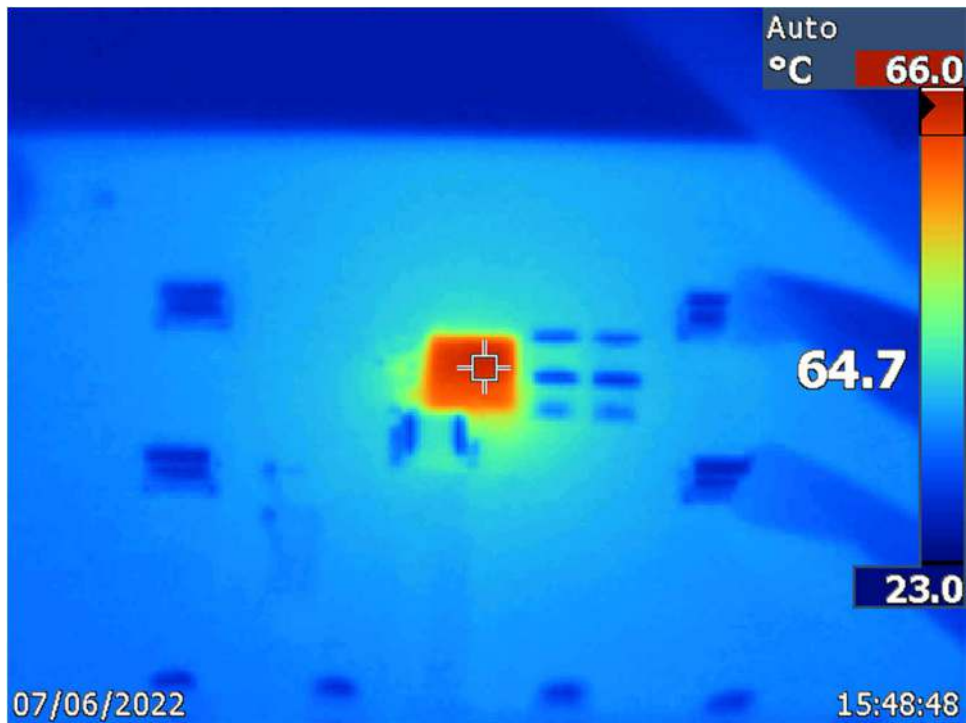



Figure 5-6. IR Top Case Measurement

24 V<sub>IN</sub>, 1 MHz, 2-A load (continuous)

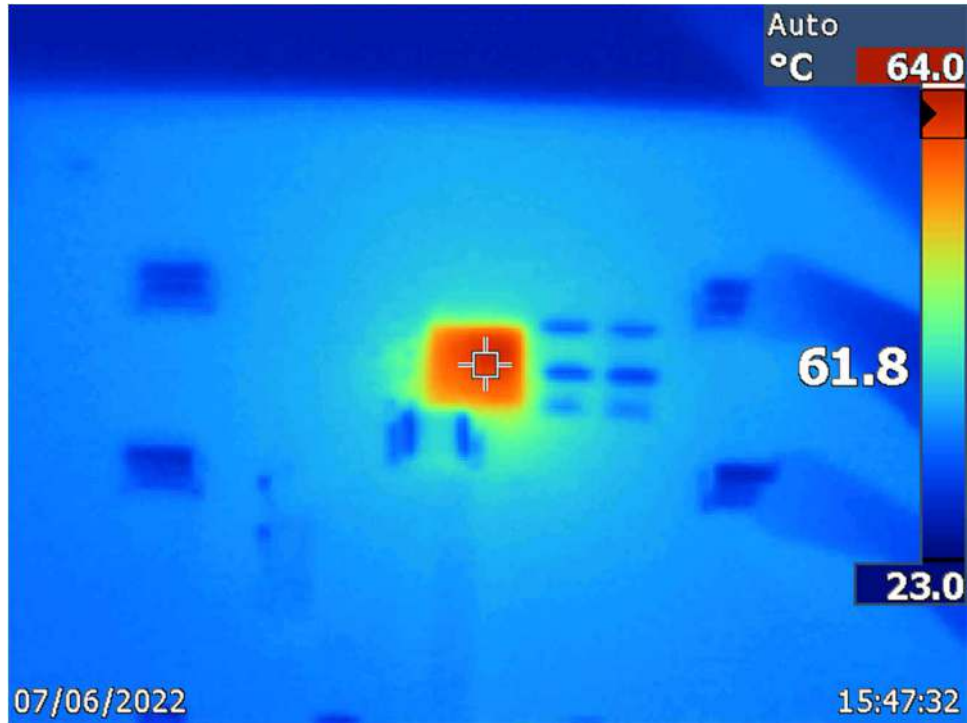

**Figure 5-7. IR Top Case Measurement**

24 V<sub>IN</sub>, 500 kHz, 2-A load (continuous)

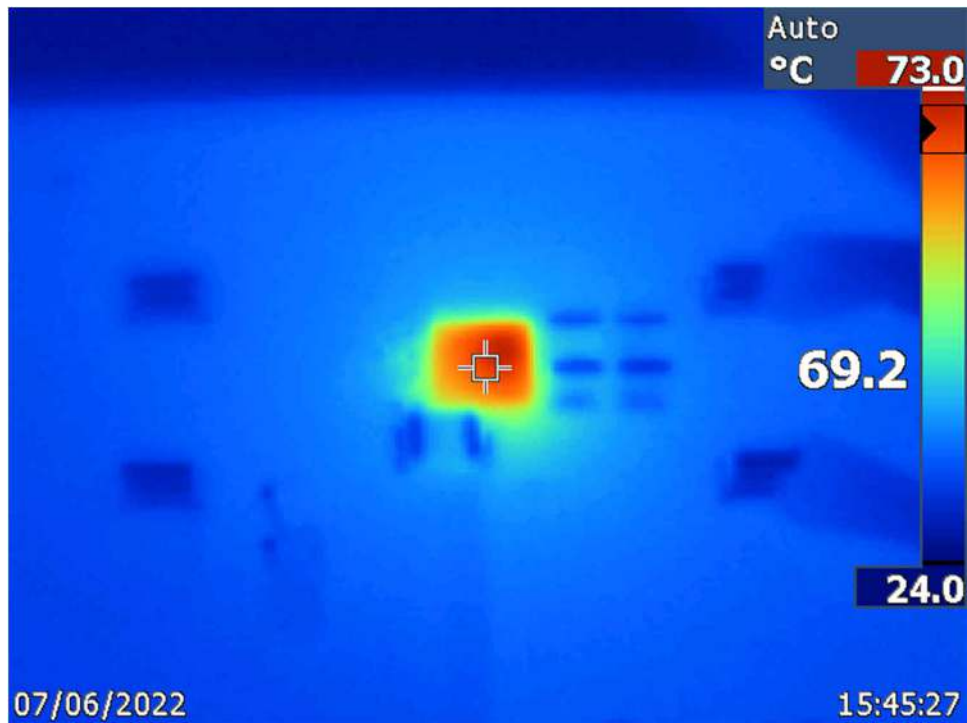

**Figure 5-8. IR Top Case Measurement**

## 6 Layout

The top silkscreen (that is, J4) differs between the TPSM33625EVM and TPSM3365FEVM, which is the only difference between the layer plots (no routing).

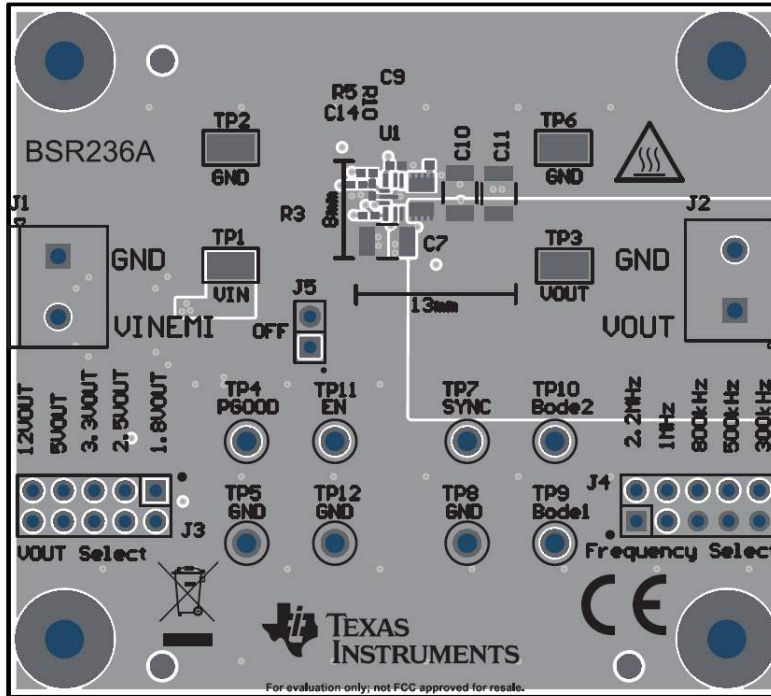


Figure 6-1. PCB Top 2-D (TPSM33625EVM)

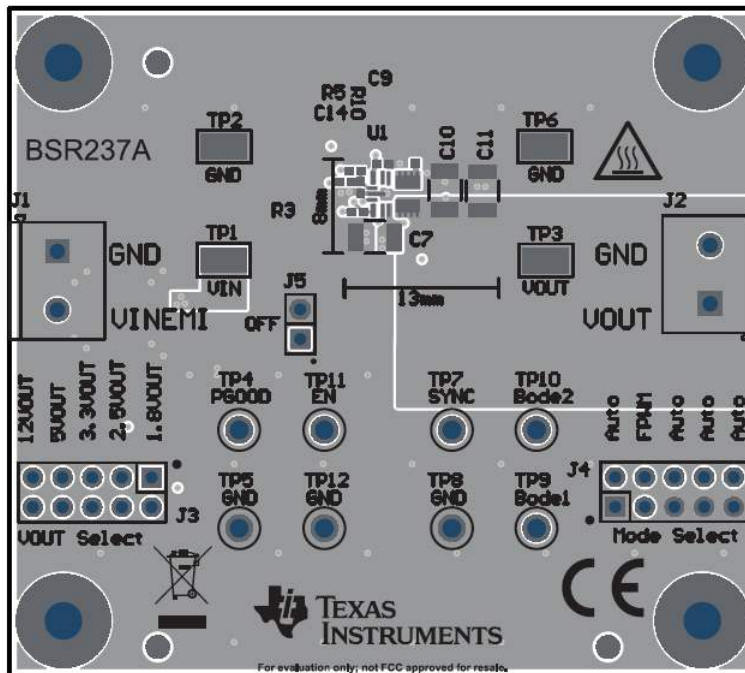


Figure 6-2. PCB Top 2-D (TPSM33625FEVM)

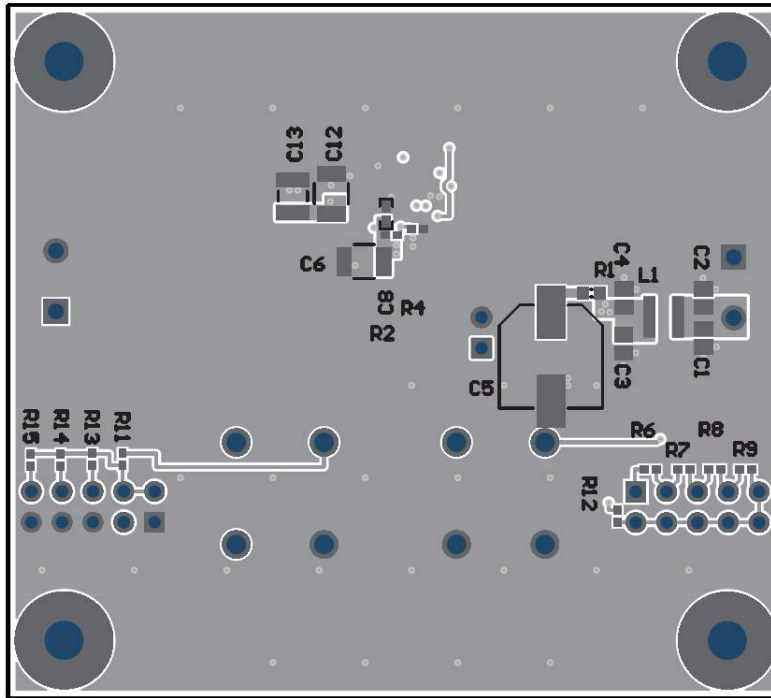


Figure 6-3. PCB Bottom 2-D

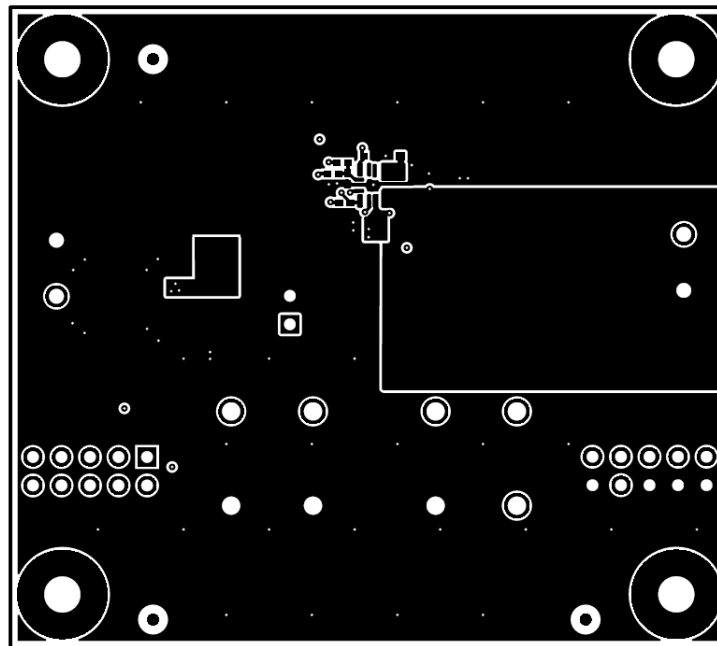


Figure 6-4. Top Layer

Reserved for solid ground plane for low-noise and optimized thermal design.

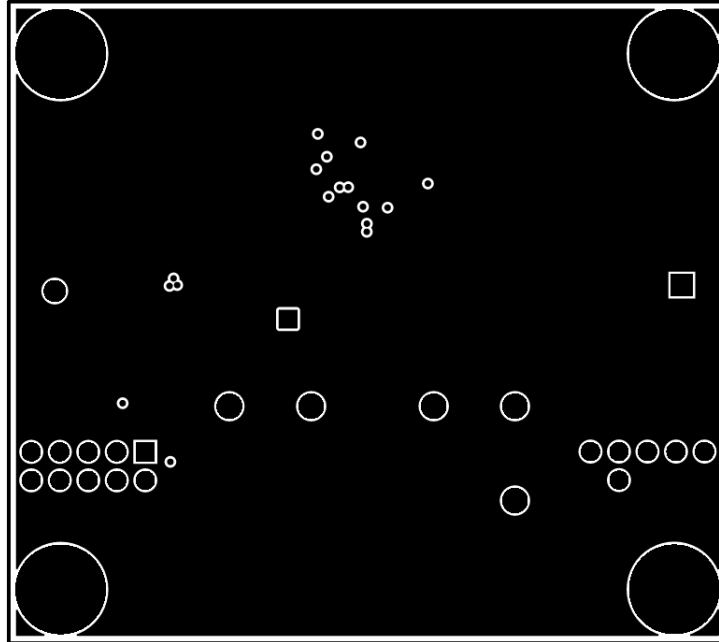


Figure 6-5. Mid Layer 1

Primary routing layer

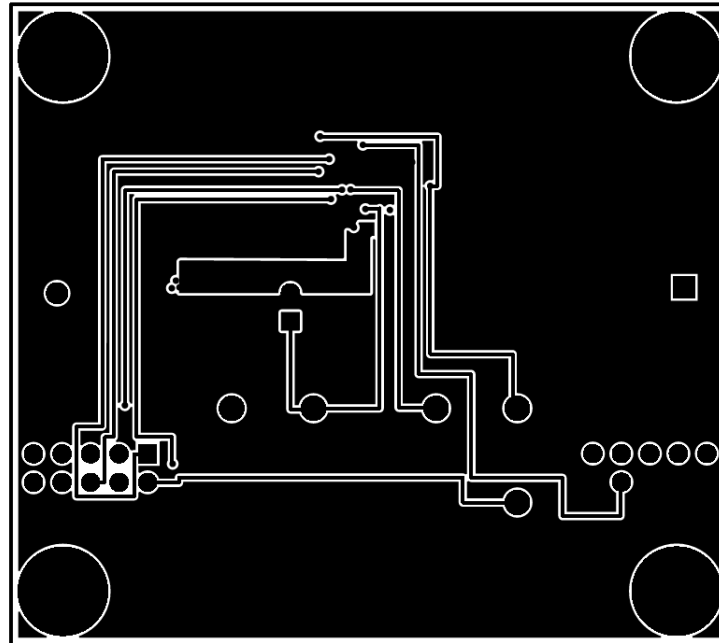


Figure 6-6. Mid Layer 2

Reserved for PI filter and non-critical passive component placement (minus input capacitor). An input capacitor is placed on bottom side of PCB as the input capacitor provides a slightly lower input loop inductance. A single layer implementation is satisfactory as well.

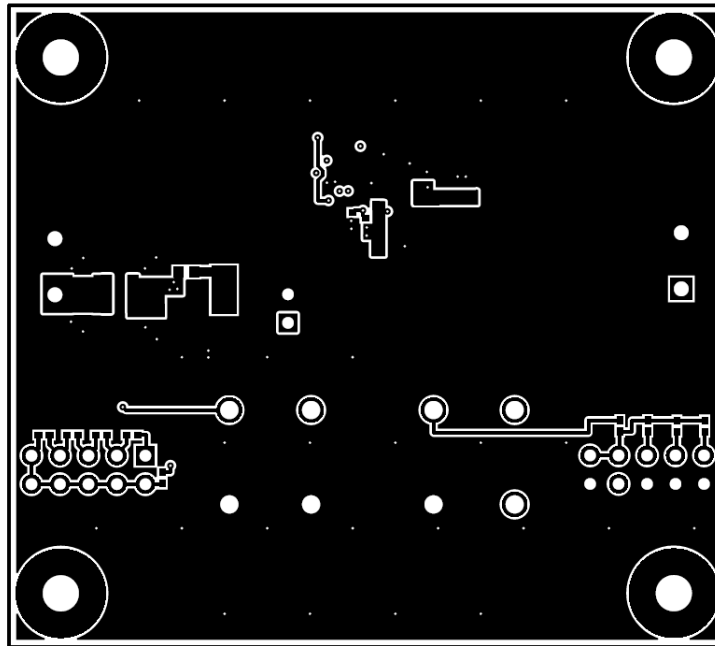


Figure 6-7. Bottom Layer



## 7 Bill of Materials

**Table 7-1. Bill of Materials**

Designator	Qty	Value	Description	Package Reference	Part Number	Manufacturer
C1, C2, C3, C4	4	2.2 $\mu$ F	CAP, CERM, 2.2 $\mu$ F, 50 V, $\pm$ 10%, X7R, AEC-Q200 Grade 1, 0805	0805	CGA4J3X7R1H225K125AB	TDK
C5	1	100 $\mu$ F	CAP, AL, 100 $\mu$ F, 50 V, $\pm$ 20%, 0.6 $\Omega$ , SMD	HA0	EMVY500ADA101MHA0G	Chemi-Con
C6, C7	2	4.7 $\mu$ F	CAP, CERM, 4.7 $\mu$ F, 50 V, $\pm$ 10%, X7R, 1210	1210	C3225X7R1H475K250AB	TDK
C8	1	0.1 $\mu$ F	CAP, CERM, 0.1 $\mu$ F, 50 V, $\pm$ 20%, X5R, 0402	0402	GRM155R61H104ME14D	MuRata
C9	1	1 $\mu$ F	CAP, CERM, 1 $\mu$ F, 16 V, $\pm$ 10%, X5R, 0402	0402	EMK105BJ105KVHF	Taiyo Yuden
C10, C11	2	22 $\mu$ F	CAP, CERM, 22 $\mu$ F, 16 V, $\pm$ 20%, X7R, AEC-Q200 Grade 1, 1210	1210	CGA6P1X7R1C226M250AC	TDK
C14	1	22 pF	CAP, CERM, 22 pF, 50 V, $\pm$ 5%, C0G/NP0, AEC-Q200 Grade 1, 0402	0402	CGA2B2NP01H220J050BA	TDK
H1, H2, H3, H4	4		Machine Screw, Round, #4-40 $\times$ 1/4, Nylon, Philips panhead	Screw	NY PMS 440 0025 PH	B&F Fastener Supply
H5, H6, H7, H8	4		Standoff, Hex, 0.5"L #4-40 Nylon	Standoff	1902C	Keystone
J1, J2	2		TERM BLOCK 2POS 5 mm, TH	10x10x8.1 mm	1729018	Phoenix Contact
J3, J4	2		Header, 100 mil, 5 $\times$ 2, Tin, TH	Header, 5 $\times$ 2, 100 mil, Tin	PEC05DAAN	Sullins Connector Solutions
J5	1		Header, 100 mil, 2 $\times$ 1, Gold, TH	Header, 100 mil, 2 $\times$ 1, TH	HTSW-102-07-G-S	Samtec
L1	1		Shielded Power Inductors	SMD2	XGL4020-152MEC	Coilcraft
R1	1	0	RES, 0, 5%, 0.1 W, AEC-Q200 Grade 0, 0603	0603	CRCW06030000Z0EA	Vishay-Dale
R2	1	255 k	RES, 255 k, 1%, 0.063 W, AEC-Q200 Grade 0, 0402	0402	CRCW0402255KFKED	Vishay-Dale
R3	1	49.9 k	RES, 49.9 k, 1%, 0.063 W, 0402	0402	CRCW040249K9FKED	Vishay-Dale
R4	1	47 k	RES, 47 k, 5%, 0.063 W, AEC-Q200 Grade 0, 0402	0402	CRCW040247K0JNED	Vishay-Dale
R5, R7	2	8.06 k	RES, 8.06 k, 1%, 0.063 W, AEC-Q200 Grade 0, 0402	0402	CRCW04028K06FKED	Vishay-Dale
R6	1	6.98 k	RES, 6.98 k, 1%, 0.063 W, AEC-Q200 Grade 0, 0402	0402	CRCW04026K98FKED	Vishay-Dale
R8	1	16.9 k	RES, 16.9 k, 1%, 0.063 W, AEC-Q200 Grade 0, 0402	0402	CRCW040216K9FKED	Vishay-Dale
R9	1	69.8 k	RES, 69.8 k, 1%, 0.063 W, 0402	0402	CRCW040269K8FKED	Vishay-Dale
R10	1	10.0 k	RES, 10.0 k, 1%, 0.063 W, AEC-Q200 Grade 0, 0402	0402	CRCW040210K0FKED	Vishay-Dale
R11	1	0	RES, 0, 5%, 0.063 W, AEC-Q200 Grade 0, 0402	0402	CRCW04020000Z0ED	Vishay-Dale
R12	1	10.0	RES, 10.0, 1%, 0.063 W, AEC-Q200 Grade 0, 0402	0402	CRCW040210R0FKED	Vishay-Dale
R13	1	20.0 k	RES, 20.0 k, 1%, 0.063 W, AEC-Q200 Grade 0, 0402	0402	CRCW040220K0FKED	Vishay-Dale

**Table 7-1. Bill of Materials (continued)**

Designator	Qty	Value	Description	Package Reference	Part Number	Manufacturer
R14	1	33.2 k	RES, 33.2 k, 1%, 0.063 W, AEC-Q200 Grade 0, 0402	0402	CRCW040233K2FKED	Vishay-Dale
R15	1	54.9 k	RES, 54.9 k, 1%, 0.063 W, AEC-Q200 Grade 0, 0402	0402	CRCW040254K9FKED	Vishay-Dale
SH-J1, SH-J2	2		Shunt, 100 mil, Gold plated, Black	Shunt 2 pos. 100 mil	881545-2	TE Connectivity
TP1, TP2, TP3, TP6	4		Test Point, Miniature, SMT	Test Point, Miniature, SMT	5019	Keystone
TP4, TP7, TP9, TP10, TP11	5		Test Point, Multipurpose, White, TH	White Multipurpose Testpoint	5012	Keystone Electronics
TP5, TP8, TP12	3		Test Point, Multipurpose, Black, TH	Black Multipurpose Testpoint	5011	Keystone Electronics
U1	1		36-V Input, 1-V to 15-V Output, 2.5-A DC-DC Power Module	QFN- FCMOD11	TPSM33625RDNR (TPSM33625FEVM: TPSM33625FRDNR)	Texas Instruments

## 8 Related Documentation

Texas Instruments, [Input Filter Design for Switching Power Supplies](#) application report.

## 9 Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

---

### Changes from Revision \* (September 2022) to Revision A (March 2023) Page

- Deleted text in *Schematic* section.....7
-

## STANDARD TERMS FOR EVALUATION MODULES

1. *Delivery:* TI delivers TI evaluation boards, kits, or modules, including any accompanying demonstration software, components, and/or documentation which may be provided together or separately (collectively, an "EVM" or "EVMs") to the User ("User") in accordance with the terms set forth herein. User's acceptance of the EVM is expressly subject to the following terms.
  - 1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductor products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM ("Software") shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms that accompany such Software
  - 1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.
2. *Limited Warranty and Related Remedies/Disclaimers:*
  - 2.1 These terms do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.
  - 2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for a nonconforming EVM if (a) the nonconformity was caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI, (b) the nonconformity resulted from User's design, specifications or instructions for such EVMs or improper system design, or (c) User has not paid on time. Testing and other quality control techniques are used to the extent TI deems necessary. TI does not test all parameters of each EVM. User's claims against TI under this Section 2 are void if User fails to notify TI of any apparent defects in the EVMs within ten (10) business days after delivery, or of any hidden defects with ten (10) business days after the defect has been detected.
  - 2.3 TI's sole liability shall be at its option to repair or replace EVMs that fail to conform to the warranty set forth above, or credit User's account for such EVM. TI's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by TI and that are determined by TI not to conform to such warranty. If TI elects to repair or replace such EVM, TI shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.

### **WARNING**

**Evaluation Kits are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems.**

**User shall operate the Evaluation Kit within TI's recommended guidelines and any applicable legal or environmental requirements as well as reasonable and customary safeguards. Failure to set up and/or operate the Evaluation Kit within TI's recommended guidelines may result in personal injury or death or property damage. Proper set up entails following TI's instructions for electrical ratings of interface circuits such as input, output and electrical loads.**

**NOTE:**

**EXPOSURE TO ELECTROSTATIC DISCHARGE (ESD) MAY CAUSE DEGRADATION OR FAILURE OF THE EVALUATION KIT; TI RECOMMENDS STORAGE OF THE EVALUATION KIT IN A PROTECTIVE ESD BAG.**

### 3 Regulatory Notices:

#### 3.1 United States

##### 3.1.1 Notice applicable to EVMs not FCC-Approved:

**FCC NOTICE:** This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.

##### 3.1.2 For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:

#### **CAUTION**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### **FCC Interference Statement for Class A EVM devices**

*NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.*

#### **FCC Interference Statement for Class B EVM devices**

*NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### 3.2 Canada

##### 3.2.1 For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210 or RSS-247

#### **Concerning EVMs Including Radio Transmitters:**

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

#### **Concernant les EVMs avec appareils radio:**

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### **Concerning EVMs Including Detachable Antennas:**

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

### Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

#### 3.3 Japan

3.3.1 *Notice for EVMs delivered in Japan:* Please see [http://www.tij.co.jp/lstds/ti\\_ja/general/eStore/notice\\_01.page](http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_01.page) 日本国内に輸入される評価用キット、ボードについては、次のところをご覧ください。

<https://www.ti.com/ja-jp/legal/notice-for-evaluation-kits-delivered-in-japan.html>

3.3.2 *Notice for Users of EVMs Considered "Radio Frequency Products" in Japan:* EVMs entering Japan may not be certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, not certified to Technical Regulations of Radio Law of Japan, User is required to follow the instructions set forth by Radio Law of Japan, which includes, but is not limited to, the instructions below with respect to EVMs (which for the avoidance of doubt are stated strictly for convenience and should be verified by User):

1. Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above, User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】 開発キットの中には技術基準適合証明を受けていないものがあります。技術適合証明を受けていないものご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。日本テキサス・イ

ンスツルメンツ株式会社

東京都新宿区西新宿 6 丁目 2 4 番 1 号

西新宿三井ビル

3.3.3 *Notice for EVMs for Power Line Communication:* Please see [http://www.tij.co.jp/lstds/ti\\_ja/general/eStore/notice\\_02.page](http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_02.page)

電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。 <https://www.ti.com/ja-jp/legal/notice-for-evaluation-kits-for-power-line-communication.html>

#### 3.4 European Union

3.4.1 *For EVMs subject to EU Directive 2014/30/EU (Electromagnetic Compatibility Directive):*

This is a class A product intended for use in environments other than domestic environments that are connected to a low-voltage power-supply network that supplies buildings used for domestic purposes. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

- 
- 4 *EVM Use Restrictions and Warnings:*
    - 4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.
    - 4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.
    - 4.3 *Safety-Related Warnings and Restrictions:*
      - 4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.
      - 4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.
    - 4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.
  5. *Accuracy of Information:* To the extent TI provides information on the availability and function of EVMs, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.
  6. *Disclaimers:*
    - 6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY MATERIALS PROVIDED WITH THE EVM (INCLUDING, BUT NOT LIMITED TO, REFERENCE DESIGNS AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY EPIDEMIC FAILURE WARRANTY OR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.
    - 6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT, REGARDLESS OF WHEN MADE, CONCEIVED OR ACQUIRED.
  7. *USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS.* USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.
-

8. *Limitations on Damages and Liability:*

8.1 *General Limitations.* IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS OR THE USE OF THE EVMS , REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TI MORE THAN TWELVE (12) MONTHS AFTER THE EVENT THAT GAVE RISE TO THE CAUSE OF ACTION HAS OCCURRED.

8.2 *Specific Limitations.* IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY USE OF AN EVM PROVIDED HEREUNDER, INCLUDING FROM ANY WARRANTY, INDEMNITY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS, , EXCEED THE TOTAL AMOUNT PAID TO TI BY USER FOR THE PARTICULAR EVM(S) AT ISSUE DURING THE PRIOR TWELVE (12) MONTHS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM SHALL NOT ENLARGE OR EXTEND THIS LIMIT.

9. *Return Policy.* Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.

10. *Governing Law:* These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright © 2023, Texas Instruments Incorporated



## IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to [TI's Terms of Sale](#) or other applicable terms available either on [ti.com](https://www.ti.com) or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright © 2023, Texas Instruments Incorporated