



## Get In-depth Support for Saving Energy by Visualizing Each Power Consumption




200kWh

Inverter air-conditioning power consumption visualization

Refrigerating power consumption and temperature\* visualization

\* When analog input is used

300kWh

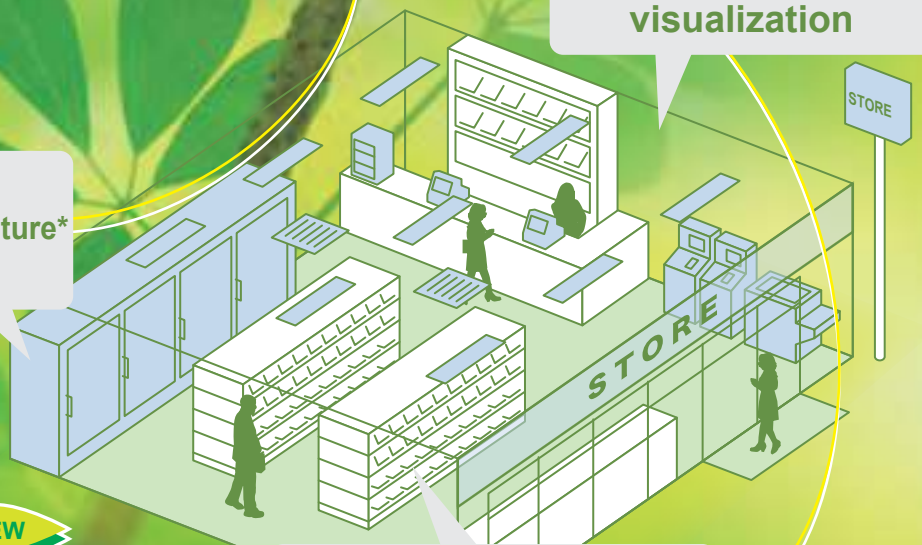

Lighting power consumption and illumination\* visualization

\* When analog input is used

50kWh

NEW

NEW



**KW2G**  
Eco-POWER METER  
Standard type



**KW2G-H**  
Eco-POWER METER  
SD memory card type



**KW2G / KW2G-H**  
Eco-POWER METER  
Expansion unit (Power measurement and Pulse output)



**KW1M**  
Eco-POWER METER  
Standard type



**KW1M-H**  
Eco-POWER METER  
SD memory card type



**KW1M-R**  
Eco-POWER METER  
Built-in wireless type

(Slave unit)



**KW7M**  
Eco-POWER METER  
DIN rail



**KW4M**  
Eco-POWER METER  
DIN 48

IP66




**KW8M**  
Eco-POWER METER  
DIN 48x96



# Visualizing energy consumption is the first step toward energy savings.

Install Eco-POWER METERS in lighting equipment, air conditioners, and production equipment to measure power consumption and check the current status. Then, with specific targets in place, the implementation and management of an energy savings plan is quick and simple. Visualizing target achievements improves the energy usage cycle and allows for changes to be made to maximize efficiency.

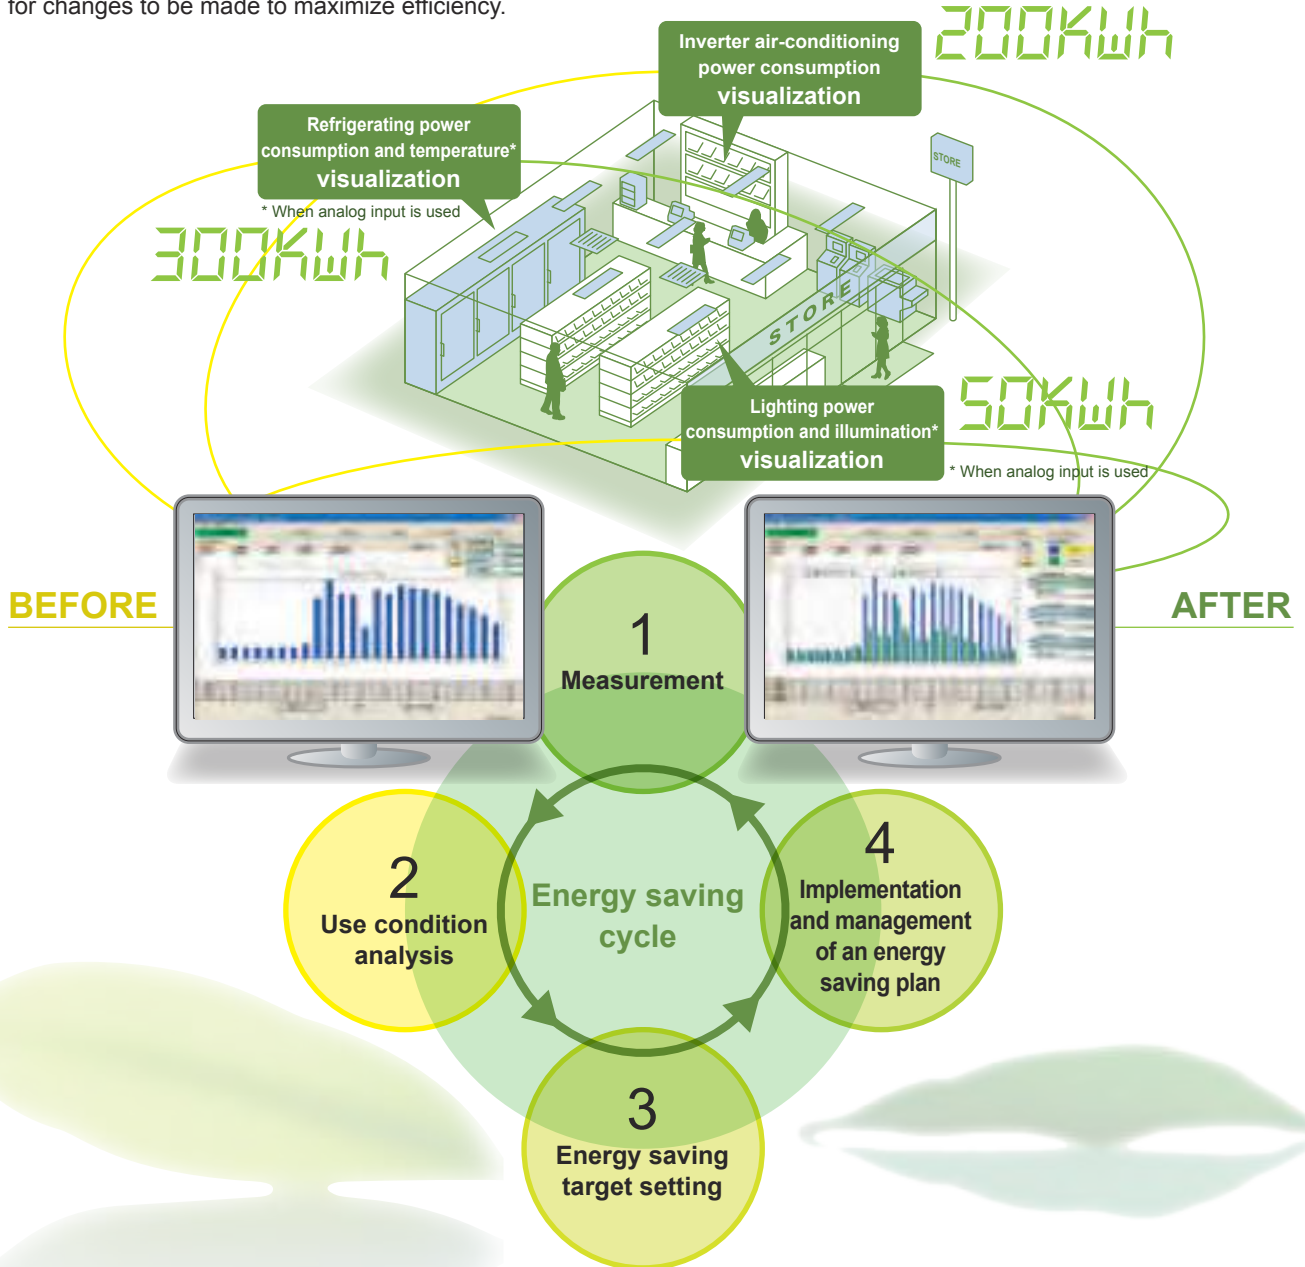

**Market Trend**

To reduce the usage of earth's resources, demand for a longer product lifecycle increases.



**3 Year Warranty**


**3 year warranty**  
Factory Automation  
Devices Products

**Company direction**


Pursue and supply high quality standard products which can be safely used in long term.

\* Please refer to our website for warranted products and extent of 3 year warranty.

# TYPICAL APPLICATIONS

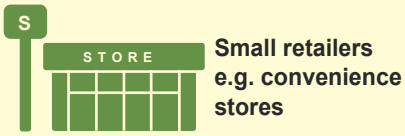

## Convenience stores

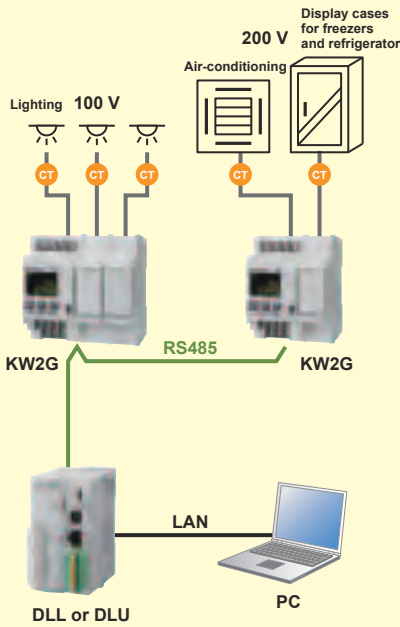


You can add only the required number of units in a small switchboard. Ideal for small stores.

**Connector-expandable type**

**KW2G Eco-POWER METER**



## Schools and supermarkets

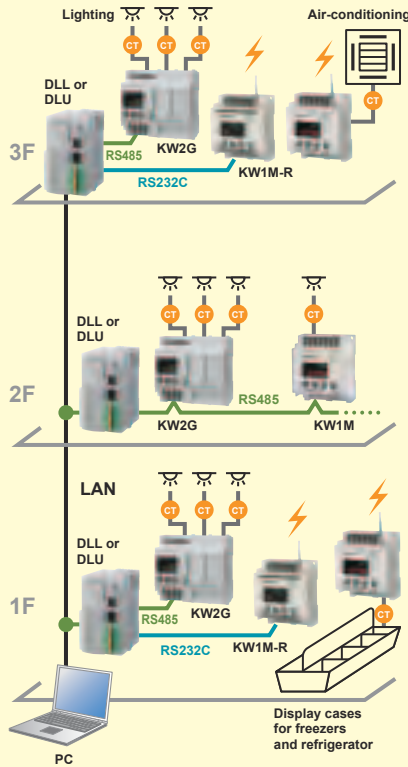

(Master unit)

Wiring work not required. Ideal if the layout is frequently changed.

**Built-in wireless type**

**KW1M-R Eco-POWER METER**



(Slave unit)


You can add only the required number of units, preventing waste.

**Connector-expandable type**

**KW2G Eco-POWER METER**



## Plants

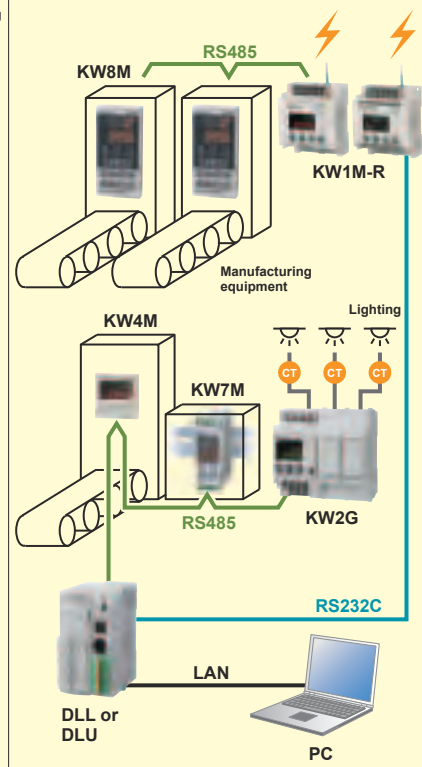

Mountable on a panel surface. Applicable to 400 V equipment.

**Panel surface mount type**

**KW8M Eco-POWER METER**



Mountable on a panel. Waterproof (IP66).

**Waterproof type**

**KW4M Eco-POWER METER**



Designed for DIN rail mounting, ideal for installation in a panel.

**Panel-mount DIN rail type**

**KW7M Eco-POWER METER**



Expandable for large equipment with multiple power supplies.

**Connector-expandable type**

**KW2G Eco-POWER METER**

## Easy when you want small-scale visualization or for trial runs



Easy to measure. You can immediately check data on a PC.

**SD memory card type**

**KW1M-H Eco-POWER METER**


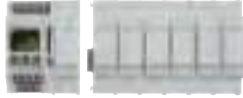








Easily measure multiple circuits, immediately view results on a PC screen.

**SD memory card type**

**KW2G-H Eco-POWER METER**

# Eco-POWER METER SELECTION GUIDE

| Needs  | Recommended model  |
|--|--|
| <ul style="list-style-type: none"> <li>■ Need to measure power of general-purpose CT installed at facility</li> <li>■ Need to measure high current circuits</li> </ul>   | <p><b>KW8M 1 A / 5 A CT input type</b> </p> <ul style="list-style-type: none"> <li>• Capable of direct input from 1 A / 5 A CT in the secondary side and up to 4,000 A CT in the primary side without using a dedicated CT</li> </ul>   |
| <ul style="list-style-type: none"> <li>■ Need to measure multiple points</li> <li>■ Need to measure micro-power such as standby power</li> <li>■ Need to measure existing equipment without line stoppage</li> <li>■ Need to load analog data or pulse data</li> </ul> | <p><b>KW2G Series</b> </p> <ul style="list-style-type: none"> <li>• Expandable, as needed, to up to 7 expansion units.</li> <li>• Able to measure micro-power.</li> <li>• Simple measurement function enables measuring CT power only.</li> <li>• The environmental conditions and power can be monitored by using expansion units. (Analog input and pulse input types)</li> </ul> |
| <ul style="list-style-type: none"> <li>■ Need to simply visualize data on Eco-POWER METER</li> <li>■ Need to reduce initial costs</li> <li>■ Need to use the Eco-POWER METER for trials</li> <li>■ Need alternative cable communications (RS485 and LAN)</li> </ul>    | <p><b>KW1M-H / KW2G-H</b> </p> <ul style="list-style-type: none"> <li>• Main unit has built-in memory.</li> <li>• Transfer of data to SD memory card allows visualization on PC screens, and with the <b>KW2G-H</b>, no wiring needed except for operating power supply.</li> </ul>   |
| <ul style="list-style-type: none"> <li>■ Need to measure three-phase four-wire systems</li> </ul>  | <p><b>KW1M Series (except AKW1110) and KW8M Series</b> </p> <ul style="list-style-type: none"> <li>• Direct measurement even of three-phase, four-wire 400 V AC system can be done without VT.</li> </ul>   |
| <ul style="list-style-type: none"> <li>■ Need to collect data wirelessly</li> <li>■ Need to reduce installation costs and man-hour of data collection</li> <li>■ Need to flexibly alter equipment layout</li> <li>■ Need to bypass cabling difficulties</li> </ul>     | <p><b>KW1M-R</b> </p> <ul style="list-style-type: none"> <li>• Installation costs reduced because no wires are needed for communications.</li> <li>• Auto routing system for easy wireless set up</li> <li>• RS485 connection enables other Eco-POWER METERS to be ready for wireless communications.</li> </ul>  |
| <ul style="list-style-type: none"> <li>■ Need waterproofing for use of water</li> </ul>  | <p><b>KW4M</b> </p> <ul style="list-style-type: none"> <li>• IEC IP66 certified protective structure</li> </ul>   |
| <ul style="list-style-type: none"> <li>■ Need to monitor demand</li> </ul>   | <p><b>KW1M-H / KW8M High performance type</b> </p> <ul style="list-style-type: none"> <li>• Built-in simple demand function</li> <li>• Alarm outputs when demand target value is exceeded.</li> <li>* Demand function of Eco-POWER METER is that of Japanese specifications.</li> </ul>   |
| <ul style="list-style-type: none"> <li>■ Need low-cost power meter</li> <li>■ Need capability to measure 200 V three-phase three-wire system, etc.</li> </ul>  | <p><b>KW1M (AKW1110), KW4M and KW7M</b> </p> <ul style="list-style-type: none"> <li>• Space-saving design at a reasonable price achieve visualization.</li> </ul>   |

# USEFUL FUNCTIONS

## 1 A / 5 A CT input type

### When you want to use a general-purpose CT

Without using a dedicated CT, direct input from up to 4,000 A CT in the primary side, 1 A or 5A CT in the secondary side is possible.




**KW8M**  
1 A / 5 A CT input type

You can measure with a direct connection to an already-installed large-capacity general-purpose CT.


#### Other Eco-POWER METER Series

When taking dedicated CT measurements of more than 600 A

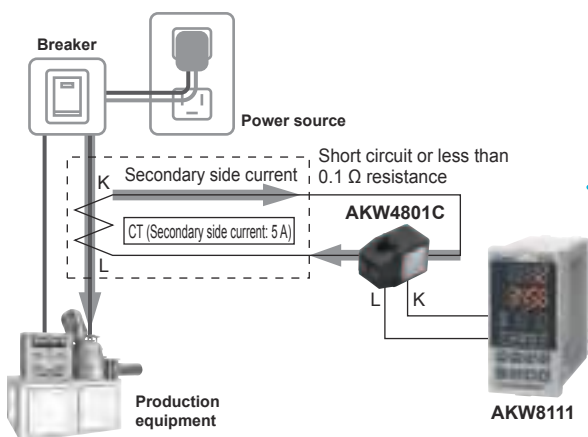

#### KW8M 1 A / 5 A CT input type

When taking large-capacity general-purpose CT measurements of more than 600 A

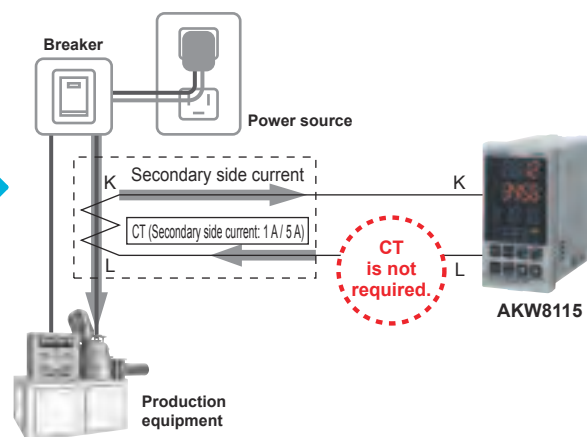

Eco-POWER METER Series accuracy does not include CT error. For dedicated CT measurements of more than 600 A, two CTs are necessary, but since the 1 A / 5 A CT input type **KW8M**, direct input from a single CT is possible, and you can carry out measurement with higher accuracy than provided by other Eco-POWER METER Series models. For measurements of less than 600 A, measurement from a single CT, whether dedicated or general-purpose, is possible.

## Inverter (primary side) measurement function

### For measurement of inverter power supply equipment introduced for saving energy

Owing to general susceptibility to high frequency interference, it is said to be difficult to accurately measure power supplied by inverters.



**Entire Eco-POWER METER Series**  
\*Only Eco-POWER METERS with power measurement function

Our customers expressed strong demand for a line-up of Eco-POWER METERS that would enable measurement of inverter power supplies (primary side).

Ideal for measuring inverter power for large equipment, lighting, etc.

Application example



Compressor



Molding machine




Lighting

# USEFUL FUNCTIONS

## Unit expansion possible function

**Up to 8 units! expandable to suit conditions of use without waste!**

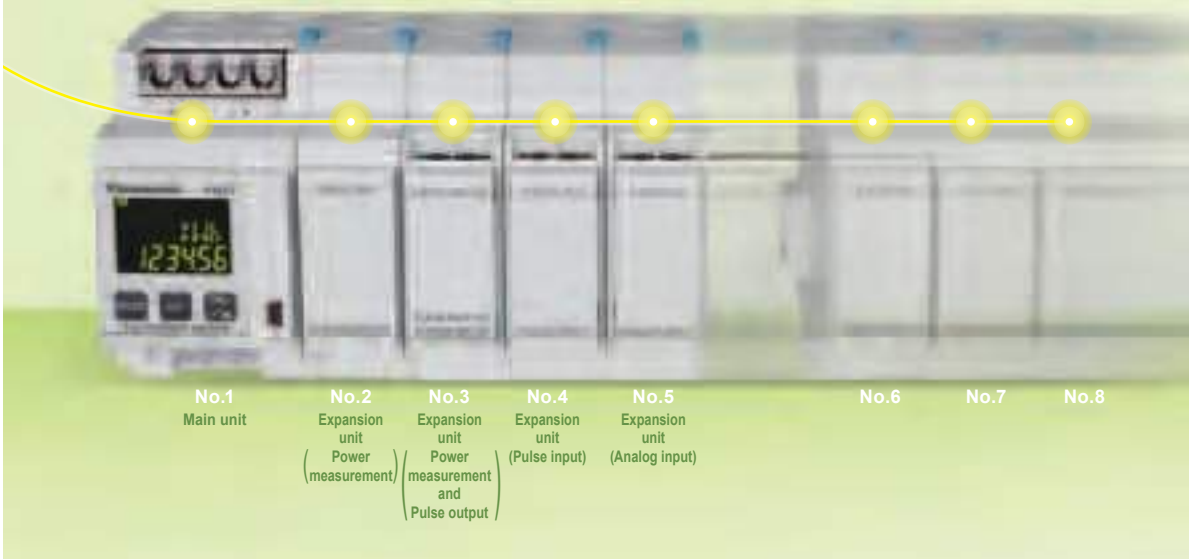


## You can get pulse output from each measurement circuit

### Application example


Expansion unit (AKW2160G) can be used to monitor integrated electric power value according to measured power or to issue alarms from pulse output, and can be controlled by PLC or other host system.

Using pulse output it is easy to connect to other companies' equipment with pulse input functions.

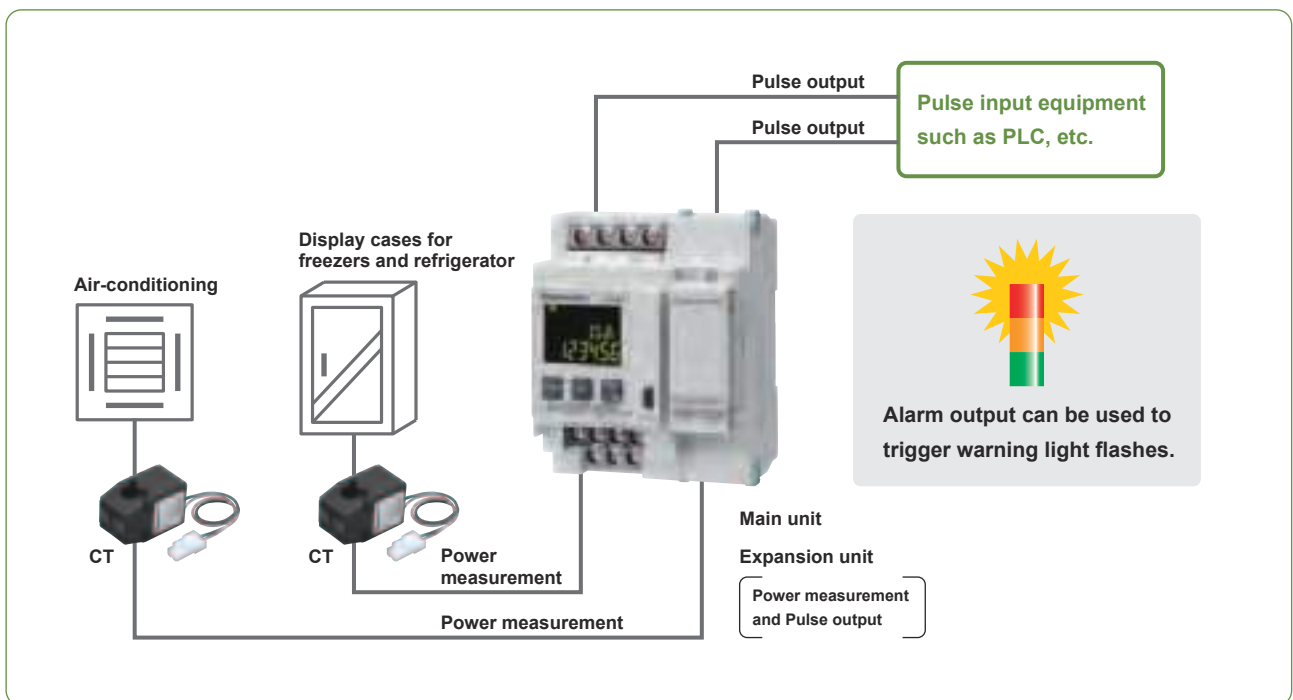

### Easy wire-saving expandability brings diversity of measurement

Eliminate excess wiring by using up to seven expansion units to add-on the required number of CT inputs for your application.

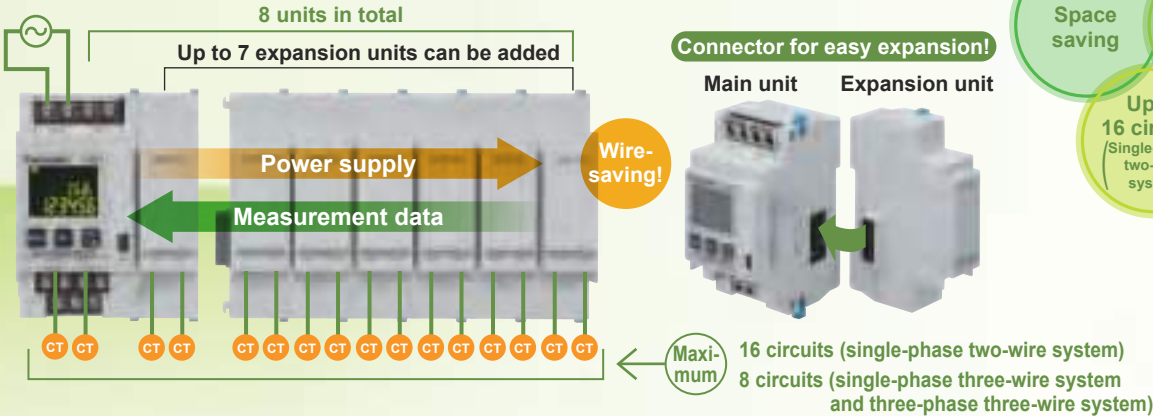


### Connectable to various sensors as well as electric power

### Application example

Air/water consumption, temperature, humidity, illumination and other environmental conditions along with power can be monitored by using expansion units for pulse/analog input.

- Power measurement
  - Main unit (AKW2010G)
  - Main unit (AKW2020G)
  - Expansion unit (AKW2110G)
  - Expansion unit (AKW2160G)
- Pulse input
  - Main unit (AKW2010G) = one input
  - Main unit (AKW2020G) = one input
  - Expansion unit (AKW2152G) = two inputs
- Analog input
  - Expansion unit (AKW2182G) = two inputs

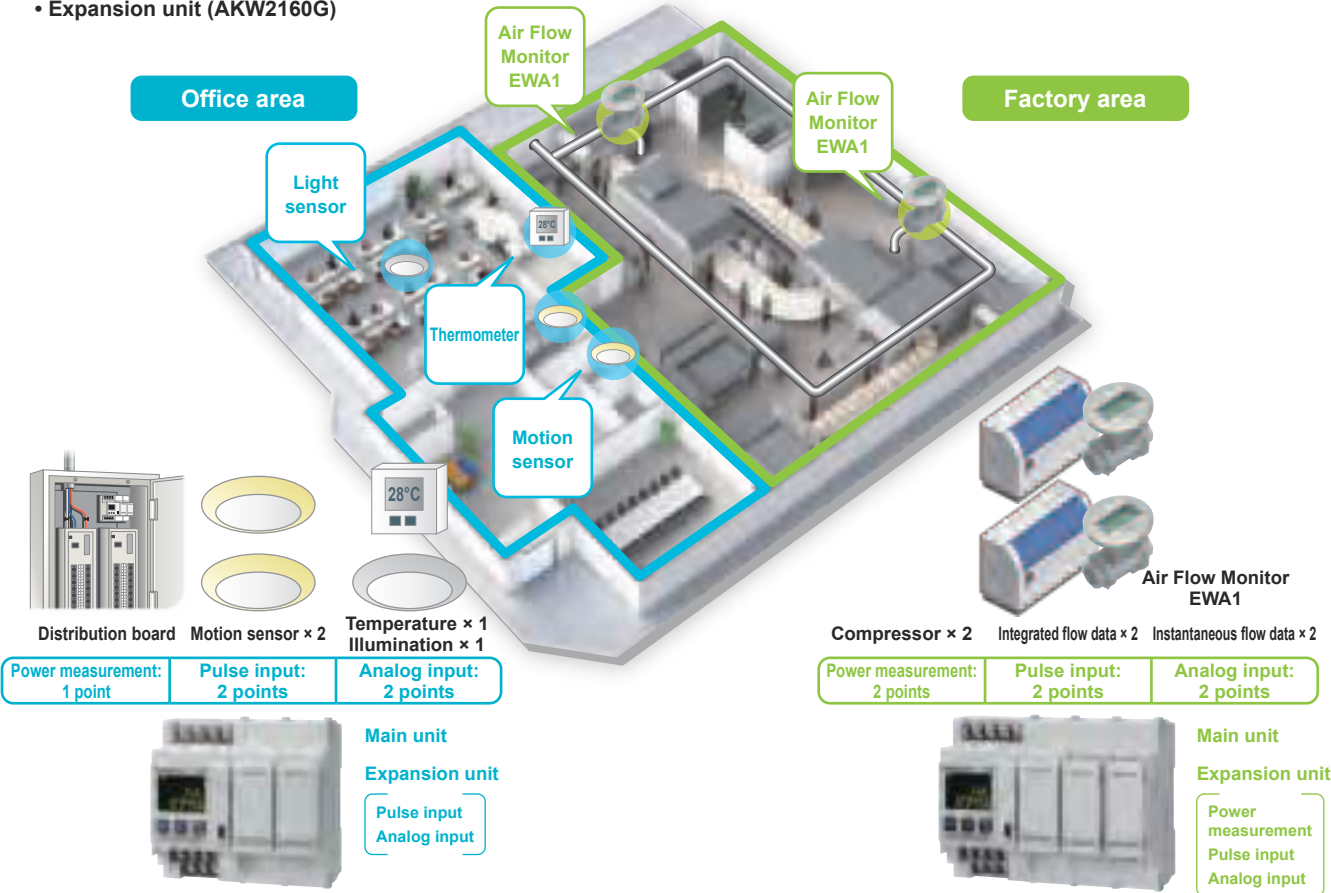

# USEFUL FUNCTIONS

## SD memory card function

Easy to implement, visualization of energy usage made easy!



Measurement data is automatically saved to an SD memory card.

Data collection is possible without a network.

- Data can be saved at intervals of 1, 5, 10, 15, 30, or 60 minutes.
- Previous power usage is displayed on screen (For KW1M-H: up to 1.5 years worth, for KW2G-H: up to 8 days worth).
- Lithium battery backup eliminates worries during power outage.
- Data is stored to memory of main unit when an SD memory card is not inserted.



Measurement data that is saved to the SD card can be easily displayed in graph form using the free KW View software tool.


- No complicated settings are required. Data from multiple Eco-POWER METERS can be compared in a single graph.
- In addition to electrical power, create comparison graphs for pulse data or analog data loaded by KW2G-H expansion unit (pulse input type and analog input type).



## Ideal for switchboards or embedded devices

### Application example


SD memory card compatibility enables economical implementation without the need to set up an external data loggers and a LAN or other network connection for measuring and storing the data. Takes only a small space in an electrical switchboard or embedded device and is ideal for small-scale measurement.

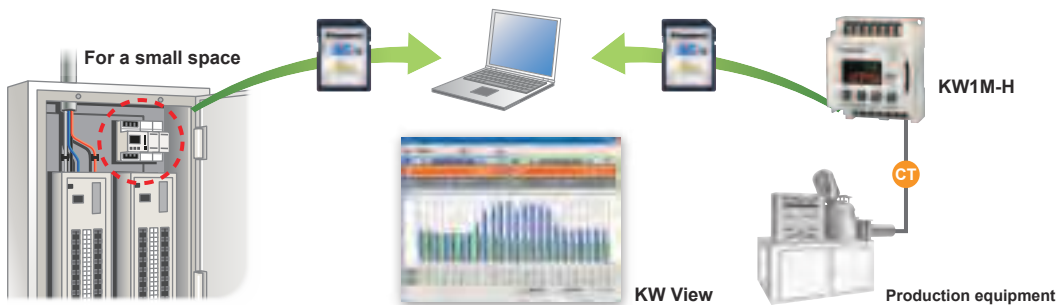

## For measurements at remote locations

### Application example

Using the free KW Watcher software, you can simultaneously graph data stored in the Data logger as well as on the SD memory card.

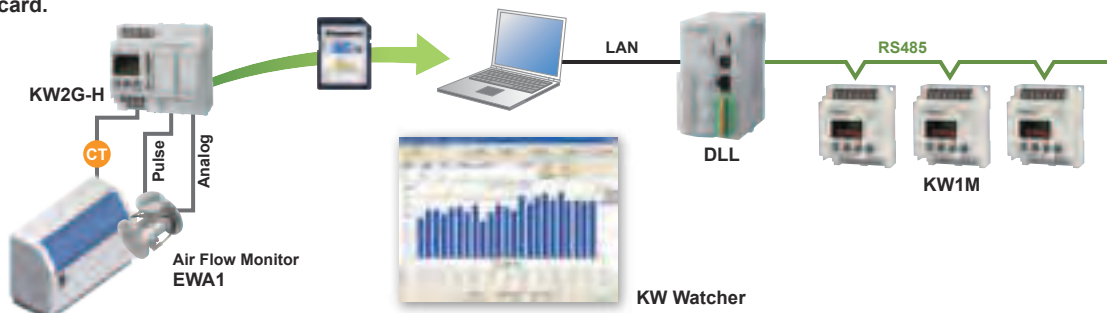




Wireless capability

Easy wire-saving in existing facilities where wiring is difficult



KW1M-R


Going wireless reduces the labor and installation cost for implementation

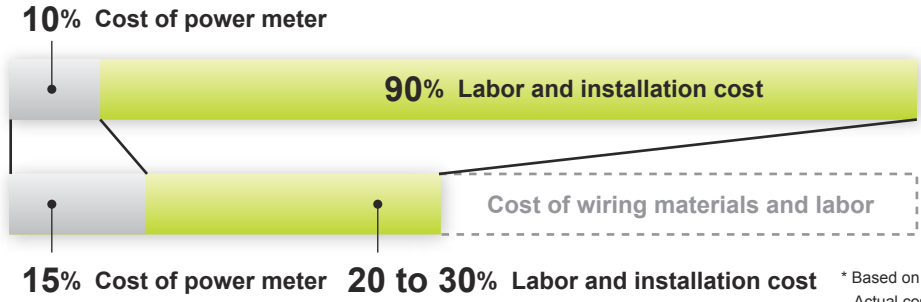

About half!


\* Based on internal research  
Actual costs depend on site conditions.

Wireless auto routing allows easy communications setting via the built-in screen. Using RS485 connection also enables wireless communications other Eco-POWER METERS besides the KW1M-R

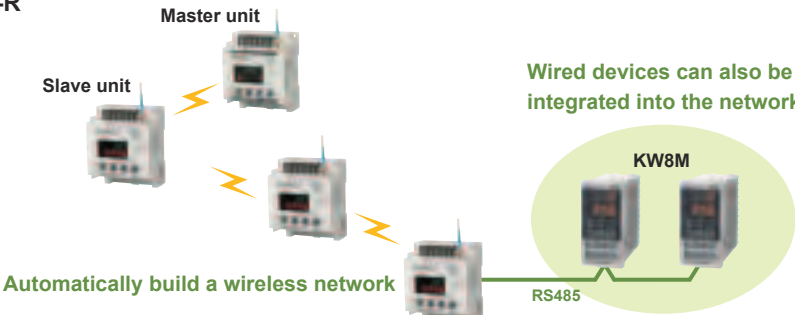

You can connect to up to 99 MEWTOCOL devices, 247 MODBUS (RTU) devices (incl. slave units).

Ideal for installation where wiring is difficult or where equipment layout flexibility is required **Application example**

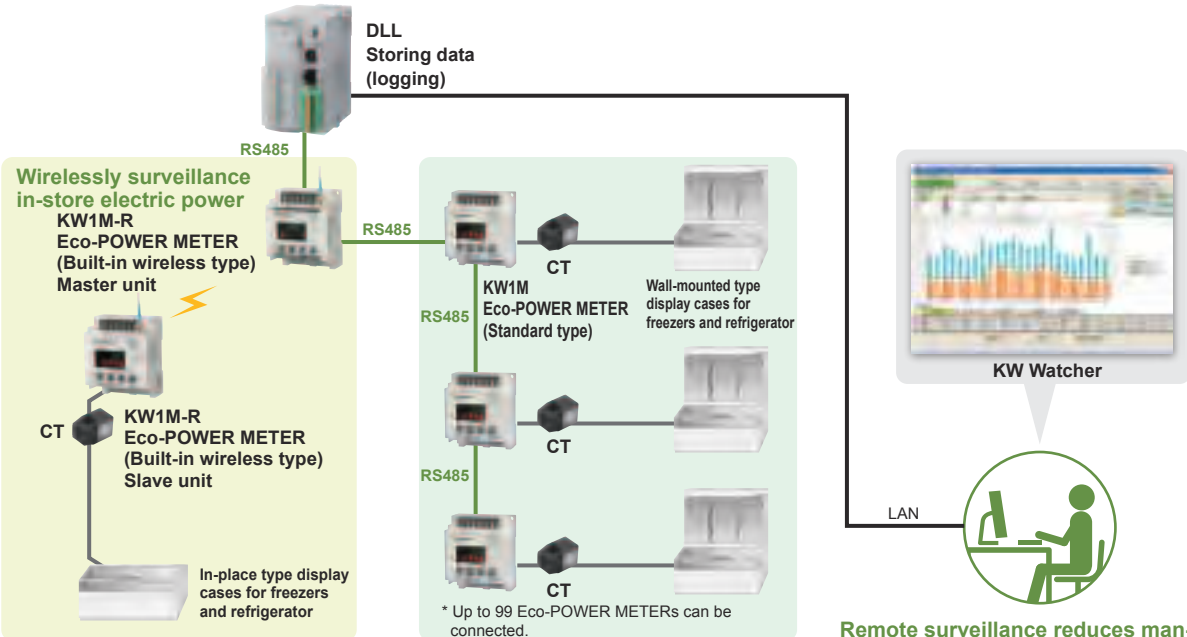

\*Please contact our sales offices for more information about which areas this product can be used.

# USEFUL FUNCTIONS

## Micro-power measurement function


### You can even visualize standby power

#### Standby power is a key to saving energy

By understanding both operating power and standby power, you can reduce non-operational energy wastage and initiate power-saving activities that go beyond what was formerly possible.



KW2G and KW2G-H can also measure fine currents. When the load current declines, micro-power measurement mode is automatically activated (auto range switching function).

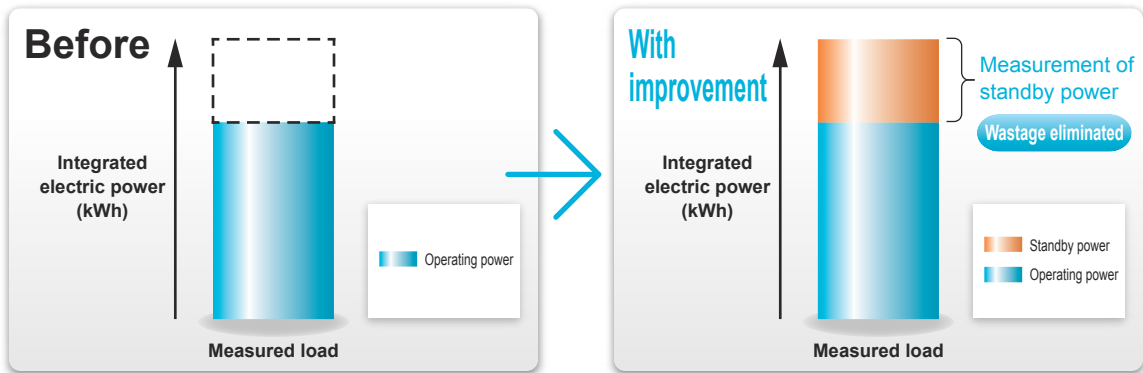

## Simple measurement function


### For existing equipment that must stay switched on and sequential measurement



Ideal for existing facilities where it is better not to switch off equipment and for sequential measurement **Application example**

No power supply wiring needed for the measuring the load! Because connection to the CT is possible, electric power measurement can be done without powering down the equipment.

- STEP1** Phase and wire system setting (for each unit)
- STEP2** Set simple measurement mode
- STEP3** Voltage and power factor setting (common to each unit)
- STEP4** Set simple measurement mode

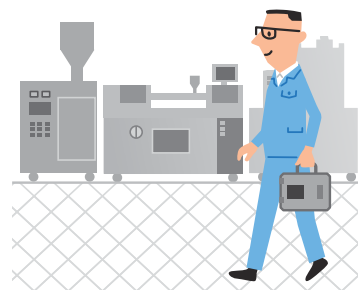


Simple demand function

# Affordable peak demand control!

Estimate power consumption peak demand and get support for power management and cost-efficiency.



## Operation overview of simple demand control

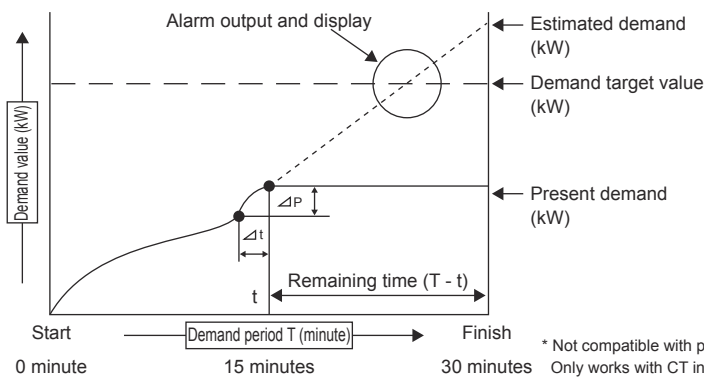

The simple demand function averages electric power during 30-minute periods and estimates demand on a per-minute basis.


\* Not compatible with pulse input.  
Only works with CT input (power measurement).

\* The demand function of Eco-POWER METER is that of Japanese specifications.

## Demand control for cost-efficiency

## Application example



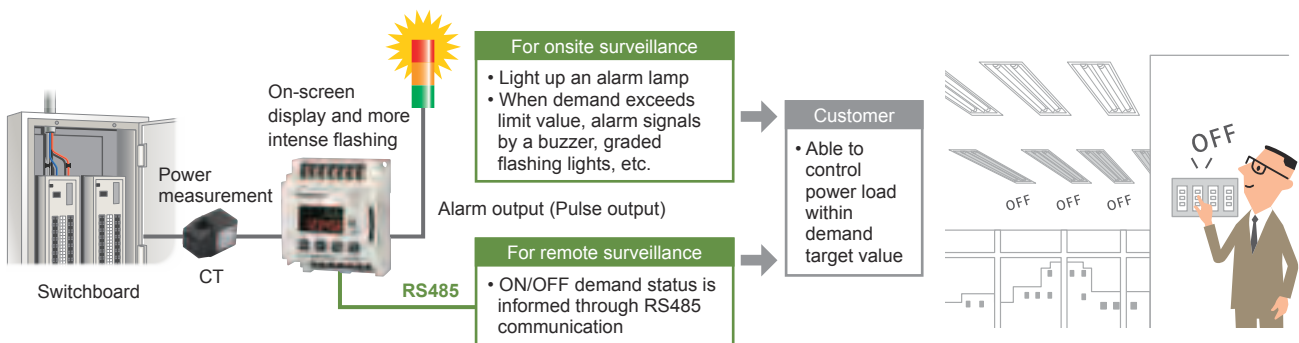





If demand exceeds present demand or estimated demand target values, an alarm alerts the customer.



\*Simple demand should be treated as a rough guide. Power-use scheduling is set by the Eco-POWER METER.

# PERFORMANCE COMPARISON

○ : Available  
 — : Not available

| Product name   | Main unit   |   | Expansion unit  |   |   |   | KW1M<br>Standard type   | KW1M-H<br>SD memory<br>card type  |   |                    |
|--|---|---|---|---|---|---|---|---|---|--------------------|
|  | KW2G  | KW2G-H  | KW2G / KW2G-H   |   |   |   |   |   |   |                    |
|  | Standard type   | SD memory card type   | Power measurement   | Power measurement<br>and Pulse output   | Pulse input   | Analog input  |   |   |   |                    |
| Appearance   |  |                                        |  |  |  |  |  |  |   |                    |
| Model No.  | AKW2010G  | AKW2020G  | AKW2110G  | AKW2160G  | AKW2152G  | AKW2182G  | AKW1110   | AKW1111   | AKW1121   |                    |
| Dimensions (mm inch)<br>(W × H × D)                  | 50×95×65<br>1.97×3.74×2.56  |   | 25×95×65<br>0.98×3.74×2.56  |   |   |   | 75×90×50<br>2.95×3.54×1.97  |   |   |                    |
| Mounting method                                      | DIN rail (sold separately)  | ○   | ○   | ○   | ○   | ○   | ○   | ○   | ○   |                    |
|  | Screw installation  | —   | —   | —   | —   | —   | ○   | ○   | ○   |                    |
|  | Mounting frame (sold separately)  | —   | —   | —   | —   | —   | ○   | ○   | ○   |                    |
|  | In panel mounting   | ○   | ○   | ○   | ○   | ○   | ○   | ○   | ○   |                    |
| On panel mounting                                    | —   | —   | —   | —   | —   | —   | ○ [Mounting frame (sold separately) is required.]                                   |   |   |                    |
| Operating power supply                               | 100 to 240 V AC   |   |   |   |   |   |   |   |   |                    |
| Input measured voltage<br>(Select with setting mode) | 100/200 V AC system   |   |   |   |   | —   | —   | 100/200 V AC system   | 100/200/400 V AC system                           |                    |
| Phase and wire system                                | Single-phase two-wire system  | ○   | ○   | ○   | ○   | —   | —   | ○   | ○   | ○                  |
|  | Single-phase three-wire system  | ○   | ○   | ○   | ○   | —   | —   | ○   | ○   | ○                  |
|  | Three-phase three-wire system   | ○   | ○   | ○   | ○   | —   | —   | ○   | ○   | ○                  |
|  | Three-phase four-wire system  | —   | —   | —   | —   | —   | —   | —   | ○   | ○                  |
| Load measurement for<br>400 V AC system (Note 1)     | External voltage transformer (VT) required.                                       |   |   |   |   | —   | —   | External voltage transformer (VT) required.   | Transformer not required<br>Direct input possible |                    |
| Current transformer (CT)                             | Dedicated type: 5 A, 50 A, 100 A, 250 A, 400 A and 600 A                          |   |   |   |   | —   | —   | Dedicated type: 5 A, 50 A, 100 A, 250 A, 400 A and 600 A                            |   |                    |
| Communication  | Interface   | Conforming to RS485   |   |   |   |   |   |   |   |                    |
|  | Communication protocol  | MEWTOCOL/MODBUS (Selectable with setting mode)<br>Restrictions apply. Please check communication specifications column. |   |   |   |   |   |   |   |                    |
|  | Number of connected units   | 99 (max.)   |   |   |   |   |   |   |   |                    |
| Number of pulse input point (Note 2)                 | 1 point   | 1 point   | —   | —   | 2 points  | —   | —   | 1 point   | 1 point   |                    |
| Number of pulse output point                         | 1 point   | 1 point   | —   | 1 point   | —   | —   | 1 point   | 1 point   | 1 point   |                    |
| Number of analog input point (Note 3)                | —   | —   | —   | —   | —   | 2 points  | —   | —   | —   |                    |
| Excess alarm output                                  | Instantaneous active electric power   | ○   | ○   | —   | ○   | —   | —   | ○   | ○   | ○                  |
|  | Current value   | ○   | ○   | —   | ○   | —   | —   | ○   | ○   | ○                  |
|  | Stand-by electric power   | ○   | ○   | —   | ○   | —   | —   | —   | ○   | ○                  |
|  | Preset value  | ○   | ○   | —   | —   | —   | —   | —   | ○   | ○                  |
|  | Demand (Note 4)   | —   | —   | —   | —   | —   | —   | —   | —   | ○                  |
| Main unit memory function                            | —   | ○   | —   | —   | —   | —   | —   | —   | ○   |                    |
| External memory function                             | —   | ○   | —   | —   | —   | —   | —   | —   | ○   |                    |
| Calendar timer function                              | —   | ○   | —   | —   | —   | —   | —   | —   | ○   |                    |
| Simple measurement                                   | ○   | ○   | ○   | ○   | —   | —   | —   | —   | —   |                    |
| Measuring items                                      | Integrated electric power   | ○ (Active)  |   |   |   | —   | —   | ○ (Active)  | ○ (Active)  | ○ (Active)         |
|  | Instantaneous electric power  | ○ (Active, Reactive, Apparent, Regenerative)  |   |   |   | —   | —   | ○ (Active)  | ○ (Active)  | ○ (Active)         |
|  | Current   | ○ (R, N/S, and T)   |   |   |   | —   | —   | ○ (R and T)   | ○ (R, S, and T)                                   | ○ (R, S, and T)    |
|  | Voltage   | ○ (RS, RT, and TS)  |   |   |   | —   | —   | ○ (R and T)   | ○ (R, S, and T)                                   | ○ (RS, RT, and TS) |
|  | Electricity charge (Note 5)   | ○   | ○   | Displayed on<br>the main unit   | Displayed on<br>the main unit   | —   | —   | ○   | ○   | ○                  |
|  | Conversion carbon dioxide value   | ○   | ○   |   |   | —   | —   | ○   | ○   | ○                  |
|  | Power factor  | ○   | ○   |   |   | —   | —   | —   | ○   | ○                  |
|  | Frequency   | ○   | ○   | —   | —   | —   | —   | ○   | ○   |                    |
|  | Hour meter  | —   | —   | —   | —   | —   | —   | ○   | ○   | ○                  |
|  | Pulse count value   | ○   | ○   | —   | —   | ○ (Note 6)  | —   | —   | ○   | ○                  |
| Simultaneous power and pulse measurement             | ○   | ○   | —   | —   | —   | —   | —   | ○   | ○   |                    |
| Tool and software<br>(free of charge)                | KW Monitor  | ○   | ○   | ○   | ○   | ○   | ○   | ○   | ○   |                    |
|  | KW Watcher  | ○   | ○   | ○   | ○   | ○   | ○   | ○   | ○   |                    |
|  | KW View   | —   | ○   | ○ When connected to AKW2020G  |   |   |   | —   | —   | ○                  |
|  | KW Network monitor  | —   | —   | —   | —   | —   | —   | —   | —   |                    |
| Standard   | CE and S-MARK   | CE  | CE and S-MARK   | CE  | CE and S-MARK   | —   | CE and S-MARK   |   |   |                    |

Notes: 1) A VT (secondary side rated voltage: 110 V) is needed to measure loads that exceed rated input voltage.  
 2) Input method: contact/non-voltage contact (open collector)  
 3) To set input range of analog input unit using setting mode and select voltage 0 to 5 V/1 to 5 V, current 0 to 20 mA/4 to 20 mA.  
 4) The demand function of Eco-POWER METER is that of Japanese function.  
 5) Eco-POWER METER is primarily designed for managing energy saving. It is not intended to be used for billing.  
 6) Displayed on the main unit

○ : Available  
 — : Not available

| Product name   | KW1M-R<br>Built-in wireless type (Note 1)                     |   | KW7M<br>DIN rail                                  | KW4M DIN□48  |  | KW8M DIN48×96  |   |          |   |
|--|---|---|---|--|--|--|---|----------|---|
|  | Master unit   | Slave unit  |   | MEWTOCOL type  | MODBUS type  | High performance type                                    | 1 A / 5 A CT input type                                     |          |   |
| Appearance   |   |   |   |  |  |  |   |          |   |
| Model No.  | AKW1000   | AKW1131   | AKW7111   | AKW5111<br>AKW5211   | AKW5112<br>AKW5212                                 | AKW8111  | AKW8111H  | AKW8115  |   |
| Dimensions (mm inch)<br>(W × H × D)                  | 75×90×50 2.95×3.54×1.97<br>(Excluding the antenna)            |   | 22.5×75×100<br>0.89×2.95×3.94                     | Screw terminal type: 48×48×81.9 1.89×1.89×3.22<br>11-pin type: 48×48×87.5 1.89×1.89×3.44 |  | 48×96×98.5<br>1.89×3.78×3.88                             |   |          |   |
| Mounting method                                      | DIN rail (sold separately)                                    | ○   | ○   | ○  | ○  | —  | —   | —        |   |
|  | Screw installation  | ○   | —   | —  | —  | —  | —   | —        |   |
|  | Mounting frame (sold separately)                              | —   | —   | —  | ○  | ○  | ○   | ○        |   |
|  | In panel mounting   | ○   | ○   | ○  | ○ [Terminal socket (sold separately) is required.] | —  | —   | —        |   |
|  | On panel mounting   | —   | —   | —  | ○  | ○  | ○   | ○        |   |
| Operating power supply                               | 100 to 240 V AC   |   |   |  |  |  |   |          |   |
| Input measured voltage<br>(Select with setting mode) | —   | 100/200/400 V AC system   | 100/200 V AC system                               |  |  | 100/200/400 V AC system                                  |   |          |   |
| Phase and wire system                                | Single-phase two-wire system                                  | —   | ○   | ○  | ○  | ○  | ○   | ○        |   |
|  | Single-phase three-wire system                                | —   | ○   | ○  | ○  | ○  | ○   | ○        |   |
|  | Three-phase three-wire system                                 | —   | ○   | ○  | ○  | ○  | ○   | ○        |   |
|  | Three-phase four-wire system                                  | —   | ○   | —  | —  | —  | ○   | ○        |   |
| Load measurement for 400 V AC system (Note 2)        | —   | Transformer not required. Direct input possible.  | External voltage transformer (VT) required.       |  |  | Transformer not required. Direct input possible.         |   |          |   |
| Current transformer (CT)                             | —   | Dedicated type: 5 A, 50 A, 100 A, 250 A, 400 A and 600 A  | Dedicated type: 5 A, 50 A, 100 A, 250 A and 400 A |  |  | Dedicated type: 5 A, 50 A, 100 A, 250 A, 400 A and 600 A |   | (Note 4) |   |
| Communication  | Interface   | Conforming to RS485/RS232C  | Conforming to RS485                               |  |  |  |   |          |   |
|  | Communication protocol  | MEWTOCOL/MODBUS (Selectable with setting mode)<br>Restrictions apply. Please check communication specifications column. | MEWTOCOL/MODBUS (Selectable with setting mode)    | MEWTOCOL   | MODBUS   | MEWTOCOL/MODBUS (Selectable with setting mode)           |   |          |   |
|  | Number of connected units                                     | MEWTOCOL: Up to 99 units<br>MODBUS: Up to 247 units   | 99 (max.)   |  |  |  |   |          |   |
| Number of pulse input point (Note 3)                 | —   | 1 point   | —   | 1 point  | 1 point  | 1 point  | 1 point   | 1 point  |   |
| Number of pulse output point                         | —   | 1 point   | 1 point   | 1 point  | 1 point  | 1 point  | 1 point   | 1 point  |   |
| Number of analog input point                         | —   | —   | —   | —  | —  | —  | —   | —        |   |
| Excess alarm output                                  | Instantaneous active electric power                           | —   | ○   | ○  | ○  | ○  | ○   | ○        |   |
|  | Current value   | —   | ○   | —  | —  | —  | ○   | ○        |   |
|  | Stand-by electric power                                       | —   | ○   | —  | —  | —  | ○   | ○        |   |
|  | Preset value  | —   | ○   | —  | ○  | ○  | ○   | ○        |   |
|  | Demand (Note 5)   | —   | —   | —  | —  | —  | ○   | —        |   |
| Main unit memory function                            | —   | —   | —   | —  | —  | —  | ○   | —        |   |
| External memory function                             | —   | —   | —   | —  | —  | —  | —   | —        |   |
| Calendar timer function                              | ○   | —   | —   | —  | —  | —  | ○   | —        |   |
| Simple measurement                                   | —   | —   | —   | —  | —  | —  | —   | —        |   |
| Measuring items                                      | Integrated electric power                                     | —   | ○ (Active)  | ○ (Active)   | ○ (Active)   | ○ (Active)   | ○ (Active, Reactive, Apparent)                              |          |   |
|  | Instantaneous electric power                                  | —   | ○ (Active)  | ○ (Active)   | ○ (Active)   | ○ (Active)   | ○ (Active, Reactive, Apparent)                              |          |   |
|  | Current   | —   | ○ (R, S, and T)                                   | ○ (CT1 and CT2)  | ○ (CT1 and CT2)                                    | ○ (CT1 and CT2)  | ○ (CT1, CT2, and CT3)                                       |          |   |
|  | Voltage   | —   | ○ (RS, RT, and TS)                                | ○ (between 1 and 2, between 2 and 3)   | ○ (between 1 and 2, between 2 and 3)               | ○ (between 1 and 2, between 2 and 3)                     | ○ (between P1 and P0, between P2 and P0, between P3 and P0) |          |   |
|  | Electricity charge (Note 6)                                   | —   | ○   | ○  | ○  | ○  | ○   | ○        | ○ |
|  | Conversion carbon dioxide value                               | —   | ○   | —  | ○  | ○  | —   | —        | — |
|  | Power factor  | —   | ○   | —  | —  | —  | ○   | ○        | ○ |
|  | Frequency   | —   | ○   | —  | —  | —  | ○   | ○        | ○ |
|  | Hour meter  | —   | ○   | —  | ○  | ○  | ○   | ○        | ○ |
|  | Pulse count value<br>Simultaneous power and pulse measurement | —   | ○   | —  | ○  | ○  | ○   | ○        | ○ |
| Tool and software (free of charge)                   | KW Monitor  | —   | ○   | ○  | ○  | ○  | ○   | ○        |   |
|  | KW Watcher  | —   | ○   | ○  | ○  | —  | ○   | ○        |   |
|  | KW View   | —   | —   | —  | —  | —  | —   | —        |   |
|  | KW Network monitor  | ○   | ○   | —  | —  | —  | —   | —        |   |
| Standard   | — (Note 1)  |   | CE and S-MARK                                     | CE, UL, and S-MARK   |  | CE and S-MARK  |   |          |   |

Notes: 1) Please contact our sales offices for more information about which areas this product can be used.  
 2) A VT (secondary side rated voltage: 110 V) is needed to measure loads that exceed rated input voltage.  
 3) Input method: contact/non-voltage contact (open collector)  
 4) Commercially available current transformer (CT) (When using secondary current 1 A or 5 A and when primary current is 4,000 A or less)  
 5) The demand function of Eco-POWER METER is that of Japanese function.  
 6) Eco-POWER METER is primarily designed for managing energy saving. It is not intended to be used for billing.

# SOFTWARE TOOL

## KW View

For KW1M-H / KW2G-H

### For easy visualization of measurement data collected by an SD memory card

Display tool | Verification




- Simply load the measurement data (CSV file) collected in an SD/SDHC memory card into your PC. You can then display the data as a graph by month, day and hour, and print it out.
- Using easy operation, you can manage Eco-POWER METER data for up to 99 units.
- KW1M-H** graph shows display is in 60 minutes units (fixed).
- KW2G-H** graph shows display is in 15, 30 or 60 minutes units (fixed).
- NEW** Data for integrated electric power, pulse data (count values), analog data (converted to digital values) can now be displayed graphically.
- NEW** Automatic device recognition.



Before and after chart of integrated electric power KW View



Graph comparing integrated electric power KW View and temperature (analog)

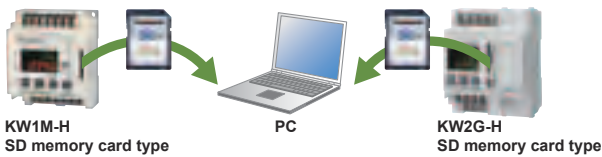

\* Analog data (converted digital values) are only displayed on the graph for each hour.

## KW Watcher

Compatible with all products (if data is stored by DLL or DLU)

### For easy “visualization” of data collected in DLL and DLU\* \*DLL is the abbreviation for Data Logger Light. DLU is the abbreviation for Web Datalogger Unit.

Measurement monitoring software | Management




- Collected files stored according to unit of time on the Data logger, are downloaded as required to a PC and graphs and numerical data can be displayed for simple electric power, water amount, temperature, primary unit and air flow amount measurement values.
- Measurement is in 15 min, 30 min, and 60 min units.
- KW1M-H / KW2G-H** data stored on SD memory cards can also be displayed. (Requires change of KW Watcher settings)



Before and after chart of integrated electric power KW Watcher



Electric power use broken down by facility KW Watcher

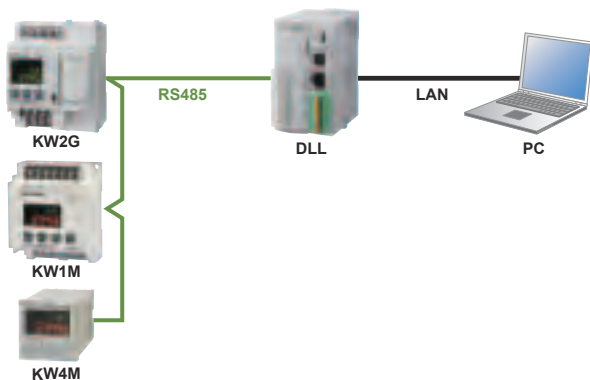

All software tool can be downloaded\*, free of charge, from our website.

You can also check the required operating environments.

\*Customer registration is required before you download.

# KW Monitor


## For easy visualization of real-time Eco-POWER METER data

Software for centralized control by PC | Analysis and Eco-POWER METER setting

- You can directly access the Eco-POWER METER via your PC.  
Data can be constantly collected and easily displayed numerically or in graph form.
- Logging can be selected among 1 sec, 5 sec, 10 sec, 15 sec, 30 sec, 60 sec, 1 min, 5 min, 10 min, 15 min, 30 min, and 60 min units.  
(Depending on communication conditions and number of connections, data may not be acquired for the collection period.)
- Electrical power can be measured either integrated or instantaneous.
- With simple demand functions both logging and demand estimation can be performed simultaneously.  
Display of warning messages according to target value settings is useful for energy management.
- NEW** ■ Data for integrated electric power, pulse data (count values), analog data (converted to digital values) can now be displayed graphically.
- Communication protocol compatibility only with MEWTOCOL



Graph showing hour integrated value and total integrated value KW Monitor

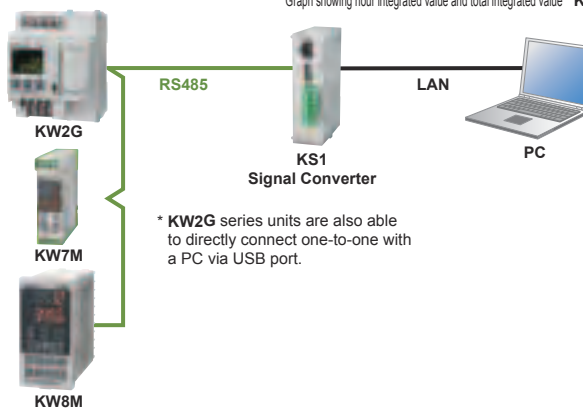

\* KW2G series units are also able to directly connect one-to-one with a PC via USB port.

## Eco-POWER METER setting

- For each Eco-POWER METER, settings can all be set, changed, or stored on a PC.  
(Storage of setting values is possible only, via USB transfer, with the KW2G series.)
- Since changes can be made to multiple Eco-POWER METERS at the same time, the labor of setting units one at a time is saved.



Setting screen KW Monitor

# KW Network Monitor

## For wireless network tree check

Built-in wireless type | For KW1M-R | Software for wireless network check | Verification

- This software is useful for making the “visualization” of network at the time of installation or occurrence of a problem.
- You can check the connection status of the wireless network and the terminal devices by connecting your PC to the master unit and carrying out simple operations, which will help you to quickly resolve problems.
- This software can read out an error log stored in KW1M-R (master unit).



Wireless network confirmation screen KW Network Monitor

## Specifications

# KW2G / KW2G-H



\* AKW2020G and AKW2160G have only CE certification marking.

## KW2G / KW2G-H COMMON FEATURES

- Up to 7 expansion units can be added as required without need for power or other wiring.  
Up to 16 circuits (single-phase two-wire) or 8 circuits (single-phase three-wire; three-phase three-wire)
- If an expansion unit (pulse input and analog input type) is used, flow, temperature, humidity and other environmental conditions can be monitored.
- By using an expansion unit (power measurement and pulse output), pulse output is possible for each measuring circuit.
- Capable of various types of measurement.  
Simultaneous measurement of regenerative power (instantaneous), micro-power, inverter power (primary side), electrical power and pulse (flow, etc.)

- Simple measurement function enables measurement of electric power of only the CT.
- Via USB connection with a PC, using **KW Monitor**, you can easily check initial settings and operating status.
- Quick installation: The units fit DIN rails.
- Pulse output width can be freely set in the range of 1 to 100 ms; finer power values can be output to an external counter.
- Because pulse input status is displayed, the operational status of external connected devices can be monitored.

## FEATURES OF KW2G-H

- Internal memory  
Automatic logging function (read by SD memory card).
- Automatic logging of measurement data on expansion units.
- Built-in battery (clock and log data backup).

## ORDER GUIDE

| Product name                     |                                 | Phase and wire system   | Operating power supply               | Input measured voltage                                | Current transformer (sold separately)                      | Model No.  |          |
|----------------------------------|---------------------------------|---|--------------------------------------|---|--|--|----------|
| KW2G / KW2G-H<br>Eco-POWER METER | Main unit (Standard type)       | Single-phase two-wire system<br>Single-phase three-wire system<br>Three-phase three-wire system | 100 to 240 V AC<br>50 / 60 Hz        | 100 / 200 V AC system                                 | Dedicated type<br>5 A, 50 A, 100 A,<br>250 A, 400 A, 600 A | AKW2010G   |          |
|                                  | Main unit (SD memory card type) |   |                                      |   |  | AKW2020G   |          |
|                                  | Expansion unit                  | Power measurement   | Number of input points<br>2 channels | Input method<br>Contact / No contact (open collector) |  | Input range<br>Voltage: 0 to 5 V / 1 to 5 V (Note 3) Current: 0 to 20 mA / 4 to 20 mA (Note 3) | AKW2110G |
|                                  |                                 | Power measurement and Pulse output (Note 1)   |                                      |   |  |  | AKW2160G |
|                                  |                                 | Pulse input (Note 2)  |                                      |   |  |  | AKW2152G |
|                                  |                                 | Analog input (Note 2)   |                                      |   |  |  | AKW2182G |

Notes: 1) Use a main unit (standard type) of Ver. 1.04 or later and a main unit (SD memory card type) of Ver.1.01 or later.  
2) Use a main unit (standard type) of Ver. 1.02 or later. 3) Select with setting mode

## MEASUREMENT ITEMS

### Power measurement (for AKW2010G, AKW2020G, AKW2110G and AKW2160G)

| Item  | Unit                        | Data display range  |
|---|-----------------------------|---|
| Integrated electric power (Active) (Note 1) | kWh/MWh                     | 0.00 to 9999.99 kWh to 9999.99 MWh, 0.00 to 9999999.99 kWh (when 9-digit display) |
| Instantaneous electric power                | Active (Note 2)             | kW  |
|   | Reactive (Note 2)           | kvar  |
|   | Apparent                    | kVA   |
| Current                                     | R-current                   | A   |
|   | N/S-current                 | A   |
|   | T-current                   | A   |
|   | R (RS)-voltage              | V   |
| Voltage                                     | S (RT)-voltage              | V   |
|   | T (TS)-voltage              | V   |
|   | Electricity charge (Note 3) |   |
| Conversion carbon dioxide value             | kg-CO <sub>2</sub>          | 0.00 to 999999  |
| Power factor (Note 2)                       | Displayed on the main unit  | -1.00 to 1.00 (without identify leading phase and lagging phase)                  |
| Frequency                                   | Hz                          | 47.5 to 63.0  |
| Pulse count value (Note 4)                  |                             | 0 to 999999   |

Notes: 1) KW2G / KW2G-H can measure regeneration electric power. Integrated electrical power is not integrated (not subtracted) when detecting regeneration electric power.  
2) While detecting regeneration electric power, minus is displayed on instantaneous active electric power and power factor.  
3) Eco-POWER METER is designed chiefly to manage saving energy. It is neither intended nor can it be legally used for billing.  
4) Displayed digit of pulse counter differs according to the pre-scale set by pre-scale setting mode.

### Pulse input (for AKW2152G)

| Item                     | Data display range |
|--------------------------|--------------------|
| Pulse count value (Note) | 0 to 999999        |

Note: The number of displayed digit of pulse count value differs according to the pre-scale set by pre-scale setting mode.

### Analog input (for AKW2182G)

| Item                           | Data display range |
|--------------------------------|--------------------|
| Converted digital value (Note) | -999999 to 999999  |

Note: The number of displayed digits of the converted digital values differs according to the preset decimal point position.

## SPECIFICATIONS

For details, please refer to the Eco-POWER METER user's manual.

### Main unit specifications

| Item                                  | Specifications  |
|---------------------------------------|---|
| Rated operating voltage               | 100 to 240 V AC (Add to main unit)  |
| Rated frequency                       | 50 / 60 Hz common   |
| Rated power consumption               | Main unit: 6 VA, Expansion unit (Power measurement, Power measurement and Pulse output, and Analog input): 0.5 VA / unit, Expansion unit (Pulse input): 1.0 VA / unit (240 V AC at 25 °C 77 °F)             |
| Allowable operating voltage range     | 85 to 264 V AC (85 % to 110 % of rated operating voltage)   |
| Allowable momentary power-off time    | 10 ms   |
| Ambient temperature                   | -10 to +50 °C +14 to +122 °F (-25 to +70 °C -13 to +158 °F) at storage  |
| Ambient humidity                      | 30 to 85 % RH (at 20 °C 68 °F), non-condensing  |
| Display method                        | LCD with backlight (green), Upper: 5-digit (7-segment 1-digit + 16-segment 4-digit), Lower: 6-digit (7-segment)   |
| Number of connectable expansion units | Max. 7 units  |
| Power failure memory method           | EEPROM (more than 1,000,000 overwrite), Memory items: setting value and integral measuring value  |
| Weight                                | Main unit (Standard type): 180 g, Main unit (SD memory card type): 185 g, Expansion unit (Power measurement): 80 g, Expansion unit (Power measurement and Pulse output, Pulse input and Analog input): 85 g |

### Electric power input specifications (for AKW2010G, AKW2020G, AKW2110G and AKW2160G)

| Item                                  | Specifications   |   |
|---------------------------------------|--|---|
| Accuracy (without error in CT and VT) | Integrated electric power and Instantaneous electric power | Within ± (2.0 % F.S. + 1 digit) (at 20 °C 68 °F, rated input, rated frequency, power factor 1) *Accuracy coverage: 10 to 100 % of rated current |
|                                       | Current  | Within ± (1.0 % F.S. + 1 digit) (at 20 °C 68 °F, rated input, rated frequency, power factor 1) *Accuracy coverage: 10 to 100 % of rated current |
|                                       | Voltage  | Within ± (1.0 % F.S. + 1 digit) (at 20 °C 68 °F, rated input, rated frequency, power factor 1)  |
|                                       | Temperature characteristics                                | Within ± (1.0 % F.S. + 1 digit) (Range of -10 to +50 °C 14 to 122 °F, rated input, power factor 1)  |
|                                       | Frequency characteristics                                  | Within ± (1.0 % F.S. + 1 digit) (Frequency change ± 5 % based on rated frequency, rated input, power factor 1)                                  |



Memory specifications of main unit (for AKW2020G)

| Item                      |  | Specifications   |  |
|---------------------------|--|--|--|
| Logging functions         | File type 1 (instantaneous value) (Note 1)               | Save cycle   | 15 min (00 hr. 00 min 00 sec after the day) (fixed)  |
|                           |  | Save data  | (Instantaneous value) Integrated electric power (1) (2), Instantaneous active electric power (1) (2), Instantaneous reactive electric power (1) (2), Instantaneous apparent electric power (1) (2), R-current (1), R (T)-current (2), S (N)-current, R/RS-voltage (1), R (T/TS)-voltage (2), RT-voltage, Power factor (1) (2), Frequency, Count value, Converted digital value for CH0, Converted digital value for CH1, Pulse count value for CH0 and Pulse count value for CH1 |
|                           |  | Save data amount   | 96 records per file (max. approx. 8 days worth of data)  |
|                           | File type 2 (difference value) (Note 1)                  | Save cycle   | 15 min (00 hr. 00 min 00 sec after the day) (fixed)  |
|                           |  | Save data  | (Difference value) Integrated electric power (1) (2), Count value, Pulse count value for CH0 and Pulse count value for CH1   |
|                           |  | Save data amount   | 96 records per file (max. approx. 8 days worth of data)  |
|                           | File type 3 (instantaneous value detail) (Note 1)        | Save cycle   | Select among 1 min, 5 min, 10 min, 15 min, 30 min, or 60 min<br>(Saved timing) When 1 min is selected: 00 sec after the minute<br>When 10 min is selected: 00, 10, 20, 30, 40, 50 min after the hour<br>When 15 min is selected: 00, 15, 30, 45 min after the hour<br>When 5 min is selected: 00, 05, 10, 15, 20, 25, 30... min after the hour   |
|                           |  | Save data  | Integrated electric power (1) (2), Instantaneous active electric power (1) (2), Instantaneous reactive electric power (1) (2), Instantaneous apparent electric power (1) (2), R-current (1), R (T)-current (2), S (N)-current, R/RS-voltage (1), R (T/TS)-voltage (2), RT-voltage, Power factor (1) (2), Frequency, Count value, Converted digital value for CH0, Converted digital value for CH1, Pulse count value for CH0 and Pulse count value for CH1                       |
|                           |  | Save data amount   | Max. 720 records, 12 hours approx. worth of data (when the save cycle is set to one minute)  |
|                           | Main unit display  | Integrated electric power by day (latest data covering 8 days period) / Integrated electric power by hour (latest data covering 12 hours period) |  |
| Calendar timer function   | Time accuracy Monthly accuracy: ±30 sec (at 25 °C 77 °F) |  |  |
| Content of battery backup | Time measurement and Log data                            |  |  |
| Battery life (Note 2)     | 2 years approx. (at 25 °C 77 °F, in power-off state)     |  |  |

Notes: 1) Using the setting mode, you can select whether or not to write to the SD memory card for each of file types 1, 2, and 3. Files can be created for each unit.  
2) When the battery gets low, the BATT display will start flashing. Please replace the battery in accordance with the battery replacing procedure. Also, battery life will be shortened if the main unit is used in a high temperature environment.

\* While measuring, data is collected in the memory of main unit. If, while measuring, the memory capacity of main unit is reached, data will be overwritten in succession starting from the oldest data. Initialization of the main unit memory is possible.

External memory specifications (for AKW2020G)

• SD memory card slot

| Item                       | Specifications                                |
|----------------------------|---|
| Support media              | SD memory card (Note 1)                       |
| Supported format standards | Compliant with SD and SDHC standards (Note 2) |

Notes:  
1) Operation verified SD memory card: Panasonic Corporation SD/SDHC memory card 2 GB and 4 GB class 4 and over  
2) To format SD memory cards, please download and use the formatting software available on the Panasonic website.  
The file system on a SD memory card that was formatted using standard PC software does not comply with the SD memory card standard.

<SD memory card handling precautions>

Data saved on an SD memory card may be lost in the following cases. Please note that Panasonic Industrial Devices SUNX is not responsible for any losses of recorded data and other direct and indirect damages.  
1) When a customer or a third party incorrectly uses the SD memory card  
2) When the SD memory card is affected by static electricity or electrical noise  
3) When the SD memory card is taken out or the power is turned off while the SD memory card access LED of the unit is flashing (during data writing)  
\* It is recommended that you constantly back up important data to another medium.

Communication specifications

| Item                      | Specifications  |                                    |
|---------------------------|---|------------------------------------|
|                           | RS485 communication   | USB communication (Note 5)         |
| Protocol                  | MEWTocol / MODBUS (RTU) (selectable with setting mode)  | —                                  |
| Transmission function     | —   | Computer link (MEWTocol)           |
| Isolation status          | Isolated with the internal circuit  | Isolated with the internal circuit |
| Number of connected units | 99 units max. (Note 1) (Note 2)   | —                                  |
| Transmission distance     | 1,200 m 3,937 ft max. (Note 3)  | —                                  |
| Transmission speed        | 38,400 / 19,200 / 9,600 / 4,800 / 2,400 bps (selectable with setting mode)  | 12 Mbps (Full-speed)               |
| Transmission format       | Data length: 8-bit / 7-bit (selectable with setting mode) (Note 4)<br>Parity: Not available / Odd number / Even number (selectable with setting mode)<br>Stop bit: 1-bit / 2-bit (selectable with setting mode) | —                                  |
| Communication method      | Half-duplex   | —                                  |
| Synchronous system        | Synchronous communication method  | —                                  |
| Ending resistance         | 120 Ω approx. (built-in)  | —                                  |

Notes:  
1) For RS485 converter on the computer side, we recommend SI-35 and SI-35USB (from LINE EYE Co., Ltd.).  
2) When using SI-35, SI-35USB or PLC from our company (which can be connected up to 99 units), up to 99 Eco-POWER METER can be connected. [When using C-NET adapter, up to 32 Eco-POWER METER (max.)] In case using this system with the other devices, up to 31 Eco-POWER METER can be connected.  
3) Please check with the actual devices when some commercial devices with RS485 interface are connected. The number of connected devices, transmission distance, and transmission speed may be different according to using transmission line.  
4) With MODBUS (RTU) protocol, it works only with 8-bit. 5) When using the USB port, install the dedicated USB driver.

Pulse input specifications (for AKW2010G, AKW2020G and AKW2152G)

| Item                                  | Specifications  |  |
|---------------------------------------|---|--|
| Input mode                            | Addition (Fixed)  |  |
| Max. counting speed                   | 50 kHz / 30 Hz (Select with setting mode)   |  |
| Pulse input (Min. input signal width) | 0.01 ms (When 50 kHz selected) / 16.7 ms (When 30 Hz selected), ON : OFF ratio = 1 : 1  |  |
| Input signal                          | Contact / No contact (open collector)<br>• Impedance when shorted: Max. 1 kΩ<br>• Residual voltage when shorted: Max. 2 V<br>• Impedance when open: Min. 100 kΩ |  |
| Output mode                           | HOLD (Over count)   |  |
| Prescale                              | Decimal point   | Setting possible up to under 3-digit     |
|                                       | Range   | 0.001 to 100.000 (Set with setting mode) |

Analog input specifications (for AKW2182G)

| Item                                   | Specifications                                  |  |
|--|---|--|
| Number of input points                 | 2 channels                                      |  |
| Input range (Select with setting mode) | Voltage   | 0 to 5 V / 1 to 5 V (selectable with setting mode)     |
|  | Current   | 0 to 20 mA / 4 to 20 mA (selectable with setting mode) |
| Converted digital value                | 0 to 4000 (decimal number) (Note)               |  |
| Resolution                             | 1/4000 (12 bits)                                |  |
| Overall precision                      | ±1 % F.S. or less (-10 to +55 °C +14 to 131 °F) |  |
| Input impedance                        | Voltage   | 440 kΩ   |
|  | Current   | 125 Ω  |
| Absolute maximum input                 | Voltage   | - 0.3 to +10 V   |
|  | Current   | - 2 to + 30 mA   |
| Input protection                       | Diode   |  |

Note: Digital conversion value differs according to the scaling conversion value set by setting mode. If the analog input value exceeds the upper or lower limit, the digital value will preserve the upper or lower limit.

Pulse output (Transistor output) specifications (for AKW2010G, AKW2020G and AKW2160G)

| Item   | Specifications  |
|--|---|
| Number of output point   | 1 point   |
| Insulation method  | Optical coupler   |
| Output type / Output capacity  | Open collector / 100 mA 30 V DC   |
| Pulse width (when pulse output with integrated active electric power selected) | 1 to 100 ms (selectable with setting mode) (Note 1)   |
| ON state voltage drop  | 1.5 V or less   |
| OFF state leakage current  | 100 μA or less  |
| Pulse output unit (selectable with setting mode)                               | 0.001 kWh, 0.01 kWh, 0.1 kWh, 1 kWh, 10 kWh, 100 kWh /  |
|  | Power alarm (AL-P) / Current alarm (AL-C) / Stand-by power alarm (AL-S) / Counter (Cnt) (Note 2, 3) |

Notes: 1) Pulse width setting is possible using main unit software AKW2010G Ver. 1.04 or later and AKW2020G Ver. 1.01 and later.  
2) For normal operation of other functions, to switch on minimal pulse width of 1 to 10 ms, the maximum pulse output interval is 25 ms. Consequently, a minimum measurable pulse unit output setting of 40 pulses or less per 1 second is recommended.  
How to calculate  
Unit for pulse output: PL-P > Max. measurement power (kW) / 3,600 sec × 4 pulse/sec  
When the pulse output unit is 0.001, the maximum power that can be properly measured by pulse output is 144 kW (3600 sec × 40 pulse/sec × 0.001).  
Cautions:  
(1) Count errors may occur if the pulse output is set to 40 pulses or more per 1 second.  
(2) If the pulse output OFF time is set too short, count errors by connected counters, PLCs (Programmable Logic Controllers) may occur.  
3) These count output specifications are only for the main unit.

# KW1M / KW1M-H / KW1M-R



## KW1M COMMON FEATURES

- Output of alarm signal is possible using the "alarm setting".
- 50 mm 1.97 inch thickness makes it perfect for control panel installations.
- Selectable screw, DIN rail and panel installation.
- Display switchable between electrical power and electricity charge usage.
- Display of calculated CO<sub>2</sub> value possible
- Measurement of inverter power supplies (primary side) is available.

**NEW**

## FEATURES OF KW1M-H

- Internal memory (Read by SD memory card)
- Built-in battery (for clock and log data backup)
- Calendar timer function.
- Simple demand function.

**NEW**

## FEATURES OF KW1M-R

- Wireless capabilities eliminate need for LAN installation.
- Auto routing system for easy setup of a wireless network.
- Compatible with a wide range of AC power supply and directly installable in a distribution board.
- RS485 connection enables Eco-POWER METERS other than KW1M-R to be ready for wireless communications.
- Calendar timer function.
- Wired/Wireless selection function (AKW1131 only)
- Please contact our sales offices for more information about which areas this product can be used.

**NEW**

## ORDER GUIDE

| Product name                            | Phase and wire system   | Operating power supply        | Input measured voltage  | Current transformer (sold separately)                         | Model No.   |                |
|---|---|-------------------------------|---|---|---|----------------|
| <b>KW1M</b> (Standard type)             | Single-phase two-wire system<br>Single-phase three-wire system<br>Three-phase three-wire system | 100 to 240 V AC<br>50 / 60 Hz | 100 / 200 V AC system   | Dedicated type<br>5 A, 50 A, 100 A,<br>250 A, 400 A and 600 A | <b>AKW1110</b>  |                |
| <b>KW1M-H</b> (SD memory card type)     | Three-phase four-wire system (Note 1)   |                               | 100 / 200 / 400 V AC system<br>(Select with setting mode)   |   | <b>AKW1111</b><br><b>AKW1121</b>                              |                |
| <b>KW1M-R</b><br>Built-in wireless type | Master unit (Note 2, 3)   |                               | —   | —   | —   | <b>AKW1000</b> |
|   | Slave unit  |                               | Single-phase two-wire system<br>Single-phase three-wire system<br>Three-phase three-wire system<br>Three-phase four-wire system | 100 / 200 / 400 V AC system<br>(Select with setting mode)     | Dedicated type<br>5 A, 50 A, 100 A,<br>250 A, 400 A and 600 A | <b>AKW1131</b> |

Notes: 1) For a three-phase four-wire system, exclude **AKW1110** from the selection.

2) **AKW1000** can serve as either a "master unit" or a "slave unit (as a repeater)" by being selected in the master unit/slave unit setting mode (MODE 1).

3) **AKW1000** does not have a power measurement function.

## MEASUREMENT ITEMS (Not applicable for AKW1000)

| Item                                  | Unit                    | Data display range   |
|---------------------------------------|-------------------------|--|
| Instantaneous electric power (Active) | kW                      | 0.00 to 9999.99  |
| Integrated electric power (Active)    | kWh/MWh                 | 0.00 to 9999.99 MWh  |
|                                       |                         | 0.00 to 9999999.99 kWh (when 9-digit display)  |
| Current                               | R-current               | A  |
|                                       | S-current (Note 1)      | A  |
|                                       | T-current               | A  |
| Voltage                               | R (RS)-voltage          | V  |
|                                       | S (RT)-voltage (Note 1) | V  |
|                                       | T (TS)-voltage          | V  |
| Electricity charge (Note 2)           | —                       | 0.00 to 999999   |
| Conversion carbon dioxide value       | kg-CO <sub>2</sub>      | 0.00 to 999999   |
| Power factor (Note 1)                 | —                       | 0.00 to 1.00 [Identify leading phase (–) or lagging phase] (Only in range of phase angle $\theta = -90^\circ$ to $+90^\circ$ ) |
| Frequency (Note 1)                    | —                       | 47.5 to 63.0 Hz  |
| Hour meter                            | ON-time                 | h (Hour)   |
|                                       | OFF-time                | h (Hour)   |
| Pulse count value (Note 1)            | —                       | 0 to 999999  |

Notes: 1) Excluding **AKW1110**

2) Eco-POWER METER is designed chiefly to manage saving energy. It is neither intended nor can it be legally used for billing.

# SPECIFICATIONS

For details, please refer to the Eco-POWER METER user's manual.

## Main unit specifications

| Item                               | Specifications  |
|------------------------------------|---|
| Rated operating voltage            | 100 to 240V AC  |
| Rated frequency                    | 50 / 60 Hz common   |
| Rated power consumption            | 6 VA (AKW1110), 8 VA (AKW1111, AKW1121 and AKW1131), 5 VA (AKW1000) (240 V AC at 25 °C 77 °F) |
| Allowable operating voltage range  | 85 to 264 V AC (85 % to 110 % of rated operating voltage)                                     |
| Allowable momentary power-off time | 10 ms   |
| Ambient temperature                | -10 to +50 °C 14 to 122 °F (-25 to +70 °C -13 to +158 °F) at storage                          |
| Ambient humidity                   | 30 to 85 % RH (at 20 °C 68 °F), non-condensing  |

## Wireless specifications (for AKW1000 and AKW1131)

| Item                        | Specifications  |
|-----------------------------|---|
| Wireless system type        | Direct sequence spread spectrum (DS-SS)   |
| Communication distance      | 100 m 328 ft (Obstacle-free straight-line distance)   |
| Radio wave output           | 1 mW  |
| Frequency band              | 2,405 to 2,480 MHz  |
| Number of channels          | 16 channels (The auto-scanning function can automatically select an unassigned channel.)    |
| Wireless transmission speed | 250 kbps  |
| Communication style         | 1 : N communication, Auto routing system (N: Up to 247 units)                               |
| Repeater function           | Number of repeaters: 8 repeaters (between the master unit and the target slave unit) (Note) |

Note: Since the unit does not have a repeater setting function, use the dedicated tool "KW Network Monitor" to check the actual number of repeaters.

## Pulse input specifications (for AKW1111, AKW1121 and AKW1131)

| Item                                  | Specifications  |  |
|---------------------------------------|---|--|
| Input mode                            | Addition (Fixed)  |  |
| Max. counting speed                   | 2 kHz / 30 Hz (Select with setting mode)  |  |
| Pulse input (Min. input signal width) | 0.25 ms (When 2 kHz selected) / 16.7 ms (When 30 Hz selected), ON : OFF ratio = 1 : 1   |  |
| Input signal (at 20 °C 68 °F)         | Contact / No voltage contact (open collector)<br>• Impedance when shorted: Max. 1 kΩ<br>• Residual voltage when shorted: Max. 2 V<br>• Impedance when open: Min. 100 kΩ |  |
| Mode                                  | HOLD (Over count)   |  |
| Prescale                              | Decimal point   | Setting possible up to under 3-digit     |
|                                       | Range   | 0.001 to 100.000 (Set with setting mode) |

## Communication specifications

| Item  | Specifications   |   |
|---|--|---|
|   | RS232C communication (for AKW1000 only)  | RS485 communication   |
| Protocol  | MEWTOCOL and MODBUS (RTU) (Note 5)   | MEWTOCOL and MODBUS (RTU) (Note 5) (Note 6) (selectable with setting mode)  |
| Isolation status  | —  | Isolated with the internal circuit  |
| Number of connected units                                       | —  | Max. 99 units (Note 2, 3)   |
| Transmission distance / Transmission speed                      | 15 m 49 ft / 115,200, 57,600, 38,400, 19,200, 9,600, 4,800, 2,400 or 1,200 bps (selectable with setting mode)  | 1,200 m 3,937 ft (Note 1) / 38,400, 19,200, 9,600, 4,800 or 2,400 bps (selectable with setting mode)<br>For AKW1000: 115,200, 57,600, 38,400, 19,200, 9,600, 4,800, 2,400 or 1,200 bps (selectable with setting mode) |
| Transmission format   | Data length: 8-bit / 7-bit (selectable with setting mode) (Note 4), Parity: Not available / Odd number / Even number (selectable with setting mode), Stop bit: 1 bit (fixed) |   |
| Communication method / Synchronous system                       | Half-duplex / Synchronous communication method   |   |
| Flow control  | Enable / Disable (selectable with setting mode) (If you enable the flow control function, the counterpart equipment must also be compatible with flow control.)              | —   |
| Ending resistance   | —  | 120 Ω approx. (built-in)  |
| Data buffer (Max. data byte size for send and receive one time) | MEWTOCOL: 2,048 bytes, MODBUS (RTU): 256 bytes   | MEWTOCOL: 2,048 bytes (Note 7), MODBUS (RTU): 256 bytes (Note 7)  |

Notes: 1) Please check with the actual devices when some commercial devices with RS485 interface are connected. The number of connected devices, transmission distance, transmission speed may be different according to using devices or transmission line.  
2) For RS485 converter on the computer side, we recommend SI-35 and SI-35USB (from LINE EYE Co., Ltd.).  
3) When using SI-35, SI-35USB or our PLC (which can be connected up to 99 units), up to 99 Eco-POWER METER units can be connected. (However, 32 units max. using connection with C-NET adapter) In case using this system with the other devices, up to 31 Eco-POWER METER units can be connected.  
4) With MODBUS (RTU) protocol for RS485 communication, it works only with data length 8-bit. 5) You don't have to select a protocol for the 1:1 communications of AKW1000 (only if both units are AKW1000).  
6) AKW1131 cannot be used for data communications via RS485. It may result in malfunction.  
7) Command sending to/receiving from an AKW1131 station: Max. reading: 26 points (57 bytes), Max. writing: 23 points (55 bytes)  
\* Modbus Protocol is a communications protocol developed for PLCs by Modicon Inc.

## Memory specifications of main unit (for AKW1121)

| Item                                     | Specifications  |  |
|--|---|--|
| File type 1 (instantaneous value)        | Save cycle  | 60 min (on the hour) (fixed)   |
|  | Save data   | (Instantaneous value) Integrated electric power, Instantaneous electric power, Current, Voltage, Power factor, Frequency, and Count value  |
|  | Save data amount  | 24 records per file (max. approx. 1.5 years worth of data)   |
| File type 2 (difference value)           | Save cycle  | 60 min (on the hour) (fixed)   |
|  | Save data   | (Difference value) Integrated electric power and Count value   |
|  | Save data amount  | 24 records per file (max. approx. 1.5 years worth of data)   |
| File type 3 (instantaneous value detail) | Save cycle  | Select among 1 min, 5 min, 10 min, 15 min, 30 min, or 60 min (Saved timing)<br>When 1 min is selected: 00 sec after the minute<br>When 5 min is selected: 00, 05, 10, 15, 20, 25, 30... min after the hour<br>When 10 min is selected: 00, 10, 20, 30, 40, 50 min after the hour<br>When 15 min is selected: 00, 15, 30, 45 min after the hour<br>When 60 min is selected: 00 min after the hour |
|  | Save data   | Integrated electric power, Instantaneous electric power, Current, Voltage, Power factor, Frequency, and Count value  |
|  | Save data amount  | Max. 5,760 records, 4 days approx. period (when the save cycle is set to one minute)   |
| Main unit display                        | Integrated electric power by month (latest data covering 1.5 year period) / Integrated electric power by day (latest data covering 1 month period) / Integrated electric power by hour (latest data covering 24 hours period) |  |

| Item                        | Specifications  |
|-----------------------------|---|
| Display method              | LCD with backlight Upper: green, 4-digit, 16-segment Lower: amber, 6-digit, 7-segment   |
| Power failure memory method | AKW1000 FROM (more than 100,000 overwrite)<br>AKW1110, AKW1111, AKW1112 and AKW1131 EEPROM (more than 100,000 overwrite)                              |
| Weight                      | 170 g approx. (AKW1110 and AKW1111), 180 g approx. (AKW1121), 160 g approx. (AKW1000), 170 g approx. (AKW1131)<br>* Excluding the antenna and battery |

## Electric power input specifications NEW Improved measurement accuracy

| Item                                  | Specifications   |   |
|---------------------------------------|--|---|
| Accuracy (without error in CT and VT) | Integrated electric power and instantaneous electric power | Within ± (2.0 % F.S. + 1 digit) (at 20 °C 68 °F, rated input, rated frequency, power factor 1)<br>Accuracy coverage: 5 to 100 % of rated current  |
|                                       | Current  | Within ± (1.0 % F.S. + 1 digit) (at 20 °C 68 °F rated input, rated frequency, power factor 1)<br>Accuracy coverage: 5 to 100 % of rated current   |
|                                       | Voltage  | Within ± (1.0 % F.S. + 1 digit) (at 20 °C 68 °F rated input, rated frequency, power factor 1)   |
|                                       | Hour meter   | Within ± (0.01 % + 1 digit) (at 20 °C 68 °F) [In case power on start or current energizing: within ± (0.01 % + 1 sec + 1 digit) (at 20 °C 68 °F)] |
|                                       | Temperature characteristics                                | Within ± (1.0 % F.S. + 1 digit) (Range of -10 to 50 °C 14 to 122 °F, rated input, power factor 1)   |
|                                       | Frequency characteristics                                  | Within ± (1.0 % F.S. + 1 digit) (Frequency change ± 5 % based on rated frequency, rated input, power factor 1)                                    |

## Specifications of the pulse output (transistor output) of integrated electric active power

| Item  | Specifications  |
|---|---|
| Number of output point                                    | 1 point   |
| Insulation method   | Optical coupler   |
| Output type   | Open collector  |
| Output capacity   | 100 mA 30 V DC  |
| Pulse width   | 100 ms approx.  |
| ON state voltage drop                                     | 1.5 V or less   |
| OFF state leakage current                                 | 100 μA or less  |
| Pulse output unit (selectable with setting mode) (Note 3) | 0.001 kWh, 0.01 kWh, 0.1 kWh, 1 kWh, 10 kWh, 100 kWh / Power alarm (AL-P) / Current alarm (AL-C) / Stand-by power alarm (AL-S) (Note 1) / Counter output (Cnt) (Note 1) / Demand alarm (OEM) (Note 2) |

Notes: 1) For AKW1111, AKW1121, and AKW1131 2) For AKW1121 only  
3) We recommend the setting of minimum unit for pulse output for measurement shown as below.  
Output pulse: 4 pulses or less per 1sec  
Count errors may occur if pulse output unit is set so that 4 or more pulses are output per 1 second.  
- How to calculate -  
Unit for pulse output: PL-P > Max. measurement power (kW) / 3,600 sec × 4 pulse/sec

## External memory specifications

### <SD memory card slot> (for AKW1121 only)

| Item                       | Specifications                                |
|----------------------------|---|
| Support media              | SD memory card (Note 1)                       |
| Supported format standards | Compliant with SD and SDHC standards (Note 2) |

Notes:  
1) Operation verified maker: Panasonic Corporation SD/SDHC memory card 2 GB, 4 GB and 8 GB  
2) To format SD memory cards, please download and use the formatting software available on the Panasonic website. The file system on a SD memory card that was formatted using standard PC software does not comply with the SD memory card standard.

## Calendar timer specifications (for AKW1000 and AKW1121)

| Item                      | Specifications  |
|---------------------------|---|
| Time accuracy             | Monthly accuracy: ± 240 sec (at -10 °C 14 °F)<br>Monthly accuracy: ± 70 sec (at 25 °C 77 °F)<br>Monthly accuracy: ± 240 sec (at 50 °C 122 °F) |
| Content of battery backup | Time measurement and log data (for AKW1121)   |
| Battery life              | 2 years approx. (at ambient temperature 25 °C 77 °F) (in power-off state)   |


### < SD memory card handling precautions >

Data saved on an SD memory card may be lost in the following cases. Please note that Panasonic Industrial Devices SUNX is not responsible for any losses of recorded data and other direct and indirect damages.

- When a user or a third party incorrectly uses the SD memory card
- When the SD memory card is affected by static electricity or electrical noise
- When the SD memory card is taken out or the power is turned off while the SD memory card access LED of the unit is flashing (during data writing)

\* It is recommended that you constantly back up important data to another medium.

# KW4M / KW7M / KW8M

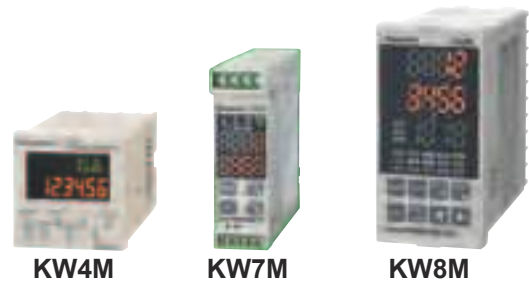

## FEATURES

### Features of KW4M

- Easy on-panel mounting with included mounting frame.
- Protective structure: IEC IP66 (Only the panel front with rubber gasket).
- UL-compliant.
- NEW** • Measurement of inverter power supplies (primary side) is available.

### Features of KW7M

- DIN rail type ideal for installation in a panel.
- Slim, 22.5 mm **0.89 in** wide: easily mounts anywhere.
- NEW** • Measurement of inverter power supplies (primary side) is available.

### Common Features of KW8M

- Compatible with systems of up to three-phase four-wire.
- Easy on-panel mounting with included mounting frame.
- NEW** • Measurement of inverter power supplies (primary side) is available.

### KW8M High performance type

- Log data is stored to memory of main unit.
- Built-in battery (for clock and log data backup).
- Simple demand function.

### KW8M 1 A / 5 A CT input type

- Capable of direct input from 1 A / 5 A CT in the secondary side without using dedicated CT.
- High current circuit measurement.

## ORDER GUIDE

| Product name                                       | Protocol                | Phase and wire system   | Input measured voltage                                 | Current transformer (sold separately)                         | Terminal type                     | Model No.   |
|--|-------------------------|---|--|---|-----------------------------------|---|
| <b>KW4M</b><br>Eco-POWER METER<br>DIN □48 type     | MEWTOCOL                | Single-phase two-wire system<br>Single-phase three-wire system<br>Three-phase three-wire system                                 | 100 / 200 V AC system                                  | Dedicated type<br>5 A, 50 A, 100 A,<br>250 A and 400 A        | Screw terminal                    | <b>AKW5111</b>  |
|  | MODBUS (RTU)            |   |  |   |                                   | <b>AKW5112</b>  |
|  | MEWTOCOL                |   |  |   | 11-pin                            | <b>AKW5211</b>  |
|  | MODBUS (RTU)            |   |  |   |                                   | <b>AKW5212</b>  |
| <b>KW7M</b><br>Eco-POWER METER DIN rail type       |                         | Single-phase two-wire system<br>Single-phase three-wire system<br>Three-phase three-wire system                                 | 100 / 200 V AC system                                  |   | Screw terminal (M3 / M2 screw)    | <b>AKW7111</b>  |
| <b>KW8M</b><br>Eco-POWER METER<br>DIN 48 × 96 type | High performance type   | Single-phase two-wire system<br>Single-phase three-wire system<br>Three-phase three-wire system<br>Three-phase four-wire system | 100 / 200 / 400 V AC system (Select with setting mode) | Dedicated type<br>5 A, 50 A, 100 A,<br>250 A, 400 A and 600 A | Screw terminal (M3 "+ / -" screw) | <b>AKW8111</b>  |
|  |                         |   |  |   |                                   | <b>AKW8111H</b>   |
|  | 1 A / 5 A CT input type |   |  |   |                                   | U.R.D., Ltd. CTL-CL series separate CT recommended (Check the specifications before use.) |

Note: Since a dedicated CT is not used, please use a 4,000 A or less type (secondary current: 1 A or 5 A).

## MEASUREMENT ITEMS

### KW4M

| Item                            | Unit                     | Data display range   |
|---------------------------------|--------------------------|--|
| Instantaneous electric power    | kW                       | 0.00 to 9999.99  |
| Integrated electric power       | kWh                      | 0.00 to 9999.99 kWh and after  |
|                                 | MWh                      | 10.00 MWh to 9999.99 MWh<br>When 9-digit display: 0.00 to 9999999.99 kWh |
| Current                         | L1 (CT1) - phase current | A 0.0 to 6000.0  |
|                                 | L2 (CT2) - phase current | A 0.0 to 6000.0  |
| Voltage                         | Voltage between 1-2      | V 0.0 to 9999.9  |
|                                 | Voltage between 2-3      | V 0.0 to 9999.9  |
| Electricity charge (Note)       | Yen                      | JPY 0 to 999999  |
|                                 | Dollars                  | \$ 0.0 to 99999.9  |
|                                 | Euros                    | EUR 0.0 to 99999.9   |
|                                 | Yuan                     | CNY 0 to 999999  |
|                                 | No currency              | CHG 0 to 999999  |
| Conversion carbon dioxide value | kg-CO <sub>2</sub>       | 0.0 to 999999  |
| Hour meter                      | ON-time                  | h (Hour) 0.0 to 99999.9  |
|                                 | OFF-time                 | h (Hour) 0.0 to 99999.9  |
| Pulse count value               | Count                    | 0 to 999999  |

### KW7M

| Item                         | Unit                     | Data display range |
|------------------------------|--------------------------|--------------------|
| Instantaneous electric power | kW                       | 0.00 to 999999.99  |
| Integrated electric power    | kWh                      | 0.00 to 9999999.9  |
| Current                      | L1 (CT1) - phase current | A 0.0 to 6000      |
|                              | L2 (CT2) - phase current | A 0.0 to 6000      |
| Voltage                      | Voltage between 1-2      | V 0.0 to 9999      |
|                              | Voltage between 2-3      | V 0.0 to 9999      |
| Electricity charge (Note)    |                          | 0.00 to 99999999   |

### KW8M

| Item                         | Unit                       | Data display range   |
|------------------------------|----------------------------|--|
| Integrated electric power    | Active                     | kWh 0.00 to 9999999.9  |
|                              | Reactive                   | kvarh 0.00 to 9999999.9  |
|                              | Apparent                   | kVAh 0.00 to 9999999.9   |
| Instantaneous electric power | Active                     | kW 0.00 to 9999999.99  |
|                              | Reactive                   | kvar -99999.99 to 0.00 to 999999.99  |
|                              | Apparent                   | kVA 0.00 to 9999999.99   |
| Current                      | CT1 - phase current        | A 0.0 to 6000  |
|                              | CT2 - phase current        | A 0.0 to 6000  |
|                              | CT3 - phase current        | A 0.0 to 6000  |
| Voltage                      | Voltage between P1 and P0  | V 0.0 to 9999  |
|                              | Voltage between P2 and P0  | V 0.0 to 9999  |
|                              | Voltage between P3 and P0  | V 0.0 to 9999  |
| Electricity charge (Note)    | —                          | 0.0 to 99999999  |
| Power factor                 | Displayed on the main unit | 0.00 to 1.00 [with identify leading phase (LEAD) or lagging phase (LAG)]                     |
|                              | Communication              | -1.00 to 0.00 to 1.00<br>(Only in range of phase angle $\theta = -90^\circ$ to $+90^\circ$ ) |
| Frequency                    | Hz                         | 47.5 to 63.0   |
| Hour meter                   | ON-time                    | Time 0.0 to 99999.9  |
|                              | OFF-time                   | Time 0.0 to 99999.9  |
| Pulse count value            | —                          | 0.0 to 99999999  |

Note: Eco-POWER METER is primarily designed to manage saving energy. It is neither intended nor can it be legally used for billing.

## SPECIFICATIONS

For details, please refer to the Eco-POWER METER user's manual.

### KW4M

#### Main unit specifications

| Item                               | Specifications   |
|------------------------------------|--|
| Rated operating voltage            | 100 to 120 V AC / 200 to 240 V AC  |
| Rated frequency                    | 50 / 60 Hz common  |
| Rated power consumption            | 8 VA (240 V AC at 25 °C 77 °F)   |
| Allowable operating voltage range  | 85 to 132 V AC / 170 to 264 V AC (85 % to 110 % of rated operating voltage)  |
| Allowable momentary power-off time | 10 ms  |
| Ambient temperature                | -10 to +50 °C 14 to 122 °F (-25 to +70 °C -13 to +158 °F) at storage   |
| Ambient humidity                   | 30 to 85 % RH (at 20 °C 68 °F), non-condensing   |
| Vibration resistance               | 10 to 55 Hz (1cycle / min), single amplitude: 0.75 mm 0.03 in (1 hour on 3 axes)   |
| Shock resistance                   | Min. 294 m/s <sup>2</sup> (5 times on 3 axes)  |
| Display method                     | 6-digit, 7-segment (set value) with backlight and 4-digit, 16-segment (mode), LCD upper section: green, lower section: amber |
| Power failure memory method        | EEPROM (more than 100,000 overwrite)   |
| Protection                         | IEC standard IP66 (only front panel with rubber gasket)<br>* Mounted in a row, waterproofing property will be lost.          |
| Weight                             | 140 g approx. (screw terminal type), 130 g approx. (11-pin type)   |

### KW7M

#### Main unit specifications

| Item                               | Specifications  |
|------------------------------------|---|
| Rated operating voltage            | 100 to 120 V AC / 200 to 240 V AC   |
| Rated frequency                    | 50 / 60 Hz common   |
| Rated power consumption            | 6 VA (240 V AC at 25 °C 77 °F)  |
| Allowable operating voltage range  | 85 to 132 V AC / 170 to 264 V AC (85 % to 110 % of rated operating voltage)       |
| Allowable momentary power-off time | 10 ms   |
| Ambient temperature                | -10 to +50 °C 14 to 122 °F (-25 to +70 °C -13 to +158 °F) at storage              |
| Ambient humidity                   | 30 to 85 % RH (at 20 °C 68 °F), non-condensing                                    |
| Vibration resistance               | 10 to 55 Hz (1cycle / min), single amplitude: 0.375 mm 0.01 in (1 hour on 3 axes) |
| Shock resistance                   | Min. 294 m/s <sup>2</sup> (5 times on 3 axes)                                     |
| Display method                     | 8-digit, 7-segment LED  |
| Power failure memory method        | EEPROM (more than 100,000 overwrite)  |
| Weight                             | 100 g approx.   |

### KW8M

#### Main unit specifications

| Item                               | Specifications   |
|------------------------------------|--|
| Rated operating voltage            | 100 to 240 V AC  |
| Rated frequency                    | 50 / 60 Hz common  |
| Rated power consumption            | 8 VA (240 V AC at 25 °C 77 °F)   |
| Allowable operating voltage range  | 85 to 264 V AC (85 % to 110 % of rated operating voltage)  |
| Allowable momentary power-off time | 10 ms  |
| Ambient temperature                | -10 to +50 °C 14 to 122 °F (-25 to +70 °C -13 to +158 °F) at storage   |
| Ambient humidity                   | 30 to 85 % RH (at 20 °C 68 °F), non-condensing   |
| Vibration resistance               | 10 to 55 Hz (1cycle / min), single amplitude: 0.375 mm 0.01 in (1 hour on 3 axes)  |
| Shock resistance                   | Min. 294 m/s <sup>2</sup> (5 times on 3 axes)  |
| Display method                     | 8-digit, 7-segment LED   |
| Power failure memory method        | EEPROM (more than 100,000 overwrite)   |
| Weight (without mounting bracket)  | 235 g approx. (AKW8111), 250 g approx. (AKW8111H high performance type), 265 g approx. (AKW8115 1 A / 5 A CT input type) |

Note: Analog input terminals: No. 11 to 20 / Pulse input terminals: No. 4 and 5

### KW4M / KW7M / KW8M

#### Electric power input specifications NEW Improved measurement accuracy

| Item  | Specifications  |   |
|---|---|---|
| Accuracy<br>(without error in<br>CT and VT) | Integrated electric power and<br>Instantaneous electric power | Within ± (2.0 % F.S. + 1 digit) (at 20 °C 68 °F, rated input, rated frequency, power factor 1) (Note 1)<br>Accuracy coverage: 5 to 100 % of rated current |
|   | Current   | Within ± (1.0 % F.S. + 1 digit) (at 20 °C 68 °F rated input, rated frequency, power factor 1)<br>Accuracy coverage: 5 to 100 % of rated current           |
|   | Voltage   | Within ± (1.0 % F.S. + 1 digit) (at 20 °C 68 °F rated input, rated frequency, power factor 1)   |
|   | Hour meter (Note 2)   | Within ± (0.01 % + 1 digit) (at 20 °C 68 °F)<br>[In case power on start or current energizing: Within ± (0.01 % + 1 sec + 1 digit) (at 20 °C 68 °F)]      |
|   | Temperature characteristics                                   | Within ± (1.0 % F.S. + 1 digit) (Range of -10 to +50 °C 14 to 122 °F, rated input, power factor 1)  |
|   | Frequency characteristics                                     | Within ± (1.0 % F.S. + 1 digit) (Frequency change ± 5 % based on rated frequency, rated input, power factor 1)  |

Notes: 1) Integrated electric power (active/apparent) and instantaneous electric power (active/apparent) of **AKW8115**: within ± (1.0 % F.S. + 1 digit) (at 20 °C 68 °F, rated input, rated frequency, power factor 1)  
Accuracy coverage: 5 to 100 % of rated current

2) Excluding **KW7M**

# DEDICATED CURRENT TRANSFORMER (CT) AND OPTIONS

## DEDICATED CURRENT TRANSFORMER (CT)



### ORDER GUIDE (Dedicated CT cannot be used with the AKW8115.)

| Primary side rated current |             | Model No.                |
|----------------------------|-------------|--------------------------|
| Clamp-on type              | 5 A/50 A    | <b>AKW4801C</b>          |
|                            | 100 A       | <b>AKW4802C</b>          |
|                            | 250 A       | <b>AKW4803C</b>          |
|                            | 400 A       | <b>AKW4804C</b>          |
| Through type               | 50 A/100 A  | <b>AKW4506C</b>          |
|                            | 250 A/400 A | <b>AKW4507C</b>          |
|                            | 600 A       | <b>AKW4508C (Note 2)</b> |



- Notes: 1) For except **AKW8115**, please order in accordance with the type of power distribution system you will be measuring. (Even if you will be using a secondary side 5 A CT, you will need an **AKW4801C**.)  
 2) **AKW4508C** can be used with an Eco-POWER METER compatible with 600 A type CT.

### Specifications

| Item                            | Type      | Clamp-on type   |                        |  |                        | Through type   |                        |  |  |
|---------------------------------|-----------|---|------------------------|--|------------------------|--|------------------------|--|--|
|                                 | Model No. | <b>AKW4801C</b>   | <b>AKW4802C</b>        | <b>AKW4803C</b>  | <b>AKW4804C</b>        | <b>AKW4506C</b>  | <b>AKW4507C</b>        | <b>AKW4508C</b>  |  |
| Primary side rated current      |           | 5 A/50 A  | 100 A                  | 250 A  | 400 A                  | 50 A/100 A   | 250 A/400 A            | 600 A  |  |
| Secondary side rated current    |           | 1.67 mA/16.7 mA   | 33.3 mA                | 125 mA   | 200 mA                 | 16.7 mA/33.3 mA  | 125 mA/200 mA          | 200 mA   |  |
| Winding (Turn)                  |           | 3,000   | 3,000                  | 2,000  | 2,000                  | 3,000  | 2,000                  | 3,000  |  |
| Ratio error                     |           | ± 2.0% F.S.   |                        |  |                        |  |                        | ± 1.0% F.S.  |  |
| Through hole                    |           | ø10 mm <b>ø0.39 in</b>  | ø16 mm <b>ø0.63 in</b> | ø24 mm <b>ø0.94 in</b>   | ø36 mm <b>ø1.42 in</b> | ø17 mm <b>ø0.67 in</b>   | ø36 mm <b>ø1.42 in</b> |  |  |
| Breakdown voltage (initial)     |           | 1,000 V AC / 1 min (Between through hole and output lead wire)                            |                        | 2,000 V AC / 1 min (Between through hole and output lead wire) |                        | 1,000 V AC / 1 min (Between through hole and output lead wire) |                        | 2,000 V AC / 1 min (Between through hole and output lead wire) |  |
| Insulation resistance (initial) |           | Min. 100 MΩ (at 500 V DC megger) (Between through hole and output lead wire)              |                        |  |                        |  |                        |  |  |
| Functional vibration resistance |           | 10 to 55 Hz (1 cycle / min), single amplitude: 0.15 mm <b>0.01 in</b> (10 min on 3 axes)  |                        |  |                        |  |                        |  |  |
| Vibration resistance            |           | 10 to 55 Hz (1 cycle / min), single amplitude: 0.375 mm <b>0.01 in</b> (1 hour on 3 axes) |                        |  |                        |  |                        |  |  |
| Functional shock resistance     |           | Min. 98 m/s <sup>2</sup> (4 times on 3 axes)  |                        |  |                        |  |                        |  |  |
| Shock resistance                |           | Min. 294 m/s <sup>2</sup> (5 times on 3 axes)   |                        |  |                        |  |                        |  |  |
| Output protection level         |           | ± 7.5 V with clamp element  |                        | ± 3.0 V with clamp element                                     |                        | ± 7.5 V with clamp element                                     |                        | ± 3.0 V with clamp element                                     |  |
| Permissible clamping frequency  |           | 100 times approx.   |                        |  |                        |  |                        | —  |  |
| Ambient temperature range       |           | -10 to +50 °C <b>+14 to +122 °F</b> (without frost and non-condensing)                    |                        |  |                        |  |                        |  |  |
| Storage temperature             |           | -20 to +60 °C <b>-4 to +140 °F</b> (without frost and non-condensing)                     |                        |  |                        |  |                        |  |  |
| Ambient humidity                |           | 35 to 85 % RH (at 20 °C <b>68 °F</b> non-condensing)                                      |                        |  |                        |  |                        |  |  |
| Weight (Trunk cable included)   |           | 60 g approx.  | 90 g approx.           | 200 g approx.  | 295 g approx.          | 70 g approx.   | 200 g approx.          | 215 g approx.  |  |

- Notes: 1) Dedicated CT are dedicated for low voltage under 440 V AC system. They can not be used for high voltage circuit.  
 2) In each type of Eco-POWER METER excluding **AKW8115**, a combination of commercially secondary side 5 A CTs and dedicated CTs for 5 A (**AKW4801C**) is used for measuring high voltage circuits; therefore, **AKW4801C** is definitely necessary. For details, confirm with each respective user's manual.  
 3) Since dedicated CTs cannot be used when measuring with **AKW8115**, please be careful and do not purchase a dedicated CT by mistake.  
 4) For the **AKW8115** CT, current transformers manufactured by U.R.D. Co., Ltd. (clamp-on type CT CTL-CL series) are recommended. Please confirm the specification beforehand.  
 5) Dedicated CT are not included with Eco-POWER METERS.  
 6) Each dedicated CT includes a 1 m **3.3 ft** trunk cable, respectively.

## OPTIONS


### Trunk cable



| Product name   | Model No.                           |                |
|--|-------------------------------------|----------------|
| Trunk cable for CT<br>(Option of Eco-POWER METER dedicated CT) | 3 m <b>9.8 ft</b>                   | <b>AKW4703</b> |
|  | 5 m <b>16.4 ft</b>                  | <b>AKW4705</b> |
|  | 10 m <b>32.8 ft</b> (special order) | <b>AKW4710</b> |

Note: For any type of trunk cable, please connect no more than one.

### Intermediate power cable



| Product name             | Model No.      |
|--------------------------|----------------|
| Intermediate power cable | <b>AKE2811</b> |

Note: We recommend using an intermediate power cable when attaching the dedicated CT to a non-"Y" split power cable.


### Antenna with cable: For KW1M-R



### Pencil type antenna: For KW1M-R



### Antenna extension cable: For KW1M-R (Note)

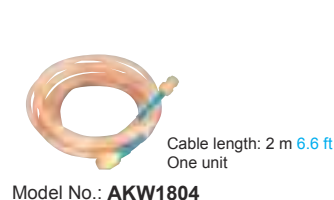


### RS232C cable: For KW1M-R (master unit)



Note: When an antenna extension cable is used, radio wave attenuation occurs. With a single extension cable, the communications distance is reduced by about 30 %: use only after prior confirmation that the system is functioning effectively.


**Required for installation inside switchboard**

**Mounting rails (applicable for DIN and IEC standards):**  
For KW4M pin type (AKW5211 and AKW5212), KW7M, KW2G / KW2G-H, and KW1M / -H / -R

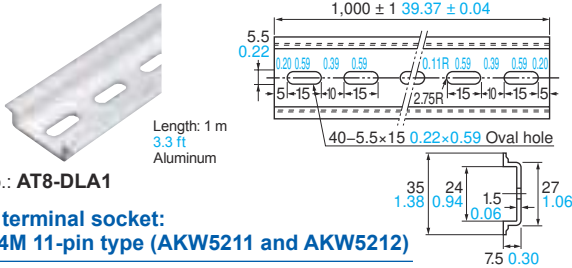

Model No.: **AT8-DLA1**

**DIN rail terminal socket:**  
For KW4M 11-pin type (AKW5211 and AKW5212)

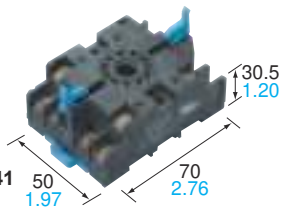


Model No.: **ATC180041**

**Fastening plate:**  
For KW4M pin type (AKW5211 and AKW5212), KW7M, KW2G / KW2G-H, and KW1M / -H / -R




Model No.: **ATA4806**

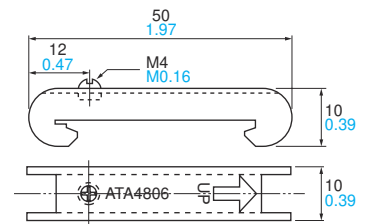

\* For holding DIN rails


**Required for installation on control panel**

**Rear terminal socket:**  
For KW4M 11-pin type (AKW5211 and AKW5212)

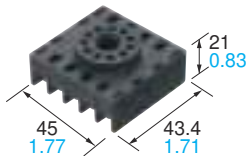

Model No.: **AT78051**


**11-pin cap:**  
For KW4M 11-pin type (AKW5211 and AKW5212)

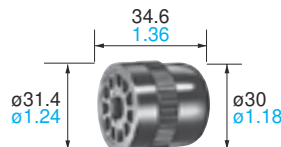

Model No.: **AT8-DP11**

**Mounting frame:**  
For KW1M and KW1M-H


\* Sold separately

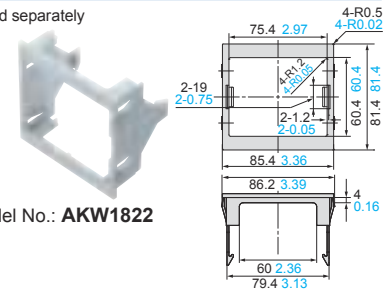

Model No.: **AKW1822**

**Convenient when installation is on control panel.**

**Protective cover for DIN 48 size (flexible type) : For KW4M**

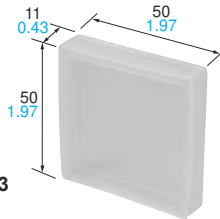


Model No.: **AQM4803**


**Terminal protective cover: For KW4M screw terminal type (AKW5111 and AKW5112)**



Model No.: **AKW4823**

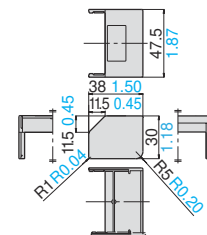


**Mounting frame: For KW4M** \* For fixing

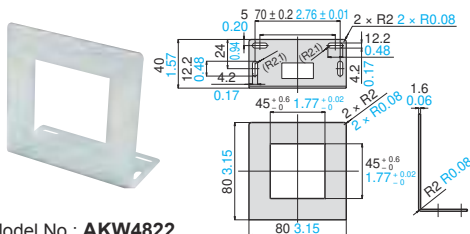


Model No.: **AKW4822**

**Mounting frame: For all types KW8M**

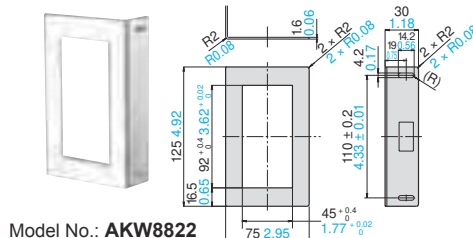

Model No.: **AKW8822**

**Terminal cover: For all types KW8M**

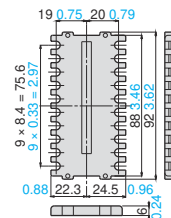

Model No.: **AKT8801**


**Others**

**Screwdriver for terminal socket: For KW7M**



Model No.: **AFP0806**

**Backup battery: For KW1M-H, KW1M-R (master unit) and KW2G-H main unit**



\* Packaged with AKW1000, AKW1121 and AKW2020G

Model No.: **AFPG804**

**Backup battery: For high performance type KW8M (AKW8111H) only**



\* Packaged with the main unit


Model No.: **AFC8801**

# DIMENSIONS


Unit: mm in, Tolerance:  $\pm 1.0 \pm 0.04$

## KW2G (Standard type) and KW2G-H (SD memory card type)

### (Main unit) AKW2010G / AKW2020G

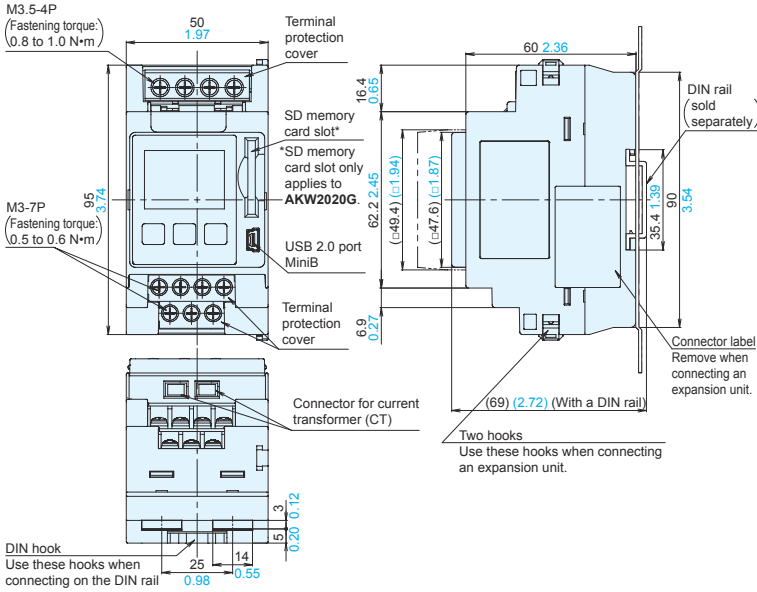

### (Expansion unit) AKW2110G / AKW2160G / AKW2152G / AKW2182G

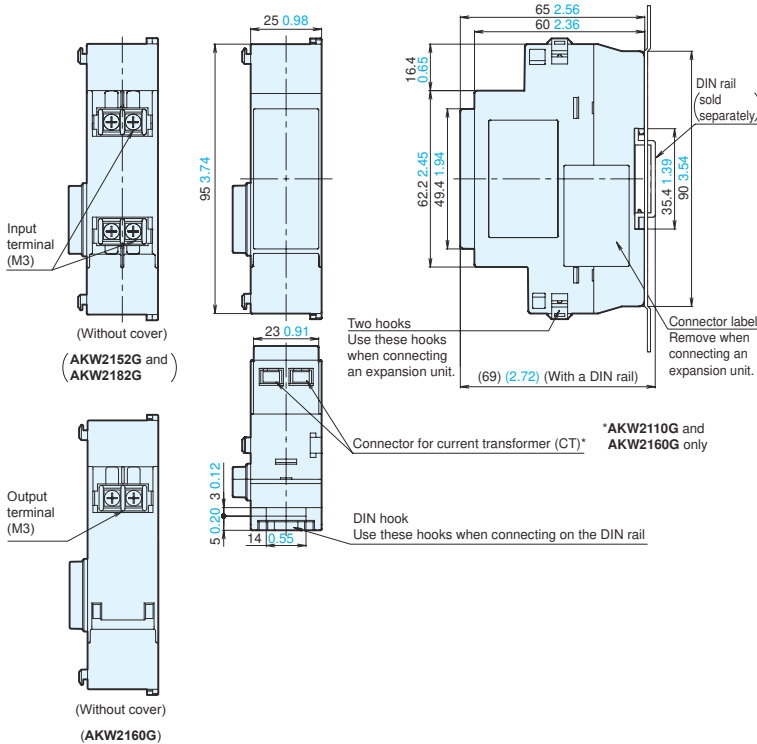

### Terminal arrangement (for AKW2010G / AKW2020G)

| Terminal No. | Function | Terminal type         |
|--------------|----------|-----------------------|
| (1)          | P1       | M3.5<br>"+ / -" screw |
| (2)          | P0       |                       |
| (3)          | P2       |                       |
| (4)          | NC       |                       |
| (5)          | +        | M3<br>"+ / -" screw   |
| (6)          | -        |                       |
| (7)          | +        |                       |
| (8)          | -        | RS485                 |
| (9)          | +        |                       |
| (10)         | -        |                       |
| (11)         | E        |                       |

⚠ The input voltage to each terminal is as follows.

| Terminal               | Phase and wire system          | Between terminals         | Input voltage  |
|------------------------|--------------------------------|---------------------------|--|
| Measured voltage input | Single-phase two-wire system   | (1)-(2)<br>(P1-P0)        | 100 to 240 V AC (100 to 240 V and after) (Line voltage)      |
|                        | Single-phase three-wire system | (1)-(2)-(3)<br>(P1-P0-P2) | 100 to 120 V AC (100 to 120 V and after: 3W) (Phase voltage) |
|                        | Three-phase three-wire system  | (1)-(2)-(3)<br>(P1-P0-P2) | 100 to 240 V AC (100 to 240 V 3 and after) (Line voltage)    |

### Terminal arrangement (for AKW2160G)

| Terminal No. | Function | Terminal type |
|--------------|----------|---------------|
| (1)          | +        | M3            |
| (2)          | -        |               |

### Terminal arrangement (for AKW2152G)

| Terminal No. | Function | Terminal type |    |
|--------------|----------|---------------|----|
| (1)          | CH0      | +             | M3 |
| (2)          |          | -             |    |
| (3)          | CH1      | +             |    |
| (4)          |          | -             |    |

\* The "-" terminals are connected internal. (Between channels: non-isolated)

### Terminal arrangement (for AKW2182G)


| Terminal No. | Function | Terminal type |    |
|--------------|----------|---------------|----|
| (1)          | CH0      | V/I           | M3 |
| (2)          |          | COM           |    |
| (3)          | CH1      | V/I           |    |
| (4)          |          | COM           |    |

\* The "COM" (common) terminals are connected internal. (Between channels: non-isolated)

## <Wiring diagrams>


### Single-phase two-wire system

\* One dedicated CT is required for one load.

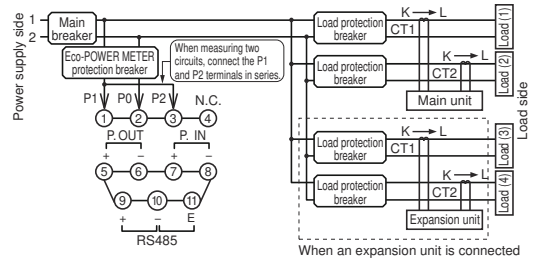

### Single-phase three-wire system / Three-phase three-wire system

\* Two dedicated CT are required for one load.

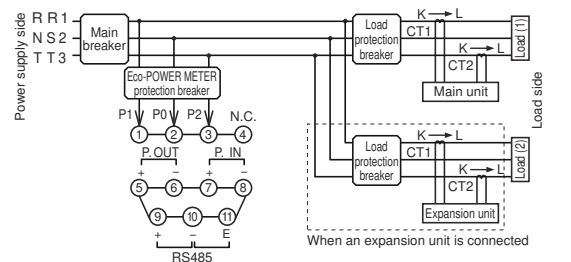



- Be sure to wire correctly according to the terminal arrangement and wiring diagrams.
- For details, please refer to the Eco-POWER METER user's manual.


Unit: mm in, Tolerance:  $\pm 1.0 \pm 0.04$

**KW1M-R Built-in wireless type**

**(Master unit) AKW1000**

**Mounting hole dimensions**


**Terminal arrangement**

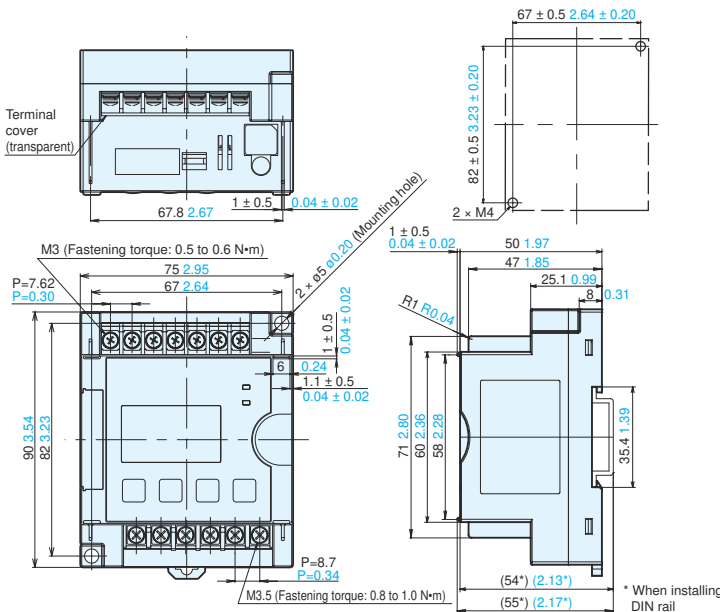

| Function               | Terminal type         | Terminal No. | Terminal type | Function      |
|------------------------|-----------------------|--------------|---------------|---------------|
| Operating power supply | L                     | (1)          | (7)           | +             |
|                        | N                     | (2)          | (8)           |               |
| No connection          | M3.5<br>"+ / -" screw | (3)          | (9)           | E             |
|                        |                       | (4)          | (10)          |               |
| RS232C                 | SD                    | (5)          | (11)          | No connection |
|                        | RD                    | (6)          | (12)          |               |
|                        | SG                    | (13)         | (13)          |               |
|                        |                       |              |               | RS            |
|                        |                       |              |               | CS            |
|                        |                       |              |               | RS232C        |

⚠ The input voltage to each terminal is as follows.

| Terminal                     | Phase and wire system | Between terminals | Input voltage   |
|------------------------------|-----------------------|-------------------|---|
| Operating power supply input | Single-phase two-wire | (1)-(2)           | 100 to 240 V AC (100 to 240 V and after) (Line voltage) |

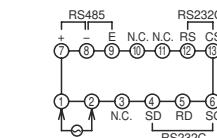


\* Use a straight cable for RS232C connections.

**(Slave unit) AKW1131**

**Mounting hole dimensions**

**Terminal arrangement**

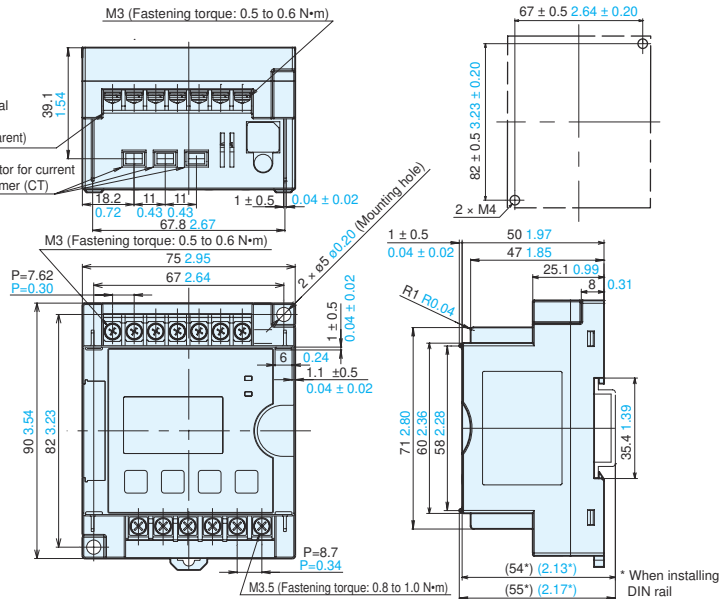

| Function               | Terminal type         | Terminal No. | Terminal type | Function     |
|------------------------|-----------------------|--------------|---------------|--------------|
| Operating power supply | L                     | (1)          | (7)           | +            |
|                        | N                     | (2)          | (8)           |              |
| Measured voltage input | P1                    | (3)          | (9)           | E            |
|                        | P0                    | (4)          | (10)          |              |
|                        | P2                    | (5)          | (11)          |              |
|                        | M3.5<br>"+ / -" screw | (6)          | (12)          | +            |
|                        |                       | (13)         | (13)          |              |
|                        |                       |              |               | +            |
|                        |                       |              |               | -            |
|                        |                       |              |               | Pulse output |
|                        |                       |              |               | Pulse input  |

\* Because the RS485(E) terminal does not have an SG (signal ground) terminal, the ground wire of the shielded cable should not be connected.


⚠ The input voltage to each terminal is as follows.

| Terminal                     | Phase and wire system   | Between terminals | Input voltage   |
|------------------------------|-------------------------|-------------------|---|
| Operating power supply input | Single-phase two-wire   | (1)-(2)           | 100 to 240 V AC (100 to 240 V and after) (Line voltage) |
|                              | Single-phase two-wire   | (3)-(4)           | 0 to 440 V AC (0 to 440 V and after) (Line voltage)     |
| Measured voltage input       | Single-phase three-wire | (3)-(4)-(5)       | 0 to 220 V AC (0 to 220 V to: 3W) (Phase voltage)       |
|                              | Three-phase three-wire  | (3)-(4)-(5)       | 0 to 440 V AC (0 to 440 V 3 and after) (Line voltage)   |
|                              | Three-phase four-wire   | (3)-(4)-(5)-(6)   | 0 to 254 V AC (0 to 254 V 3N and after) (Phase voltage) |


**<Wiring diagrams>**

**AKW1131 When measuring load with rated input voltage (100 to 200 V AC system and 400 V AC system)**

**Single-phase two-wire system** \*One dedicated CT is required.

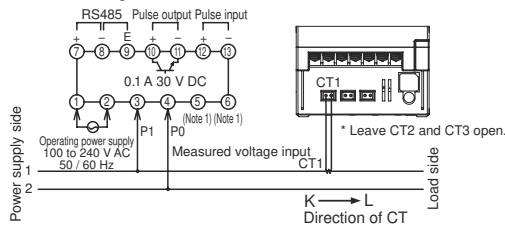


**Three-phase four-wire system** \* Three dedicated CT are required.

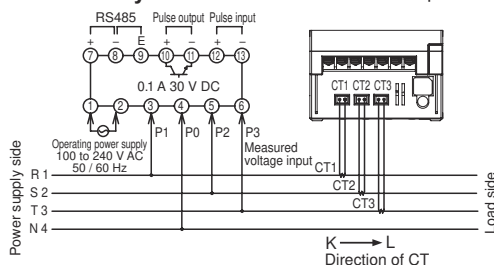

**Single-phase three-wire system / Three-phase three-wire system**

\* Two dedicated CT are required.

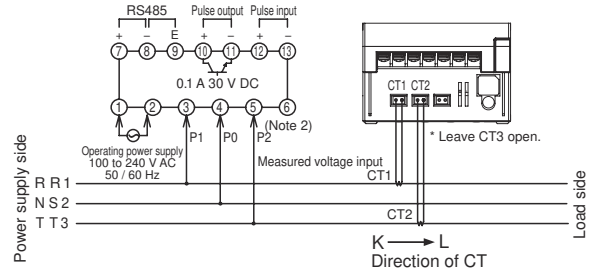

Notes: 1) Do not wire to (5), (6) terminal. They are connected internal.


2) Do not wire to (6) terminal. They are connected internal.

# DIMENSIONS

Unit: mm in, Tolerance:  $\pm 1.0 \pm 0.04$

## KW1M (Standard type) and KW1M-H (SD memory card type)

### AKW1110/AKW1111/AKW1121

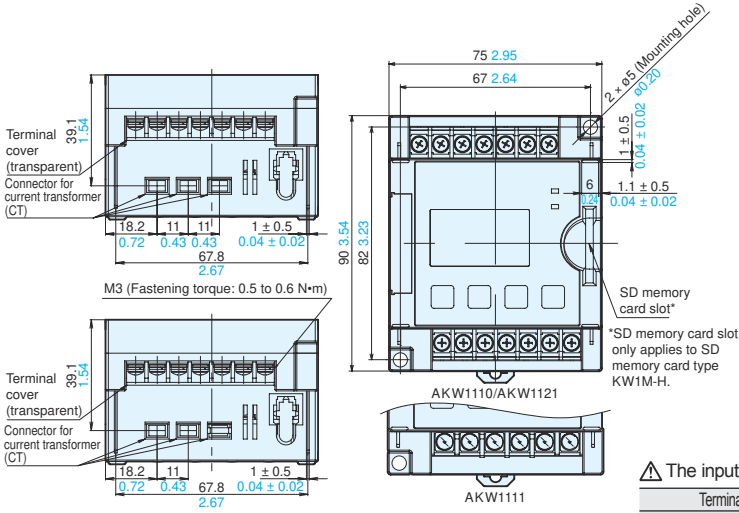

• For mounting hole dimensions, please refer to the KW1M-R "Mounting hole dimensions" on page 25.

### Terminal arrangement (for AKW1110)

| Terminal No.  | Function      | Terminal type          |
|---------------|---------------|------------------------|
| (1)           | L             | Operating power supply |
| (2)           | N             |                        |
| (3)           | No connection | Measured voltage input |
| (4)           | P1            |                        |
| (5)           | P0            |                        |
| (6)           | P2            |                        |
| (7) (Note 1)  | No connection | RS485                  |
| (8)           | +             |                        |
| (9)           | -             |                        |
| (10) (Note 2) | E             | Pulse output           |
| (11)          | +             |                        |
| (12)          | -             | No connection          |
| (13) (Note 1) |               |                        |
| (14) (Note 1) |               |                        |

Notes: 1) The (7), (13) and (14) terminals are connected internal to analog input terminal. Cannot use extending wiring.  
2) Because the RS485(E) terminal does not have an SG (signal ground) terminal, the ground wire of the shielded cable should not be connected.


⚠ The input voltage to each terminal is as follows. (for AKW1110)

| Terminal                     | Phase and wire system   | Between terminals | Input voltage   |
|------------------------------|-------------------------|-------------------|---|
| Operating power supply input | Single-phase two-wire   | (1)-(2)           | 100 to 240 V AC (100 to 240 V and after) (Line voltage) |
|                              | Single-phase two-wire   | (4)-(5)           | 0 to 220 V AC (0 to 220 V and after) (Line voltage)     |
| Measured voltage input       | Single-phase three-wire | (4)-(5)-(6)       | 0 to 110 V AC (0 to 110 V to: 3W) (Phase voltage)       |
|                              | Three-phase three-wire  | (4)-(5)-(6)       | 0 to 220 V AC (0 to 220 V 3 and after) (Line voltage)   |

### <Wiring diagrams>


#### AKW1110 When measuring load with rated input voltage (100 to 200 V AC system)

Single-phase two-wire system \*One dedicated CT is required.

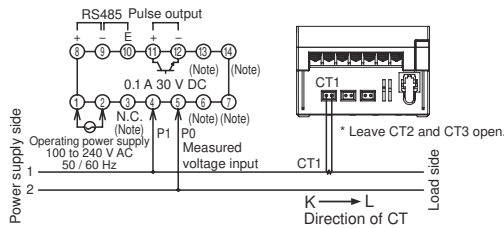

Note: Do not wire to (3), (6), (7), (13), (14) terminal. They are connected internal.


#### Single-phase three-wire system / Three-phase three-wire system \* Two dedicated CT are required.

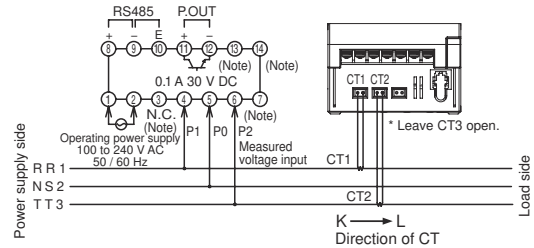

Note: Do not wire to (3), (7), (13), (14) terminal. They are connected internal.


#### AKW1111 When measuring load with rated input voltage (100 to 200 V AC system and 400 V AC system)

Single-phase two-wire system \*One dedicated CT is required.

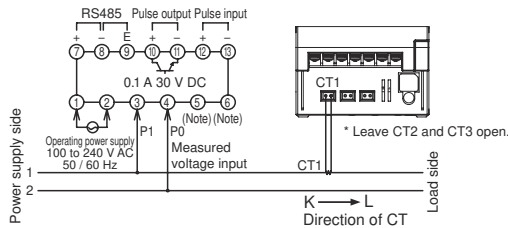


Note: Do not wire to (5), (6) terminal. They are connected internal.

#### Single-phase three-wire system / Three-phase three-wire system \* Two dedicated CT are required.

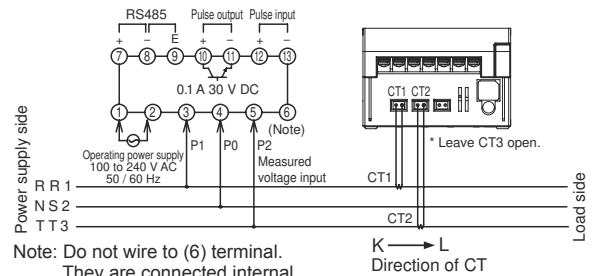

Note: Do not wire to (6) terminal. They are connected internal.

#### Three-phase four-wire system \* Three dedicated CT are required.

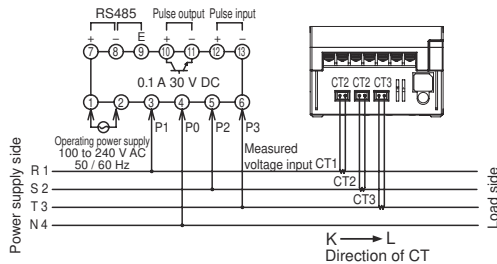

### Terminal arrangement (for AKW1111)

| Terminal No. | Function | Terminal type          |
|--------------|----------|------------------------|
| (1)          | L        | Operating power supply |
| (2)          | N        |                        |
| (3)          | P1       | Measured voltage input |
| (4)          | P0       |                        |
| (5)          | P2       |                        |
| (6)          | P3       |                        |
| (7)          | +        | RS485                  |
| (8)          | -        |                        |
| (9)          | E        |                        |
| (10)         | +        | Pulse output           |
| (11)         | -        |                        |
| (12)         | +        | Pulse input            |
| (13)         | -        |                        |

\* Because the RS485(E) terminal does not have an SG (signal ground) terminal, the ground wire of the shielded cable should not be connected.


⚠ The input voltage to each terminal is as follows.

| Terminal                     | Phase and wire system   | Between terminals | Input voltage   |
|------------------------------|-------------------------|-------------------|---|
| Operating power supply input | Single-phase two-wire   | (1)-(2)           | 100 to 240 V AC (100 to 240 V and after) (Line voltage) |
|                              | Single-phase two-wire   | (3)-(4)           | 0 to 440 V AC (0 to 440 V and after) (Line voltage)     |
| Measured voltage input       | Single-phase three-wire | (3)-(4)-(5)       | 0 to 220 V AC (0 to 220 V to: 3W) (Phase voltage)       |
|                              | Three-phase three-wire  | (3)-(4)-(5)       | 0 to 440 V AC (0 to 440 V 3 and after) (Line voltage)   |
|                              | Three-phase four-wire   | (3)-(4)-(5)-(6)   | 0 to 254 V AC (0 to 254 V 3N and after) (Phase voltage) |
|                              | Three-phase four-wire   | (3)-(4)-(5)-(6)   | 0 to 254 V AC (0 to 254 V 3N and after) (Phase voltage) |

**AKW1121** When measuring load with rated input voltage (100 to 200 V AC system and 400 V AC system)

**Single-phase two-wire system**


\*One dedicated CT is required.

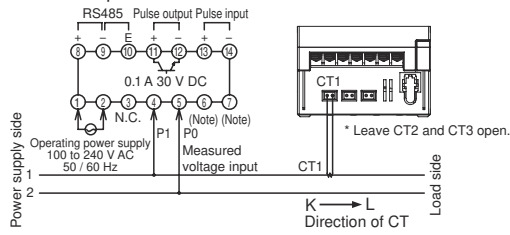

Note: Do not wire to (6), (7) terminal. They are connected internal.

**Single-phase three-wire system / Three-phase three-wire system**


\* Two dedicated CT are required.

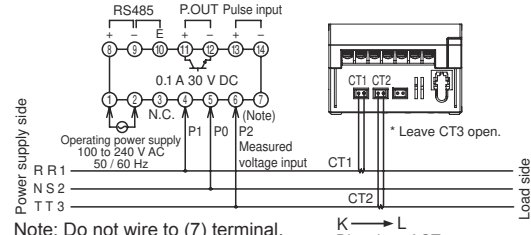

Note: Do not wire to (7) terminal. They are connected internal.

**Three-phase four-wire system**

\* Three dedicated CT are required.

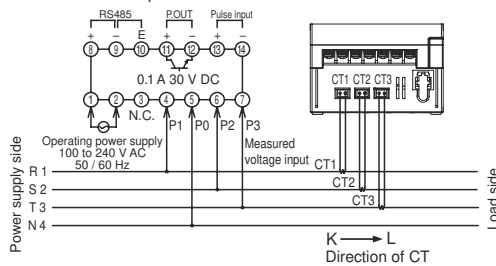

**Terminal arrangement (for AKW1121)**

| No. | Function      | Terminal type       | No.  | Function | Terminal type       |
|-----|---------------|---------------------|------|----------|---------------------|
| (1) | L             | M3<br>"+ / -" screw | (8)  | +        | M3<br>"+ / -" screw |
| (2) | N             |                     | (9)  | -        |                     |
| (3) | No connection |                     | (10) | E        |                     |
| (4) | P1            | M3<br>"+ / -" screw | (11) | +        | M3<br>"+ / -" screw |
| (5) | P0            |                     | (12) | -        |                     |
| (6) | P2            | M3<br>"+ / -" screw | (13) | +        | M3<br>"+ / -" screw |
| (7) | P3            |                     | (14) | -        |                     |

\* Because the RS485(E) terminal does not have an SG (signal ground) terminal, the ground wire of the shielded cable should not be connected.

⚠ The input voltage to each terminal is as follows.


| Terminal                     | Phase and wire system   | Between terminals | Input voltage   |
|------------------------------|-------------------------|-------------------|---|
| Operating power supply input | Single-phase two-wire   | (1)-(2)           | 100 to 240 V AC (100 to 240 V and after) (Line voltage) |
|                              | Single-phase two-wire   | (4)-(5)           | 0 to 440 V AC (0 to 440 V and after) (Line voltage)     |
| Measured voltage input       | Single-phase three-wire | (4)-(5)-(6)       | 0 to 220 V AC (0 to 220 V to: 3W) (Phase voltage)       |
|                              | Three-phase three-wire  | (4)-(5)-(6)       | 0 to 440 V AC (0 to 440 V 3 and after) (Line voltage)   |
|                              | Three-phase three-wire  | (4)-(5)-(6)       | 0 to 440 V AC (0 to 440 V 3 and after) (Line voltage)   |
|                              | Three-phase four-wire   | (4)-(5)-(6)-(7)   | 0 to 254 V AC (0 to 254 V 3N and after) (Phase voltage) |

Unit: mm in, Tolerance: ± 1.0 ± 0.04

**KW4M**

**Screw terminal type (AKW5111/AKW5112)**

**11-pin type (AKW5211/AKW5212)**

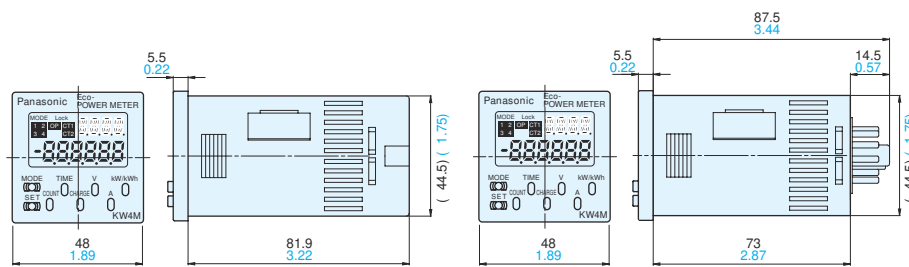


**Terminal arrangement**

| No. | Terminal type    |                     |                       |
|-----|------------------|---------------------|-----------------------|
|     | 11-pin type      | Screw terminal type |                       |
| 1   | 1, R, R          | RS485 (-)           | M3.5<br>"+ / -" screw |
| 2   | 2, N, S          | CT1 (k)/IN          |                       |
| 3   | 3, T, T          | CT1 (ℓ), CT2 (ℓ)    |                       |
| 4   | RS485 (+)        | CT2 (k)             |                       |
| 5   | RS485 (-)        | 0V                  |                       |
| 6   | Pulse output (+) | Pulse output (+)    |                       |
| 7   | Pulse output (-) | Pulse output (-)    |                       |
| 8   | CT1 (k)/IN       | 1, R, R             |                       |
| 9   | CT1 (ℓ), CT2 (ℓ) | 2, N, S             |                       |
| 10  | CT2 (k)          | 3, T, T             |                       |
| 11  | 0V               | RS485 (+)           |                       |

Note: A DIN rail terminal socket (ATC180041) should be used for 11-pin type KW4M Eco-POWER METER.

Unit: mm in, Tolerance: ± 1.0 ± 0.04

**KW7M**

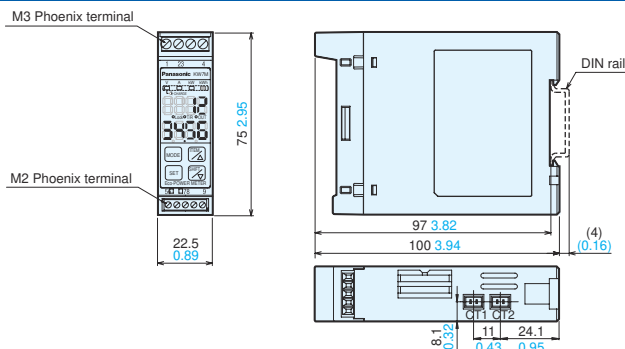

**Terminal arrangement**

| No. | Function         | Terminal type                    |
|-----|------------------|----------------------------------|
| 1   | 1, R, R          | Phoenix terminal<br>M3 "—" screw |
| 2   | 2, N, S          |                                  |
| 3   | 3, T, T          |                                  |
| 4   | No connection    | Phoenix terminal<br>M2 "—" screw |
| 5   | Pulse output (+) |                                  |
| 6   | Pulse output (-) |                                  |
| 7   | RS485 (+)        | Phoenix terminal<br>M2 "—" screw |
| 8   | RS485 (-)        |                                  |
| 9   | RS485 (E)        |                                  |


\* Because the RS485(E) terminal does not have an SG (signal ground) terminal, the ground wire of the shielded cable should not be connected.

Unit: mm in, Tolerance: ± 1.0 ± 0.04

**KW8M, KW8M (High performance type) and KW8M (1 A / 5 A CT input type)**

**AKW8115**

**AKW8111/AKW8111H**

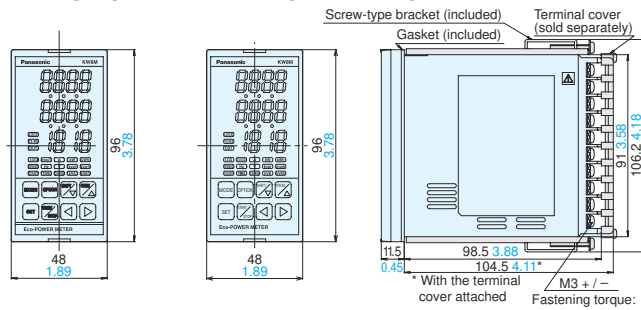

**Terminal arrangement**

| No. | Function               | No. | Function | Terminal type       |
|-----|------------------------|-----|----------|---------------------|
| 1   | No connection          | 11  | P1       | M3<br>"+ / -" screw |
| 2   | Operating power supply | 12  | P0       |                     |
| 3   |                        | 13  | P2       |                     |
| 4   | Pulse input            | 14  | P3       |                     |
| 5   |                        | 15  | CT1 (+)  |                     |
| 6   |                        | 16  | CT1 (-)  |                     |
| 7   | Pulse output           | 17  | CT2 (+)  |                     |
| 8   |                        | 18  | CT2 (-)  |                     |
| 9   | RS485                  | 19  | CT3 (+)  |                     |
| 10  |                        | 20  | CT3 (-)  |                     |

\* Because the RS485(E) terminal does not have an SG (signal ground) terminal, the ground wire of the shielded cable should not be connected.

## CE MARKING

### ■ Acquisition of CE marking

When using in the application conforming to EN61010-1/IEC61010-1, make sure to satisfy the following conditions.

[Environmental conditions]

- Overvoltage category II, Pollution degree 2
- Indoor use
- An ambient temperature of -10 to 50°C **14 to 122°F**
- An ambient non-condensing humidity of 35 to 85%RH (at 20°C **68°F**)
- Altitude of 2,000 m **6,562 ft** or less

[Mount the product in a place with]

- A minimum of dust, and an absence of corrosive gases
- No flammable, explosive gasses
- Few mechanical vibrations or shocks
- No exposure to direct sunlight
- No large capacity electromagnetic switches or cables through which large current is flowing

### ■ Applicable standard

|                 |                  |  |  |
|-----------------|------------------|--|--|
| Safety standard | EN61010-1        |  |  |
| EMC             | EMI<br>EN61326-1 | Radiation interference field strength<br>Noise terminal voltage  | CISPR11 class A<br>CISPR11 class A   |
|                 | EMS<br>EN61326-1 | Static discharge immunity<br>RF electromagnetic field immunity<br>EFT/B immunity<br>Surge immunity<br>Conductivity noise immunity<br>Power frequency magnetic field immunity<br>Voltage dip / Instantaneous stop /<br>Voltage fluctuation immunity | EN61000-4-2<br>EN61000-4-3<br>EN61000-4-4<br>EN61000-4-5<br>EN61000-4-6<br>EN61000-4-8<br>EN61000-4-11 |

## ENERGY EFFICIENCY SUPPORT EQUIPMENT LINEUP

### Visualize Air Consumption

#### Air Flow Monitor EWA1



- Ultrasonic type resistant to oil mist
- No need to use dedicated filters
- Pipe size: 25A (1B) to 200A (8B)

### Data collection and storage

#### DLL

(Data Logger Light)



- Collecting and storing power, pulse and analog data of Eco-POWER METER
- Provided with a USB port and an SD/SDHC memory card slot
- Equipped with an AC/DC power supply
- Provided with a RS232C/RS485 communication port [MEWTOCOL / MODBUS (RTU)]

### Monitoring by LAN (Ethernet)

#### KS1 Signal Converter



- Converting RS232C/RS485 power data for communications by LAN

### For cases where wired connection is difficult

#### KR20 Wireless Unit



- Wireless communications of RS232C/RS485 power data
- 2.4 GHz band wireless communications
- Compliant with wireless standards of Europe and Japan

#### Wireless Sensor EWR1



- Wireless communications of illuminance data/temperature and humidity data
- Radially connect slave units with the master unit at the center
- 2.4 GHz band wireless communications

\* Please contact our sales offices for more information about which areas this product can be used.

Please contact .....

## Panasonic Industrial Devices SUNX Co., Ltd.

2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan  
Global Sales Department

■Telephone: +81-568-33-7861 ■Facsimile: +81-568-33-8591  
panasonic.net/id/pidsx/global