

EKI-6558TI

**EN50155 IP67 8-port M12
Managed Ethernet Switch
with Wide Temperature**

EKI-6559TMI

**EN50155 IP67 8-port M12 +
2-port Fiber Optic Managed
Ethernet Switch with Wide
Temperature**

User Manual

Copyright

The documentation and the software included with this product are copyrighted 2011 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties, which may result from its use.

Acknowledgements

All other product names or trademarks are properties of their respective owners.

Part No.
Printed in China

2nd Edition
Mar 2011

Product Warranty (2 years)

Advantech warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Advantech, or which have been subject to misuse, abuse, accident or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, network speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, obtain an RMA (return merchandise authorization) number from your dealer. This allows us to process your return more quickly.
4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

Declaration of Conformity

CE

This product has passed the CE test for environmental specifications. Test conditions for passing included the equipment being operated within an industrial enclosure. In order to protect the product from being damaged by ESD (Electrostatic Discharge) and EMI leakage, we strongly recommend the use of CE-compliant industrial enclosure products.

FCC Class A

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Technical Support and Assistance

- Step 1. Visit the Advantech web site at www.avanotech.com/support where you can find the latest information about the product.

- Step 2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Safety Instructions

1. Read these safety instructions carefully.
2. Keep this User's Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection. Protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient over voltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of breakage.
15. **DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -40°C (-40°F) OR ABOVE 85°C (185°F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.**

Contents

Chapter 1	Overview.....	2
1.1	Introduction	2
1.1.1	Heavy Duty	2
1.1.2	Dual Power Inputs	2
1.1.3	Flexible Mounting	2
1.1.4	Wide Operating Temperature	2
1.1.5	Easy Troubleshooting	2
1.2	Features	3
1.3	Specifications	4
1.3.1	EKI-6558TI	4
1.3.2	EKI-6559TMI	6
1.4	Packing List.....	8
1.5	Safety Precaution.....	8
Chapter 2	Installation	10
2.1	LED Indicators.....	10
2.1.1	EKI-6558TI	10
	Table 2.1: EKI-6558TI LED Definition	10
2.1.2	EKI-6559TMI	11
	Table 2.1: EKI-6559TMI LED Definition	11
2.2	Dimensions (units: mm)	12
2.2.1	EKI-6558TI	12
	Figure 2.1: EKI-6558TI Mechanical Dimensions	12
2.2.2	EKI-6559TMI	13
	Figure 2.2: EKI-6559TMI Mechanical Dimensions.....	13
2.3	Front & Bottom View	14
2.3.1	EKI-6558TI	14
	Figure 2.3: EKI-6558TI Front & Bottom Panels.....	14
2.3.2	EKI-6559TMI	15
	Figure 2.4: EKI-6559TMI Front & Bottom Panels	15
2.4	Mounting	16
2.4.1	Wall mounting.....	16
	Figure 2.5: The illustration for Wall-mounting	16
2.5	Fast Ethernet Ports	17
	Figure 2.6: M12 D-coded Fast Ethernet Connector	17
2.6	Wiring the Power Inputs	18
	Figure 2.7: Power1 & Power 2 Contacts	18
2.7	Wiring the P-Fail Alarm Contacts	18
	Figure 2.8: P-Fail Alarm Wiring	18
2.8	Hardware Installation	19
2.9	X-Ring Application.....	20
2.10	Coupling-Ring Application.....	21
2.11	Dual Homing Application.....	22

Chapter 3	Configuration	24
3.1	RS-232 Console	24
	Table 3.1: DB9-to-M12 Pin Assignments	24
	Figure 3.1: Open Hyper Terminal	25
	Figure 3.2: COM Port Properties Setting	25
	Figure 3.3: Login Screen: RS-232 Configuration	26
	Figure 3.4: Command Line Interface	26
3.1.1	Commands Level.....	27
	Table 3.2: Command Level	27
3.1.2	Commands Set List	27
	Table 3.3: Commands Set List	27
3.1.3	System Commands Set.....	28
	Table 3.4: System Commands Set.....	28
3.1.4	Port Commands Set	29
	Table 3.5: Port Commands Set.....	29
3.1.5	Trunk Commands Set.....	30
	Table 3.6: Trunk Commands Set.....	30
3.1.6	VLAN Commands Set	30
	Table 3.7: VLAN Commands Set.....	30
3.1.7	Spanning Tree Commands Set	31
	Table 3.8: Spanning Tree Commands Set	31
3.1.8	QOS Commands Set.....	32
	Table 3.9: QOS Commands Set.....	32
3.1.9	IGMP Commands Set.....	33
	Table 3.10: QOS Commands Set.....	33
3.1.10	Mac/Filter Table Commands Set	33
	Table 3.11: Mac/Filter Table Commands Set.....	33
3.1.11	SNMP Commands Set.....	33
	Table 3.12: SNMP Commands Set.....	34
3.1.12	Port Mirroring Commands Set	35
	Table 3.13: Port Mirroring Commands Set	35
3.1.13	802.1x Commands Set	35
	Table 3.14: 802.1x Commands Set.....	35
3.1.14	TFTP Commands Set	36
	Table 3.15: TFTP Commands Set	36
3.1.15	SystemLog, SMTP and Event.....	36
	Table 3.16: SysLog,SMTP,Event Commands Set.....	36
3.1.16	SNTP Commands Set	37
	Table 3.17: SNTP Commands Set.....	37
3.1.17	X-ring Commands Set	37
	Table 3.18: X-ring Commands Set	37
3.1.18	LLDP Command Set.....	38
	Table 3.19: LLDP Commands Set.....	38
3.2	Web Browser.....	39
	Figure 3.5: Type the address in the URL.....	39
	Figure 3.6: Web Login Window	39

Figure 3.7: Main page.....	40
3.2.1 System.....	41
Figure 3.8: System Information.....	41
Figure 3.9: IP Configuration.....	42
Figure 3.10: DHCP Server - System Configuration	43
Figure 3.11: DHCP Server – Client Entries	44
Figure 3.12: DHCP Server – Client Entries	44
Figure 3.13: TFTP – Update Firmware	45
Figure 3.14: TFTP – Restore Configuration.....	45
Figure 3.15: TFTP – Backup Configuration.....	46
Figure 3.16: Syslog Configuration	47
Figure 3.17: SMTP Configuration.....	48
Figure 3.18: Event Configuration.....	49
Figure 3.19: Fault Relay Alarm.....	50
Table 3.20: UTC Timezone	51
Figure 3.20: SNTP Configuration	52
Figure 3.21: IP Security.....	53
Figure 3.22: User Authentication	54
3.2.2 Port.....	55
Figure 3.23: Port Statistics.....	55
Figure 3.24: Port Control.....	56
Figure 3.25: Aggregator Setting	57
Figure 3.26: 2 work ports with LACP disabled.....	58
Figure 3.27: Static trunking group of 2 ports	58
Figure 3.28: Aggregator Information	59
Figure 3.29: State Activity.....	59
Figure 3.30: Port Mirroring	60
Figure 3.31: Rate Limiting	61
3.2.3 Protocol	62
Figure 3.32: VLAN Configuration	62
Figure 3.33: Port based mode	63
Figure 3.34: Port based mode-Add interface.....	63
Figure 3.35: Port Based Edit/Delete interface.....	64
Figure 3.36: 802.1Q VLAN Configuration	66
Figure 3.37: Edit Group Configuration interface	66
Figure 3.38: 802.1Q Group Configuration-Edit	67
Figure 3.39: RSTP System Configuration interface....	68
Figure 3.40: RSTP Port Configuration interface.....	69
Figure 3.41: SNMP System Configuration interface... 70	
Figure 3.42: Trap Configuration interface.....	71
Figure 3.43: SNMP V3 Configuration interface	72
Figure 3.44: QoS Configuration interface	75
Table 3.21: IGMP types.....	77
Figure 3.45: IGMP Configuration interface	77
Figure 3.46: X-ring interface	79
Figure 3.47: LLDP Configuration interface	80
3.2.4 Security.....	81
Figure 3.48: 802.1x/Radius System Configuration interface	81

Figure 3.49: 802.1x/Radius - Port Configuration interface	82
Figure 3.50: 802.1x/Radius - Misc Configuration interface	82
Figure 3.51: Static MAC Addresses interface.....	83
Figure 3.52: MAC Filtering interface.....	84
Figure 3.53: All MAC Address interface	84
Figure 3.54: Multicast Filtering interface.....	85
Figure 3.55: Factory Default interface	86
Figure 3.56: Save Configuration interface	86
Figure 3.57: System Reboot interface	86
Chapter 4 Troubleshooting	88

Overview

Sections include:

- Introduction
- Features
- Specifications
- Packing List
- Safety Precaution

Chapter 1 Overview

1.1 Introduction

To create reliability in your network, the IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH comes equipped with a proprietary redundant network protocol—X-Ring that was developed by Advantech, which provides users with an easy way to establish a redundant Ethernet network with ultra high-speed recovery time less than 20 ms.

Aside from 8 x 10/100Base-T(X) Fast Ethernet ports, EKI-6559TMI comes equipped with 2 LC type fiber optic ports. The fiber optic ports can be used for the application of wideband uploading and long distance transmissions to fit the field request flexibility.

1.1.1 Heavy Duty

Designed with circular M12 connectors for Fast Ethernet interface, the MANAGED INDUSTRIAL ETHERNET SWITCH provides the rugged construction which complies with IP67 standards. Therefore, the equipment is especially intended for the damp, dusty, and vibrant environments.

1.1.2 Dual Power Inputs

The redundant power input design for the IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH gives a backup power solution. With both the power inputs supplied, and when either one fails, the other one will be activated to keep the system operating continually. When one of the power inputs fails, the P-Fail LED indicator lights up and send an alarm through the relay output for notification purposes.

1.1.3 Flexible Mounting

IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH is compact and can be mounted on a DIN-rail or panel, so it is suitable for any space-constrained environment.

1.1.4 Wide Operating Temperature

The operating temperature of the IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH is between -40 ~ 75 °C. With such a wide range, you can use the IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH in some of the harshest industrial environments that exist.

1.1.5 Easy Troubleshooting

LED indicators make troubleshooting quick and easy. Each Ethernet port has a LED indicator displaying the link status. Also the PWR1, PWR2 and P-Fail indicators help you diagnose the system immediately.

1.2 Features

- Provides 2 x 100Base-FX LC type fiber port (EKI-6558TMI only)
- Provides 8 x 10/100Base-TX Mbps Ethernet ports
- Supports full/half duplex flow control
- Supports auto-negotiation
- Supports MDI/MDI-X auto-crossover
- Supports Packet Buffer up to 1Mbits
- Supports MAC Address Table up to 8K entries
- Wide range redundant power design
- IP-67 Protection
- Wall mounting design
- IEEE 802.1d Spanning Tree/IEEE 802.1w Rapid Spanning Tree
- Port-based VLAN, 802.1Q Tag VLAN, and GVRP
- X-Ring, Dual Homing, and Couple Ring technology
- Port Trunking with LACP
- QoS (Quality of Service)
- Bandwidth Control: Ingress Packet Filter and Egress Rate Limit
- Port Mirroring
- System Event Log
- Security: Port Security, IP Security, Login Security
- SNMP Trap
- IGMP with Query mode for Multi Media Application
- TFTP Firmware Update and System Configuration Restoration/Backup
- Supports wide operating temperatures from -40 ~ 75°C

1.3 Specifications

1.3.1 EKI-6558TI

Communications

Standard	IEEE 802.3, 802.3u, 802.3x, 802.3ad, IEEE 802.1d, 802.1w, 802.1p, 802.1Q, 802.1x, 802.1ab
LAN Transmission Speed	10/100Base-TX Up to 100Mbps

Interface

Connectors	8 x M12, 4-pole D-coded, female (8-port 10/100TX) 1 x M12, 8-pole A-coded, female (RS-232 Console) 1 x M12, 5-pole A-coded, male (Power) 1 x M12, 3-pole A-coded, female (Relay)
LED Indicators	System: PWR1, PWR2, P-Fail, R-Master Copper: Link/Activity

Network Management

Configuration	Web browser, Telnet, Serial Console, TFTP, SNMP v1/v2c/v3
VLAN Redundancy	IEEE 802.1Q, GVRP, Port-based, VLAN ADVANTECH X-Ring (Recovery time < 20ms), Dual Homing, Couple Ring, 802.1w/D RSTP/STP
Security	IP Access security, port security, DHCP Server, Port-IP Binding, User Authentication, Port Access Control
Traffic Control	IGMP Snooping/Query for multicast group management, Port Trunking, IEEE 802.3x flow control
Diagnostics	IEEE 802.1p QoS Cos/TOS/DSCP priority queuing Port Mirroring, Real-time traffic statistics, MAC Address Table, SNTP, Syslog, E-Mail Alert, SNMP, Trap, RMON, LLDP

Power

Power Consumption	3.84 Watts max. @ 48VDC
Power Input	2 x Unregulated +12 ~ 48 VDC
Relay Output	1 Relay Output, 1A @ 24 VDC

Mechanism

Dimensions (WxHxD)	193 x 176 x 62.5 mm
Enclosure	IP-67protection, Aluminum shell
Mounting	Wall-mount

Environment

Operating Temperature	-40 ~ 75°C
Operating Humidity	5 ~ 95% (non-condensing)
Storage Temperature	-40 ~ 85°C
Storage Humidity	5 ~ 95% (non-condensing)

Certifications

Safety	UL 508
Hazardous Location	UL/cUL Class I, Division 2, Groups A, B, C, and D
EMC	FCC Class A CE EN61000-6-4 CE EN61000-6-2 CE EN61000-4-2 (ESD) CE EN61000-4-3 (RS) CE EN61000-4-4 (EFT) CE EN61000-4-5 (Surge) CE EN61000-4-6 (CS) CE EN61000-4-8 (Magnetic Field)
Free Fall	IEC60068-2-32
Shock	IEC60068-2-27
Vibration	IEC60068-2-6

1.3.2 EKI-6559TMI

Communications

Standard	IEEE 802.3, 802.3u, 802.3x, 802.3z, 802.3ad, IEEE 802.1d, 802.1w, 802.1p, 802.1Q, 802.1x, 802.1ab
LAN Transmission Speed	10/100Base-TX, 100Base-FX Up to 100Mbps

Interface

Connectors	8 x M12, 4-pole D-coded, female (8-port 10/100TX) 2 x 100 LC type socket with water-proof 1 x M12, 8-pole A-coded, female (RS-232 Console) 1 x M12, 5-pole A-coded, male (Power) 1 x M12, 3-pole A-coded, female (Relay)
LED Indicators	System: PWR1, PWR2, P-Fail, R-Master Copper: Link/Activity Fiber: Link/Active

Network Management

Configuration	Web browser, Telnet, Serial Console, TFTP, SNMP v1/v2c/v3
VLAN Redundancy	IEEE 802.1Q, GVRP, Port-based, VLAN ADVANTECH X-Ring (Recovery time < 20ms), Dual Homing, Couple Ring, 802.1w/d RSTP/STP
Security	IP Access security, port security, DHCP Server, Port-IP Binding, User Authentication, Port Access Control
Traffic Control	IGMP Snooping/Query for multicast group management, Port Trunking, IEEE 802.3x flow control IEEE 802.1p QoS Cos/TOS/DSCP priority queuing
Diagnostics	Port Mirroring, Real-time traffic statistics, MAC Address Table, SNMP, Syslog, E-mail Alert, SNMP Trap, RMON' LLDP

Power

Power Consumption	8.1 Watts max. @ 48VDC
Power Input	2 x Unregulated +12 ~ 48 VDC
Relay Output	1 Relay Output, 1A @ 24 VDC

Mechanism

Dimensions (WxHxD)	193 x 176 x 62.5 mm
---------------------------	---------------------

Enclosure IP-67 protection, Aluminum shell
Mounting Wall-mount

Environment

Operating Temperature -40 ~ 75°C
Operating Humidity 5 ~ 95% (non-condensing)
Storage Temperature -40 ~ 85°C
Storage Humidity 5 ~ 95% (non-condensing)

Certifications

Safety UL 508
Hazardous Location UL/cUL Class I, Division 2, Groups A, B, C, and D
EMC FCC Class A
CE EN61000-6-4
CE EN61000-6-2
CE EN61000-4-2 (ESD)
CE EN61000-4-3 (RS)
CE EN61000-4-4 (EFT)
CE EN61000-4-5 (Surge)
CE EN61000-4-6 (CS)
CE EN61000-4-8 (Magnetic Field)

Free Fall IEC60068-2-32
Shock IEC60068-2-27
Vibration IEC60068-2-6

1.4 Packing List

- 1 x EKI-6558TI or EKI-6559TMI series managed industrial Ethernet switch
- 1 x eAutomation Industrial Communication CD-ROM with user manual
- 1 x M12 to RS-232 console cable
- 1 x startup manual

1.5 Safety Precaution

Attention *IF DC voltage is supplied by an external circuit, please use a protection device on the power supply input.*

Installation

Sections include:

- LED Indicators
- Dimensions
- Mounting
- Fast Ethernet Ports
- Wiring the Power Inputs
- Wiring the P-Fail Alarm Contacts
- Hardware Installation
- X-Ring Application
- Coupling-Ring Application
- Dual Homing Application

Chapter 2 Installation

In this chapter, you will be given an overview of the IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH hardware installation procedures.

2.1 LED Indicators

There are few LEDs located on the front panel display the power status and network status of IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH. Each of them has its own specific meaning shown as below.

2.1.1 EKI-6558TI

<i>Table 2.1: EKI-6558TI LED Definition</i>			
LED	Color	Description	
PWR1	Green	On	Power input 1 is active
		Off	Power input 1 is inactive
PWR2	Green	On	Power input 2 is active
		Off	Power input 2 is inactive
P-Fail (depends on the Fault Relay Alarm configuration)	Red	On	Power or Ethernet port failure occurs
		Off	No failure occurs
R-Master	Green	On	The industrial switch is the master of the X-ring group
		Off	The industrial switch is not the master of the X-ring group
P1 ~ P8	Green	On	Connected to network
		Flashing	Networking is active
		Off	Not connected to network

2.1.2 EKI-6559TMI

<i>Table 2.1: EKI-6559TMI LED Definition</i>			
LED	Color	Description	
PWR1	Green	On	Power input 1 is active
		Off	Power input 1 is inactive
PWR2	Green	On	Power input 2 is active
		Off	Power input 2 is inactive
P-Fail (depends on the Fault Relay Alarm configuration)	Red	On	Power or Ethernet port failure occurs
		Off	No failure occurs
R-Master	Green	On	The industrial switch is the master of the X-ring group
		Off	The industrial switch is not the master of the X-ring group
P9 ~ P10	Green	On	LC fiber port is linking
		Flashing	Networking is active
		Off	Not connected to network
P1 ~ P8	Green	On	Connected to network
		Flashing	Networking is active
		Off	Not connected to network

2.2 Dimensions (units: mm)

2.2.1 EKI-6558TI

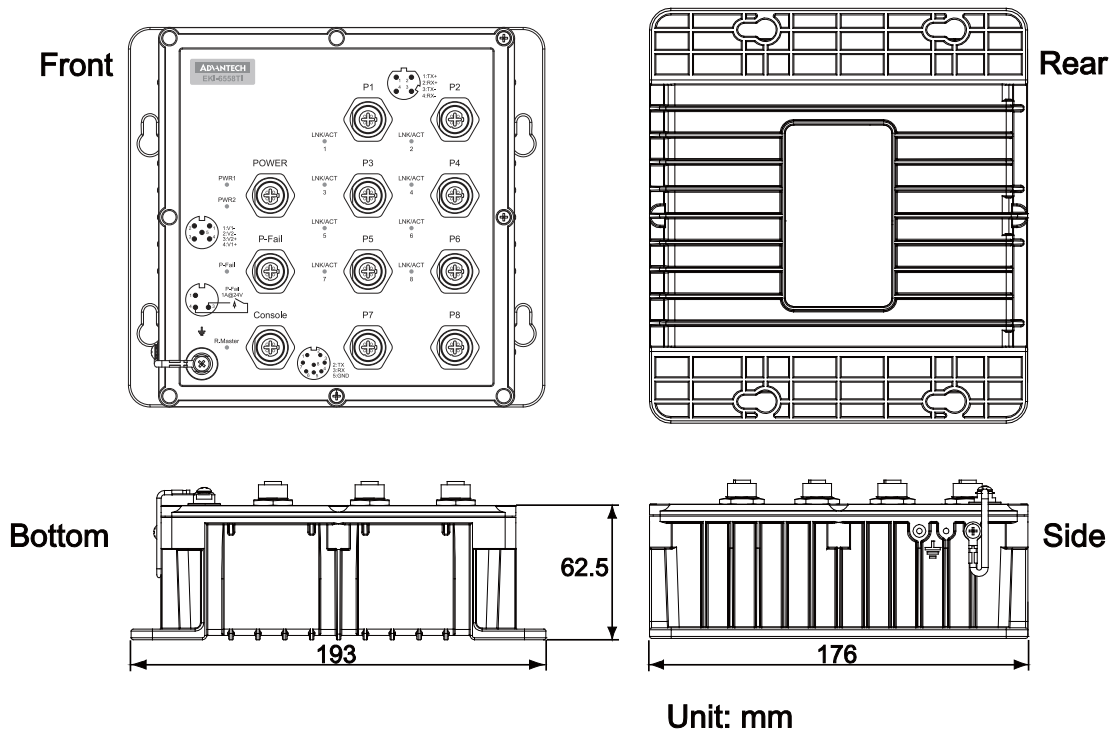


Figure 2.1: EKI-6558TI Mechanical Dimensions

2.2.2 EKI-6559TMI

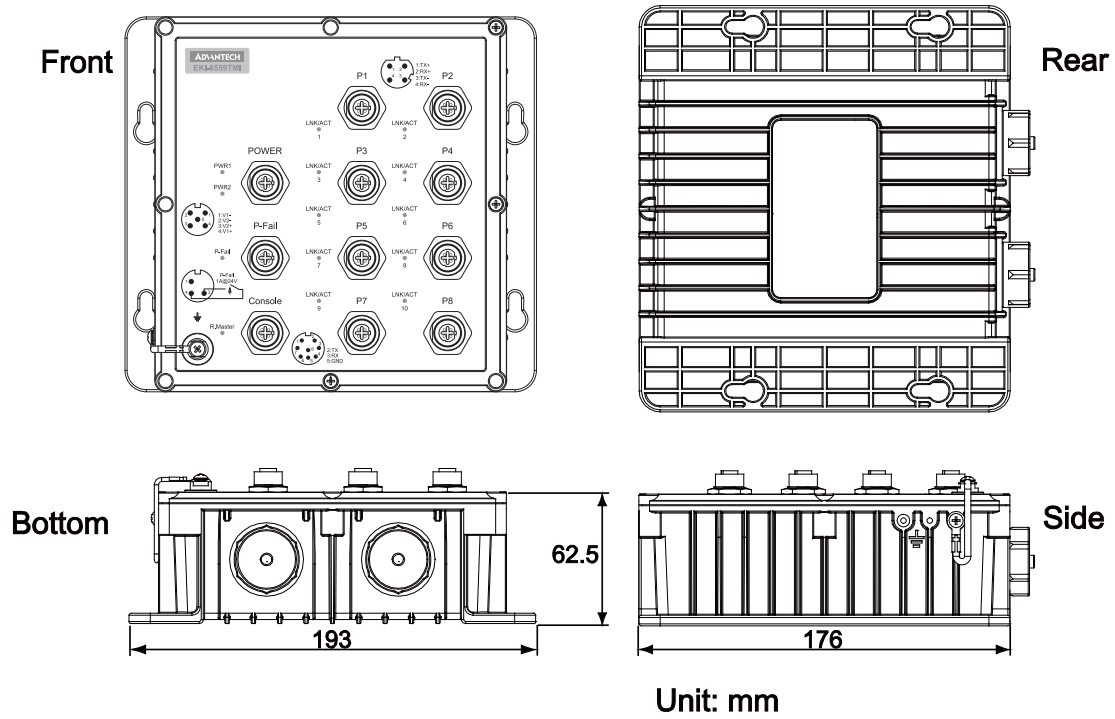


Figure 2.2: EKI-6559TMI Mechanical Dimensions

2.3 Front & Bottom View

2.3.1 EKI-6558TI

The figures shown below are the front panel and bottom panel of EKI-6558TI.

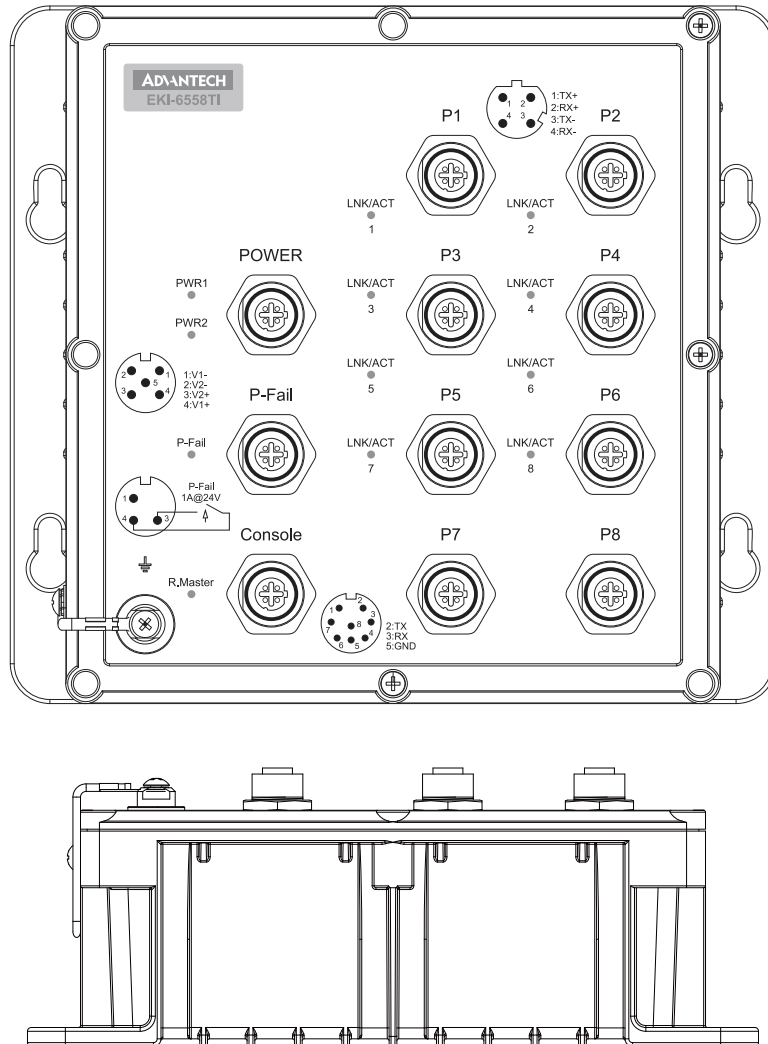


Figure 2.3: EKI-6558TI Front & Bottom Panels

2.3.2 EKI-6559TMI

The figures shown below are the front panel and bottom panel of EKI-6559TMI.

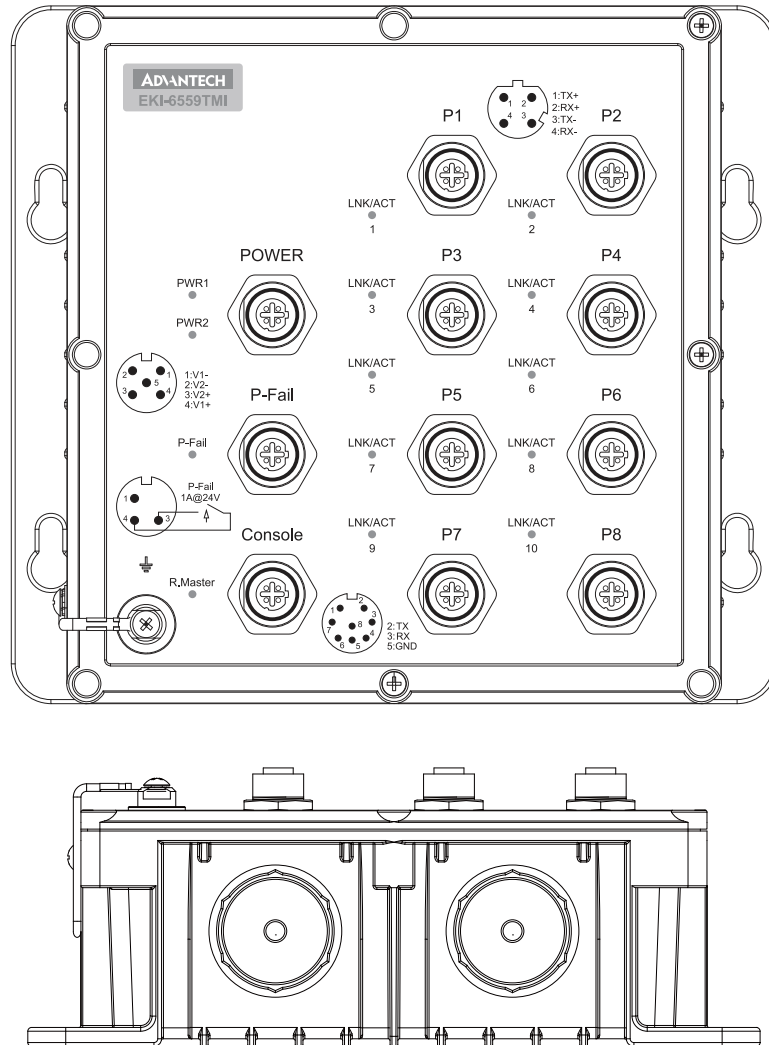


Figure 2.4: EKI-6559TMI Front & Bottom Panels

2.4 Mounting

2.4.1 Wall mounting

Besides desktop installation, the industrial switch is specially designed to hang on the wall for space-constrained environments. The drawing below illustrates the wall-mounting installation to hang the switch on the wall via four mounting holes on the sides.

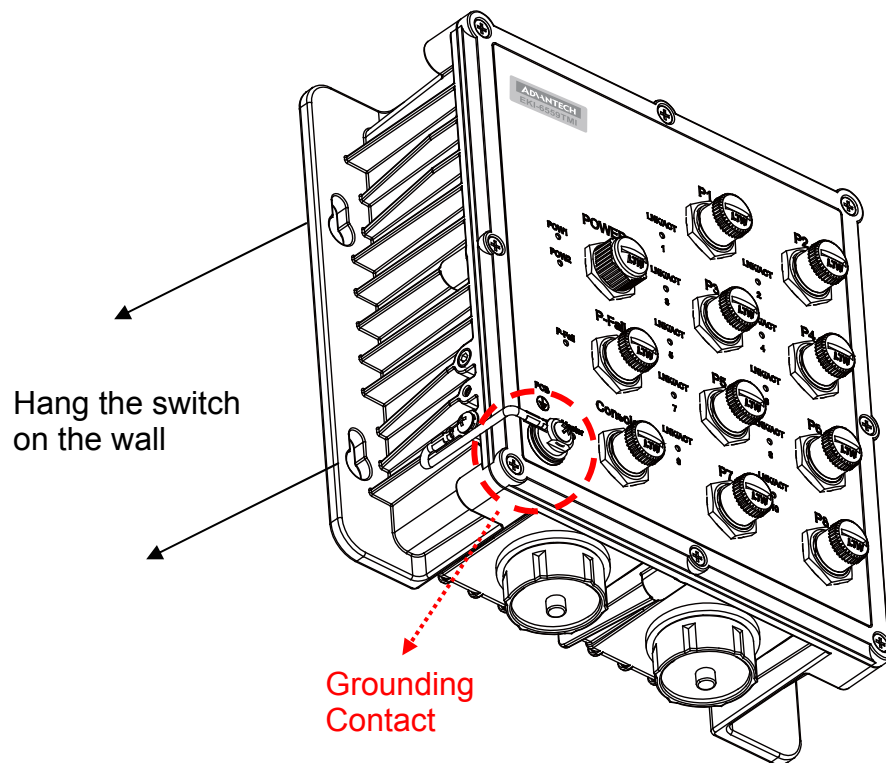


Figure 2.5: The illustration for Wall-mounting

Attention To earth the switch to ground with the grounding lug, please prepare an M8 wrench to hold the grounding contact from rotating when you are trying to tighten or release the fixing screw above the contact.

2.5 Fast Ethernet Ports

The M-12 D-coded Fast Ethernet ports are auto-sensing for 10Base-T or 100Base-TX connections. Auto MDI/MDI-X means that you can connect to another switch or workstation without changing straight-through or cross-over cabling.

M12 D-coded Connector Pin Assignments

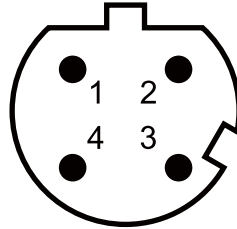


Figure 2.6: M12 D-coded Fast Ethernet Connector

Pin Number	Assignments
1	Tx+
2	RX+
3	TX-
4	Rx-

Note “+” and “-” signs represent the polarity of the wires that make up each wire pair.

2.6 Wiring the Power Inputs

Connect the positive and negative wires to PWR1 (V1+, V1-) and PWR2 (V2+, V2-) as the power pin assignments shown below.

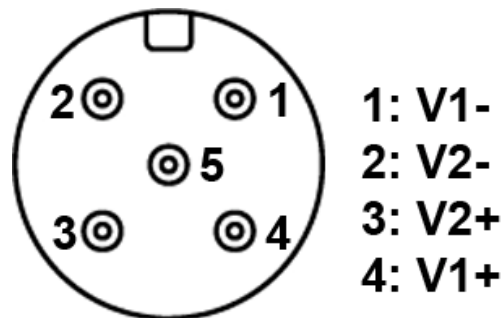


Figure 2.7: Power1 & Power 2 Contacts

2.7 Wiring the P-Fail Alarm Contacts

The P-Fail alarm relay is provided to signal critical error conditions that may occur on the switch. The contacts are energized upon powering up of the switch and remain energized until a critical error occurs including power failure or Ethernet port disconnection. Take the wiring illustration below as an example that illustrates the proper relay connection forming a normally close circuit, and the connection is to be broken when an error occurs.

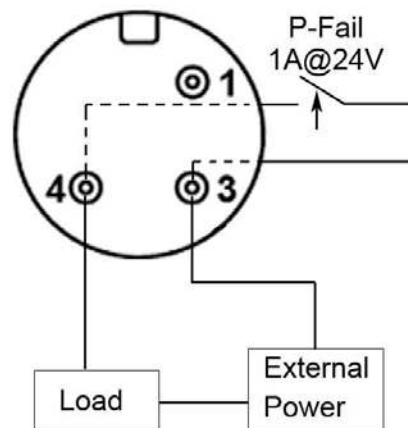


Figure 2.8: P-Fail Alarm Wiring

2.8 Hardware Installation

This section is intended to guide users on how to install the IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH with the installation points attending to it.


Installation Steps

1. Unpack the industrial switch
2. To hang the industrial switch on the wall, please refer to the Wall Mounting section.
3. To power on the Industrial switch, please refer to the Wiring the Power Inputs section for further information on how to wire the power. And then the power LED on the Industrial switch will light up. Please refer to the LED Indicators section for indication of LED lights.
4. Prepare the M12 D-Code Fast Ethernet Port mating cable for Ethernet connection.
5. The Fast Ethernet port LED indicators on the Industrial switch will light up when the cable is connected with the network devices. Please refer to the LED Indicators section for LED light indication.
6. When all connections are set and LED lights all show in normal, the installation is complete.

Note *This equipment is intended for use in a Pollution Degree 2 industrial environment.*


2.9 X-Ring Application

The industrial switch supports the X-Ring protocol that can help the network system recover from network connection failure within 20ms or less, and make the network system more reliable. The X-Ring algorithm is similar to Spanning Tree Protocol (STP) and Rapid STP (RSTP) algorithm but its recovery time is less than STP/RSTP. The figure below is a sample of X-Ring application.

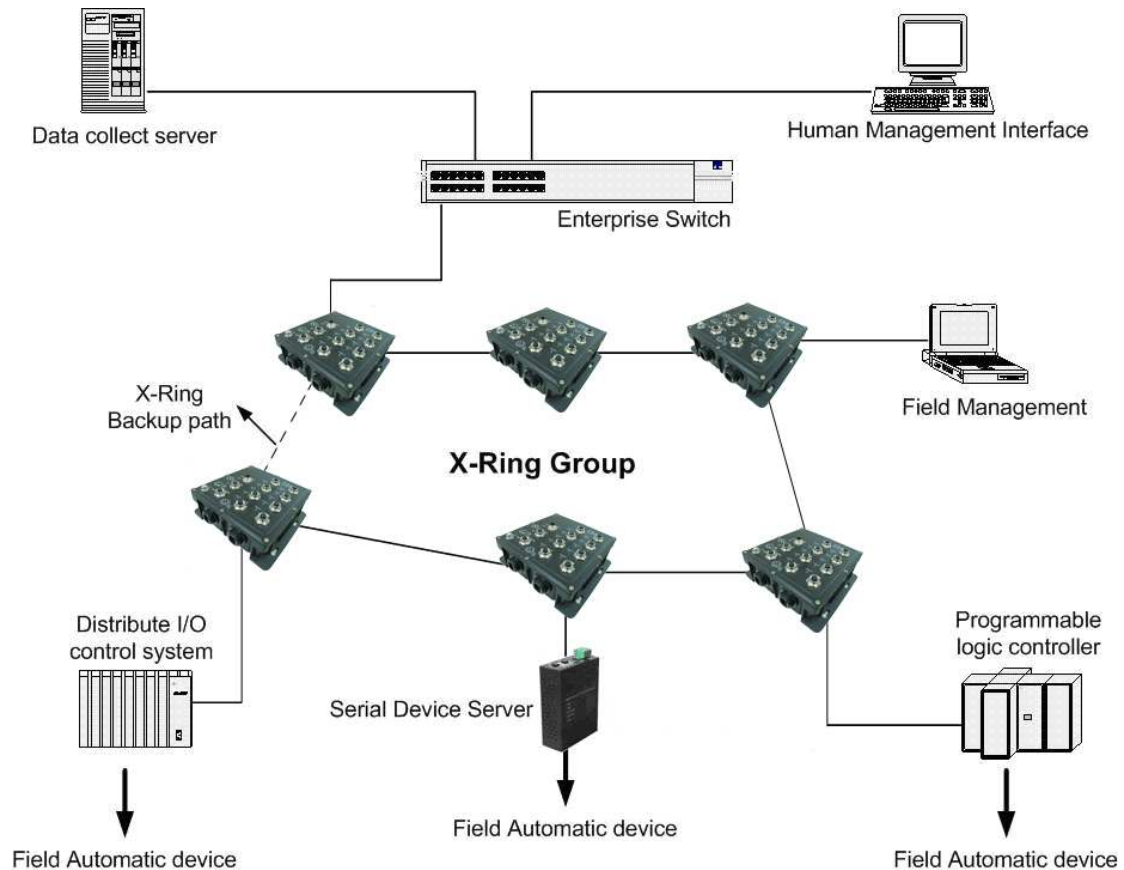

2.10 Coupling-Ring Application


In the network, it may have more than one X-Ring group. Using the coupling ring function can connect each X-Ring for redundant backup. It can ensure the transmissions between two ring groups not to fail. The following figure is a sample of coupling ring application.

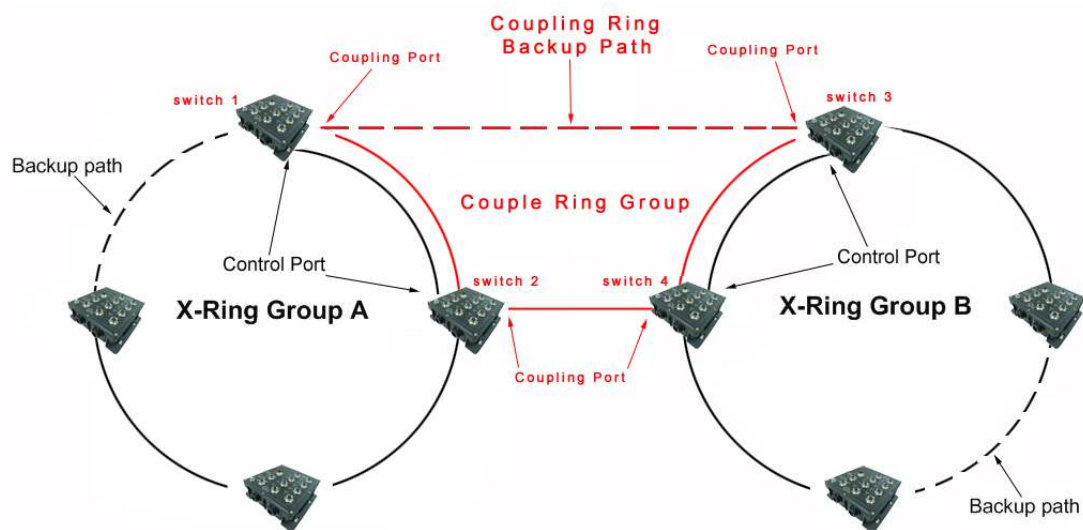

2.11 Dual Homing Application

The Dual Homing function is to prevent the connection loss from between X-Ring group and upper level/core switch. Assign two ports to be the Dual Homing port that is the backup port in the X-Ring group. The Dual Homing function only works when the X-Ring function is active. Each X-Ring group only has one Dual Homing port.

Note In dual Homing application architecture, the upper level switches need to enable the Rapid Spanning Tree Protocol.

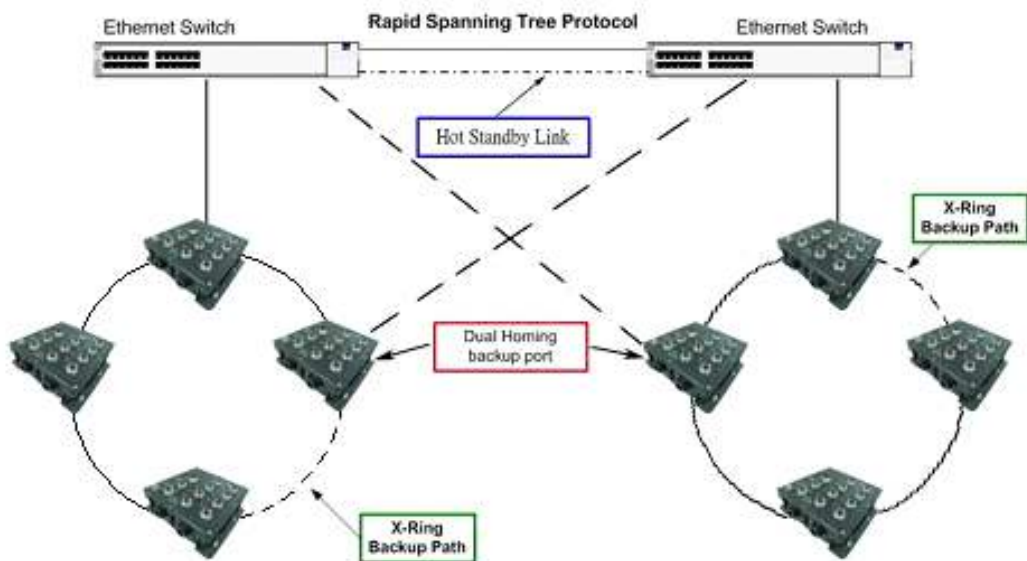

Configuration

Sections include:

- RS-232 Console
- Web Browser

Chapter 3 Configuration

The IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH can be configured in two ways: via RS-232 Console or a web browser.

3.1 RS-232 Console

The supplied cable which one end is RS-232 connector and the other end is M12, 8-pole A-coded, Male connector. Attach the RS-232 connector to PC or terminal and the M12 connector to the console port of the switch. The connected terminal or PC must support the terminal emulation program.



Table 3.1: DB9-to-M12 Pin Assignments

DB9 Connector (to PC)	DB9 Connector Pin Assignments		M12 Connector Pin Assignments		M12 Connector (to Switch)
	Pin 2	TX	Pin 2	TX	
	Pin 3	RX	Pin 3	RX	
	Pin 5	GND	Pin 5	GND	

From the Windows desktop, click '**Start/Programs/Accessories/Communications/HyperTerminal**' to open the **Hyper Terminal** program.

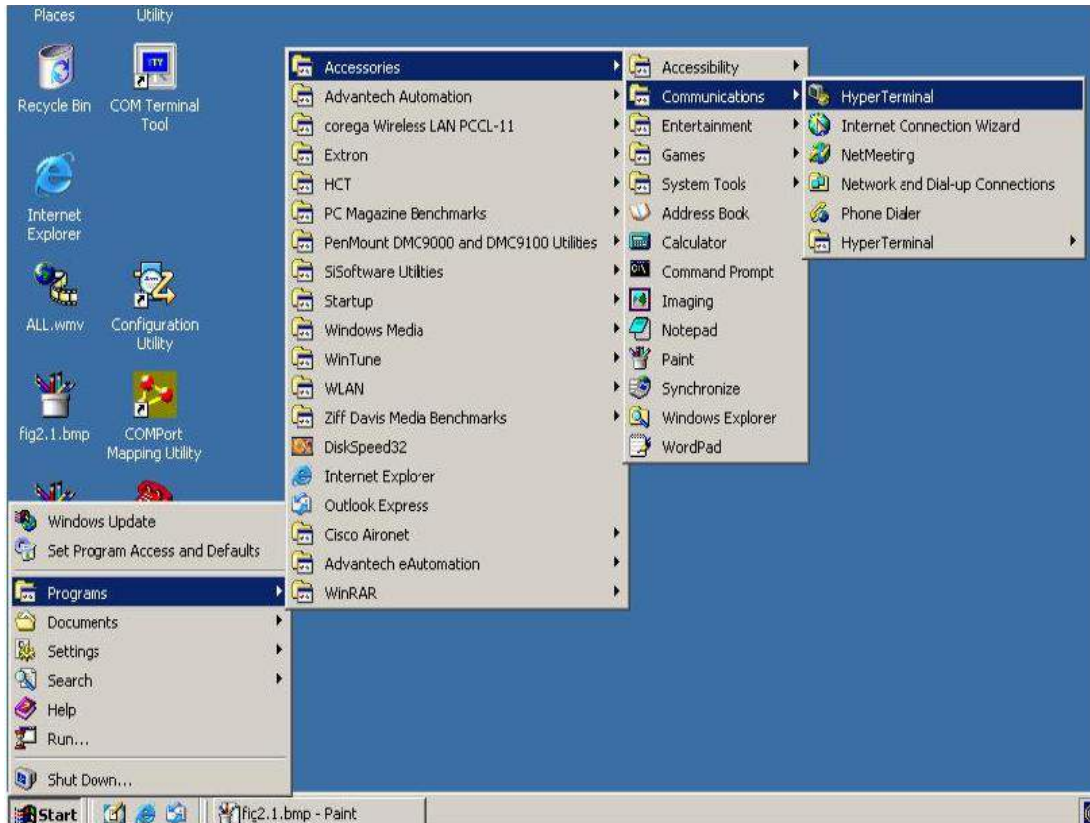


Figure 3.1: Open Hyper Terminal

Select the appropriate COM port, and set the parameter as Fig.3.2 (9600 for **Baud Rate**, 8 for **Data Bits**, **None** for **Parity**, 1 for **Stop Bits**, and **None** for **Flow Control**).

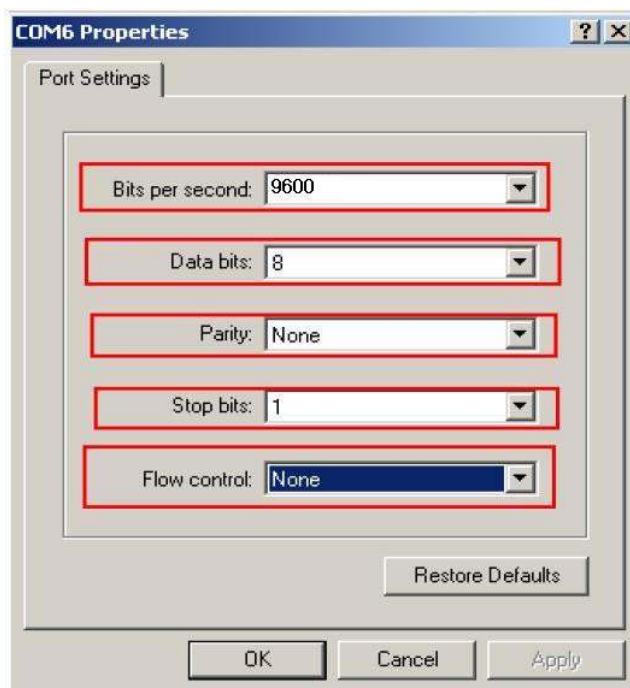


Figure 3.2: COM Port Properties Setting

Press **Enter** for login screen (If you can not find the login screen, press **Enter** one more time). The default user name and password are both "**admin**". Key in user name and password to enter the command line interface.

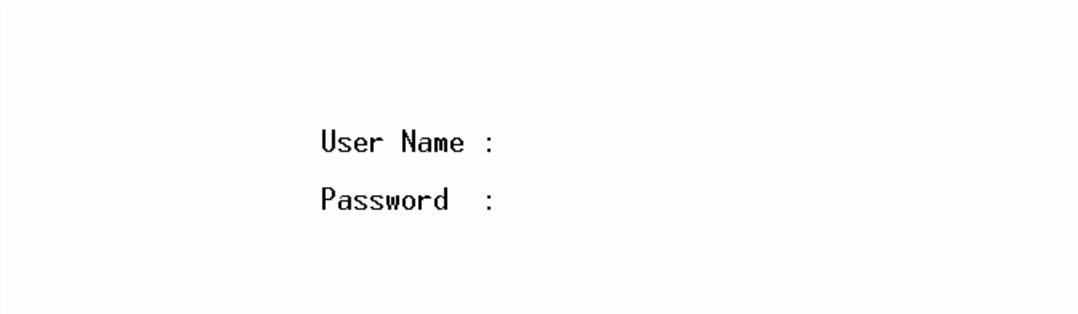


Figure 3.3: Login Screen: RS-232 Configuration

After you have logged in to the system, you will see a command prompt. To enter CLI management interface, type in "**enable**" command.

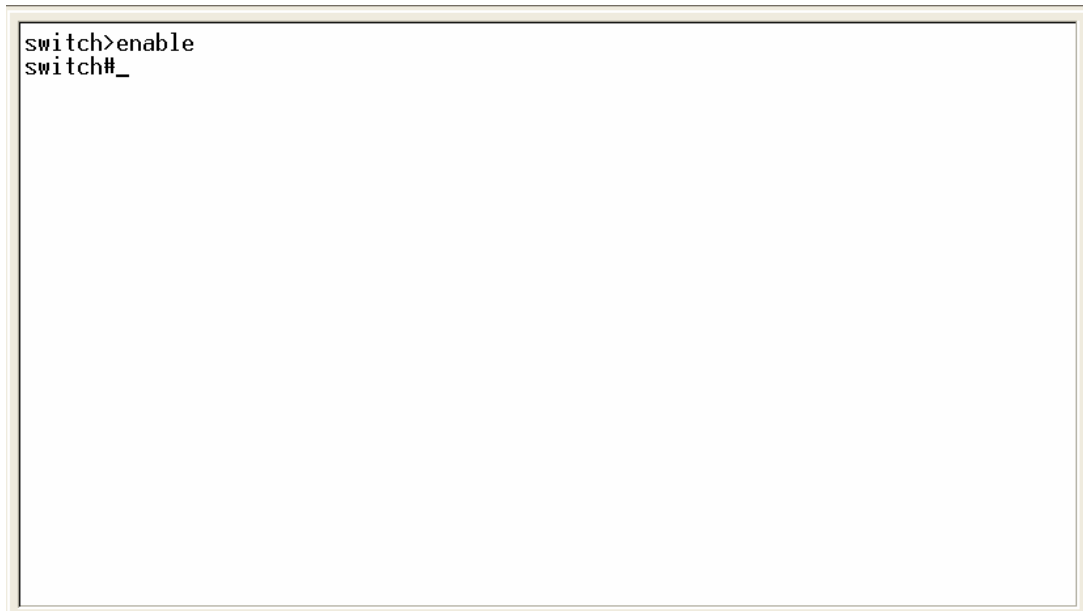


Figure 3.4: Command Line Interface

The following table lists the CLI commands and description.

3.1.1 Commands Level

<i>Table 3.2: Command Level</i>				
Modes	Access Method	Prompt	Exit Method	About This Model
User EXEC	Begin a session with your switch.	switch>	Enter logout or quit .	The user commands available at the user level are a subset of those available at the privileged level. Use this mode to <ul style="list-style-type: none"> • Perform basic tests. • Display system information.
Privileged EXEC	Enter the enable command while in user EXEC mode.	switch#	Enter disable to exit.	The privileged commands are the advanced mode. Use this mode to <ul style="list-style-type: none"> • Display advanced function status • Save configuration
Global Configuration	Enter the configure command while in privileged EXEC mode.	switch(config)#	To exit to the Privileged EXEC mode, enter exit or end	Use this mode to configure the parameters to be applied to your switch
VLAN database	Enter the vlan database command while in privileged EXEC mode.	switch(vlan)#	To return to the User EXEC mode, enter exit .	Use this mode to configure VLAN-specific parameters.
Interface configuration	Enter the interface command with a specific interface while in the Global Configuration mode	switch(config-if)#	To return to the previous mode, enter exit or end .	Use this mode to configure the parameters for the switch and Ethernet ports.

3.1.2 Commands Set List

<i>Table 3.3: Commands Set List</i>	
Command	Code Word
User EXEC	E
Privileged EXEC	P
Global configuration	G
VLAN database	V
Interface configuration	I

3.1.3 System Commands Set

Table 3.4: System Commands Set			
Commands	Level	Description	Example
show config	E	Show switch configuration	switch> show config
show terminal	P	Show console information	switch# show terminal
write memory	P	Save user configuration into permanent memory (flash rom)	switch# write memory
system name [System Name]	G	Configure system name	switch(config)# system name xxx
system location [System Location]	G	Set switch system location string	switch(config)# system location xxx
system description [System Description]	G	Set switch system description string	switch(config)# system description xxx
system contact [System Contact]	G	Set switch system contact window string	switch(config)# system contact xxx
show system-info	E	Show system information	switch> show system-info
ip address [Ip-address] [Subnet-mask] [Gateway]	G	Configure the IP address of switch	switch(config)# ip address 192.168.1.1 255.255.255.0 192.168.1.254
ip dhcp	G	Enable DHCP client function of switch	switch(config)# ip dhcp
show ip	P	Show IP information of switch	switch# show ip
no ip dhcp	G	Disable DHCP client function of switch	switch(config)# no ip dhcp
reload	G	Halt and perform a cold restart	switch(config)# reload
default	G	Restore to default	switch(config)# default
admin username [Username]	G	Changes a login username. (maximum 10 words)	switch(config)# admin username xxxxxx
admin password [Password]	G	Specifies a password (maximum 10 words)	switch(config)# admin password xxxxxx
show admin	P	Show administrator information	switch# show admin
dhcpserver enable	G	Enable DHCP Server	switch(config)# dhcpserver enable
Dhcpserver disable	G	Disable DHCP Server	switch(config)# no dhcpserver
dhcpserver lowip [Low IP]	G	Configure low IP address for IP pool	switch(config)# dhcpserver lowip 192.168.1.100
dhcpserver highip [High IP]	G	Configure high IP address for IP pool	switch(config)# dhcpserver highip 192.168.1.200
dhcpserver subnetmask [Subnet mask]	G	Configure subnet mask for DHCP clients	switch(config)# dhcpserver subnetmask 255.255.255.0
dhcpserver gateway [Gateway]	G	Configure gateway for DHCP clients	switch(config)# dhcpserver gateway 192.168.1.254
dhcpserver dnsip [DNS IP]	G	Configure DNS IP for DHCP clients	switch(config)# dhcpserver dnsip 192.168.1.1
dhcpserver leasetime [Hours]	G	Configure lease time (in hour)	switch(config)# dhcpserver leasetime 1
dhcpserver ipbinding [IP address]	I	Set static IP for DHCP clients by port	switch(config)# interface fastEthernet 2 switch(config)# dhcpserver ipbinding 192.168.1.1
show dhcpserver configuration	P	Show configuration of DHCP server	switch# show dhcpserver configuration
show dhcpserver clients	P	Show client entries of DHCP server	switch# show dhcpserver clients
show dhcpserver ip-binding	P	Show IP-Binding information of DHCP server	switch# show dhcpserver ip-binding
no dhcpserver	G	Disable DHCP server function	switch(config)# no dhcpserver
security enable	G	Enable IP security function	switch(config)# security enable
security http	G	Enable IP security of HTTP server	switch(config)# security http
security telnet	G	Enable IP security of telnet server	switch(config)# security telnet
security ip [Index(1..10)] [IP Address]	G	Set the IP security list	switch(config)# security ip 1 192.168.1.55
show security	P	Show the information of IP security	switch# show security

no security	G	Disable IP security function	switch(config)# no security
no security http	G	Disable IP security of HTTP server	switch(config)# no security http
no security telnet	G	Disable IP security of telnet server	switch(config)# no security telnet

3.1.4 Port Commands Set

Table 3.5: Port Commands Set			
Commands	Level	Description	Example
interface fastEthernet [Portid]	G	Choose the port for modification.	switch(config)# interface fastEthernet 2
duplex [full half]	I	Use the duplex configuration command to specify the duplex mode of operation for Fast Ethernet.	switch(config)# interface fastEthernet 2 switch(config-if)# duplex full
speed [10 100 1000]auto]	I	Use the speed configuration command to specify the speed mode of operation for Fast Ethernet., the speed can't be set to 1000 if the port isn't a giga port..	switch(config)# interface fastEthernet 2 switch(config-if)# speed 100
no flowcontrol	I	Disable flow control of interface	switch(config-if)# no flowcontrol
security enable	I	Enable security of interface	switch(config)# interface fastEthernet 2 switch(config-if)# security enable
no security	I	Disable security of interface	switch(config)# interface fastEthernet 2 switch(config-if)# no security
bandwidth type all	I	Set interface ingress limit frame type to "accept all frame"	switch(config)# interface fastEthernet 2 switch(config-if)# bandwidth type all
bandwidth type broadcast-multicast-flooded-unicast	I	Set interface ingress limit frame type to "accept broadcast, multicast, and flooded unicast frame"	switch(config)# interface fastEthernet 2 switch(config-if)# bandwidth type broadcast-multicast-flooded-unicast
bandwidth type broadcast-multicast	I	Set interface ingress limit frame type to "accept broadcast and multicast frame"	switch(config)# interface fastEthernet 2 switch(config-if)# bandwidth type broadcast-multicast
bandwidth type broadcast-only	I	Set interface ingress limit frame type to "only accept broadcast frame"	switch(config)# interface fastEthernet 2 switch(config-if)# bandwidth type broadcast-only
bandwidth in [Value]	I	Set interface input bandwidth. Rate Range is from 100 kbps to 102400 kbps or to 256000 kbps for giga ports, and zero means no limit.	switch(config)# interface fastEthernet 2 switch(config-if)# bandwidth in 100
bandwidth out [Value]	I	Set interface output bandwidth. Rate Range is from 100 kbps to 102400 kbps or to 256000 kbps for giga ports, and zero means no limit.	switch(config)# interface fastEthernet 2 switch(config-if)# bandwidth out 100
show bandwidth	I	Show interfaces bandwidth control	switch(config)# interface fastEthernet 2 switch(config-if)# show bandwidth
state [Enable Disable]	I	Use the state interface configuration command to specify the state mode of operation for Ethernet ports. Use the disable form of this command to disable the port.	switch(config)# interface fastEthernet 2 switch(config-if)# state Disable

show interface configuration	I	show interface configuration status	switch(config)#interface fastEthernet 2 switch(config-if)#show interface configuration
show interface status	I	show interface actual status	switch(config)#interface fastEthernet 2 switch(config-if)#show interface status
show interface accounting	I	show interface statistic counter	switch(config)#interface fastEthernet 2 switch(config-if)#show interface accounting
no accounting	I	Clear interface accounting information	switch(config)#interface fastEthernet 2 switch(config-if)#no accounting

3.1.5 Trunk Commands Set

Table 3.6: Trunk Commands Set

Commands	Level	Description	Example
aggregator priority [1~65535]	G	Set port group system priority	switch(config)#aggregator priority 22
aggregator activityport [Group ID] [Port Numbers]	G	Set activity port	switch(config)#aggregator activityport 2
aggregator group [GroupID] [Port-list] lACP workp [Workport]	G	Assign a trunk group with LACP active. [GroupID] :1~3 [Port-list]:Member port list, This parameter could be a port range(ex.1-4) or a port list separate by a comma(ex.2, 3, 6) [Workport]: The amount of work ports, this value could not be less than zero or be large than the amount of member ports.	switch(config)#aggregator group 1 1-4 lACP workp 2 or switch(config)#aggregator group 2 1,4,3 lACP workp 3
aggregator group [GroupID] [Port-list] noLACP	G	Assign a static trunk group. [GroupID] :1~3 [Port-list]:Member port list, This parameter could be a port range(ex.1-4) or a port list separate by a comma(ex.2, 3, 6)	switch(config)#aggregator group 1 2-4 noLACP or switch(config)#aggregator group 1 3,1,2 noLACP
show aggregator	P	Show the information of trunk group	switch#show aggregator 1 or switch#show aggregator 2 or switch#show aggregator 3
no aggregator lACP [GroupID]	G	Disable the LACP function of trunk group	switch(config)#no aggregator lACP 1
no aggregator group [GroupID]	G	Remove a trunk group	switch(config)#no aggregator group 2

3.1.6 VLAN Commands Set

Table 3.7: VLAN Commands Set

Commands	Level	Description	Example
vlan database	P	Enter VLAN configure mode	switch#vlan database
Vlanmode [portbase] 802.1q gvrp]	V	To set switch VLAN mode.	switch(vlan)#vlanmode portbase or switch(vlan)#vlanmode 802.1q or switch(vlan)#vlanmode gvrp

no vlan	V	No VLAN	Switch(vlan)# no vlan
Ported based VLAN configuration			
vlan port-based grpname [Group Name] grpname [GroupID] port [PortNumbers]	V	Add new port based VALN	switch(vlan)# vlan port-based grpname test grpname 2 port 2-4 or switch(vlan)# vlan port-based grpname test grpname 2 port 2,3,4
show vlan [GroupID] or show vlan	V	Show VLAN information	switch(vlan)# show vlan 23
no vlan group [GroupID]	V	Delete port base group ID	switch(vlan)# no vlan group 2
IEEE 802.1Q VLAN			
vlan 8021q name [GroupName] vid [VID]	V	Change the name of VLAN group, if the group didn't exist, this command can't be applied.	switch(vlan)# vlan 8021q name test vid 22
vlan 8021q port [PortNumber] access-link untag [UntaggedVID]	V	Assign a access link for VLAN by port, if the port belong to a trunk group, this command can't be applied.	switch(vlan)# vlan 8021q port 3 access-link untag 33
vlan 8021q port [PortNumber] trunk-link tag [TaggedVID List]	V	Assign a trunk link for VLAN by port, if the port belong to a trunk group, this command can't be applied.	switch(vlan)# vlan 8021q port 3 trunk-link tag 2,3,6,99 or switch(vlan)# vlan 8021q port 3 trunk-link tag 3-20
vlan 8021q port [PortNumber] hybrid-link untag [UntaggedVID] tag [TaggedVID List]	V	Assign a hybrid link for VLAN by port, if the port belong to a trunk group, this command can't be applied.	switch(vlan)# vlan 8021q port 3 hybrid-link untag 4 tag 3,6,8 or switch(vlan)# vlan 8021q port 3 hybrid-link untag 5 tag 6-8
vlan 8021q trunk [PortNumber] access-link untag [UntaggedVID]	V	Assign a access link for VLAN by trunk group	switch(vlan)# vlan 8021q trunk 3 access-link untag 33
vlan 8021q trunk [PortNumber] trunk-link tag [TaggedVID List]	V	Assign a trunk link for VLAN by trunk group	switch(vlan)# vlan 8021q trunk 3 trunk-link tag 2,3,6,99 or switch(vlan)# vlan 8021q trunk 3 trunk-link tag 3-20
vlan 8021q trunk [PortNumber] hybrid-link untag [UntaggedVID] tag [TaggedVID List]	V	Assign a hybrid link for VLAN by trunk group	switch(vlan)# vlan 8021q trunk 3 hybrid-link untag 4 tag 3,6,8 or switch(vlan)# vlan 8021q trunk 3 hybrid-link untag 5 tag 6-8
show vlan [GroupID] or show vlan	V	Show VLAN information	switch(vlan)# show vlan 23
no vlan group [GroupID]	V	Delete port base group ID	switch(vlan)# no vlan group 2

3.1.7 Spanning Tree Commands Set

<i>Table 3.8: Spanning Tree Commands Set</i>			
Commands	Level	Description	Example
spanning-tree enable	G	Enable spanning tree	switch(config)# spanning-tree enable
spanning-tree priority [0~61440]	G	Configure spanning tree priority parameter	switch(config)# spanning-tree priority 32767
spanning-tree max-age [seconds]	G	Use the spanning-tree max-age global configuration command to	switch(config)# spanning-tree max-age 15

		change the interval between messages the spanning tree receives from the root switch. If a switch does not receive a bridge protocol data unit (BPDU) message from the root switch within this interval, it recomputed the Spanning Tree Protocol (STP) topology.	
spanning-tree hello-time [seconds]	G	Use the spanning-tree hello-time global configuration command to specify the interval between hello bridge protocol data units (BPDUs).	switch(config)# spanning-tree hello-time 3
spanning-tree forward-time [seconds]	G	Use the spanning-tree forward-time global configuration command to set the forwarding-time for the specified spanning-tree instances. The forwarding time determines how long each of the listening and learning states last before the port begins forwarding.	switch(config)# spanning-tree forward-time 20
stp-path-cost [1~200000000]	I	Use the spanning-tree cost interface configuration command to set the path cost for Spanning Tree Protocol (STP) calculations. In the event of a loop, spanning tree considers the path cost when selecting an interface to place into the forwarding state.	switch(config)# interface fastEthernet 2 switch(config-if)# stp-path-cost 20
stp-path-priority [Port Priority]	I	Use the spanning-tree port-priority interface configuration command to configure a port priority that is used when two switches tie for position as the root switch.	switch(config)# interface fastEthernet 2 switch(config-if)# stp-path-priority 128
stp-admin-p2p [Auto True False]	I	Admin P2P of STP priority on this interface.	switch(config)# interface fastEthernet 2 switch(config-if)# stp-admin-p2p Auto
stp-admin-edge [True False]	I	Admin Edge of STP priority on this interface.	switch(config)# interface fastEthernet 2 switch(config-if)# stp-admin-edge True
stp-admin-non-stp [True False]	I	Admin NonSTP of STP priority on this interface.	switch(config)# interface fastEthernet 2 switch(config-if)# stp-admin-non-stp False
show spanning-tree	E	Displays a summary of the spanning-tree states.	switch> show spanning-tree
no spanning-tree	G	Disable spanning-tree.	switch(config)# no spanning-tree

3.1.8 QOS Commands Set

Table 3.9: QOS Commands Set

Commands	Level	Description	Example
qos policy [weighted-fair strict]	G	Select QOS policy scheduling	switch(config)# qos policy weighted-fair
qos prioritytype [port-based cos-only tos-only cos-first tos-first]	G	Setting of QOS priority type	switch(config)# qos prioritytype
qos priority portbased [Port] [lowest low middle high]	G	Configure Port-based Priority	switch(config)# qos priority portbased 1 low
qos priority cos [Priority][lowest low middle high]	G	Configure COS Priority	switch(config)# qos priority cos 0 middle
qos priority tos [Priority][lowest low middle high]	G	Configure TOS Priority	switch(config)# qos priority tos 3 high
show qos	P	Displays the information of QoS configuration	Switch# show qos

no qos	G	Disable QoS function	switch(config)#no qos
---------------	----------	----------------------	-----------------------

3.1.9 IGMP Commands Set

Table 3.10: QOS Commands Set

Commands	Level	Description	Example
igmp enable	G	Enable IGMP snooping function	switch(config)#igmp enable
igmp-query auto	G	Set IGMP query to auto mode	switch(config)#igmp-query auto
igmp-query enable	G	Set IGMP query to force mode	switch(config)#igmp-query enable
igmp unregister flooding	G	Set unregister stream flooding	switch(config)#igmp unregister flooding
igmp unregister blocking	G	Set unregister stream blocking	switch(config)#igmp unregister blocking
show igmp configuration	P	Displays the details of an IGMP configuration.	switch#show igmp configuration
show igmp multi	P	Displays the details of an IGMP snooping entries.	switch#show igmp multi
no igmp	G	Disable IGMP snooping function	switch(config)#no igmp
no igmp-query	G	Disable IGMP query	switch#no igmp-query

3.1.10 Mac/Filter Table Commands Set

Table 3.11: Mac/Filter Table Commands Set

Commands	Level	Description	Example
mac-address-table static hwaddr [MAC]	I	Configure MAC address table of interface (static).	switch(config)#interface fastEthernet 2 switch(config-if)#mac-address-table static hwaddr 000012345678
mac-address-table filter hwaddr [MAC]	G	Configure MAC address table(filter)	switch(config)#mac-address-table filter hwaddr 000012348678
show mac-address-table	P	Show all MAC address table	switch#show mac-address-table
show mac-address-table static	P	Show static MAC address table	switch#show mac-address-table static
show mac-address-table filter	P	Show filter MAC address table.	switch#show mac-address-table filter
no mac-address-table static hwaddr [MAC]	I	Remove an entry of MAC address table of interface (static)	switch(config)#interface fastEthernet 2 switch(config-if)#no mac-address-table static hwaddr 000012345678
no mac-address-table filter hwaddr [MAC]	G	Remove an entry of MAC address table (filter)	switch(config)#no mac-address-table filter hwaddr 000012348678
no mac-address-table	G	Remove dynamic entry of MAC address table	switch(config)#no mac-address-table

3.1.11 SNMP Commands Set

Table 3.12: SNMP Commands Set

Commands	Level	Description	Example
snmp system-name [System Name]	G	Set SNMP agent system name	switch(config)#snmp system-name I2switch
snmp system-location [System Location]	G	Set SNMP agent system location	switch(config)#snmp system-location lab
snmp system-contact [System Contact]	G	Set SNMP agent system contact	switch(config)#snmp system-contact where
snmp agent-mode [v1v2c v3 v1v2cv3]	G	Select the agent mode of SNMP	switch(config)#snmp agent-mode v1v2cv3
snmp community-strings [Community] right [RO/RW]	G	Add SNMP community string.	switch(config)#snmp community-strings public right rw
snmp-server host [IP address] community [Community-string] trap-version [v1 v2c]	G	Configure SNMP server host information and community string	switch(config)#snmp-server host 192.168.1.50 community public trap-version v1 (remove) Switch(config)# no snmp-server host 192.168.1.50
snmpv3 context-name [Context Name]	G	Configure the context name	switch(config)#snmpv3 context-name Test
snmpv3 user [User Name] group [Group Name] password [Authentication Password] [Privacy Password]	G	Configure the userprofile for SNMPV3 agent. Privacy password could be empty.	switch(config)#snmpv3 user test01 group G1 password AuthPW PrivPW
snmpv3 access context-name [Context Name] group [Group Name] security-level [NoAuthNoPriv AuthNoPriv AuthPriv] match-rule [Exact Prefix] views [Read View Name] [Write View Name] [Notify View Name]	G	Configure the access table of SNMPV3 agent	switch(config)#snmpv3 access context-name Test group G1 security-level AuthPriv match-rule Exact views V1 V1 V1
snmpv3 mibview view [View Name] type [Excluded Included] sub-oid [OID]	G	Configure the mibview table of SNMPV3 agent	switch(config)#snmpv3 mibview view V1 type Excluded sub-oid 1.3.6.1
show snmp	P	Show SNMP configuration	switch#show snmp
no snmp community-strings [Community]	G	Remove the specified community.	switch(config)#no snmp community-strings public
no snmp-server host [Host-address]	G	Remove the SNMP server host.	switch(config)#no snmp-server 192.168.1.50
no snmpv3 user [User Name]	G	Remove specified user of SNMPV3 agent.	switch(config)#no snmpv3 user Test
no snmpv3 access context-name [Context Name] group [Group Name] security-level [NoAuthNoPriv AuthNoPriv AuthPriv] match-rule [Exact Prefix] views [Read View Name] [Write View Name] [Notify View Name]	G	Remove specified access table of SNMPV3 agent.	switch(config)#no snmpv3 access context-name Test group G1 security-level AuthPriv match-rule Exact views V1 V1 V1
no snmpv3 mibview view [View Name] type [Excluded Included] sub-oid [OID]	G	Remove specified mibview table of SNMPV3 agent.	switch(config)#no snmpv3 mibview view V1 type Excluded sub-oid 1.3.6.1

3.1.12 Port Mirroring Commands Set

Table 3.13: Port Mirroring Commands Set

Commands	Level	Description	Example
monitor rx	G	Set RX destination port of monitor function	switch(config)# monitor rx
monitor tx	G	Set TX destination port of monitor function	switch(config)# monitor tx
show monitor	P	Show port monitor information	switch# show monitor
monitor [RX TX Both]	I	Configure source port of monitor function	switch(config)# interface fastEthernet 2 switch(config-if)# monitor RX
show monitor	I	Show port monitor information	switch(config)# interface fastEthernet 2 switch(config-if)# show monitor
no monitor	I	Disable source port of monitor function	switch(config)# interface fastEthernet 2 switch(config-if)# no monitor

3.1.13 802.1x Commands Set

Table 3.14: 802.1x Commands Set

Commands	Level	Description	Example
8021x enable	G	Use the 802.1x global configuration command to enable 802.1x protocols.	switch(config)# 8021x enable
8021x system radiusip [IP address]	G	Use the 802.1x system radius IP global configuration command to change the radius server IP.	switch(config)# 8021x system radiusip 192.168.1.1
8021x system serverport [port ID]	G	Use the 802.1x system server port global configuration command to change the radius server port	switch(config)# 8021x system serverport 1815
8021x system accountport [port ID]	G	Use the 802.1x system account port global configuration command to change the accounting port	switch(config)# 8021x system accountport 1816
8021x system sharekey [ID]	G	Use the 802.1x system share key global configuration command to change the shared key value.	switch(config)# 8021x system sharekey 123456
8021x system nasid [words]	G	Use the 802.1x system nasid global configuration command to change the NAS ID	switch(config)# 8021x system nasid test1
8021x misc quietperiod [sec.]	G	Use the 802.1x misc quiet period global configuration command to specify the quiet period value of the switch.	switch(config)# 8021x misc quietperiod 10
8021x misc txperiod [sec.]	G	Use the 802.1x misc TX period global configuration command to set the TX period.	switch(config)# 8021x misc txperiod 5
8021x misc supportimeout [sec.]	G	Use the 802.1x misc supp timeout global configuration command to set the supplicant timeout.	switch(config)# 8021x misc supportimeout 20
8021x misc servertimeout [sec.]	G	Use the 802.1x misc server timeout global configuration command to set the server timeout.	switch(config)# 8021x misc servertimeout 20
8021x misc maxrequest [number]	G	Use the 802.1x misc max request global configuration command to set the MAX requests.	switch(config)# 8021x misc maxrequest 3
8021x misc reauthperiod [sec.]	G	Use the 802.1x misc reauth period	switch(config)# 8021x misc reauthperiod 3000

		global configuration command to set the reauth period.	
8021x portstate [disable reject accept authorize]	I	Use the 802.1x port state interface configuration command to set the state of the selected port.	switch(config)# interface fastethernet 3 switch(config-if)# 8021x portstate accept
show 8021x	E	Displays a summary of the 802.1x properties and also the port sates.	switch> show 8021x
no 8021x	G	Disable 802.1x function	switch(config)# no 8021x

3.1.14 TFTP Commands Set

Table 3.15: TFTP Commands Set

Commands	Level	Description	Defaults Example
backup flash:backup_cfg	G	Save configuration to TFTP and need to specify the IP of TFTP server and the file name of image.	switch(config)# backup flash:backup_cfg
restore flash:restore_cfg	G	Get configuration from TFTP server and need to specify the IP of TFTP server and the file name of image.	switch(config)# restore flash:restore_cfg
upgrade flash:upgrade_fw	G	Upgrade firmware by TFTP and need to specify the IP of TFTP server and the file name of image.	switch(config)# upgrade lash:upgrade_fw

3.1.15 SystemLog, SMTP and Event

Table 3.16: SysLog,SMTP,Event Commands Set

Commands	Level	Description	Example
systemlog ip [IP address]	G	Set System log server IP address.	switch(config)# systemlog ip 192.168.1.100
systemlog mode [client server both]	G	Specified the log mode	switch(config)# systemlog mode both
show systemlog	E	Displays system log.	Switch> show systemlog
show systemlog	P	Show system log client & server information	switch# show systemlog
no systemlog	G	Disable systemlog functon	switch(config)# no systemlog
smtp enable	G	Enable SMTP function	switch(config)# smtp enable
smtp serverip [IP address]	G	Configure SMTP server IP	switch(config)# smtp serverip 192.168.1.5
smtp authentication	G	Enable SMTP authentication	switch(config)# smtp authentication
smtp account [account]	G	Configure authentication account	switch(config)# smtp account User
smtp password [password]	G	Configure authentication password	switch(config)# smtp password
smtp rcptemail [Index] [Email address]	G	Configure Rcpt e-mail Address	switch(config)# smtp rcptemail 1 Alert@test.com
show smtp	P	Show the information of SMTP	switch# show smtp
no smtp	G	Disable SMTP function	switch(config)# no smtp
event device-cold-start [Systemlog SMTP Both]	G	Set cold start event type	switch(config)# event device-cold-start both
event authentication-failure [Systemlog SMTP Both]	G	Set Authentication failure event type	switch(config)# event authentication-failure both
event X-ring-topology-change [Systemlog SMTP Both]	G	Set X - ring topology changed event type	switch(config)# event X-ring-topology-change both
event systemlog [Link-UP Link-Down Both]	I	Set port event for system log	switch(config)# interface fastethernet 3 switch(config-if)# event systemlog both
event smtp [Link-UP Link-Down Both]	I	Set port event for SMTP	switch(config)# interface fastethernet 3 switch(config-if)# event smtp both

show event	P	Show event selection	switch# show event
no event device-cold-start	G	Disable cold start event type	switch(config)# no event device-cold-start
no event authentication-failure	G	Disable Authentication failure event type	switch(config)# no event authentication-failure
no event X-ring-topology-change	G	Disable X - ring topology changed event type	switch(config)# no event X-ring-topology-change
no event systemlog	I	Disable port event for system log	switch(config)# interface fastethernet 3 switch(config-if)# no event systemlog
no event smtp	I	Disable port event for SMTP	switch(config)# interface fastethernet 3 switch(config-if)# no event smtp
show systemlog	P	Show system log client & server information	switch# show systemlog

3.1.16 SNTP Commands Set

Table 3.17: SNTP Commands Set

Commands	Level	Description	Example
sntp enable	G	Enable SNTP function	switch(config)# sntp enable
sntp daylight	G	Enable daylight saving time, if SNTP function is inactive, this command can't be applied.	switch(config)# sntp daylight
sntp daylight-period [Start time] [End time]	G	Set period of daylight saving time, if SNTP function is inactive, this command can't be applied. Parameter format: [yyyymmdd-hh:mm]	switch(config)# sntp daylight-period 20060101-01:01 20060202-01-01
sntp daylight-offset [Minute]	G	Set offset of daylight saving time, if SNTP function is inactive, this command can't be applied.	switch(config)# sntp daylight-offset 3
sntp ip [IP]	G	Set SNTP server IP, if SNTP function is inactive, this command can't be applied.	switch(config)# sntp ip 192.169.1.1
sntp timezone [Timezone]	G	Set timezone index, use "show sntp timezone" command to get more information of index number	switch(config)# sntp timezone 22
show sntp	P	Show SNTP information	switch# show sntp
show sntp timezone	P	Show index number of time zone list	switch# show sntp timezone
no sntp	G	Disable SNTP function	switch(config)# no sntp
no sntp daylight	G	Disable daylight saving time	switch(config)# no sntp daylight

3.1.17 X-ring Commands Set

Table 3.18: X-ring Commands Set

Commands	Level	Description	Example
ring enable	G	Enable X-ring	switch(config)# ring enable
ring master	G	Enable ring master	switch(config)# ring master
ring couplering	G	Enable couple ring	switch(config)# ring couplering
ring dualhoming	G	Enable dual homing	switch(config)# ring dualhoming
ring ringport [1st Ring Port] [2nd Ring Port]	G	Configure 1st/2nd Ring Port	switch(config)# ring ringport 7 8
ring couplingport [Coupling Port]	G	Configure Coupling Port	switch(config)# ring couplingport 1
ring controlport [Control Port]	G	Configure Control Port	switch(config)# ring controlport 2

ring homingport [Dual Homing Port]	G	Configure Dual Homing Port	switch(config)# ring homingport 3
show ring	P	Show the information of X - Ring	switch# show ring
no ring	G	Disable X-ring	switch(config)# no ring
no ring master	G	Disable ring master	switch(config)# no ring master
no ring couplering	G	Disable couple ring	switch(config)# no ring couplering
no ring dualhoming	G	Disable dual homing	switch(config)# no ring dualhoming

3.1.18 LLDP Command Set

Table 3.19: LLDP Commands Set

Commands	Level	Description	Example
lldp enable	G	Enable LLDP function	switch(config)# lldp enable
lldp interval [TIME sec]	G	Configure LLDP interval	switch(config)# lldp interval 10
no lldp	G	Disable LLDP function	switch(config)# no lldp
show lldp	P	Show LLDP function	switch# show lldp

3.2 Web Browser

IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH provides a convenient configuring way via web browser. You can follow the steps below to access IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH.

IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH's default IP is 192.168.1.1. Make sure your host PC and IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH are on the same logical sub-network.

Warning *Your host PC should be in the same VLAN with the IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH, or the management will not be configured.*

Connect IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH to the Ethernet then your host PC could be configured via Ethernet. Or you can directly connect IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH to your host PC with a straight-through or cross over Ethernet cable.

Before to use web management, install the industrial switch on the network and make sure that any one of PCs on the network can connect with the industrial switch through the web browser. The industrial switch default value of IP, subnet mask, username and password are as below:

- IP Address: 192.168.1.1
- Subnet Mask: 255.255.255.0
- Default Gateway: 192.168.1.254
- User Name: admin
- Password: admin

Open Internet Explorer and type IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH's IP in the Address field then press Enter to open the web login page.

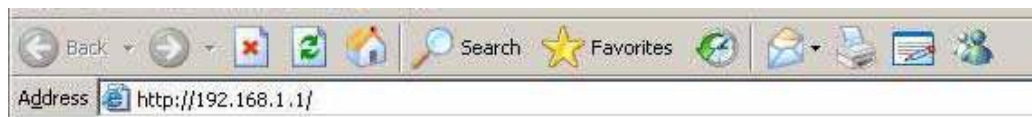


Figure 3.5: Type the address in the URL



Figure 3.6: Web Login Window

The default user name and password are both **admin**, fill in the user name and password then press **OK** to enter the configuration. You can change the password in the system setting.

In the main page, you can find the tree menu structure of the IP-67 MANAGED INDUSTRIAL ETHERNET SWITCH in the left side. Click the “+” symbol to unroll the hiding hyperlink, and click the hyperlink to open the function page you want to configure.

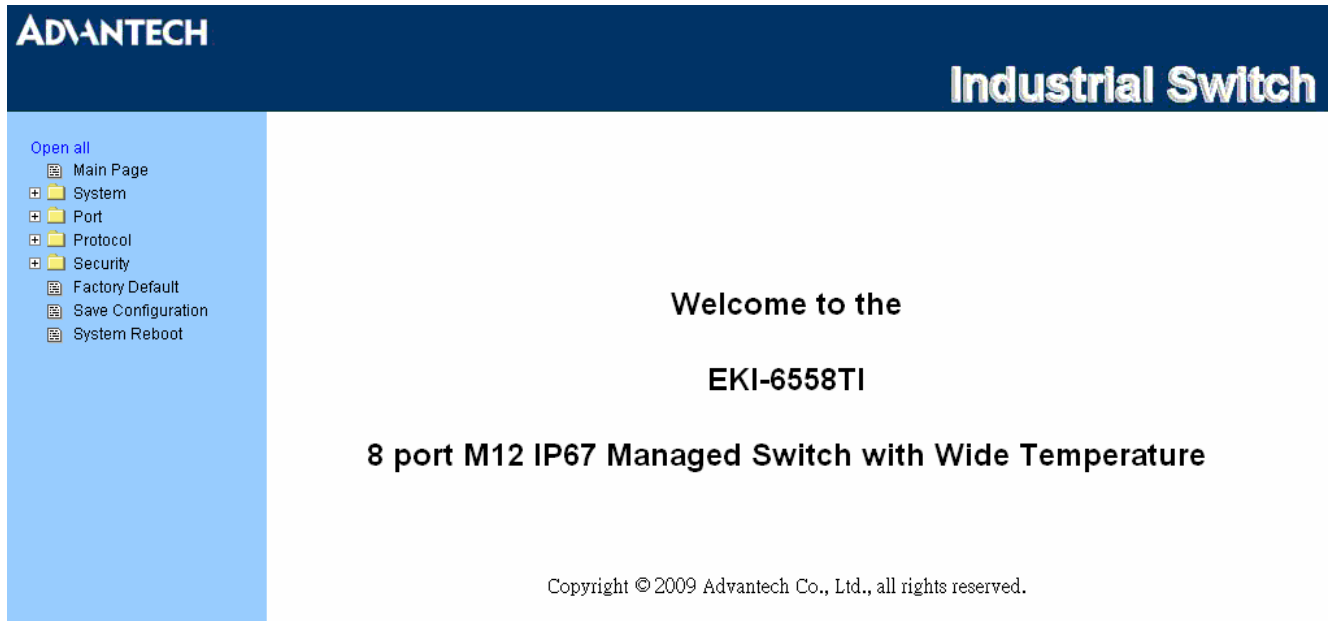


Figure 3.7: Main page

3.2.1 System

System Information

Assign the system name, location and view the system information

- **System Name:** Assign the name of the switch. The maximum length is 64 bytes.
- **System Description:** Displays the description of switch. Read only cannot be modified.
- **System Location:** Assign the switch physical location. The maximum length is 64 bytes.
- **System Contact:** Enter the name of contact person or organization.
- **Firmware Version:** Displays the switch's firmware version.
- **Kernel Version:** Displays the kernel software version.
- **MAC Address:** Displays the unique hardware address assigned by manufacturer (default).

Warning

Don't set "0" for the first segment of the subnet mask and default gateway (000.xxx.xxx.xxx).

Refresh the web screen if the web could not be displayed while you change the setting.

The screenshot displays the 'System Information' page of an ADVANTECH Industrial Switch. The page has a dark blue header with the ADVANTECH logo and 'Industrial Switch' text. A light blue sidebar on the left contains a navigation menu with options like 'Main Page', 'System', 'Port', 'Protocol', 'Security', 'Factory Default', 'Save Configuration', and 'System Reboot'. The main content area is titled 'System Information' and contains several input fields and buttons. The 'System Name' field is filled with 'EKI-6558TI'. The 'System Description' field contains '8 port M12 IP67 Managed Switch with Wide Temperature'. The 'System Location' and 'System Contact' fields are empty. Below these fields are 'Apply' and 'Help' buttons. At the bottom, there are three read-only fields: 'Firmware Version' (v1.00), 'Kernel Version' (v2.89), and 'MAC Address' (001122334451).

System Name	EKI-6558TI
System Description	8 port M12 IP67 Managed Switch with Wide Temperature
System Location	
System Contact	

Apply Help

Firmware Version	v1.00
Kernel Version	v2.89
MAC Address	001122334451

Figure 3.8: System Information

IP Configuration

User can configure the IP Settings and DHCP client function here.

- **DHCP Client:** Enable or disable the DHCP client function. When DHCP client function is enabled, the industrial switch will be assigned an IP address from the network DHCP server. The default IP address will be replaced by the assigned IP address on DHCP server. After user click **Apply**, a popup dialog shows up. It is to inform the user that when the DHCP client is enabled, the current IP will lose and user should find the new IP on the DHCP server.
- **IP Address:** Assign the IP address that the network is using. If DHCP client function is enabled, and then the user doesn't need to assign the IP address. And, the network DHCP server will assign the IP address displaying in this column for the industrial switch. The default IP is 192.168.16.1.
- **Subnet Mask:** Assign the subnet mask to the IP address. If DHCP client function is enabled, and then the user does not need to assign the subnet mask.
- **Gateway:** Assign the network gateway for the industrial switch. The default gateway is 192.168.16.254.
- **DNS1:** The abbreviation of Domain Name Server—an Internet service that translate domain name into IP addresses. Domain name are alphabetic which are easy to be remembered. Because the Internet is based on IP address; every time you use a domain name, therefore, a DNS service must translate the name into the corresponding IP address. For example, the domain name **www.net.com** might translate to 192.168.1.1
- **DNS2:** The backup for DNS1. When DNS1 cannot function, DNS2 will then replace DNS1 immediately.
- And then, click

The screenshot shows the ADVANTECH Industrial Switch web interface. The title bar includes the ADVANTECH logo and 'Industrial Switch'. The main heading is 'IP Configuration'. On the left is a navigation menu with 'IP Configuration' highlighted. The main content area contains a 'DHCP Client' dropdown menu set to 'Disable'. Below it is a table with the following data:

IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Gateway	192.168.1.254
DNS1	0.0.0.0
DNS2	0.0.0.0

At the bottom of the configuration area are 'Apply' and 'Help' buttons.

Figure 3.9: IP Configuration

DHCP Server – System configuration

DHCP is the abbreviation of Dynamic Host Configuration Protocol that is a protocol for assigning dynamic IP addresses to devices on a network. With dynamic addressing, a device can have a different IP address every time it connects to the network. In some systems, the device's IP address can even change while it is still connected. DHCP also supports a mix of static and dynamic IP addresses. Dynamic addressing simplifies network administration because the software keeps track of IP addresses rather than requiring an administrator to manage the task. This means that a new computer can be added to a network without the hassle of manually assigning it a unique IP address.

The system provides the DHCP server function. The system provides the DHCP server function. Having enabled the DHCP server function, the switch system can be a DHCP server.

- **DHCP Server:** Enable or Disable the DHCP Server function. Enable—the switch will be the DHCP server on your local network.
- **Low IP Address:** Type in an IP address. Low IP address is the beginning of the dynamic IP range. For example, dynamic IP is in the range between 192.168.1.100 ~ 192.168.1.200. In contrast, 192.168.1.100 is the Low IP address.
- **High IP Address:** Type in an IP address. High IP address is the end of the dynamic IP range. For example, dynamic IP is in the range between 192.168.1.100 ~ 192.168.1.200. In contrast, 192.168.1.200 is the High IP address.
- **Subnet Mask:** Type in the subnet mask of the IP configuration.
- **Gateway:** Type in the IP address of the gateway in your network.
- **DNS:** Type in the Domain Name Server IP Address in your network.
- **Lease Time (sec):** It is the time period that system will reset the dynamic IP assignment to ensure the dynamic IP is not occupied by an idle client.
- And then, click .

The screenshot shows the ADANTECH Industrial Switch web interface. The main title is "DHCP Server - System Configuration". The interface has a navigation menu on the left and a configuration form on the right. The form includes the following fields:

DHCP Server :	Enable
Low IP Address	192.168.1.100
High IP Address	192.168.1.200
Subnet Mask	255.255.255.0
Gateway	192.168.1.254
DNS	0.0.0.0
Lease Time (sec)	86400

At the bottom of the form, there are "Apply" and "Help" buttons.

Figure 3.10: DHCP Server - System Configuration

DHCP Client – System Configuration

When the DHCP server function is active, the system will collect the DHCP client information and displays it here.

DHCP Server - Client Entries

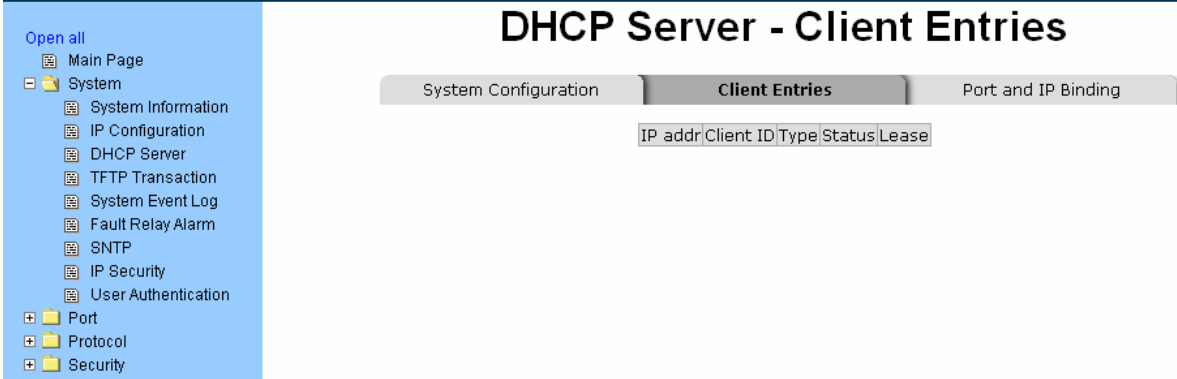


Figure 3.11: DHCP Server – Client Entries

DHCP Server - Port and IP Bindings

Assign the dynamic IP address to the port. When the device is connecting to the port and asks for IP assigning, the system will assign the IP address that has been assigned before to the connected device.

DHCP Server - Port and IP Binding

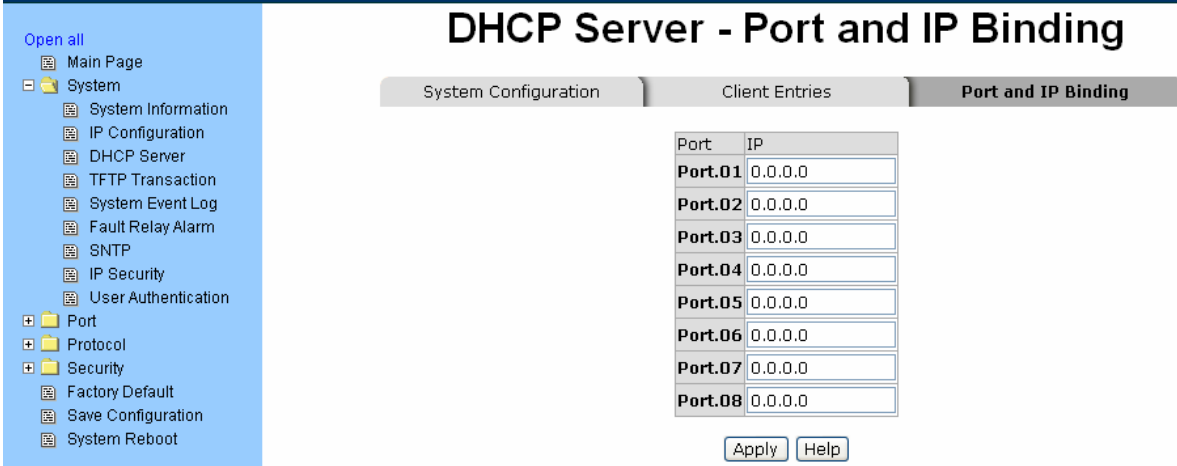


Figure 3.12: DHCP Server – Client Entries

TFTP - Update Firmware

Trivial File Transfer Protocol (TFTP) is a very simple file transfer protocol, with the functionality of a very basic form of FTP. It provides the functions to allow the user to update the switch firmware. Before updating, make sure you have your TFTP server ready and the firmware image is on the TFTP server.

- **TFTP Server IP Address:** Fill in your TFTP server IP.
- **Firmware File Name:** Type in the name of firmware image.
- And then, click

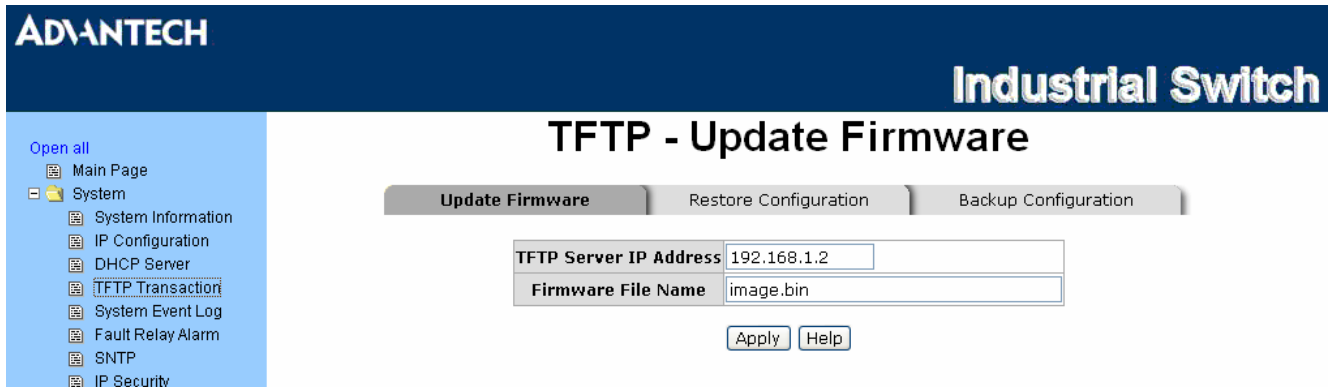


Figure 3.13: TFTP – Update Firmware

TFTP – Restore Configuration

You can restore the configuration from TFTP server. Before doing that, you must put the image file on TFTP server first and the switch will download back the flash image.

- **TFTP Server IP Address:** Fill in the TFTP server IP.
- **Restore File Name:** Fill in the correct restore file name.
- Click

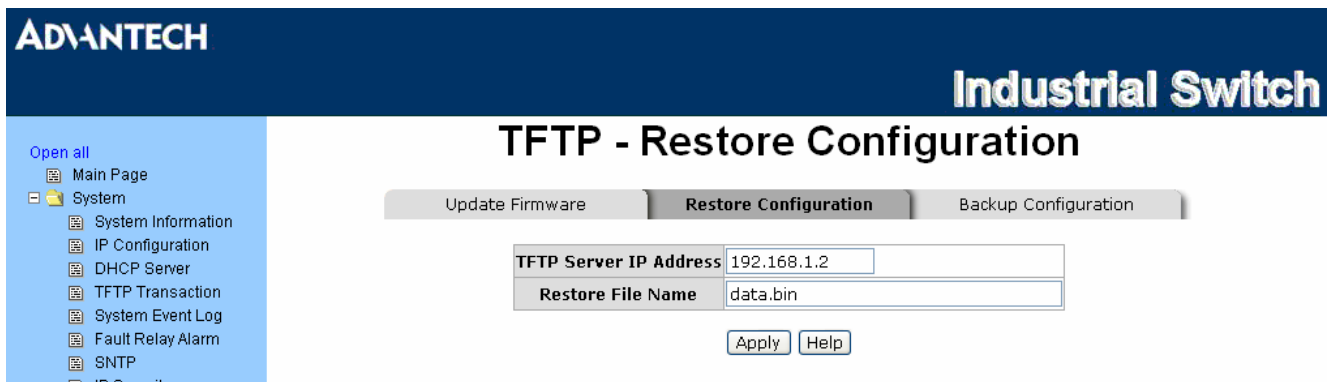


Figure 3.14: TFTP – Restore Configuration

TFTP - Backup Configuration

You can save current Flash ROM value from the switch to TFTP server for restoring later.

- **TFTP Server IP Address:** Fill in the TFTP server IP
- **Backup File Name:** Fill in the file name
- Click .

The screenshot shows the web interface for an industrial switch. At the top left is the 'ADVANTECH' logo. At the top right, it says 'Industrial Switch'. Below the logo is a navigation menu with 'Open all' and a list of system-related items: Main Page, System (expanded), System Information, IP Configuration, DHCP Server, TFTP Transaction, System Event Log, Fault Relay Alarm, SNTP, IP Security, and User Authentication. The main content area is titled 'TFTP - Backup Configuration' and has three tabs: 'Update Firmware', 'Restore Configuration', and 'Backup Configuration' (which is selected). Below the tabs are two input fields: 'TFTP Server IP Address' with the value '192.168.1.2' and 'Backup File Name' with the value 'data.bin'. At the bottom of the form are two buttons: 'Apply' and 'Help'.

Figure 3.15: TFTP – Backup Configuration

System Event Log – Syslog Configuration

Configure the system event mode to collect system log.

- **Syslog Client Mode:** Select the system log mode—**Client Only**, **Server Only**, or **Both**.
- **System Log Server IP Address:** Assign the system log server IP.
- When Syslog Client Mode is set as **Client Only**, the system event log will only be reserved in the switch's RAM until next reboot. When Syslog Client Mode is set as **Server Only**, the system log will only be sent to the syslog server and you have to type the IP address in the Syslog Server IP Address column. If the Syslog Client Mode is set as **Both**, the system log will be reserved in the switch's RAM and sent to server.
- Click **Reload** to refresh the events log.
- Click **Clear** to clear all current events log.
- After configuring, click **Apply**.

The screenshot displays the web management interface for an ADVANTECH Industrial Switch. The main navigation menu on the left includes categories like System, Port, Protocol, and Security. The 'System Event Log - Syslog Configuration' page is shown, with three tabs: 'Syslog Configuration', 'SMTP Configuration', and 'Event Configuration'. The 'Syslog Configuration' tab is selected, showing a configuration form with 'Syslog Client Mode' set to 'Both' and 'Syslog Server IP Address' set to '192.168.1.180'. An 'Apply' button is next to the IP address field. Below the form is a log window displaying two entries: '2: Jan 1 00:57:30 : System Log Server IP: 192.168.1.180' and '1: Jan 1 00:57:30 : System Log Enable!'. At the bottom of the page, there are buttons for 'Page.1', 'Reload', 'Clear', and 'Help'.

Figure 3.16: Syslog Configuration

System Event Log - SMTP Configuration

You can set up the mail server IP, mail account, password, and forwarded email account for receiving the event alert.

- **Email Alert:** Enable or disable the email alert function.
- **SMTP Server IP:** Set up the mail server IP address (when **Email Alert** enabled, this function will then be available).
- **Sender:** Type in an alias of the switch in complete email address format, e.g. switch01@123.com, to identify where the event log comes from.
- **Authentication:** Tick the checkbox to enable this function, configuring the email account and password for authentication (when **Email Alert** enabled, this function will then be available).
- **Mail Account:** Set up the email account, e.g. Tomadmin, to receive the alert. It must be an existing email account on the mail server, which you had set up in **SMTP Server IP Address** column.
- **Password:** Type in the password to the email account.
- **Confirm Password:** Reconfirm the password.
- **Rcpt e-mail Address 1 ~ 6:** You can also assign up to 6 e-mail accounts to receive the alert.
- Click .

The screenshot shows the configuration page for the System Event Log - SMTP Configuration. The interface includes a navigation menu on the left, a header with the ADVANTECH logo and 'Industrial Switch', and a main configuration area. The configuration area has three tabs: 'Syslog Configuration', 'SMTP Configuration' (selected), and 'Event Configuration'. Below the tabs, there is a dropdown for 'E-mail Alert' set to 'Enable'. The main configuration form contains the following fields:

SMTP Server IP Address :	192.168.1.5
Sender :	switch01@123.com
<input checked="" type="checkbox"/> Authentication	
Mail Account :	Tomadmin
Password :	••••
Confirm Password :	••••
Rcpt e-mail Address 1 :	supervisor@123.com
Rcpt e-mail Address 2 :	
Rcpt e-mail Address 3 :	
Rcpt e-mail Address 4 :	
Rcpt e-mail Address 5 :	
Rcpt e-mail Address 6 :	

At the bottom of the form, there are two buttons: 'Apply' and 'Help'.

Figure 3.17: SMTP Configuration

System Event Log - Event Configuration

When the **Syslog/SMTP** checkbox is ticked, the event log will be sent to system log server/SMTP server. Also, per port log (link up, link down, and both) events can be sent to the system log server/SMTP server with the respective checkbox ticked. After configuring, click 'Apply' to have the setting taken effect.

- **System event selection:** There are 4 event types—Device cold start, Device warm start, Authentication Failure, and X-ring topology change. Before you can tick the checkbox of each event type, the Syslog Client Mode column on the Syslog Configuration tab/E-mail Alert column on the SMTP Configuration tab must be enabled first.
 - **Device cold start:** When the device executes cold start action, the system will issue a log event.
 - **Device warm start:** When the device executes warm start, the system will issue a log event.
 - **Authentication Failure:** When the SNMP authentication fails, the system will issue a log event.
 - **X-ring topology change:** When the X-ring topology has changed, the system will issue a log event.

- **Port event selection:** Also, before the drop-down menu items are available, the Syslog Client Mode column on the Syslog Configuration tab/E-mail Alert column on the SMTP Configuration tab must be enabled first. Those drop-down menu items have 3 selections—Link UP, Link Down, and Link UP & Link Down. Disable means no event will be sent to the system log server/SMTP server.
 - **Link UP:** The system will issue a log message when port connection links up only.
 - **Link Down:** The system will issue a log message when port connection links down only.
 - **Link UP & Link Down:** The system will issue a log message when port connection is up and down.

ADANTECH
Industrial Switch

Open all

- System Information
- IP Configuration
- DHCP Server
- TFTP Transaction
- System Event Log
- Fault Relay Alarm
- SNTP
- IP Security
- User Authentication
- Port
- Protocol
- Security
- Factory Default
- Save Configuration
- System Reboot

System Event Log - Event Configuration

Syslog Configuration
SMTP Configuration
Event Configuration

Event Type	Syslog	SMTP
Device cold start	<input type="checkbox"/>	<input type="checkbox"/>
Authentication Failure	<input type="checkbox"/>	<input type="checkbox"/>
X-Ring topology change	<input type="checkbox"/>	<input type="checkbox"/>

Port	Syslog	SMTP
Port.01	Disable	Disable
Port.02	Disable	Disable
Port.03	Link Up Link Down Link Up & Link Down	Disable
Port.04	Disable	Disable
Port.05	Disable	Disable
Port.06	Disable	Disable
Port.07	Disable	Disable
Port.08	Disable	Disable

Apply Help

Figure 3.18: Event Configuration

Fault Relay Alarm

- **Power Failure:** Tick the checkbox to enable the function of lighting up the **FAULT** LED on the panel when power fails.
- **Port Link Down/Broken:** Tick the checkbox to enable the function of lighting up **FAULT** LED on the panel when ports' states are link-down or broken.

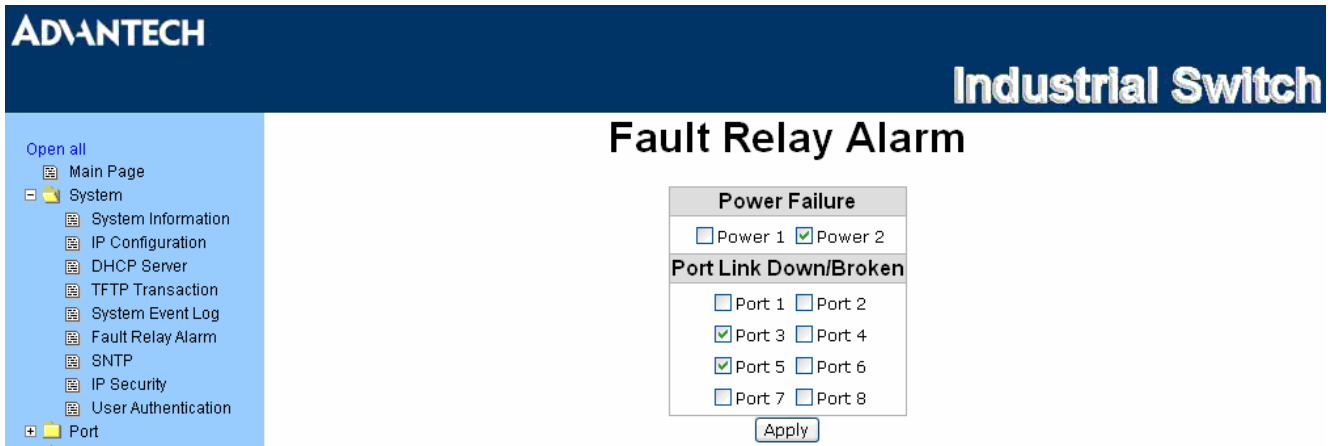


Figure 3.19: Fault Relay Alarm

SNTP Configuration

You can configure the SNTP (Simple Network Time Protocol) settings which allow you to synchronize switch clocks with an Internet time server.

- **SNTP Client:** Enable/disable SNTP function to get the time from the SNTP server.
- **Daylight Saving Time:** Enable/disable daylight saving time function. When daylight saving time is enabled, you need to configure the daylight saving time period.
- **UTC Timezone:** Set the switch location time zone. The following table lists the different location time zone for your reference.

<i>Table 3.20: UTC Timezone</i>		
Local Time Zone	Conversion from UTC	Time at 12:00 UTC
November Time Zone	- 1 hour	11am
Oscar Time Zone	-2 hours	10 am
ADT - Atlantic Daylight	-3 hours	9 am
AST - Atlantic Standard EDT - Eastern Daylight	-4 hours	8 am
EST - Eastern Standard CDT - Central Daylight	-5 hours	7 am
CST - Central Standard MDT - Mountain Daylight	-6 hours	6 am
MST - Mountain Standard PDT - Pacific Daylight	-7 hours	5 am
PST - Pacific Standard ADT - Alaskan Daylight	-8 hours	4 am
ALA - Alaskan Standard	-9 hours	3 am
HAW - Hawaiian Standard	-10 hours	2 am
Nome, Alaska	-11 hours	1 am
CET - Central European FWT - French Winter MET - Middle European MEWT - Middle European Winter SWT - Swedish Winter	+1 hour	1 pm
EET - Eastern European, USSR Zone 1	+2 hours	2 pm
BT - Baghdad, USSR Zone 2	+3 hours	3 pm
ZP4 - USSR Zone 3	+4 hours	4 pm

ZP5 - USSR Zone 4	+5 hours	5 pm
ZP6 - USSR Zone 5	+6 hours	6 pm
WAST - West Australian Standard	+7 hours	7 pm
CCT - China Coast, USSR Zone 7	+8 hours	8 pm
JST - Japan Standard, USSR Zone 8	+9 hours	9 pm
EAST - East Australian Standard GST Guam Standard, USSR Zone 9	+10 hours	10 pm
IDLE - International Date Line NZST - New Zealand Standard NZT - New Zealand	+12 hours	Midnight

- **SNTP Sever URL:** Set the SNTP server IP address.
- **Switch Timer:** Displays the current time of the switch.
- **Daylight Saving Period:** Set up the Daylight Saving beginning time and Daylight Saving ending time. Both will be different in every year.
- **Daylight Saving Offset (mins):** For non-US and European countries, specify the amount of time for day light savings.
- **Synchronization Interval (secs):** The Synchronization Interval is used for sending synchronizing packets periodically. Users can assign the time ranging from 64 to 1024 seconds. The “0” value displaying by default means that you disable the auto-synchronized feature in the SNTP client mode. You can enable the feature by filling the interval range from 64 ~ 1024 seconds.
- Click .

ADANTECH
Industrial Switch

Open all

- [-] Main Page
- [-] System
 - [-] System Information
 - [-] IP Configuration
 - [-] DHCP Server
 - [-] TFTP Transaction
 - [-] System Event Log
 - [-] Fault Relay Alarm
 - [-] SNTP
 - [-] IP Security
 - [-] User Authentication
- [+] Port
- [+] Protocol
- [+] Security
- [-] Factory Default
- [-] Device Configuration

SNTP Configuration

SNTP Client :

Daylight Saving Time :

UTC Timezone	(GMT)Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London
SNTP Server URL	<input type="text" value="76.168.30.201"/>
Switch Timer	<input type="text"/>
Daylight Saving Period	<input type="text" value="20040101 00:0"/> <input type="text" value="20040101 00:0"/>
Daylight Saving Offset(mins)	<input type="text" value="0"/>
Synchronization Interval(secs)	<input type="text" value="0"/>

Figure 3.20: SNTP Configuration

IP Security

IP security function allows the user to assign 10 specific IP addresses that have permission to access the switch through the web browser for the securing switch management.

- **IP Security Mode:** When this option is in **Enable** mode, the **Enable HTTP Server** and **Enable Telnet Server** checkboxes will then be available.
- **Enable HTTP Server:** When this checkbox is ticked, the IP addresses among Security IP1 ~ IP10 will be allowed to access this switch via HTTP service.
- **Enable Telnet Server:** When this checkbox is ticked, the IP addresses among Security IP1 ~ IP10 will be allowed to access this switch via telnet service.
- **Security IP 1 ~ 10:** The system allows the user to assign up to 10 specific IP addresses for access security. Only these 10 IP addresses can access and manage the switch through the HTTP/Telnet service.
- And then, click **Apply** to apply the configuration.

Note Remember to execute the “Save Configuration” action, otherwise the new configuration will lose when switch power off.

The screenshot shows the web interface for configuring IP Security on an ADVANTECH Industrial Switch. The page title is 'IP Security'. The 'IP Security Mode' is set to 'Enable'. Two checkboxes, 'Enable HTTP Server' and 'Enable Telnet Server', are both checked. Below these are ten input fields for Security IP1 through Security IP10. Security IP1 is 192.168.1.77, Security IP2 is 192.168.1.89, and Security IP3 is 192.168.1.120. Security IP4 through Security IP10 are all 0.0.0.0. At the bottom, there are 'Apply' and 'Help' buttons.

Figure 3.21: IP Security

User Authentication

Change web management login user name and password for the management security issue.

- **User name:** Key in the new user name (The default is “admin”).
- **Password:** Key in the new password (The default is “admin”).
- **Confirm password:** Re-type the new password.
- And then, click to apply the configuration.



The screenshot shows the web management interface for an ADVANTECH Industrial Switch. The top navigation bar is dark blue with the ADVANTECH logo on the left and 'Industrial Switch' on the right. A light blue sidebar on the left contains a menu with 'Open all' and 'System' expanded to show options like 'System Information', 'IP Configuration', 'DHCP Server', 'TFTP Transaction', 'System Event Log', and 'Fault Relav Alarm'. The main content area is titled 'User Authentication' and features a form with three rows: 'User Name :' with a text input containing 'admin', 'New Password :' with a password input containing six dots, and 'Confirm Password :' with another password input containing six dots. Below the form are 'Apply' and 'Help' buttons.

Figure 3.22: User Authentication

3.2.2 Port

Port setting includes Port Statistics, Port Control, Port Trunk, Port Mirroring, and Rate Limiting. The user can use this interface to set the parameters and control the packet flow among the ports.

Port Statistics

The following information provides the current port statistic information.

- **Port:** Displays the port number.
- **Type:** Displays the media type of the port.
- **Link:** The status of linking—'Up' or 'Down'.
- **State:** The user can set the state of the port as 'Enable' or 'Disable' via Port Control. When the state is disabled, the port will not transmit or receive any packet.
- **Tx Good Packet:** The counts of transmitting good packets via this port.
- **Tx Bad Packet:** The counts of transmitting bad packets (including undersize [less than 64 bytes], oversize, CRC Align errors, fragments and jabbers packets) via this port.
- **Rx Good Packet:** The counts of receiving good packets via this port.
- **Rx Bad Packet:** The counts of receiving bad packets (including undersize [less than 64 bytes], oversize, CRC error, fragments and jabbers) via this port.
- **Tx Abort Packet:** The aborted packet while transmitting.
- **Packet Collision:** The counts of collision packet.
- **Packet Dropped:** The counts of dropped packet.
- **Rx Bcast Packet:** The counts of broadcast packet.
- **Rx Mcast Packet:** The counts of multicast packet.
- Click to clean all counts.

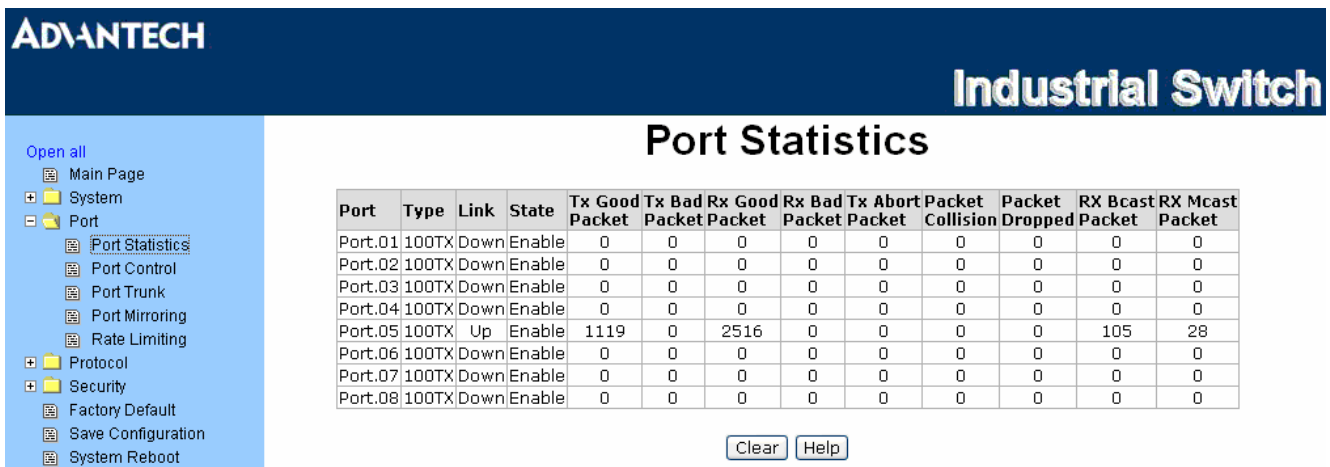


Figure 3.23: Port Statistics

Port Control

In Port Control, you can pull down the selection items to set the parameters of each port to control the transmitting/receiving packets.

- **Port:** Select the port that you want to configure.
- **State:** Current port status. The port can be set to disable or enable mode. If the port state is set as 'Disable', it will not receive or transmit any packet.
- **Negotiation:** Auto and Force. Being set as Auto, the speed and duplex mode are negotiated automatically. When you set it as Force, you have to assign the speed and duplex mode manually.
- **Speed:** It is available for selecting when the Negotiation column is set as Force. When the Negotiation column is set as Auto, this column is read only.
- **Duplex:** It is available for selecting when the Negotiation column is set as Force. When the Negotiation column is set as Auto, this column is read only.
- **Flow Control:** Set flow control function as Enable or Disable. When enabled, once the device exceed the input data rate of another device as a result the receiving device will send a PAUSE frame which halts the transmission of the sender for a specified period of time. When disabled, the receiving device will drop the packet if too much to process.
- **Security:** Once the Security selection is set as 'On', any access from the device which connects to this port will be blocked unless the MAC address of the device is included in the static MAC address table. See the segment of Static MAC Table.
- Click to make the configuration effective.

ADVANTECH
Industrial Switch

Open all

- Main Page
- System
 - Port
 - Port Statistics
 - Port Control**
 - Port Trunk
 - Port Mirroring
 - Rate Limiting
 - Protocol
 - Security
 - Factory Default
 - Save Configuration
 - System Reboot

Port Control

Port	State	Negotiation	Speed	Duplex	Flow Control	Security
Port.01	Enable	Auto	100	Full	Enable	Off
Port.02						
Port.03						
Port.04						

Port	Group ID	Type	Link	State	Negotiation	Speed Config	Duplex Actual	Flow Control Config	Flow Control Actual	Security
Port.01	N/A	100TX	Down	Enable	Auto	100 Full	N/A	Enable	N/A	OFF
Port.02	N/A	100TX	Down	Enable	Auto	100 Full	N/A	Enable	N/A	OFF
Port.03	N/A	100TX	Down	Enable	Auto	100 Full	N/A	Enable	N/A	OFF
Port.04	N/A	100TX	Down	Enable	Auto	100 Full	N/A	Enable	N/A	OFF
Port.05	N/A	100TX	Up	Enable	Auto	100 Full	100 Full	Enable	ON	OFF
Port.06	N/A	100TX	Down	Enable	Auto	100 Full	N/A	Enable	N/A	OFF
Port.07	N/A	100TX	Down	Enable	Auto	100 Full	N/A	Enable	N/A	OFF
Port.08	N/A	100TX	Down	Enable	Auto	100 Full	N/A	Enable	N/A	OFF

Figure 3.24: Port Control

Port Trunk

The Link Aggregation Control Protocol (LACP) provides a standardized means for exchanging information between Partner Systems on a link to allow their Link Aggregation Control instances to reach agreement on the identity of the Link Aggregation Group to which the link belongs, move the link to that Link Aggregation Group, and enable its transmission and reception functions in an orderly manner. Link aggregation lets you group up to 4 ports into one dedicated connections. This feature can expand bandwidth to a device on the network. **LACP operation requires full-duplex mode**, more detail information refers to IEEE 802.3ad.

Aggregator setting

- **System Priority:** A value which is used to identify the active LACP. The switch with the lowest value has the highest priority and is selected as the active LACP.
- **Group ID:** There are four trunk groups to be selected. Choose the 'Group ID' and click **Select**.
- **LACP:** When enabled, the trunk group is using LACP. A port which joins an LACP trunk group has to make an agreement with its member ports first. When disabled, the trunk group is a static trunk group. The advantage of having the LACP disabled is that a port joins the trunk group without any handshaking with its member ports. But member ports won't know that they should be aggregated together to form a logic trunk group.
- **Work ports:** This column field allows the user to type in the total number of active port up to four. With LACP trunk group, you create a trunk group by connecting two or more switches (e.g. you assign four ports to be the members of a trunk group whose work ports column field is set as two). The exceed ports are standby (the **Aggregator Information** tab will show standby status on the exceed ports) and can be aggregated if work ports fail. If it is a static trunk group, the number of work ports must equal the total number of group member ports.
- Select the ports to join the trunk group. The system allows four ports maximum to be aggregated in a trunk group. Click **Add** to add the port which is focused to the left field. To remove unwanted ports, select the port and click **Remov**.
- When LACP enabled, you can configure LACP Active/Passive status for each port on State Activity page.
- Click **Apply**.
- Use **Apply** to delete Trunk Group. Select the Group ID and click **Delete**.

ADVANTECH **Industrial Switch**

Port Trunk - Aggregator Setting

Aggregator Setting | Aggregator Information | State Activity

System Priority			
1			
Group ID	Trunk.1	Select	
LACP	Disable		
Work Ports	0	<<Add	Remove>>
			Port.01 Port.02 Port.03 Port.04 Port.05 Port.06 Port.07 Port.08

Apply | Delete | Help

Notice: The trunk function do not support GVRP and X-Ring.

Figure 3.25: Aggregator Setting

Aggregator Information

When you have set up the aggregator setting with LACP disabled, you will see the local static trunk group information as below.

Port Trunk - Aggregator Setting

Aggregator Setting | Aggregator Information | State Activity

System Priority: 1

Group ID	Trunk.1	Select
LACP	Disable	
Work Ports	2	

Port.01, Port.02 (Selected) | <<Add | Remove>> | Port.03, Port.04, Port.05, Port.06, Port.07, Port.08

Apply | Delete | Help

Notice: The trunk function do not support GVRP and X-Ring.

Figure 3.26: 2 work ports with LACP disabled

Port Trunk - Aggregator Information

Aggregator Setting | Aggregator Information | State Activity

Static Trunking Group	
Group Key	1
Port Member	1 2

Figure 3.27: Static trunking group of 2 ports

When you have set up the aggregator setting of two interconnected switches with LACP enabled, you will see the respective LACP trunk group information as below.

Group 1					
Actor			Partner		
Priority 1					1
MAC	00FF3837465C			001122334422	
PortNo	Key	Priority	Active	PortNo	Key
PORT8	513	1	selected	PORT4	513
PORT1	513	1	selected	PORT2	513

Figure 3.28: Aggregator Information

State Activity

Having set up the LACP aggregator on the tab of Aggregator Setting, you can configure the state activity for the members of the LACP trunk group. You can tick or cancel the checkbox beside the state display. When you remove the tick mark to the port and click , the port state activity will change to **Passive**.

- **Active:** The port automatically sends LACP protocol packets.
- **Passive:** The port does not automatically send LACP protocol packets, and responds only if it receives LACP protocol packets from the opposite device.

Note

A link having either two active LACP nodes or one active node can perform dynamic LACP trunk.

A link having two passive LACP nodes will not perform dynamic LACP trunk because both ports are waiting for an LACP protocol packet from the opposite device.

Port	LACP	State	Activity	Port	LACP	State	Activity
1		<input checked="" type="checkbox"/>	Active	2			N/A
3			N/A	4		<input checked="" type="checkbox"/>	Active
5			N/A	6			N/A
7			N/A	8			N/A

Figure 3.29: State Activity

Port Mirroring

The Port mirroring is a method for monitoring traffic in switched networks. Traffic through ports can be monitored by one specific port which means traffic goes in or out monitored (source) ports will be duplicated into mirroring (destination) port.

- **Destination Port:** There is only one port can be selected to be the destination (mirroring) port for monitoring both RX and TX traffic which come from the source port. Or, use one of two ports for monitoring RX traffic only and the other one for TX traffic only. The user can connect the mirroring port to LAN analyzer or Netxray.
- **Source Port:** The ports that the user wants to monitor. All monitored port traffic will be copied to mirroring (destination) port. The user can select multiple source ports by ticking the **RX** or **TX** checkboxes to be monitored.
- And then, click .

ADVANTECH **Industrial Switch**

Port Mirroring

	Destination Port		Source Port	
	RX	TX	RX	TX
Port.01	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.02	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.03	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.04	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.05	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.06	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.07	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.08	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>

Figure 3.30: Port Mirroring

Rate Limiting

Here you can set up every port's frame limitation type and bandwidth rate.

- **Ingress Limit Frame type:** Select the frame type you want to filter. The frame types have 4 options for selecting: **All**, **Broadcast/Multicast/Flooded Unicast**, **Broadcast/Multicast**, and **Broadcast only**. The four frame type options are for ingress frames limitation. The egress rate only supports 'All' type.

All ports support port ingress and egress rate control. For example, assume port 1 is 10Mbps; the user can set the effective egress rate of port 1 as 1Mbps, ingress rate 500Kbps. The switch performs the ingress rate by packet counter to meet the specified rate

- **Ingress:** Enter the port effective ingress rate (The default value is "0")
- **Egress:** Enter the port effective egress rate (The default value is "0")
- And then, click to make the settings taken effect.

ADVANTECH
Industrial Switch

Open all

- Main Page
- System
 - Port
 - Port Statistics
 - Port Control
 - Port Trunk
 - Port Mirroring
 - Rate Limiting
 - Protocol
 - Security
 - Factory Default
 - Save Configuration
 - System Reboot

Rate Limiting

	Ingress Limit Frame Type	Ingress		Egress	
Port.01	All	0	kbps	0	kbps
Port.02	All	0	kbps	0	kbps
Port.03	Broadcast/Multicast/Flooded Unicast	0	kbps	0	kbps
Port.04	Broadcast/Multicast	0	kbps	0	kbps
Port.05	Broadcast only	0	kbps	0	kbps
Port.06	All	0	kbps	0	kbps
Port.07	All	0	kbps	0	kbps
Port.08	All	0	kbps	0	kbps

Rate Range is from 100 kbps to 102400 kbps or to 256000 kbps for giga ports, and zero means no limit.

Figure 3.31: Rate Limiting

3.2.3 Protocol

The user can set the layer 2 protocol setting via this interface.

VLAN configuration

A Virtual LAN (VLAN) is a logical network grouping that limits the broadcast domain, which would allow you to isolate network traffic, so only the members of the same VLAN will receive traffic from the ones of the same VLAN. Basically, creating a VLAN from a switch is logically equivalent of reconnecting a group of network devices to another Layer 2 switch. However, all the network devices are still plugged into the same switch physically.

The switch supports **Port-based** and **802.1Q** (tagged-based) VLAN. The default configuration of VLAN operation mode is “**Disable**”.

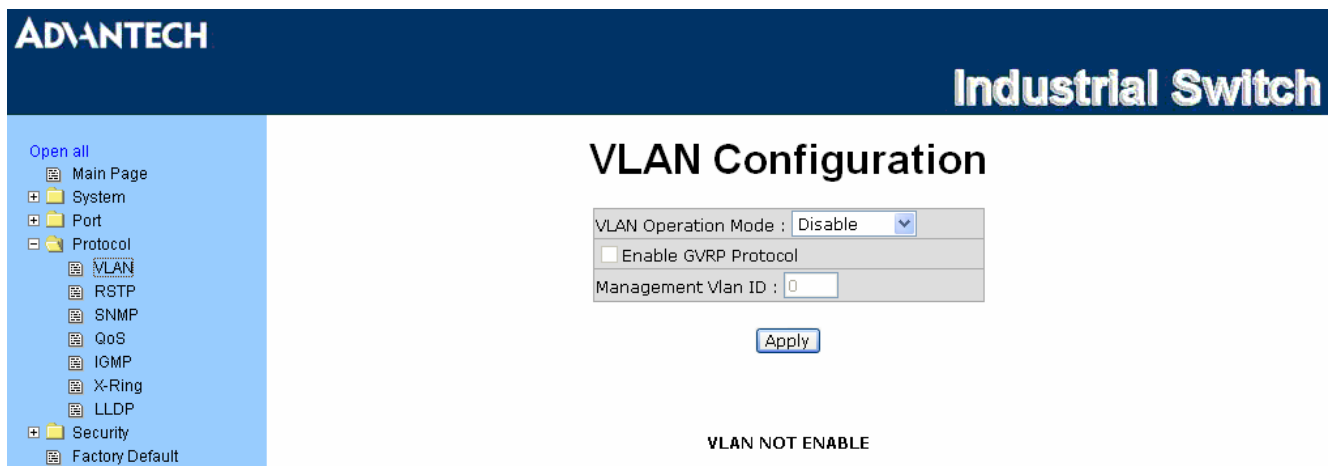


Figure 3.32: VLAN Configuration

VLAN configuration - Port-based VLAN

Packets can go among only members of the same VLAN group. Note all unselected ports are treated as belonging to another single VLAN. If the port-based VLAN enabled, the VLAN-tagging is ignored.

In order for an end station to send packets to different VLAN groups, it itself has to be either capable of tagging packets it sends with VLAN tags or attached to a VLAN-aware bridge that is capable of classifying and tagging the packet with different VLAN ID based on not only default PVID but also other information about the packet, such as the protocol.

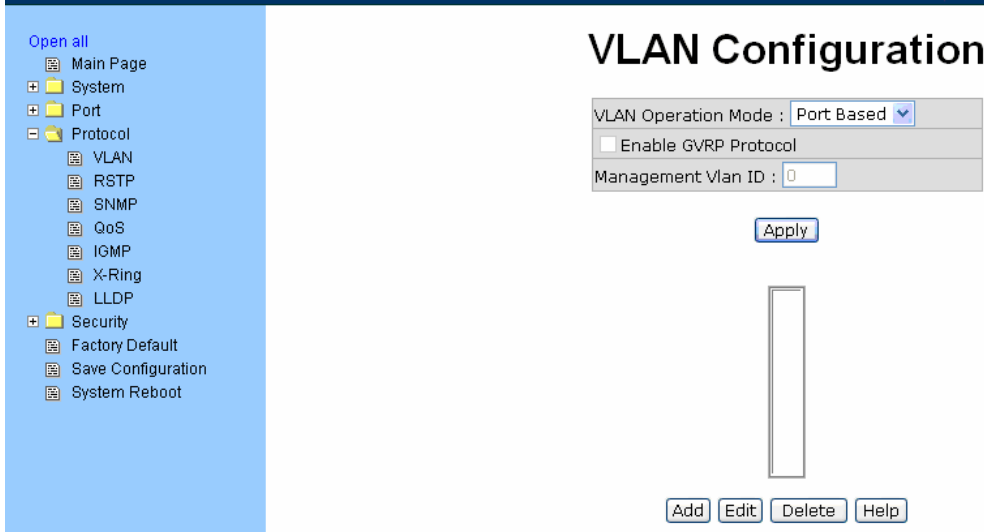


Figure 3.33: Port based mode

- Pull down the selection item and focus on **Port Based** then press **Apply** to set the VLAN Operation Mode in **Port Based** mode.
- Click **Add** to add a new VLAN group.

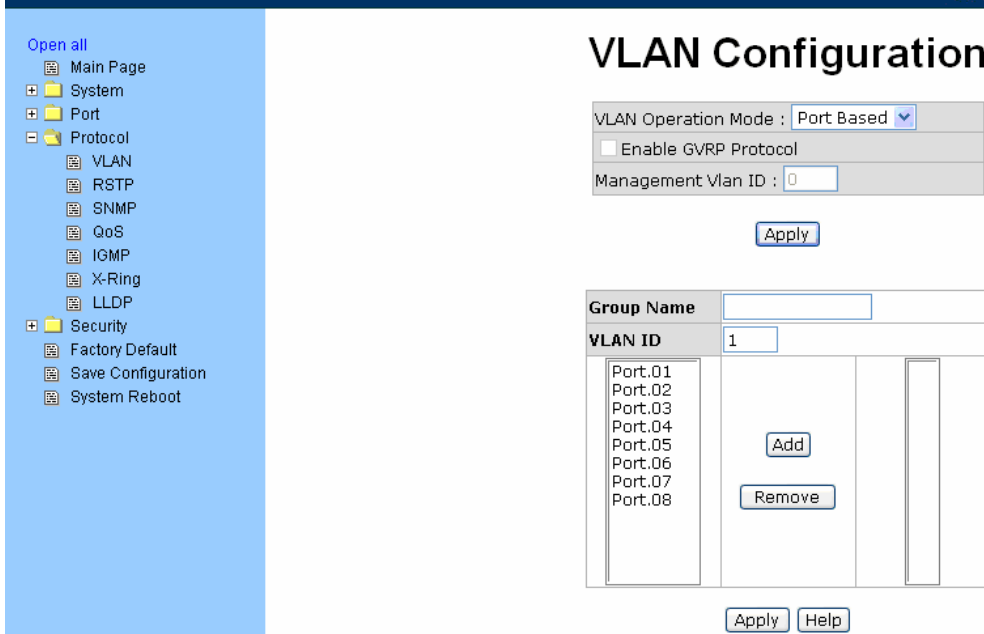


Figure 3.34: Port based mode-Add interface

- Enter the group name and VLAN ID. Add the port number having selected into the right field to group these members to be a VLAN group or remove any of them listed in the right field from the VLAN.
- And then, click **Apply** to have the settings taken effect.
- You will see the VLAN displays.

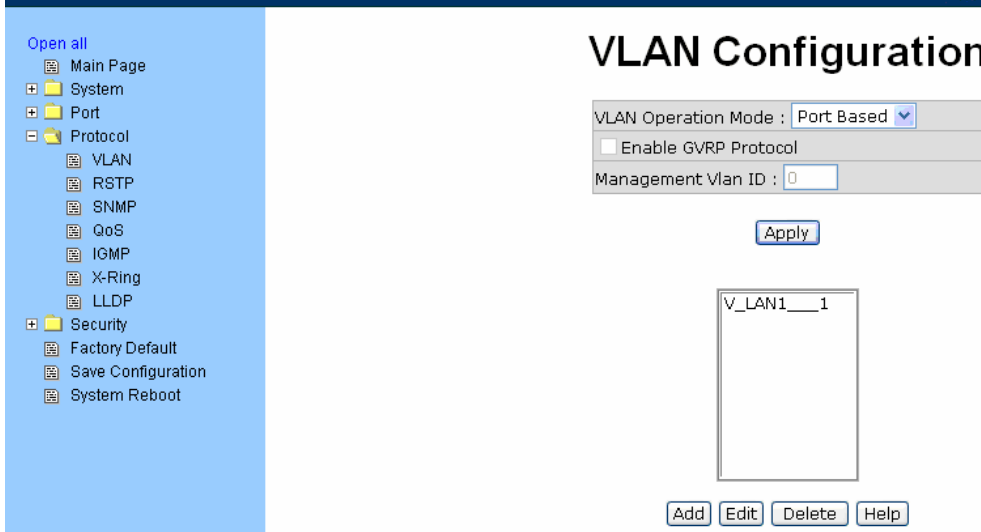


Figure 3.35: Port Based Edit/Delete interface

- Use **Delete** to delete the VLAN.
- Use **Edit** to modify group name, VLAN ID, or add/remove the members of the existing VLAN group.

Note Remember to execute the **“Save Configuration”** action, otherwise the new configuration will lose when switch power off.

802.1Q VLAN

Tagged-based VLAN is an IEEE 802.1Q specification standard. Therefore, it is possible to create a VLAN across devices from different switch vendors. IEEE 802.1Q VLAN uses a technique to insert a “tag” into the Ethernet frames. Tag contains a VLAN Identifier (VID) that indicates the VLAN numbers.

You can create Tag-based VLAN, and enable or disable GVRP protocol. There are 256 VLAN groups to provide configuration. Enable 802.1Q VLAN, all ports on the switch belong to default VLAN of VID 1. The default VLAN can't be deleted.

GVRP (GARP VLAN Registration Protocol) is a protocol that facilitates control of virtual local area networks (VLANs) within a larger network. GVRP conforms to the IEEE 802.1Q specification, which defines a method of tagging frames with VLAN configuration data. This allows network devices to dynamically exchange VLAN configuration information with other devices.

GVRP is based on GARP (Generic Attribute Registration Protocol), a protocol that defines procedures by which end stations and switches in a local area network (LAN) can register and de-register attributes, such as identifiers or addresses, with each other.

Every end station and switch thus has a current record of all the other end stations and switches that can be reached.

802.1Q Configuration

- Pull down the selection item and focus on **802.1Q** then press **Apply** to set the VLAN Operation Mode in **802.1Q** mode.
- **Enable GVRP Protocol:** Tick the checkbox to enable GVRP protocol. This checkbox is available while the VLAN Operation Mode is in **802.1Q** mode.
- **Management VLAN ID:** The default is “0” which means VLAN function in 802.1Q mode is not available. While this column field is filled with a value from 1 to 4096, the member ports of this VLAN can access the management interface.
- Select the port you want to configure.
- **Link Type:** there are 3 types of link type.
 - **Access Link:** Single switch only, it allows the user to group ports by assigning the same Untagged VID. While this link type is set, the Untagged VID column field is available but the Tagged VID column field is disabled.
 - **Trunk Link:** The extended application of **Access Link**. It allows the tagged frames go across two or more switches by assigning the tag with VID to the frames. Having set this link type, the Tagged VID column field is available but the Untagged VID column field is disabled.
 - **Hybrid Link:** Both Access Link and Trunk Link are available.
- **Untagged VID:** Assign the untagged frame VID.
- **Tagged VID:** Assign the tagged frame VID.
- Click **Apply** to have the settings taken effect.

Open all

- [-] Main Page
- [+] System
- [+] Port
- [+] Protocol
 - [-] VLAN
 - [-] RSTP
 - [-] SNMP
 - [-] QoS
 - [-] IGMP
 - [-] X-Ring
 - [-] LLDP
- [+] Security
 - [-] Factory Default
 - [-] Save Configuration
 - [-] System Reboot

VLAN Configuration

VLAN Operation Mode : 802.1Q

Enable GVRP Protocol

Management Vlan ID : 0

Apply

802.1Q Configuration Group Configuration

Port	Link Type	Untagged Vid	Tagged Vid
Port.01	Access Link	1	

Apply Help

Port	Link Type	Untagged Vid	Tagged Vid
Port.01	Access Link	3	
Port.02	Access Link	3	
Port.03	Access Link	3	
Port.04	Access Link	3	
Port.05	Trunk Link	1	7
Port.06	Trunk Link	1	7
Port.07	Hybrid Link	1	1024
Port.08	Hybrid Link	1	1024

Figure 3.36: 802.1Q VLAN Configuration

Group Configuration

Edit the existing VLAN Group.

- Select the VLAN group in the table list.
- Click .

Open all

- [-] Main Page
- [+] System
- [+] Port
- [+] Protocol
 - [-] VLAN
 - [-] RSTP
 - [-] SNMP
 - [-] QoS
 - [-] IGMP
 - [-] X-Ring
 - [-] LLDP
- [+] Security
 - [-] Factory Default
 - [-] Save Configuration
 - [-] System Reboot

VLAN Configuration

VLAN Operation Mode : 802.1Q

Enable GVRP Protocol

Management Vlan ID : 0

Apply

802.1Q Configuration Group Configuration

Default	1
VLAN_3	3
VLAN_7	7
VLAN_1024	1024

Edit Delete

Figure 3.37: Edit Group Configuration interface

- You can Change the VLAN group name and VLAN ID.

The screenshot displays the 'VLAN Configuration' interface on an ADVANTECH Industrial Switch. The left sidebar contains a navigation menu with 'Open all' and various configuration options. The main area is titled 'VLAN Configuration' and features a form for '802.1Q' configuration. The 'VLAN Operation Mode' is set to '802.1Q', and the 'Management Vlan ID' is '0'. Below this is an 'Apply' button. A tabbed interface shows '802.1Q Configuration' and 'Group Configuration' tabs. The 'Group Configuration' tab is active, showing 'Group Name' as 'VLAN_3' and 'VLAN ID' as '3', with an 'Apply' button below.

Figure 3.38: 802.1Q Group Configuration-Edit

- Click **Apply**.

Rapid Spanning Tree

The Rapid Spanning Tree Protocol (RSTP) is an evolution of the Spanning Tree Protocol and provides for faster spanning tree convergence after a topology change. The system also supports STP and the system will auto-detect the connected device that is running STP or RSTP protocol.

RSTP - System Configuration

- The user can view spanning tree information of the Root Bridge.
- The user can modify RSTP state. After modification, click **Apply**.
 - **RSTP mode:** The user must enable the RSTP function first before configuring the related parameters.
 - **Priority (0-61440):** The switch with the lowest value has the highest priority and is selected as the root. If the value is changed, the user must reboot the switch. The value must be a multiple of 4096 according to the protocol standard rule.
 - **Max Age (6-40):** The number of seconds a switch waits without receiving Spanning-tree Protocol configuration messages before attempting a reconfiguration. Enter a value between 6 through 40.
 - **Hello Time (1-10):** The time that controls the switch to send out the BPDU packet to check RSTP current status. Enter a value between 1 through 10.
 - **Forward Delay Time (4-30):** The number of seconds a port waits before changing from its Rapid Spanning-Tree Protocol learning and listening states to the forwarding state. Enter a value between 4 through 30.

Note

Follow the rule to configure the MAX Age, Hello Time, and Forward Delay Time.

$2 \times (\text{Forward Delay Time value} - 1) \geq \text{Max Age value} \geq 2 \times (\text{Hello Time value} + 1)$

ADVANTECH **Industrial Switch**

RSTP - System Configuration

System Configuration
Port Configuration

RSTP Mode	Enable <input type="button" value="v"/>
Priority (0-61440)	<input type="text" value="32768"/>
Max Age (6-40)	<input type="text" value="20"/>
Hello Time (1-10)	<input type="text" value="2"/>
Forward Delay Time (4-30)	<input type="text" value="15"/>

Priority must be a multiple of 4096
 $2 \times (\text{Forward Delay Time} - 1)$ should be greater than or equal to the Max Age.
 The Max Age should be greater than or equal to $2 \times (\text{Hello Time} + 1)$.

Bridge ID	0080001122334451
Root Priority	32768
Root Port	Root
Root Path Cost	0
Max Age	20
Hello Time	2
Forward Delay	15

Figure 3.39: RSTP System Configuration interface

RSTP - Port Configuration

Here you can configure the path cost and priority of each port.

- Select the port in the port column field.
- **Path Cost:** The cost of the path to the other bridge from this transmitting bridge at the specified port. Enter a number 1 through 200,000,000.
- **Priority:** Decide which port should be blocked by priority in LAN. Enter a number 0 through 240 (the port of the highest value will be blocked). The value of priority must be the multiple of 16.
- **Admin P2P:** Some of the rapid state transactions that are possible within RSTP are dependent upon whether the port concerned can only be connected to exactly one other bridge (i.e. it is served by a point-to-point LAN segment), or can be connected to two or more bridges (i.e. it is served by a shared medium LAN segment). This function allows the P2P status of the link to be manipulated administratively. True is P2P enabling. False is P2P disabling.
- **Admin Edge:** The port directly connected to end stations won't create bridging loop in the network. To configure the port as an edge port, set the port to "True" status.
- **Admin Non Stp:** The port includes the STP mathematic calculation. **True** is not including STP mathematic calculation. **False** is including the STP mathematic calculation.
- Click **Apply**.

AD-ANTECH Industrial Switch

RSTP - Port Configuration

System Configuration | Port Configuration

Port	Path Cost (1-200000000)	Priority (0-240)	Admin P2P	Admin Edge	Admin Non STP
Port.01					
Port.02					
Port.03	200000	128	Auto	true	false
Port.04					
Port.05					

priority must be a multiple of 16

Apply Help

RSTP Port Status

Port	Path Cost	Port Priority	Oper P2P	Oper Edge	STP Neighbor	State	Role
Port.01	2000000	128	True	True	False	Disabled	Disabled
Port.02	2000000	128	True	True	False	Disabled	Disabled
Port.03	2000000	128	True	True	False	Disabled	Disabled
Port.04	2000000	128	True	True	False	Disabled	Disabled
Port.05	2000000	128	True	True	False	Forwarding	Designated
Port.06	2000000	128	True	True	False	Disabled	Disabled
Port.07	2000000	128	True	True	False	Disabled	Disabled
Port.08	2000000	128	True	True	False	Disabled	Disabled

Figure 3.40: RSTP Port Configuration interface

SNMP Configuration

Simple Network Management Protocol (SNMP) is the protocol developed to manage nodes (servers, workstations, routers, switches and hubs etc.) on an IP network. SNMP enables network administrators to manage network performance, find and solve network problems, and plan for network growth. Network management systems learn of problems by receiving traps or change notices from network devices implementing SNMP.

System Configuration

Community Strings

Here you can define the new community string set and remove the unwanted community string.

- **String:** Fill the name string.
- **RO:** Read only. Enables requests accompanied by this community string to display MIB-object information.
- **RW:** Read write. Enables requests accompanied by this community string to display MIB-object information and to set MIB objects.
- Click **Add**.
- To remove the community string, select the community string that you have defined and click **Remove**. You cannot edit the name of the default community string set.

Agent Mode

Select the SNMP version that you want to use and then click **Change** to switch to the selected SNMP version mode. The default value is 'SNMP v1/v2c only'

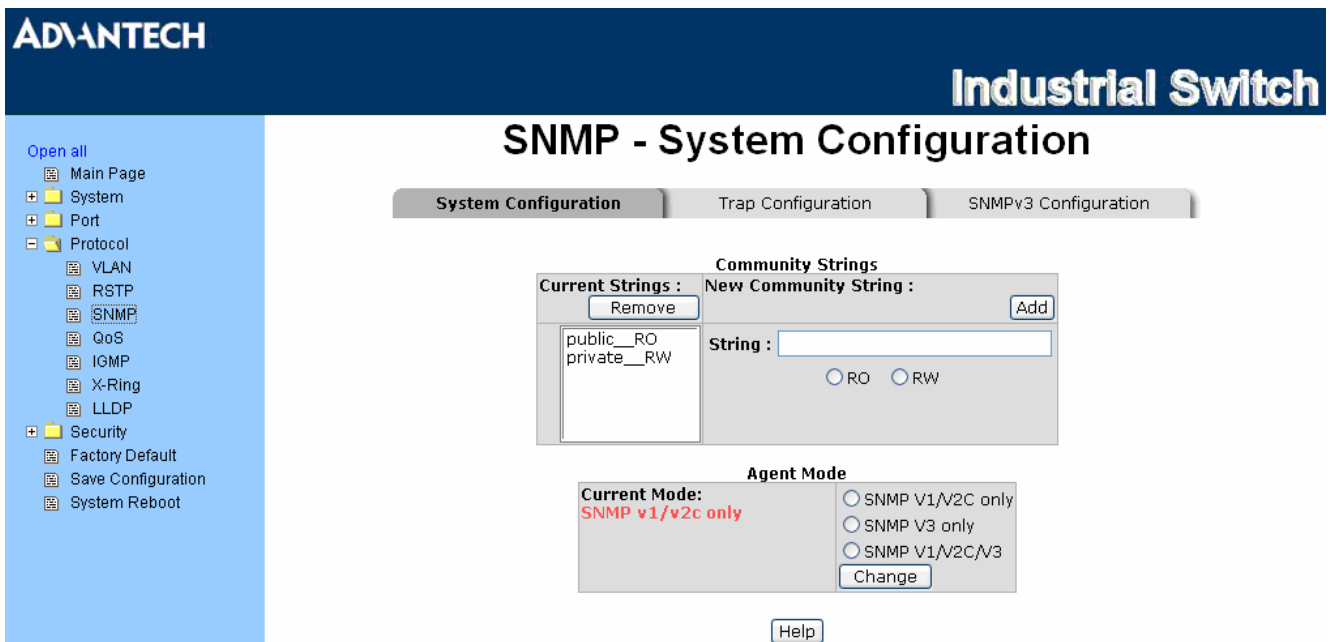


Figure 3.41: SNMP System Configuration interface

Trap Configuration

A trap manager is a management station that receives the trap messages generated by the switch. If no trap manager is defined, no traps will be issued. Create a trap manager by entering the IP address of the station and a community string. To define a management station as a trap manager, assign an IP address, enter the SNMP community strings, and select the SNMP trap version.

- **IP Address:** Enter the IP address of the trap manager.
- **Community:** Enter the community string.
- **Trap Version:** Select the SNMP trap version type—v1 or v2c.
- Click **Add**.
- To remove the community string, select the community string listed in the current managers field and click **Remove**.

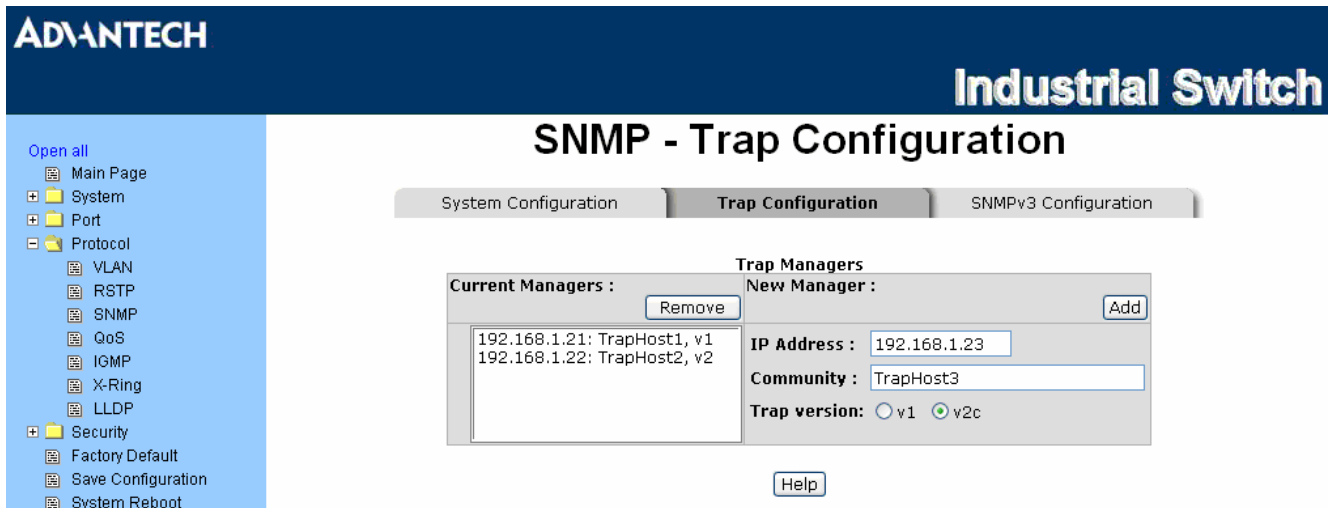


Figure 3.42: Trap Configuration interface

SNMPV3 Configuration

Configure the SNMP V3 function.

Context Table

Configure SNMP v3 context table. Assign the context name of context table. Click **Add** to add context name. Click **Remove** to remove unwanted context name.

User Profile

Configure SNMP v3 user table..

- **User ID:** Set up the user name.
- **Authentication Password:** Set up the authentication password.
- **Privacy Password:** Set up the private password.
- Click **Add** to add context name.
- Click **Remove** to remove unwanted context name.

SNMP - SNMPv3 Configuration

- Open all
- Main Page
- System
- Port
- Protocol
 - VLAN
 - RSTP
 - SNMP
 - QoS
 - IGMP
 - X-Ring
 - LLDP
- Security
 - Factory Default
 - Save Configuration
 - System Reboot

System Configuration Trap Configuration **SNMPv3 Configuration**

Context Table

Context Name :

Current User Profiles :	User Table
<input type="button" value="Remove"/> <div style="border: 1px solid gray; padding: 5px; min-height: 40px;">(none)</div>	<input type="button" value="Add"/> User ID: <input type="text"/> Authentication Password: <input type="text"/> Privacy Password: <input type="text"/>

Current Group content :	Group Table
<input type="button" value="Remove"/> <div style="border: 1px solid gray; padding: 5px; min-height: 40px;">(none)</div>	<input type="button" value="Add"/> Security Name (User ID): <input type="text"/> Group Name: <input type="text"/>

Current Access Tables :	Access Table
<input type="button" value="Remove"/> <div style="border: 1px solid gray; padding: 5px; min-height: 40px;">(none)</div>	<input type="button" value="Add"/> Context Prefix: <input type="text"/> Group Name: <input type="text"/> Security Level: <input type="radio"/> NoAuthNoPriv. <input type="radio"/> AuthNoPriv. <input type="radio"/> AuthPriv. Context Match Rule: <input type="radio"/> Exact <input type="radio"/> Prefix Read View Name: <input type="text"/> Write View Name: <input type="text"/> Notify View Name: <input type="text"/>

Current MIBTables :	MIBView Table
<input type="button" value="Remove"/> <div style="border: 1px solid gray; padding: 5px; min-height: 40px;">(none)</div>	<input type="button" value="Add"/> View Name: <input type="text"/> SubOid-Tree: <input type="text"/> Type: <input type="radio"/> Excluded <input type="radio"/> Included

Note: Any modification of SNMPv3 tables might cause MIB accessing rejection. Please take notice of the causality between the tables before you modify these tables.

Figure 3.43: SNMP V3 Configuration interface

Group Table

Configure SNMP v3 group table.

- **Security Name (User ID):** Assign the user name that you have set up in user table.
- **Group Name:** Set up the group name.
- Click to add context name.
- Click to remove the unwanted context name.

Access Table

Configure SNMP v3 access table.

- **Context Prefix:** Set up the context name.
- **Group Name:** Set up the group.
- **Security Level:** Set up the access level.
- **Context Match Rule:** Select the context match rule.
- **Read View Name:** Set up the read view.
- **Write View Name:** Set up the write view.
- **Notify View Name:** Set up the notify view.
- Click **Add** to add context name.
- Click **Remove** to remove unwanted context name.

MIBview Table

Configure MIB view table.

- **ViewName:** Set up the name.
- **Sub-Oid Tree:** Fill the Sub OID.
- **Type:** Select the type—excluded or included.
- Click **Add** to add context name.
- Click **Remove** to remove unwanted context name.

QoS Configuration

Here you can configure QoS policy and priority setting, per port priority setting, COS and TOS setting.

QoS Policy and Priority Type

- **QoS Policy:** Select the QoS policy rule.
 - **Use an 8,4,2,1 weighted fair queuing scheme:** The switch will follow 8:4:2:1 rate to process priority queue from High to lowest queue. For example, while the system processing, 1 frame of the lowest queue, 2 frames of the low queue, 4 frames of the middle queue, and 8 frames of the high queue will be processed at the same time in accordance with the 8,4,2,1 policy rule.
 - **Use a strict priority scheme:** Always the higher queue will be processed first, except the higher queue is empty.
 - **Priority Type:** There are 5 priority type selections available—**Port-based**, **TOS only**, **COS only**, **TOS first**, and **COS first**. Disable means no priority type is selected.
- Click to make the settings effective.

- Open all
- [-] Main Page
- [-] System
- [-] Port
- [-] Protocol
 - [-] VLAN
 - [-] RSTP
 - [-] SNMP
 - [-] QoS
 - [-] IGMP
 - [-] X-Ring
 - [-] LLDP
- [-] Security
 - [-] Factory Default
 - [-] Save Configuration
 - [-] System Reboot

QoS Configuration

Qos Policy:

Use an 8,4,2,1 weighted fair queuing scheme
 Use a strict priority scheme
 Priority Type: Disable

Port-based Priority:

Port.01	Port.02	Port.03	Port.04	Port.05	Port.06	Port.07	Port.08
Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest

COS:

Priority	0	1	2	3	4	5	6	7
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest

TOS:

Priority	0	1	2	3	4	5	6	7
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest
Priority	8	9	10	11	12	13	14	15
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest
Priority	16	17	18	19	20	21	22	23
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest
Priority	24	25	26	27	28	29	30	31
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest
Priority	32	33	34	35	36	37	38	39
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest
Priority	40	41	42	43	44	45	46	47
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest
Priority	48	49	50	51	52	53	54	55
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest
Priority	56	57	58	59	60	61	62	63
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest

Type: Excluded Included

Note: Any modification of SNMPv3 tables might cause MIB accessing rejection. Please take notice of the causality between the tables before you modify these tables.

Figure 3.44: QoS Configuration interface

Port Base Priority

Configure the priority level for each port. With the drop-down selection item of **Priority Type** above being selected as Port-based, this control item will then be available to set the queuing policy for each port.

- **Port x:** Each port has 4 priority levels—High, Middle, Low, and Lowest—to be chosen.
- Click to have the settings taken effect.

COS Configuration

Set up the COS priority level. With the drop-down selection item of **Priority Type** above being selected as COS only/COS first, this control item will then be available to set the queuing policy for each port.

- **COS priority:** Set up the COS priority level 0~7—High, Middle, Low, Lowest.
- Click .

TOS Configuration

Set up the TOS priority. With the drop-down selection item of **Priority Type** above being selected as TOS only/TOS first, this control item will then be available to set the queuing policy for each port.

- **TOS priority:** The system provides 0~63 TOS priority level. Each level has 4 types of priority—High, Middle, Low, and Lowest. The default value is 'Lowest' priority for each level. When the IP packet is received, the system will check the TOS level value in the IP packet that has received. For example, the user sets the TOS level 25 as high, the system will check the TOS value of the received IP packet. If the TOS value of received IP packet is 25 (priority = high), and then the packet priority will have highest priority.
- Click to make the settings taken effect.

IGMP Configuration

The Internet Group Management Protocol (IGMP) is an internal protocol of the Internet Protocol (IP) suite. IP manages multicast traffic by using switches, routers, and hosts that support IGMP. Enabling IGMP allows the ports to detect IGMP queries, report packets, and manage IP multicast traffic through the switch. IGMP have three fundamental types of message shown as follows:

Message	Description
Query	A message sent from the querier (IGMP router or switch) asking for a response from each host belonging to the multicast group.
Report	A message sent by a host to the querier to indicate that the host wants to be or is a member of a given group indicated in the report message.
Leave Group	A message sent by a host to the querier to indicate that the host has quit being a member of a specific multicast group.

The switch supports IP multicast. You can enable IGMP protocol via setting the IGMP Configuration page to see the IGMP snooping information. IP multicast addresses are in the range of 224.0.0.0 through 239.255.255.255.

- **IGMP Protocol:** Enable or disable the IGMP protocol.
- **IGMP Query:** Select the IGMP query function as Enable or Auto to set the switch as a querier for IGMP version 2 multicast networks.
- Click .

ADVANTECH
Industrial Switch

Open all

- [-] Main Page
- [+] System
- [+] Port
- [+] Protocol
 - [-] VLAN
 - [-] RSTP
 - [-] SNMP
 - [-] QoS
 - [-] IGMP
 - [-] X-Ring
 - [-] LLDP
- [+] Security
- [-] Factory Default
- [-] Save Configuration
- [-] System Reboot

IGMP Configuration

IP Address	VLAN ID	Member Port
239.255.255.250	1	*****5***

IGMP Snooping:

IGMP Query:

Figure 3.45: IGMP Configuration interface

X-Ring

X-Ring provides a faster redundant recovery than Spanning Tree topology. The action is similar to STP or RSTP, but the algorithms between them are not the same.

In the X-Ring topology, every switch should be enabled with X-Ring function and two ports should be assigned as the member ports in the ring. Only one switch in the X-Ring group would be set as the master switch that one of its two member ports would be blocked, called backup port, and another port is called working port. Other switches in the X-Ring group are called working switches and their two member ports are called working ports. When the failure of network connection occurs, the backup port of the master switch (Ring Master) will automatically become a working port to recover from the failure.

The switch supports the function and interface for setting the switch as the ring master or not. The ring master can negotiate and place command to other switches in the X-Ring group. If there are 2 or more switches in master mode, the software will select the switch with lowest MAC address number as the ring master. The X-Ring master ring mode can be enabled by setting the X-Ring configuration interface. Also, the user can identify whether the switch is the ring master by checking the R.M. LED indicator on the panel of the switch.

The system also supports the **Couple Ring** that can connect 2 or more X-Ring group for the redundant backup function; **Dual Homing** function that can prevent connection lose between X-Ring group and upper level/core switch. Apart from the advantages, **Central Ring** can handle up to 4 rings in the system and has the ability to recover from failure within 20 milliseconds.

- **Enable X-Ring:** To enable the X-Ring function, tick the checkbox beside the **Enable Ring** string label. If this checkbox is not ticked, all the ring functions are unavailable.
 - **Enable Ring Master:** Tick the checkbox to enable this switch to be the ring master.
 - **1st & 2nd Ring Ports:** Pull down the selection menu to assign the ports as the member ports. **1st Ring Port** is the working port and **2nd Ring Port** is the backup port. When **1st Ring Port** fails, the system will automatically upgrade the **2nd Ring Port** to be the working port.
- **Enable Couple Ring:** To enable the couple ring function, tick the checkbox beside the **Enable Couple Ring** string label.
 - **Couple port:** Assign the member port which is connected to the other ring group.
 - **Control port:** When the **Enable Couple Ring** checkbox is ticked, you have to assign the control port to form a couple-ring group between the two X-rings.
- **Enable Dual Homing:** Set up one of the ports on the switch to be the Dual Homing port. For a switch, there is only one Dual Homing port. Dual Homing function only works when the X-Ring function enabled.
- **Enable Dual Ring:** When this check box is ticked, the '**Enable Ring Master**' check box will then also be enabled by the system which means this equipment is assigned as the Ring Master. The Dual Ring differs from the Couple Ring in that it only needs a unit to form a redundant linking system of two rings.
- And then, click to apply the configuration.

X-Ring Configuration

- Open all
- [-] Main Page
- [-] System
- [-] Port
- [-] Protocol
 - [-] VLAN
 - [-] RSTP
 - [-] SNMP
 - [-] QoS
 - [-] IGMP
 - [-] X-Ring
 - [-] LLDP
- [-] Security
 - [-] Factory Default
 - [-] Save Configuration
 - [-] System Reboot

<input checked="" type="checkbox"/>	Enable Ring	
<input type="checkbox"/>	Enable Ring Master	
1st Ring Port	Port.01	LINK DOWN
2nd Ring Port	Port.02	LINK DOWN
<input type="checkbox"/>	Enable Couple Ring	
Coupling Port	Port.03	LINK DOWN
Control Port	Port.04	LINK DOWN
<input type="checkbox"/>	Enable Dual Homing	
Homing Port	Port.05	FORWARDING

Figure 3.46: X-ring interface

Note

When the X-Ring function enable, user must disable the RSTP. The X-Ring function and RSTP function cannot exist at the same time. Remember to execute the "Save Configuration" action, otherwise the new configuration will lose when switch power off.

LLDP Configuration

LLDP (Link Layer Discovery Protocol) function allows the switch to advertise its information to other nodes on the network and store the information it discovers.

- **LLDP Protocol:** Disable or enable LLDP function.
- **LLDP Interval:** Set the interval of learning the information time in second.
- Click .

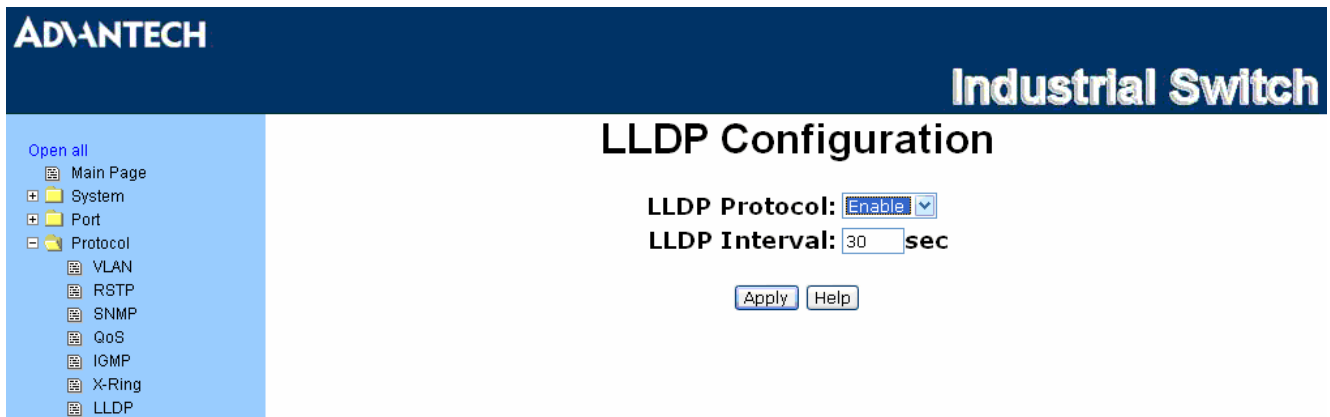


Figure 3.47: LLDP Configuration interface

3.2.4 Security

In this section, you can configure 802.1x and MAC address table.

802.1X/Radius Configuration

802.1x is an IEEE authentication specification which prevents the client from connecting to a wireless access point or wired switch until it provides authority, like the user name and password that are verified by an authentication server (such as RADIUS server).

802.1X/Radius - System Configuration

After enabling the IEEE 802.1X function, you can configure the parameters of this function.

- **IEEE 802.1x Protocol:** Enable or disable 802.1x protocol.
- **Radius Server IP:** Assign the RADIUS Server IP address.
- **Server Port:** Set the UDP destination port for authentication requests to the specified RADIUS Server.
- **Accounting Port:** Set the UDP destination port for accounting requests to the specified RADIUS Server.
- **Shared Key:** Set an encryption key for using during authentication sessions with the specified RADIUS server. This key must match the encryption key used on the RADIUS Server.
- **NAS, Identifier:** Set the identifier for the RADIUS client.
- Click **Apply** .

The screenshot shows the 'Industrial Switch' web interface. The main title is '802.1x/Radius - System Configuration'. There are three tabs: 'System Configuration', 'Port Configuration', and 'Misc Configuration'. The 'System Configuration' tab is active. The configuration table is as follows:

802.1x Protocol	Enable
Radius Server IP	0.0.0.0
Server Port	1812
Accounting Port	1813
Shared Key	12345678
NAS, Identifier	NAS_L2_SWITCH

At the bottom of the table are 'Apply' and 'Help' buttons.

Figure 3.48: 802.1x/Radius System Configuration interface

802.1x/Radius - Port Configuration

You can configure the 802.1x authentication state for each port. The state provides Disable, Accept, Reject, and Authorize options.

- **Reject:** The specified port is required to be held in the unauthorized state.
- **Accept:** The specified port is required to be held in the Authorized state.
- **Authorized:** The specified port is set to the Authorized or Unauthorized state in accordance with the outcome of an authentication exchange between the Supplicant and the authentication server.
- **Disable:** When disabled, the specified port works without complying with 802.1x protocol.
- Click **Apply** .

802.1x/Radius - Port Configuration

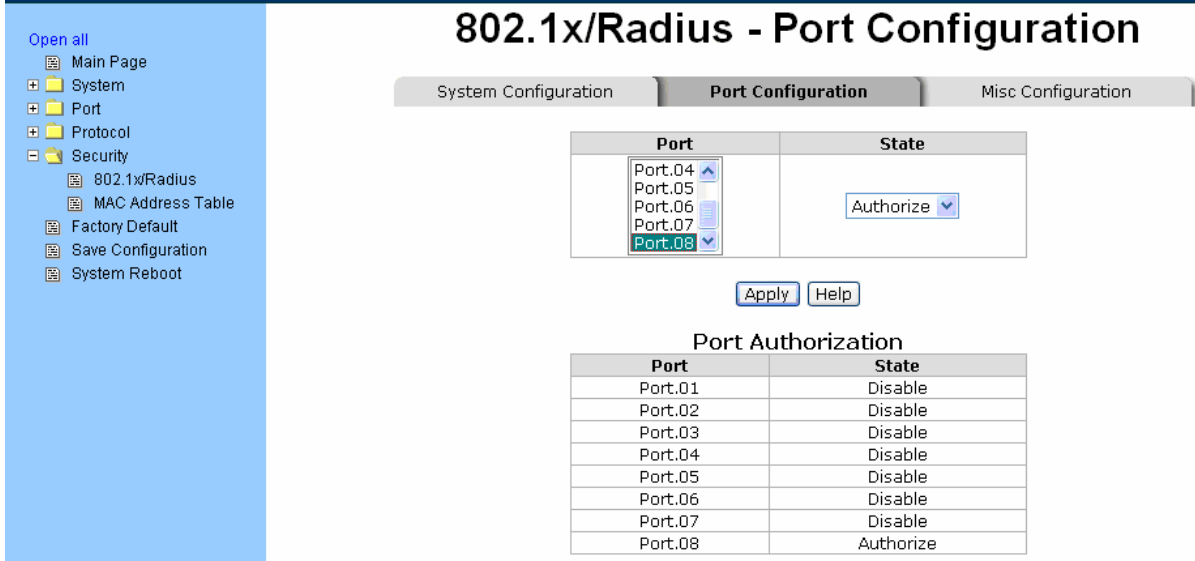


Figure 3.49: 802.1x/Radius - Port Configuration interface

802.1X/Radius - Misc Configuration

- **Quiet Period:** Set the period which the port doesn't try to acquire a supplicant.
- **TX Period:** Set the period the port waits for retransmit next EAPOL PDU during an authentication session.
- **Supplicant Timeout:** Set the period of time the switch waits for a supplicant response to an EAP request.
- **Server Timeout:** Set the period of time the switch waits for a server response to an authentication request.
- **Max Requests:** Set the number of authentication that must time-out before authentication fails and the authentication session ends.
- **Reauth period:** Set the period of time which clients connected must be re-authenticated.
- Click **Apply**.

802.1x/Radius - Misc Configuration

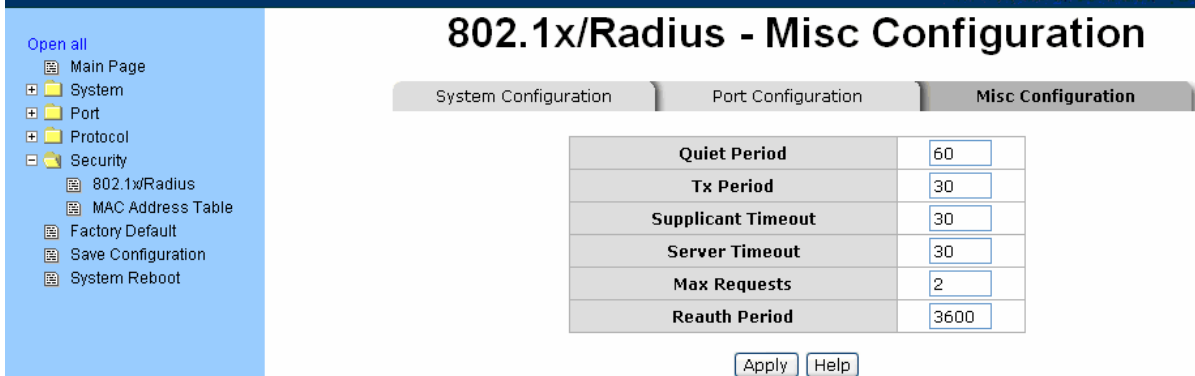


Figure 3.50: 802.1x/Radius - Misc Configuration interface

MAC Address Table

Use the MAC address table to ensure the port security.

You can add a static MAC address; it remains in the switch's address table, regardless of whether the device is physically connected to the switch. This saves the switch from having to re-learn a device's MAC address when the disconnected or powered-off device is active on the network again. You can add / modify / delete a static MAC address.

MAC Address Table - Static MAC Address

You can add static MAC address in the switch MAC table here.

- **MAC Address:** Enter the MAC address of the port that should permanently forward traffic, regardless of the device network activity.
- **Port No.:** Pull down the selection menu to select the port number.
- Click **Add**.
- If you want to delete the MAC address from filtering table, select the MAC address and click **Delete**.

The screenshot shows the 'Static MAC Addresses' configuration interface. At the top, there are four tabs: 'Static MAC Addresses', 'MAC Filtering', 'All MAC Addresses', and 'Multicast Filtering'. The 'Static MAC Addresses' tab is selected. Below the tabs is a table with one row containing the MAC address 'AABBCCDDEEFF' and the port 'Port.01'. Below the table are input fields for 'MAC Address' (containing 'ccddeeffbbaa') and 'Port No.' (a dropdown menu with 'Port.01' selected). Below the 'Port No.' dropdown is a list of port options from 'Port.01' to 'Port.08'. There are 'Add' and 'Help' buttons next to the port list.

Figure 3.51: Static MAC Addresses interface

MAC Address Table - MAC Filtering

By filtering MAC address, the switch can easily filter the pre-configured MAC address and reduce the un-safety. You can add and delete filtering MAC address.

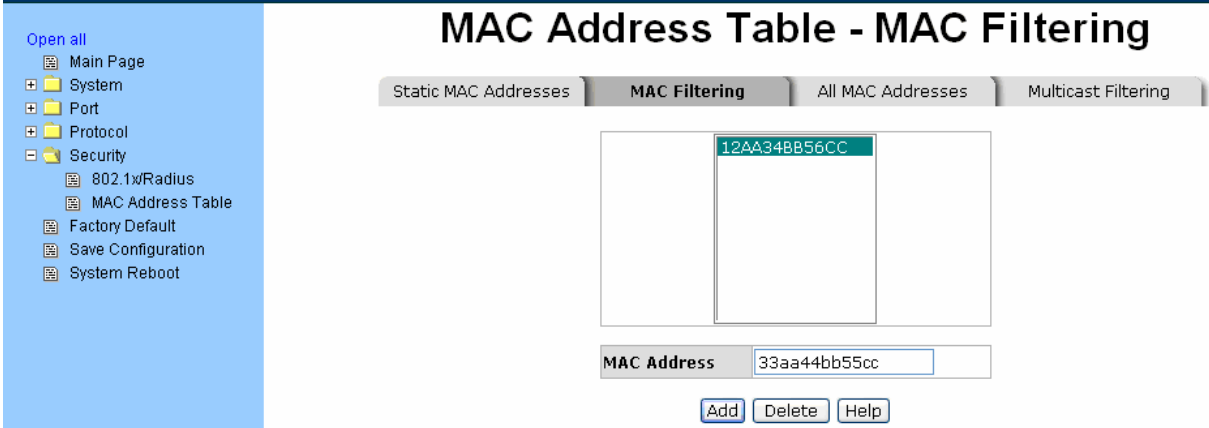


Figure 3.52: MAC Filtering interface

- **MAC Address:** Enter the MAC address that you want to filter.
- Click **Add**.
- If you want to delete the MAC address from filtering table, select the MAC address and click **Delete**.

MAC Address Table - All MAC Addresses

You can view the port that connected device’s MAC address and the related devices’ MAC address.

- Select the port.
- The selected port of static & dynamic MAC address information will be displayed in here.
- Click **Clear MAC Table** to clear the current port static MAC address information on screen.

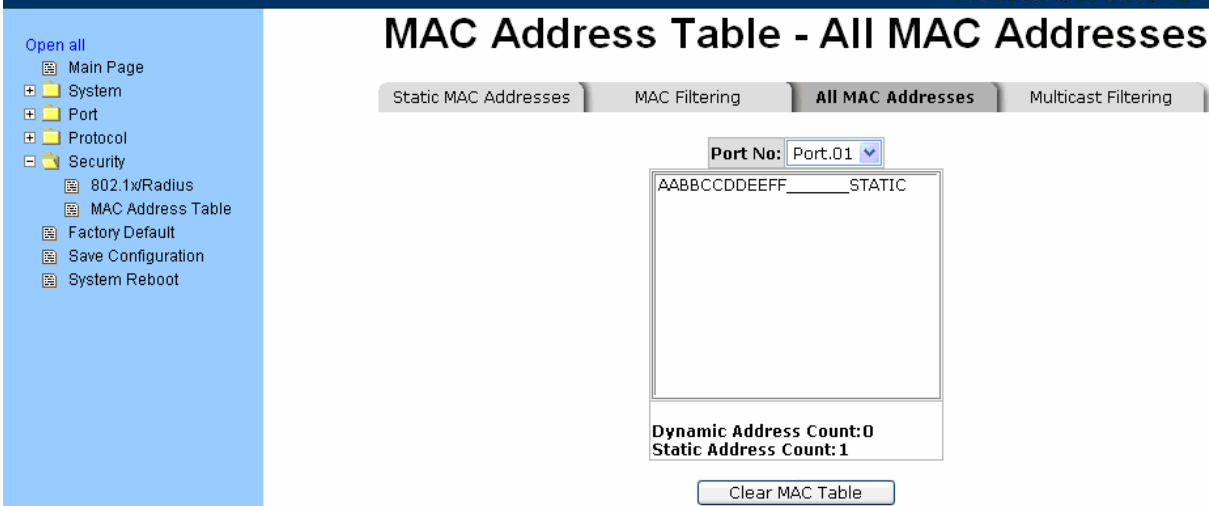


Figure 3.53: All MAC Address interface

MAC Address Table—Multicast Filtering

Multicasts are similar to broadcasts, they are sent to all end stations on a LAN or VLAN. Multicast filtering is the system by which end stations only receive multicast traffic if they register to join specific multicast groups. With multicast filtering, network devices only forward multicast traffic to the ports that are connected to registered end stations.

- **IP Address:** Assign a multicast group IP address in the range of 224.0.0.0 ~ 239.255.255.255.
- **Member Ports:** Tick the check box beside the port number to include them as the member ports in the specific multicast group IP address.
- Click **Clear MAC Table** to clear the current port static MAC address information on screen.

The screenshot displays the 'Industrial Switch' web interface. The main title is 'MAC Address Table - Multicast Filtering'. There are four tabs: 'Static MAC Addresses', 'MAC Filtering', 'All MAC Addresses', and 'Multicast Filtering'. The 'Multicast Filtering' tab is active. Below the tabs is a table with two columns: 'IP Address' and 'Member Port'. The table contains two entries: '224.000.000.100' with '12*****' and '224.000.001.100' with '**34****'. Below the table is a form with an 'IP Address' field containing '224.0.2.100' and a 'Member Ports' section with checkboxes for Port.01 through Port.08. Port.05 and Port.06 are checked. At the bottom are 'Add', 'Delete', and 'Help' buttons. On the left side, there is a navigation menu with 'Open all' and various system and security options.

Figure 3.54: Multicast Filtering interface

Factory Default

Reset switch to default configuration. Click **Reset** to reset all configurations to the default value.



Figure 3.55: Factory Default interface

Save Configuration

Save all configurations that you have made in the system. To ensure the all configuration will be saved, click **Save** to save the all configuration to the flash memory.



Figure 3.56: Save Configuration interface

System Reboot

Reboot the switch in software reset. Click **Reboot** to reboot the system.

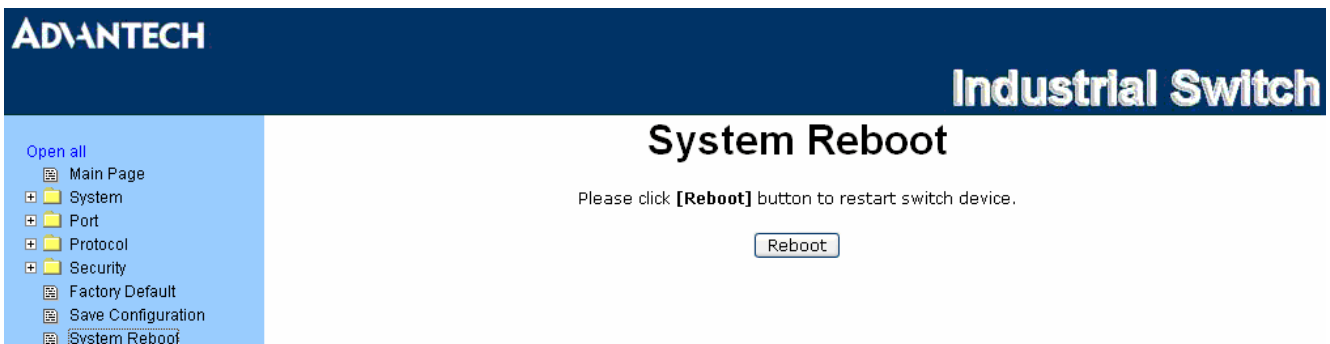


Figure 3.57: System Reboot interface

CHAPTER
4

Troubleshooting

Chapter 4 Troubleshooting

Verify that you are using the right power cord/adaptor. Don't use the power adaptor with DC output voltage higher than the input voltage of the device, or the device will burn down.

Select the proper UTP cable to construct the user network. Use unshielded twisted-pair (UTP) or shield twisted-pair (STP) cable for RJ-45 connections: 100 Ω Category 3, 4 or 5 cable for 10Mbps connections, 100 Ω Category 5 cable for 100Mbps connections, or 100 Ω Category 5e/above cable for 1000Mbps connections. Also be sure that the length of any twisted-pair connection does not exceed 100 meters (328 feet).

Diagnosing LED Indicators

To assist in identifying problems, the switch can be easily monitored through panel indicators, which describe common problems the user may encounter and where the user can find possible solutions.

If the power indicator does not light on when the power cord is plugged in, you may have a problem with power cord. Then check for loose power connections, power losses or surges at power outlet. If you still cannot resolve the problem, contact the local dealer for assistance.

If the LED indicators are normal and the connected cables are correct but the packets still cannot be transmitted. Please check the user system's Ethernet devices' configuration or status.