

RH850 Evaluation Platform

RH850/F1H 100-pin PiggyBack board T2-V1

Y-RH850-F1X-100PIN-PB-T2-V1

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Technology Corp. website (http://www.renesas.com).

The newest version of this document can be obtained from the following web location http://www.renesas.eu/updates?oc=Y-RH850-F1X-100PIN-PB-T2-V1

Table of Contents

| Chapter 1 | Introduction | 3 |
|-----------|---------------------------------|----|
| Chapter 2 | Overview | 4 |
| 2.1 | Overview | 4 |
| 2.1.1 | RH850-F1X-100PIN-PB-T2-V1 | |
| 2.2 | Mounting of the device | 5 |
| Chapter 3 | Power supply | 6 |
| 3.1 | Board power connection | 6 |
| 3.2 | Voltage distribution | 7 |
| Chapter 4 | Clock sources | 8 |
| 4.1.1 | MainOsc | |
| Chapter 5 | Debug and Programming interface | 9 |
| Chapter 6 | Connectors for ports of device | 10 |
| 6.1 | Push button for RESET | |
| 6.2 | Signal LEDs | 10 |
| 6.3 | Connectors to MainBoard | 10 |
| 6.3.1 | Connector CN1 | |
| 6.3.2 | Connector CN2 | 12 |
| 6.3.3 | Connector CN3 | 13 |
| Chapter 7 | Mechanical dimensions | 16 |
| Chapter 8 | Schematic | 17 |
| Chapter 9 | Revision History | 20 |
| - | | |

Chapter 1 Introduction

The RH850/F1x Application Board is part of the RH850 Evaluation Platform and serves as a simple and easy to use platform for evaluating the features and performance of Renesas Electronics 32-bit RH850/F1x microcontrollers. The piggyback board (Y-RH850-F1X-100PIN-PB-T2-V1) can be used as a standalone board, or can be mated with a mainboard (e.g. Y-RH850-X1X-MB-T2-Vx) for extended functionality.

Main features:

- · Socket for mounting of device
- Standalone operation of the board
- Direct supply of device voltage (typ. 3.3V-5.0V)
- · Device programming capability
- · Device debugging capability
- · Pin headers for direct access to each device pin
- · Reset switch
- · MainOSC circuitry
- Signal LEDs
- · Connectors to MainBoard

This document describes the functionality provided by the piggyback board and guides the user through its operation.


For details regarding the operation of the microcontroller, refer to the RH850/F1x User's Manual.

Chapter 2 Overview

2.1 Overview

2.1.1 RH850-F1X-100PIN-PB-T2-V1

Figures 1 and 2 provide the views of the RH850-F1X-100PIN-PB-T2-V1 Piggyback Board.

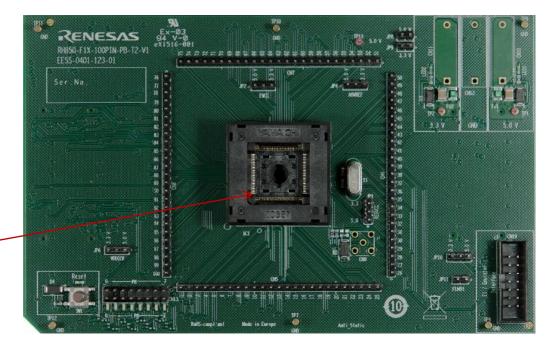

Device pin #1

Figure 1 - RH850-F1X-100PIN-PB-T2-V1 top view



Figure 2 - RH850-F1X-100PIN-PB-T2-V1 bottom view

Mounting of the device 2.2

The board is designed for use with the following device:

RH850/F1H-100 PREMIUM

The device must be placed inside the socket IC1. To insert the device, press down the lid, align the #1 pin of the device to the #1pin of the socket, insert the device inside the socket and release the lid.

Chapter 3 Power supply

3.1 Board power connection

For operation of the device, a supply voltage must be connected to the board. Though a single supply voltage is sufficient for the operation of the device, two (different) voltages can be supplied to the board.

Within this document the following voltages are considered as 'typical' connections:

Voltage1 = 5.0V

Voltage2 = 3.3V

The following connectors are available to supply those voltages:

Three 4mm 'banana-type' connectors:

- Two red connectors for voltages Voltage1 (CN10) and Voltage2 (CN11)
- A black connector for VSS connection on CN12

Note: The three connectors are supplied with the board but are not assembled.

- The E1 emulator that is used for debug purposes and flash programming can also supply a single operating voltage ('Dbg_Voltage').
 The voltage is programmable via the E1 GUI as 3.3 or 5.0V (typ).
 See the documentation of the E1 and chapter 5 'Debug and Programming interface' for details.
- In case the PiggyBoard is mounted on a MainBoard, the voltages *Voltage1* and *Voltage2* are supplied by the on-board regulators of the MainBoard.

NOTE: Do not supply any voltage directly to the PiggyBoard in case it is mounted on the MainBoard.

For each of the two voltages, 'Voltage 1 ' and 'Voltage 2', a green LED (LED1 and LED2) is available to signal that the related voltage is available on the PiggyBoard.

3.2 Voltage distribution


The table shows the required device power supply pins and their function:

| Device supply pin | Function | |
|-------------------|--|--|
| REGVCC | Supply for the device internal regulators for the digital logic. | |
| EVCC | Supply for ports of AWO area. | |
| A0VREF | Supply for ports and analog functions of ADC0. | |

Additionally one power supply for MainBoard can be selected:

| Supply voltage | Function | |
|----------------|--|--|
| VI)) C) | IO supply voltage for components located on a connected mainboard. | |

For each of the above voltages, the voltage source can be selected from *Voltage1* (typ. 5.0V) or *Voltage2* (typ. 3.3V) by the jumpers JP0, JP1, JP2, JP3, JP6 and JP9.
 See the picture for details:

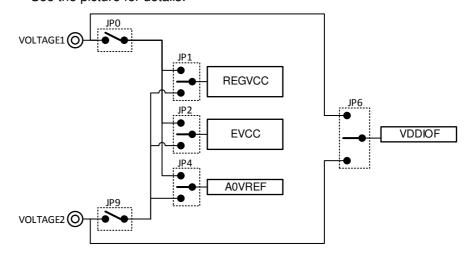

Chapter 4 Clock sources

For mounting of the external crystal oscillator, a socket is available.

4.1.1 MainOsc

A crystal or ceramic resonator in the range of 8MHz to 24MHz can be mounted on socket X1.

A 8MHz and 16Mhz oscillator is supplied with the board.

Chapter 5 Debug and Programming interface

For connection of the microcontroller debug and flash programming tools, the connector CN19 is provided.

The signal connection of the connector CN19 is shown in the picture below:

| CN19 pin | Device Port | Device signal |
|----------|---------------|-----------------------|
| 1 | JP0_2 | DCUTCK / LPDCLK |
| 2 | GND | GND |
| 3 | JP0_4 | DCUTRST |
| 4 | FLMD0 | FLMD0 |
| 5 | JP0_1 | DCUTDO / LPDO |
| 6 | P10_8* | FLMD1 |
| 7 | JP0_0 | DCUTDI / LPDI |
| 8 | 'Dbg_Voltage' | - |
| 9 | JP0_3 | DCUTMS |
| 10 | - | - |
| 11 | JP0_5 | DCURDY / LPDCLKOUT |
| 12 | GND | - |
| 13 | RESET | - |
| 14 | GND | - |

 $^{^{\}star}$ In case of connecting a debug/programming tool to CN19, the pin header JP11 must be closed.

The 'Dbg_Voltage' (on CN19 pin 8) can be monitored by the debug and flash programming tools. Therefore it is possible to select either Voltage1 or the Voltage2 by pin header JP10:

| JP10 pin | Selection for Dbg_Voltage |
|-------------|---------------------------|
| 1-2 | Voltage1 is selected |
| 2-3 | Voltage2 is selected |

Chapter 6 Connectors for ports of device

Connection to each pin of the device is possible via the connectors CN5 to CN8.

Note: The pin headers are directly connected to the pins, therefore special care must be taken to avoid any electrostatic or other damage to the device.

6.1 Push button for RESET

In order to issue a RESET to the device, the push-button SW1 is available.

6.2 Signal LEDs

Eight LEDs, LED4 to LED11, are provided to allow visual observation of microcontroller output port states.

The LEDs can be connected to P8_0 to P8_7 of the device via the pin header CN13:

| CN13 pin | Device Port | LED |
|----------|-------------|-----------------|
| 1-2 | P8_7 | LED11 (LEDP8_7) |
| 3-4 | P8_6 | LED10 (LEDP8_6) |
| 5-6 | P8_5 | LED9 (LEDP8_5) |
| 7-8 | P8_4 | LED8 (LEDP8_4) |
| 9-10 | P8_3 | LED7 (LEDP8_3) |
| 11-12 | P8_2 | LED6 (LEDP8_2) |
| 13-14 | P8_1 | LED5 (LEDP8_1) |
| 15-16 | P8_0 | LED4 (LEDP8_0) |

6.3 Connectors to MainBoard

Three connectors (CN1 to CN3) are available to connect the PiggyBoard to a MainBoard.

The signal connection of each connector is described in the following tables:

6.3.1 Connector CN1

| P | in | Function | Device Port |
|---|----|----------|-------------|
| | 1 | VOLTAGE1 | - |
| (| 3 | VOLTAGE1 | - |
| Ļ | 5 | RESET | _RESET |
| - | 7 | WAKE | - |
| Ş | 9 | INT0 | P9_1 |
| 1 | 1 | INT2 | P9_2 |
| 1 | 3 | - | - |

| Pin | Function | Device Port |
|-----|----------|-------------|
| 2 | VOLTAGE1 | 1 |
| 4 | VOLTAGE1 | - |
| 6 | NMI | P9_0 |
| 8 | - | - |
| 10 | INT1 | P0_6 |
| 12 | INT3 | P9_3 |
| 14 | - | - |

| 15 | UART0TX | P10_10 |
|-----|------------|--------|
| 17 | UART0RX | P10_9 |
| 19 | LIN0TX | P10_10 |
| 21 | LIN0RX | P10_9 |
| 23 | IIC0SDL | P10_3 |
| 25 | IIC0SDA | P10_2 |
| 27 | CAN0TX | P10_1 |
| 29 | CAN0RX | P10_0 |
| 31 | SENTIN0 | - |
| 33 | SENTOUT0 | - |
| 35 | PSI50Rx | - |
| 37 | PSI50Tx | - |
| 39 | PSI50Snyc | - |
| 41 | FLX0TX | - |
| 43 | FLX0RX | - |
| 45 | FLX1TX | - |
| 47 | FLX1RX | - |
| 49 | - | - |
| 51 | ETH0MDIO | - |
| 53 | ETH0RXD0 | - |
| 55 | ETH0RXD1 | - |
| 57 | ETH0RXD2 | - |
| 59 | ETH0RXD3 | - |
| 61 | ETH0RXDCLK | - |
| 63 | ETH0RXER | - |
| 65 | ETH0CRSDV | - |
| 67 | ETH0RXDV | - |
| 69 | ETH0RESET | - |
| 71 | - | - |
| 73 | USB0UDMF | - |
| 75 | USB0UDPF | - |
| 77 | - | - |
| 79 | - | - |
| 81 | - | - |
| 83 | - | - |
| 85 | DIGIO_0 | P8_0 |
| 87 | DIGIO_2 | P8_2 |
| 89 | DIGIO_4 | P8_4 |
| 91 | DIGIO_6 | P8_6 |
| 93 | DIGIO_8 | P10_0 |
| 95 | DIGIO_10 | P10_8 |
| 97 | DIGIO_12 | P0_9 |
| 99 | DIGIO_14 | P0_11 |
| 101 | - | - |
| 103 | MUX0 | P10_4 |

| 16 | UART1TX | D0 5 |
|-----|-------------|-------|
| | | P0_5 |
| 18 | UART1RX | P0_4 |
| 20 | LIN1TX | P0_8 |
| 22 | LIN1RX | P0_7 |
| 24 | IIC1SDL | - |
| 26 | IIC1SDA | - |
| 28 | CAN1TX | P0_3 |
| 30 | CAN1RX | P0_2 |
| 32 | SENTIN1 | - |
| 34 | SENTOUT1 | - |
| 36 | PSI51Rx | - |
| 38 | PSI51Tx | - |
| 40 | PSI51Sync | - |
| 42 | FLX0EN | - |
| 44 | FLXSTPWT | - |
| 46 | FX1EN | - |
| 48 | FLXCLK | - |
| 50 | - | - |
| 52 | ETH0MDC | - |
| 54 | EH0TXD0 | - |
| 56 | EH0TXD1 | - |
| 58 | EH0TXD2 | - |
| 60 | EH0TXD3 | - |
| 62 | ETH0TXCLK | - |
| 64 | ETH0TXER | - |
| 66 | ETH0TXEN | - |
| 68 | ETH0COL | - |
| 70 | - | - |
| 72 | - | - |
| 74 | USB0UDMH | - |
| 76 | USB0UDPH | - |
| 78 | - | - |
| 80 | - | - |
| 82 | - | - |
| 84 | - | - |
| 86 | DIGIO 1 | P8 1 |
| 88 | DIGIO 3 | P8 3 |
| 90 | DIGIO_5 | P8 5 |
| 92 | DIGIO_3 | P11 0 |
| 94 | DIGIO 9 | P10 7 |
| 96 | DIGIO_3 | P10_7 |
| 98 | DIGIO_11 | P0 10 |
| 100 | DIGIO_15 | P0_10 |
| 102 | <u> </u> | 10_12 |
| | - NALIV4 | P10 F |
| 104 | MUX1 | P10_5 |

| 105 | MUX2 | P10_6 |
|-----|----------|-------|
| 107 | ADC0 | AP0_8 |
| 109 | ADC2 | AP0_2 |
| 111 | ADC4 | AP0_4 |
| 113 | ADC6 | AP0_6 |
| 115 | VDDIOF | - |
| 117 | VOLTAGE2 | - |
| 119 | VOLTAGE2 | - |

| 106 | - | - |
|-----|----------|-------|
| 108 | ADC1 | AP0_1 |
| 110 | ADC3 | AP0_3 |
| 112 | ADC5 | AP0_5 |
| 114 | ADC7 | AP0_7 |
| 116 | VDDIOF | - |
| 118 | VOLTAGE2 | - |
| 120 | VOLTAGE2 | - |

6.3.2 Connector CN2

| Pin | Function | Device Port | |
|-----|----------|-------------|--|
| 1 | CAN2Tx | P0_4 | |
| 3 | CAN2Rx | P0_5 | |
| 5 | CAN4Tx | P0_10 | |
| 7 | CAN4Rx | P0_9 | |
| 9 | LIN2Tx | P0_10 | |
| 11 | LIN2Rx | P0_9 | |
| 13 | LIN4Tx | P11_2 | |
| 15 | LIN4Rx | P11_1 | |
| 17 | LIN6Tx | - | |
| Q | LIN6Rx | - | |
| 21 | LIN8Tx - | | |
| 23 | LIN8Rx | - | |
| 25 | LIN10Tx | - | |
| 27 | LIN10Rx | - | |
| 29 | LIN12Tx | - | |
| 31 | LIN12Rx | - | |
| 33 | LIN14Tx | - | |
| 35 | LIN14Rx | - | |
| 37 | - | - | |
| 39 | - | - | |
| 41 | MLBCLK | - | |
| 43 | MLBSIG | - | |
| 45 | - | - | |
| 47 | CAN6Tx | P10_5 | |
| 49 | CAN6Rx | P10_4 | |
| 51 | - | - | |
| 53 | - | - | |
| 55 | - | - | |
| 57 | - | - | |
| 59 | - | - | |

| Pin | Function | Device Port |
|-----|----------|-------------|
| 2 | CAN3Tx | P11_4 |
| 4 | CAN3Rx | P11_3 |
| 6 | CAN5Tx | P11_6 |
| 8 | CAN5Rx | P11_5 |
| 10 | LIN3Tx | P20_5 |
| 12 | LIN3Rx | P20_4 |
| 14 | LIN5Tx | - |
| 16 | LIN5Rx | - |
| 18 | LIN7Tx | - |
| 20 | LIN7Rx | - |
| 22 | LIN9Tx | - |
| 24 | LIN9Rx | - |
| 26 | LIN11Tx | - |
| 28 | LIN11Rx | - |
| 30 | LIN13Tx | - |
| 32 | LIN13Rx | - |
| 34 | LIN15Tx | P10_11 |
| 36 | LIN15Rx | P10_12 |
| 38 | - | - |
| 40 | - | - |
| 42 | MLBRESET | - |
| 44 | MLBDAT | - |
| 46 | - | - |
| 48 | CAN7Tx | P10_13 |
| 50 | CAN7Rx | P10_14 |
| 52 | - | - |
| 54 | - | - |
| 56 | - | - |
| 58 | - | - |
| 60 | - | - |

| 61 | - | - |
|-----|----------|---|
| 63 | - | - |
| 65 | - | - |
| 67 | - | - |
| 69 | - | - |
| 71 | - | - |
| 73 | - | - |
| 75 | - | - |
| 77 | - | - |
| 79 | - | - |
| 81 | - | - |
| 83 | - | - |
| 85 | - | - |
| 87 | - | - |
| 89 | - | - |
| 91 | - | - |
| 93 | - | - |
| 95 | <u> </u> | |
| 97 | - | - |
| 99 | - | - |
| 101 | - | - |
| 103 | - | |
| 105 | <u> </u> | |
| 107 | - | - |
| 109 | - | - |
| 111 | - | - |
| 113 | - | - |
| 115 | <u> </u> | |
| 117 | - | - |
| 119 | - | - |

| 62 | - | - |
|-----|---|---|
| 64 | - | - |
| 66 | - | - |
| 68 | - | - |
| 70 | - | - |
| 72 | | |
| 74 | - | - |
| 76 | | |
| 78 | - | - |
| 80 | - | - |
| 82 | | |
| 84 | | |
| 86 | | |
| 88 | - | - |
| 90 | - | - |
| 92 | | |
| 94 | - | - |
| 96 | - | |
| 98 | | _ |
| 100 | - | - |
| 102 | | |
| 104 | | - |
| 106 | - | - |
| 108 | - | - |
| 110 | - | - |
| 112 | - | - |
| 114 | - | - |
| 116 | - | - |
| 118 | - | - |
| 120 | - | - |

6.3.3 Connector CN3

| Pin | Function | Device Port |
|-----|----------|-------------|
| 1 | PWM00 | P10_0 |
| 3 | PWM02 | P10_2 |
| 5 | PWM04 | P10_7 |
| 7 | PWM06 | P10_9 |
| 9 | PWM08 | P9_0 |
| 11 | PWM10 | P0_4 |
| 13 | PWM12 | P0_2 |
| 15 | PWM14 | P8_0 |

| Pin | Function | Device Port |
|-----|----------|-------------|
| 2 | PWM01 | P10_1 |
| 4 | PWM03 | P10_3 |
| 6 | PWM05 | P10_8 |
| 8 | PWM07 | P10_10 |
| 10 | PWM09 | P9_1 |
| 12 | PWM11 | P0_1 |
| 14 | PWM13 | P0_3 |
| 16 | PWM15 | - |


| | | T |
|-----|----------|--------|
| 17 | PWM16 | - |
| 19 | PWM18 | - |
| 21 | PWM20 | P9_0 |
| 23 | PWM22 | - |
| 25 | PWM24 | - |
| 27 | PWM26 | - |
| 29 | PWM28 | P11_3 |
| 31 | PWM30 | - |
| 33 | PWM32 | - |
| 35 | PWM34 | - |
| 37 | PWM36 | - |
| 39 | PWM38 | P8_6 |
| 41 | PWM40 | - |
| 43 | PWM42 | - |
| 45 | PWM44 | - |
| 47 | PWM46 | - |
| 49 | PWM48 | - |
| 51 | PWM50 | - |
| 53 | PWM52 | - |
| 55 | PWM54 | - |
| 57 | PWM56 | - |
| 59 | PWM58 | - |
| 61 | PWM60 | - |
| 63 | PWM62 | - |
| 65 | PWM64 | - |
| 67 | PWM66 | - |
| 69 | PWM68 | - |
| 71 | PWM70 | - |
| 73 | PWM72 | - |
| 75 | PWM74 | - |
| 77 | PWM76 | - |
| 79 | PWM78 | - |
| 81 | PWMADC00 | AP0_8 |
| 83 | PWMADC02 | AP0_10 |
| 85 | PWMADC04 | AP0_12 |
| 87 | PWMADC06 | AP0_14 |
| 89 | PWMADC08 | - |
| 91 | PWMADC10 | - |
| 93 | PWMADC12 | - |
| 95 | PWMADC14 | |
| 97 | - | - |
| 99 | | - |
| 101 | | |
| 103 | - | - |
| 105 | - | - |

| | | T |
|-----|----------|--------|
| 18 | PWM17 | - |
| 20 | PWM19 | - |
| 22 | PWM21 | - |
| 24 | PWM23 | - |
| 26 | PWM25 | P11_0 |
| 28 | PWM27 | P11_2 |
| 30 | PWM29 | P11_4 |
| 32 | PWM31 | - |
| 34 | PWM33 | - |
| 36 | PWM35 | - |
| 38 | PWM37 | - |
| 40 | PWM39 | - |
| 42 | PWM41 | - |
| 44 | PWM43 | - |
| 46 | PWM45 | - |
| 48 | PWM47 | - |
| 50 | PWM49 | - |
| 52 | PWM51 | - |
| 54 | PWM53 | - |
| 56 | PWM55 | - |
| 58 | PWM57 | - |
| 60 | PWM59 | - |
| 62 | PWM61 | - |
| 64 | PWM63 | - |
| 66 | PWM65 | - |
| 68 | PWM67 | - |
| 70 | PWM69 | - |
| 72 | PWM71 | - |
| 74 | PWM73 | - |
| 76 | PWM75 | _ |
| 78 | PWM77 | _ |
| 80 | PWM79 | _ |
| 82 | PWMADC01 | AP0 9 |
| 84 | PWMADC03 | AP0 11 |
| 86 | PWMADC05 | AP0 13 |
| 88 | PWMADC07 | AP0 15 |
| 90 | PWMADC09 | - |
| 92 | PWMADC11 | - |
| 94 | PWMADC13 | - |
| 96 | PWMADC15 | - |
| 98 | - | - |
| 100 | - | - |
| 102 | - | _ |
| 104 | - | _ |
| 106 | _ | _ |
| 100 | <u> </u> | |


| 107 | - | - |
|-----|---|---|
| 109 | - | - |
| 111 | - | - |
| 113 | - | - |
| 115 | - | - |
| 117 | - | - |
| 119 | - | - |


| 108 | - | - |
|-----|---|---|
| 110 | - | - |
| 112 | - | - |
| 114 | - | - |
| 116 | - | - |
| 118 | - | - |
| 120 | - | - |


Chapter 7 Mechanical dimensions

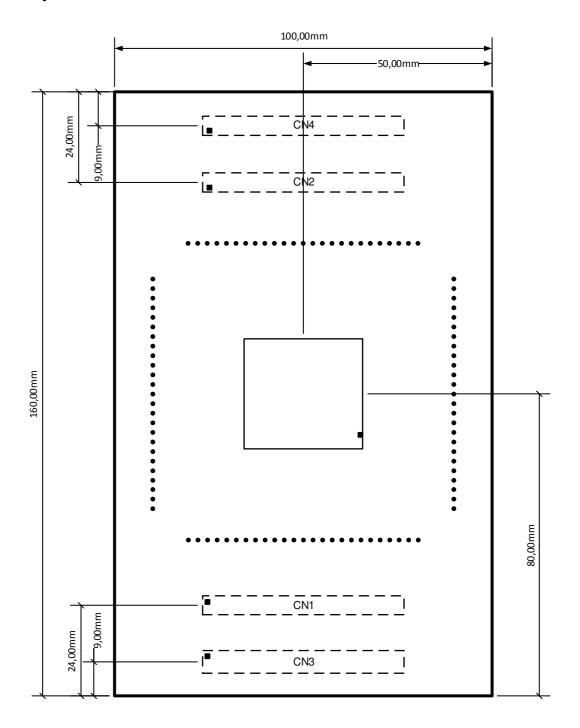

Chapter 8 Schematic

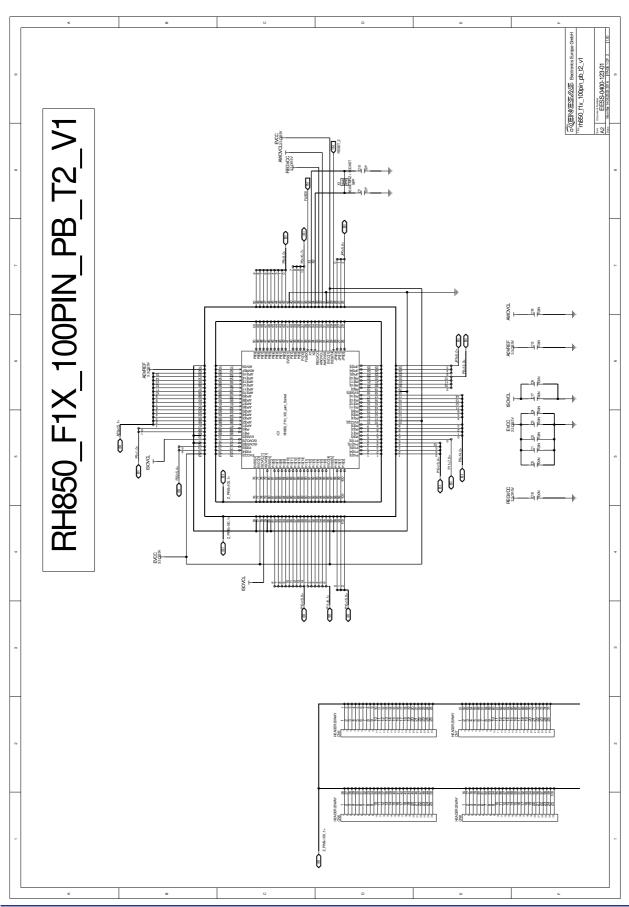

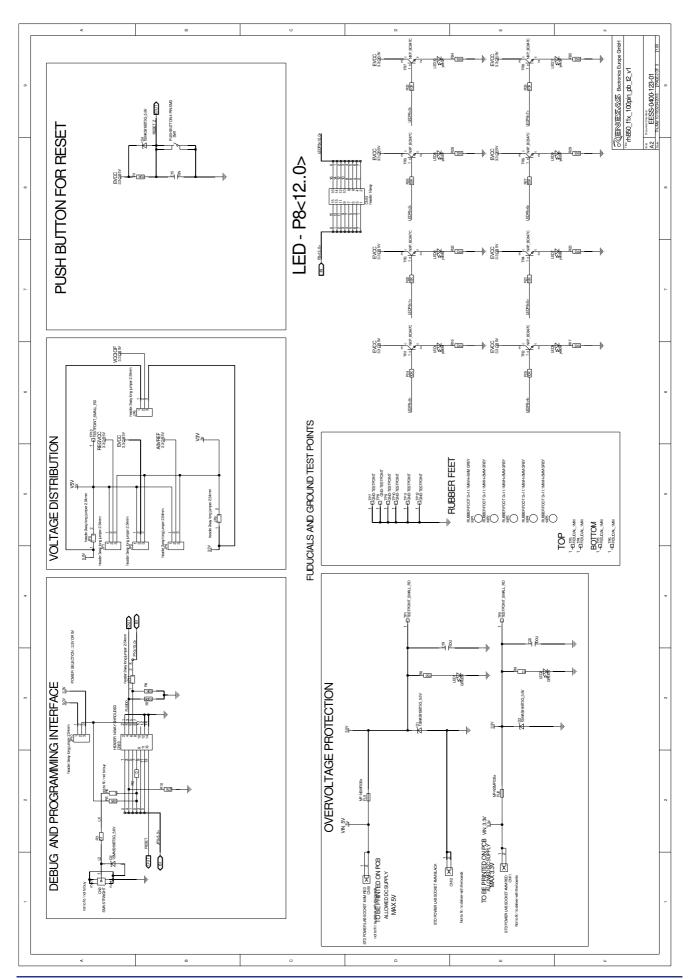

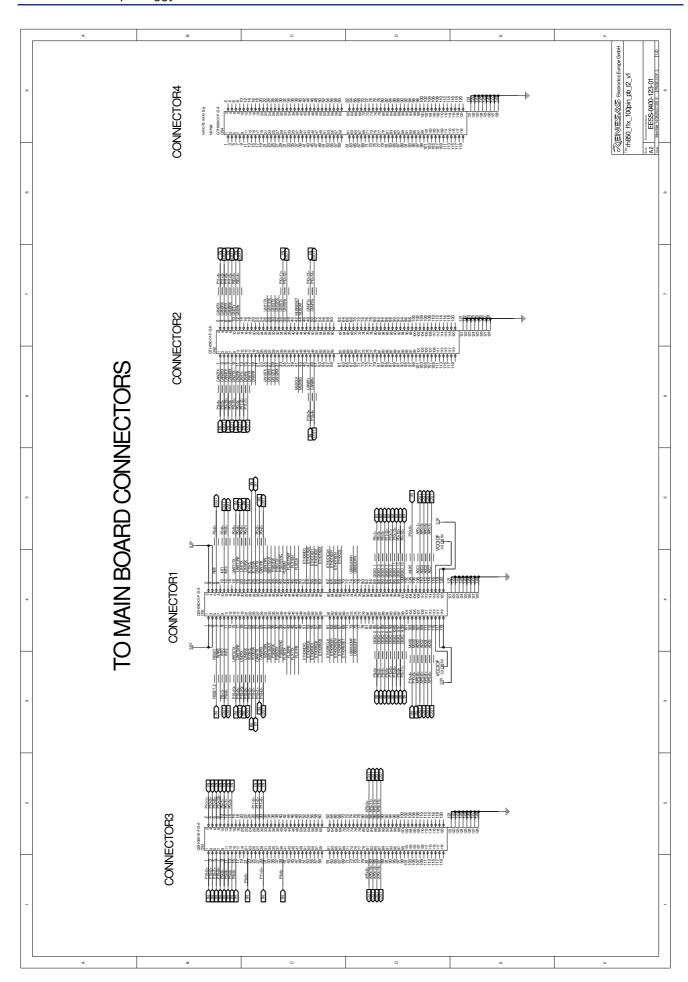

Chapter 9 Revision History

The table provides information about the major changes of the document versions.

| Date | Version | Description |
|------------|---------|-----------------|
| 2016-05-28 | 1.0 | Initial release |

Notice

- All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
- 2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
- 3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
- 4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
- 5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
- 6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
- 7. Renesas Electronics products are classified according to the following three quality grades: "Standard", "High Quality", and "Specific". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as "Specific" without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as "Specific" or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics.

The quality grade of each Renesas Electronics product is "Standard" unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.

- "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.
- "High Quality":Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.
- "Specific": Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
- 8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.

- 9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
- 10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
- 11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
- 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.
 - (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.
 - (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

